



GREISINGER EBT-AP Easybus Sensor Module For Temperature Instruction Manual

[Home](#) » [GREISINGER](#) » GREISINGER EBT-AP Easybus Sensor Module For Temperature Instruction Manual 

GREISINGER
Member of GHM GROUP



EASYBus-Sensor module for temperature

H20.0.3X.6C-06

from version V3.2

Operating Manual

EBT – AP

WEEE-Reg.-No: DE93889386



GHM GROUP – Greisinger

GHM Messtechnik GmbH | Hans-Sachs-Str. 26 | 93128 Regenstein | GERMANY

Tel.: +49 9402 9383-0 | info@greisinger.de | www.greisinger.de

Contents

- 1 Intended use
- 2 General advice
- 3 Safety instructions
- 4 Disposal notes
- 5 Assignment of elbow-type plug
- 6 General installation instructions:
- 7 Design types, dimension
- 8 Display Functions (only available for devices with option ...-VO)
- 9 Error and system messages
- 10 Configuration of the device
- 11 Notes to the calibration services
- 12 Specification
- 13 Documents / Resources
 - 13.1 References

Intended use

The device measures temperature.

Field of application

- Room climate monitoring
 - Monitoring of storage rooms
- etc...

The safety instructions (see chapter 3) have to be observed.

The device must not be used for purposes and under conditions for that the device had not been designed.

The device must carefully dealt with and has to be used according to the specifications (do not throw, knock, etc.).

It has to be protected against dirt.

Do not expose the sensor to aggressive gases (like ammonia) for longer time.

Avoid condensation, as after drying there may remain residues, which may affect the precision negatively.

In dusty environment additional protection has to be applied (special protection caps).

General advice

Read through this document attentively and make yourself familiar to the operation of the device before you use it.

Keep this document in a ready-to-hand way in order to be able to look up in the case of doubt.

Safety instructions

This device has been designed and tested in accordance to the safety regulations for electronic devices.

However, its trouble-free operation and reliability cannot be guaranteed unless the standard safety measures and special safety advises given in this manual will be adhered to when using it.

- Trouble-free operation and reliability of the device can only be guaranteed if it is not subjected to any other climatic conditions than those stated under "Specification".

Transporting the device from a cold to a warm environment condensation may result in a failure of the function.
In such a case make sure the device temperature has adjusted to the ambient temperature before trying a new start-up.
- General instructions and safety regulations for electric, light and heavy current plants, including domestic safety

regulations (e.g. VDE), have to be observed.

- If device is to be connected to other devices (e.g. via PC) the circuitry has to be designed most carefully. Internal connection in third party devices (e.g. connection GND and earth) may result in not-permissible voltages impairing or destroying the device or another device connected.
- Whenever there may be a risk whatsoever involved in running it, the device has to be switched off immediately and to be marked accordingly to avoid re-starting. Operator safety may be a risk if:
 - there is visible damage to the device
 - the device is not working as specified
 - the device has been stored under unsuitable conditions for a longer timeIn case of doubt, please return device to manufacturer for repair or maintenance.
- Warning: Do not use this product as safety or emergency stop device or in any other application where failure of the product could result in personal injury or material damage.
Failure to comply with these instructions could result in death or serious injury and material damage.
- This device must not be used at potentially explosive areas! The usage of this device at potentially explosive areas increases danger of deflagration, explosion or fire due to sparking.
- This device is not constructed for use in medical applications.

Disposal notes



This device must not be disposed as “residual waste”.
To dispose this device, please send it directly to us (adequately stamped).
We will dispose it appropriately and environmentally friendly.

Assignment of elbow-type plug

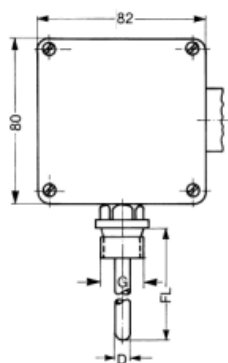
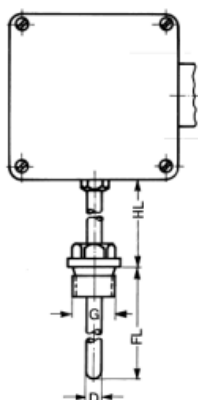
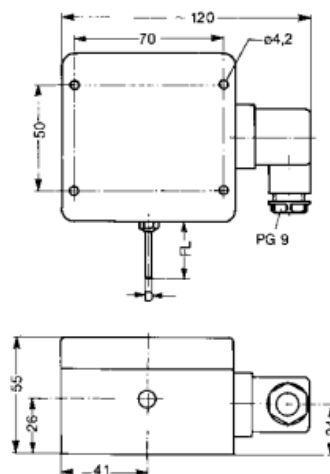
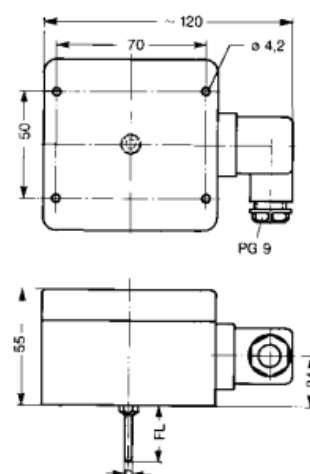
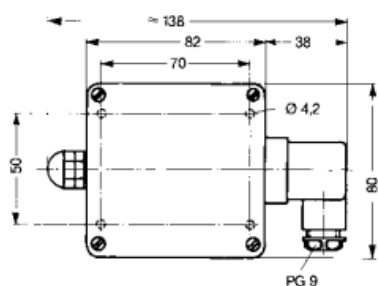
2-wire connection for EASYBus, no polarity, at terminals 1 and 2

General installation instructions:

To mount the connection cable (2-wire) the elbow-type plug screw has to be loosened and the coupling insert has to be removed by means of a screw driver at the position indicated (arrow).

Pull out connection cable through PG gland and connect to the loose coupling insert as described in the wiring diagram. Replace loose coupling insert onto the pins at the transducer housing and turn cover cap with PG gland in the direction desired till it snaps on (4 different starting positions at 90° intervals). Re-tighten the screw at the angle plug.


Design types, dimension

EBT- AP1**EBT- AP2****EBT- AP3****EBT- AP4****EBT- AP5**

Display Functions (only available for devices with option ...-VO)

8.1 Measuring display

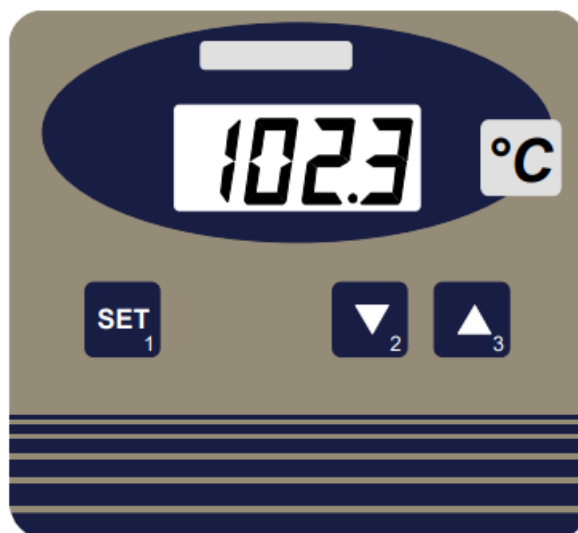During normal operation the display will show the temperature in [°C] or [°F].



8.2 Min/Max Value Memory

watch Min values (Lo):	press ▼ shortly once	display changes between 'Lo' and Min values
watch Max values (Hi):	press ▲ shortly once	display changes between 'Hi' and Max values
restore current values:	press ▼ or ▲ once again	current values are displayed
clear Min-values:	press ▼ for 2 seconds	Min values are cleared. Display shows shortly 'CLr'.
clear Max-values:	press ▲ for 2 seconds	Max values are cleared. Display shows shortly 'CLr'.

After 10 seconds the currently measured values will be displayed again.

8.3 Min/Max Alarm Display

Whenever the measured value is exceeding or undershooting the alarm-values that have been set, the alarm-warning and the measuring value will be displayed alternating.

AL.Lo	the lower alarm boundary is reached or is undershot
AL.Hi	the upper alarm boundary is reached or is exceeded

Error and system messages

Display	Description	Possible fault cause	Remedy
Err.1	Measuring range exceeded	Wrong signal	Temperatures above the measuring range are not allowed.
Err.2	Measuring value below measuring range	Wrong signal	Temperatures below the measuring range are not allowed.
Err.7	System fault	Error in device	Disconnect from supply and reconnect. If error remains: return to manufacturer
Err.9	Sensor error	Sensor or cable defective	Check sensors, cable and connections, damages visible?
Er.11	Calculation not possible	Calculation variable missing or invalid	Check temperature
8.8.8.8	Segment test	The transducer performs a display test for 2 seconds after power up. After that it will change to the display of the measuring.	

Configuration of the device

10.1 Configuration via interface

The configuration of the device is done by means of the PC-software EASYBus-Configurator or EBxKonfig. The following parameters can be changed:

- Adjusting of temperature display (offset and scale correction)
- Setting of the alarm function for temperature

The adjusting by means of offset and scale is intended to be used to compensate errors of the measuring's. It is recommended to keep the scale correction deactivated. The display value is given by following formula:
value = measured value – offset

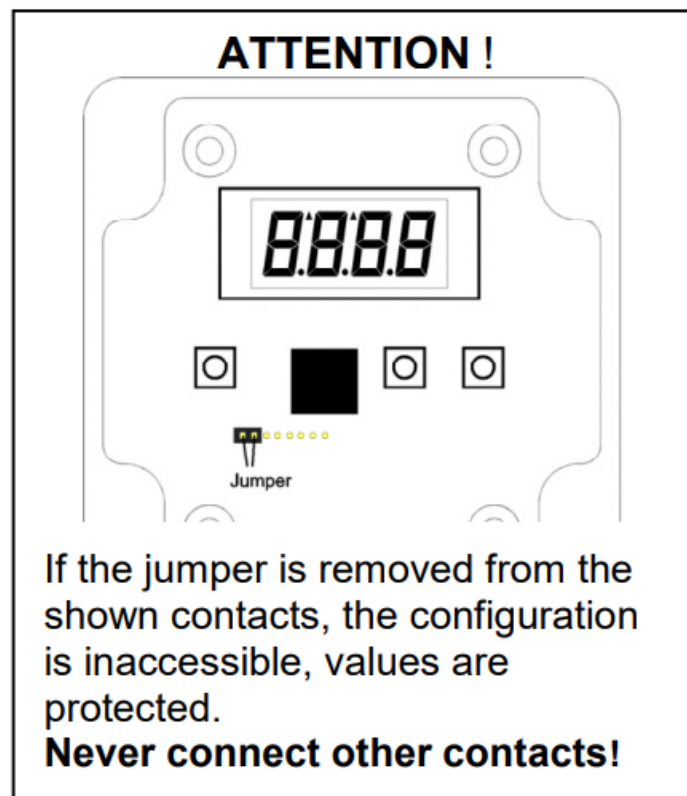
With a scale correction (just for calibration laboratories, etc) the formula changes: value = (measured value – offset) * (1 + scale adjustment/100)

10.2 Configuration at the device (only available for device with option ...-VO)

Note:







If EASYBus sensor modules are operated by a data acquisition software, there can be problems if the configuration is changed during a running acquisition.

Therefore it is recommended not to change configuration values during a running recording and furthermore to protect it against manipulation by unauthorised persons. (please refer to right picture)



Follow these instructions to configure the functions of the device:

- Press SET until the first parameter *Unit* appears in the display
- If a parameter should be changed, press ▼ or ▲,
The device changed to the setting – edit with ▼ or ▲
- Confirm the value with SET
- Jump to the next parameter with SET.

Parameter	value	information
SET	▼ and ▲	
 + Temp arrow	Unit of temperature displays factory setting: °C	
	°C °F	Temperatures in °Celsius Temperatures in °Fahrenheit
 + Temp arrow	Offset correction of temperature measuring *)	
	oFF _2.0 ... +2.0	deactivated (factory setting) Selectable from -2.0 to +2.0 °C
 + Temp arrow	Scale correction of temperature measuring *)	
	oFF -5.00 +5.00	deactivated (factory setting) Selectable from -5.00 to +5.00 % scale correction
 + Temp arrow	Min. alarm-point for temperature measuring	
	Min.MB ... AL.Hi	Selectable from: min. measuring range to AL.Hi
 + Temp arrow	Max. alarm-point for temperature measuring	
	AL.Lo ... Max.MB	Selectable from: AL.Lo to max. measuring range
 + Temp arrow	Alarm-delay for temperature measuring	
	oFF 1 ... 9999	deactivated (factory setting) Selectable from 1 to 9999 sec

Pressing SET again stores the settings, the instruments restarts (segment test)

Please note: If there is no key pressed within the menu mode within 2 minutes, the configuration will be cancelled, the entered settings are lost!

*) if higher values are needed, please check sensor, if necessary return to manufacturer for inspection.

Calculation: corrected value = (measured value – Offset) * (1+Scale/100)

Notes to the calibration services


Calibration certificates – DKD-certificates – other certificates:

If device should be certificated for its accuracy, it is the best solution to return it with the referring sensors to the manufacturer.

Specification

Measuring range	please refer to type plate
EBT – AP1, AP3, AP4	– 50,0 ... 150,0 °C or – 58,0 ... 302,0 °F
EBT – AP2	– 50,0 ... 400,0 °C or – 58,0 ... 752,0 °F
EBT – AP5	-199,9 ... 650,0 °C or -199,9 ... 999,9 °F
Accuracy (at nominal temperature) Electronic: Sensor:	±0,2 % of measured value ±0,2 °C please refer to type plate
Sensor	Pt1000 sensor, 2-wire
Meas. frequency	1 per second
Adjusting	Digital offset and scale adjustment
Min-/Max-value memory	Min and max measured values are stored
Output signal Connection Busload	Easybus-protocol 2-wire Easybus, polarity free 1.5 Easybus-devices
Display (only with option VO) Operating elements	approx. 10 mm high, 4-digit LCD-display 3 keys
Ambient conditions Nom. temperature Operating temperature Relative humidity Storage temperature	25°C -25 ... 70 °C 0 ... 95 %RH (not condensing) -25 ... 70 °C
Housing Dimensions Mounting Mounting distance Electrical connection Design-types: EBT – AP1: EBT – AP2: EBT – AP3: EBT – AP4: EBT – AP5:	ABS (IP65, except sensor head) 82 x 80 x 55 mm (without elbow-type plug and sensor tube) Holes for wall mounting (in housing – accessible after cover has been removed). 50 x 70 mm, max. shaft diameter of mounting screws is 4 mm Elbow-type plug conforming to DIN 43650 (IP65), max. wire cross section: 1.5 mm ² , wire/cable diameter from 4.5 to 7 mm with threaded stem for direct screw connection. with threaded stem at a distance from housing (for higher temperature). indoor /outdoor probe for direct wall mounting. duct type probe with centrally mounted sensor tube arrangement with the shaft of device pointing downwards at a 90° angle measuring transducer for external Pt1000 sensors. Insertion of sensor cable through PG7 screwing.
Directives / standards	The instruments confirm to following European Directives: 2014/30/EU EMC Directive 2011/65/EU RoHS Applied harmonized standards: EN 61326-1 : 2013 emissions level: class Bemi immunity according to table 2 Additional fault: <1% When connecting long leads adequate measures against voltage surges have to be taken. EN 50581 : 2012

Documents / Resources

	GREISINGER EBT-AP Easybus Sensor Module For Temperature [pdf] Instruction Manual EBT-AP Easybus Sensor Module For Temperature, EBT-AP, Easybus Sensor Module For Temperature, Sensor Module For Temperature, Module For Temperature, Temperature
---	---

References

- [Senseca Germany GmbH - Business Unit Portable](#)
- [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.