

HOLLYLAND Solidcom C1-6S Full-Duplex Wireless DECT Intercom System User Guide

Home » HOLLYLAND » HOLLYLAND Solidcom C1-6S Full-Duplex Wireless DECT Intercom System User Guide



Contents

- 1 HOLLYLAND Solidcom C1-6S Full-Duplex Wireless DECT Intercom System
- **2 INTRODUCTION**
- 3 PACKING LIST
- **4 PRODUCT INTERFACES**
- **5 INSTALLATION**
- **6 Microphone Status Indicator**
- **7 PARAMETERS**
- **8 SAFETY PRECAUTIONS**
- 9 SUPPORT
- 10 FCC Requirement
- 11 Documents / Resources
- **12 Related Posts**




HOLLYLAND Solidcom C1-6S Full-Duplex Wireless DECT Intercom System



INTRODUCTION

Thank you for purchasing Hollyland Full-duplex Wireless Intercom System. The Solidcom C1 full-duplexwireless intercom headset system.adopting the advanced DECT 6.0 technology, is Hollyland's first true wireless and self-contained headset communication solution with exceptional sound clarity. The system operates in the 1.9GHz band, providing a reliable transmission range up to 1000ft (350m) radius (LOS). This Quick Guide will guide you through the installation and use of the equipment.


PACKING LIST

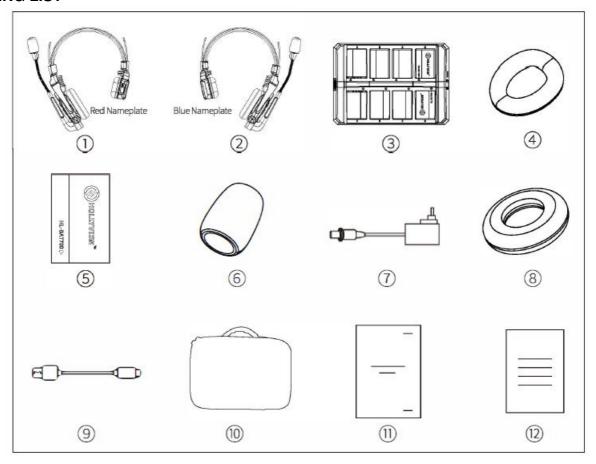

Solidcom C1 – 4S 4-person Headset Intercom Package

- 1. Master Headset (with red nameplate) xt
- 2. Slave Headset (with blue nameplate) x3
- 3. Charging Case x1
- 4. Over-ear Leather Cushion x4
- 5. Battery xB
- 6. Microphone Cushion x4
- 7. DC Adapter x1
- 8. On-ear Foam Cushion x4
- 9. USB Type-A to Type-C Cable x1
- 10. Storage Case x1
- 11. Quick Guide x1
- 12. Warranty Card x1


Note: The amount of the items listed above depends on the edition. Use the approved battery and adapter specified by the manufacturer, Please use appointed battery in case of explosion risk, please dispose of lifeless battery under guidance.

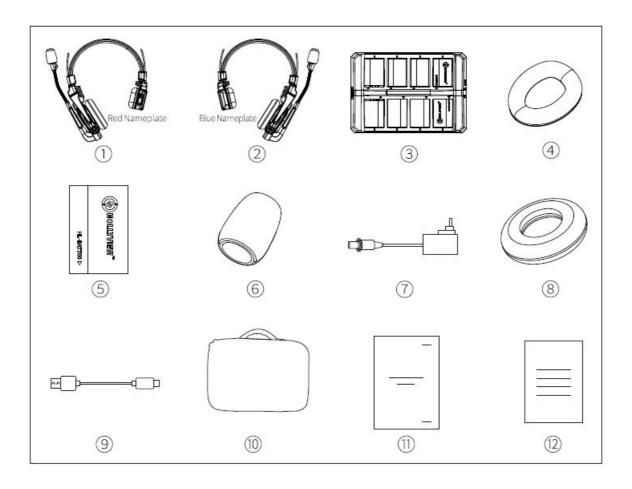

Solidcom C1 – 6S 6-person Headset Intercom Package


- 1. Master Headset (with red nameplate) x1
- 2. Slave Headset (with blue nameplate) x5
- 3. Charging Case x1
- 4. Over-ear Leather Cushion
- 5. Battery x6
- 6. Microphone Cushion x12
- 7. DC Adapter x6
- 8. On-ear Foam Cushion x1
- 9. USB Type-A to Type-C Cable x6
- 10. Storage Case x1
- 11. Quick Guide x1
- 12. Warranty Card x1

PRODUCT INTERFACES

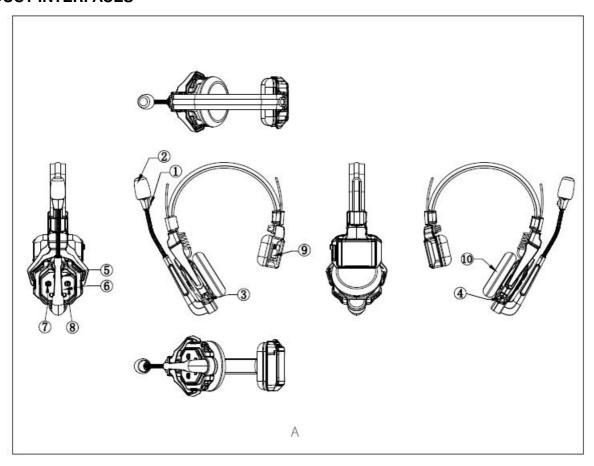

Headset Interface

- 1. Power/Connection Indicator
- 2. Microphone- Mute/unmute microphone by moving microphone boom up/down ® USB Type-C Interface for firmware upgrade
- 3. Power Button
- 4. Volume+ Button
- 5. Volume -Button
- 6. A Button Long press for 5 seconds to pair
- 7. B Button -Only functions when using with the HUB station
- 8. Battery Compartment
- 9. Speaker

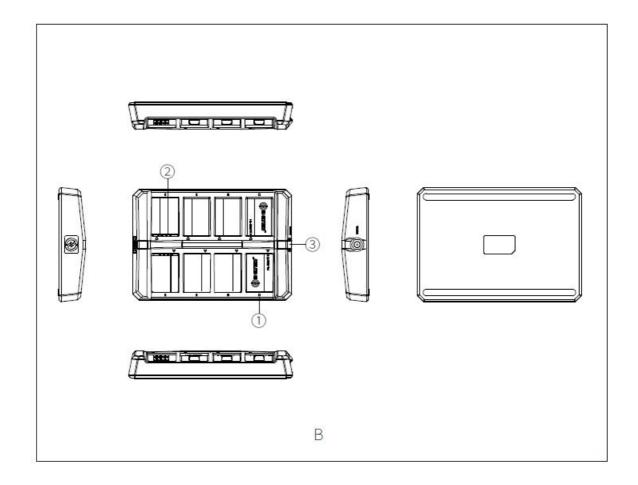



Charging Case Interface


- 1. Charging Indicator Orange: Charging in progress Green: Fully charged
- 2. Charging Contacts
- 3. DC Charging Interface

INSTALLATION


1. Install the batteries.





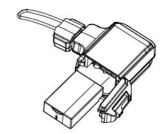


2. Turn on the Master Headset and Slave Headsets.

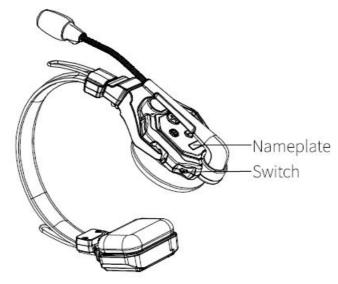

- 1. Ensure the headsets are all turned on when using Solidcom C1 full-duplex wireless intercom system.
- 2. The indicator light stops flashing and turns to static Switch green when the Master Headset is paired with the Slave Headsets.
- 3. The Master Headset is fitted with a red nameplate while the Slave Headset is fitted with a blue one.

3. Turn on microphone.


Range within which the Microphone is in Mute

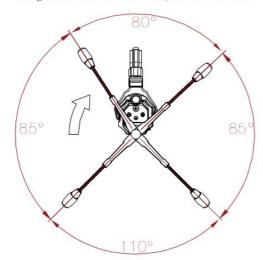

Microphone mute range when moving the microphone boom upward clockwisely

Range within which the Microphone is in Talk


Range within which the Microphone is in Mute

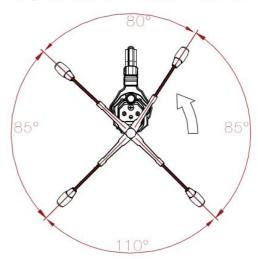

Microphone mute range when moving the microphone boom downward anti-clockwisely

4. The Solidcom C1 system is now ready for use.

Microphone Status Indicator

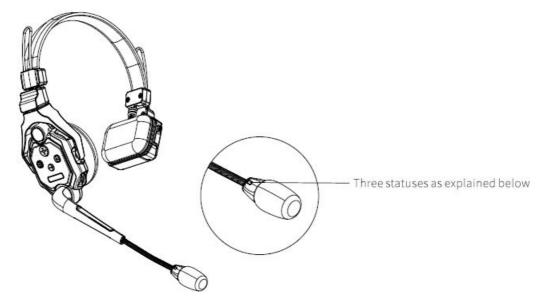

- 1. Indicator Light Flashes Green: Disconnected (for Slave Headsets)
- 2. indicator Light Stays Green: Slave Headset(s) connection successful (by defau It, the Master Headset's indicator light will light up when turned on)
- 3. Indicator Light Flashes Red: Low battery level

Pairing

All Slave Headsets and the Master Headset come in one package wi II auto pair up right out of box. Ma nu al pairing is only required when there is a need for adding new headset to the system. Du ring the pairing process, please turn on all the headsets to ensure all the Slave Headsets a re connected.

- 1. Long press the A Buttons on the Master Headset and Slave Headsets for 5seconds, the indicator lights on the headsets' microphone booms wi II flash green. Please wait for the device to complete the pairing.
- 2. The indicator lights on the headsets' microphone booms become static green when pairing succeeds.
- 3. One Master Headset can be paired with 5 Slave Headsets in maximum. Solidcom CI is extremely versatile and can be applied in a variety of scenarios. For more information of how to operate this system, please check out on:

https://hollyland-techhelp.zendesk.com/hc/en-us/categories/360005064994-Download

PARAMETERS

Transmission Range	350m (1000ft) Line-of-Sight
Frequency Information	Frequency band: 1.9GHz DECT (varies by country and region) Modulation mode : GFSK Transmitpower: <2ldBm (125.9mW) (variesby country and region) Receiving sensitivity: <-90dBm
Transmission Latency	<35ms
Battery Capacity	700mAh (2.66Wh) Li-Ion battery
Runtime	Slave headset: �!Oh Master headset: �6h (when connected with 3 slave headsets) Master headset: �sh (when connected with 5 slave headsets)
Charging Time	�2.5h
Frequency Response	150Hz~7kHz
Signal-to-Noise Ratio	>55dB
Distortion	<1%
Microphone Type	Electret
Maximum Input Sound Press ure Level	>115dBSPL
Output Sound Pressure Level	98±3dBSPL (at 94dBSPL 1kHz)
Net Weight	♦11og (batteries included)
Working Temperature	o-+45"C (Working Status) -20-+60"C (Storage Status)

SAFETY PRECAUTIONS

Do not place the headsets near or inside heating devices (including but not limited to microwave ovens, induction cookers, electric ovens, electric heaters, pressure cookers, water heaters, gas stoves) to prevent the battery from overheating and exploding. Never use non-original charging cases, cables and batteries with the product. The use of non-original spare parts may cause electric shock, ire, explosion or other dangers.

SUPPORT

If encounter any problems in using the product or need any help,please follow these ways to get more technical support:

- HolMand Products User Group
- Holly1andTech

- HolMandTech
- Support@holMand-tech.com
- www.holMand-tech.com

Statement:

All copyrights belong to Shenzhen Hollyla nd Technology Co,.LTD.

Trademark Statement:

Without the written approval of Shenzhen Hollyland Technology Co,.LTD, no organization or individual may copy or reproduce part or all of the content of the text without authorization, and may not disseminate it in any form. All representations, information, recommendations in this document do not constitute warranties of any kind, express or implied.

Note:

Due to product version upgrades or other reasons, this quick guide will be updated from time to time. Un less otherwise agreed, this document is provided as a guide for use only. All representations, information, recommendations in this document do not constitute warranties of any kind, express or implied.

FCC Requirement

Any changes or modiTications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. this device may not cause harmful interference.
- 2. this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

The device has been tested and comply with FCC SAR limits.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Documents / Resources

⊕HOTTAL

Hollyland Solidcom C1

HOLLYLAND Solidcom C1-6S Full-Duplex Wireless DECT Intercom System [pdf] User Gui

Solidcom C1-6S, Full-Duplex Wireless DECT Intercom System

Manuals+,