



HOTO QWLSD004 24-in-1 Precision Screwdriver Instruction Manual

[Home](#) » [HOTO](#) » HOTO QWLSD004 24-in-1 Precision Screwdriver Instruction Manual 

HOTO


QWLSD004 24-in-1 Precision Screwdriver
Instruction Manual

Contents

- [1 Product Overview](#)
- [2 How to Use](#)
- [3 Precautions](#)
- [4 Specifications](#)
- [5 Documents / Resources](#)

Product Overview

Thank you for purchasing the HOTO 24-in-1 Precision Screwdriver. Read this manual carefully before use, and retain it for future reference.

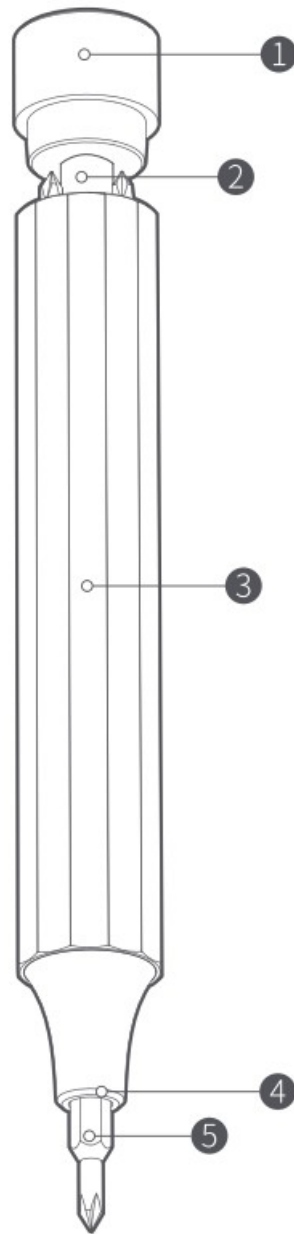

1. End Cap
2. Screwdriver Bit Cabinet
3. Trunk of Handle
4. Bit Holder
5. Screwdriver Bit

How to Use

Storage of Screwdriver Bit

- Magnetic catche of the screwdriver bit is stored in the slot of the screwdriver bit cabinet.
- Hold the trunk of handle, pull out the end cap to removethe screwdriver bit cabinet, then the screwdriver bit is removed.
- After placing the bit back to the slot of bit cabinet, push from the end of trunk of handle, the bit cabinet will be adsorbed to the trunk of handle with magnetic catche.

Use of Product

- Screwdriver bit can be inserted directly into the bit holder for use, and can be fixed in the bit holder by magnets.
- Hold the trunk of handle, rotate clockwise to tighten a screw, rotate counterclockwise to remove a screw.

Precautions

- Screwdriver bit cabinet can be separated from the trunk of handle.
- When loading or unloading the screws, the product should be perpendicular to the workpiece.
- Please keep the stamping/plate plane upside for adsorption when storing.
- Please don't disassembly the product without authorization.

Specifications


Model: QWLSD004
Maximum Torque: 2 N·m
Net Weight: Approx. 60 g
Dimensions: 120 × 16.6 × 16.6 mm
Model of bit: C4 × L30mm double heads
T2 / T3 / T4 / T5H / T6H / T8H / T9H / T10H / H1.5 / H2.0 / H2.5 / PH000 / PH00 / PH0 / PH1 / SL1.5 / SL2.0 / P2 / P5 / TW1 / U2.6 / Y0.6 / W1.5 / ▲2.3

HOTO



Stay tuned to our social media
(@hoto_official)
<https://qrcode.hototools.com/>
Manufacturer: Shanghai HOTO
Technology Co., Ltd.
Address: Building 45, No. 50 Moganshan
Rd, Putuo District, Shanghai, PRC,
200060.

Documents / Resources

| | |
|--|---|
|  <p>Stay tuned to our social media (@hoto_official)</p> | <p>HOTO QWLSD004 24-in-1 Precision Screwdriver [pdf] Instruction Manual QWLSD004, QWLSD004 24-in-1 Precision Screwdriver, 24-in-1 Precision Screwdriver, Precision Screwdriver, Screwdriver</p> |
|--|---|

