



HOVER-1 H1-SPFY-BLK Superfly Hoverboards Instruction Manual

[Home](#) » [HOVER-1](#) » HOVER-1 H1-SPFY-BLK Superfly Hoverboards Instruction Manual 

HOVER-1 H1-SPFY-BLK Superfly Hoverboards




Contents

- [1 BEFORE FIRST USE, PLEASE FULLY CHARGE YOUR HOVER-1 SUPERFLY](#)
- [2 LOCATING YOUR HOVER-1 SUPERFLY SERIAL NUMBER](#)
- [3 CALIBRATING YOUR HOVER-1 SUPERFLY](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)


BEFORE FIRST USE, PLEASE FULLY CHARGE YOUR HOVER-1 SUPERFLY

- The Superfly is fully charged when the light on the charger itself, turns from flashing in green to green as shown below.

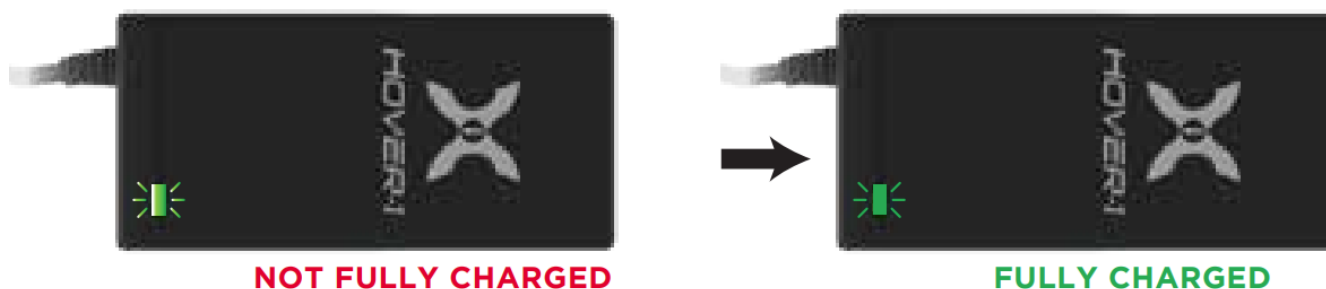

LOCATING YOUR HOVER-1 SUPERFLY SERIAL NUMBER


- There are two (2) stickers with a corresponding serial number for your Superfly affixed on the bottom of the unit as shown below. Carefully remove one (1) serial number sticker and affix it onto the designated place on page 24 in the manual of your Superfly.

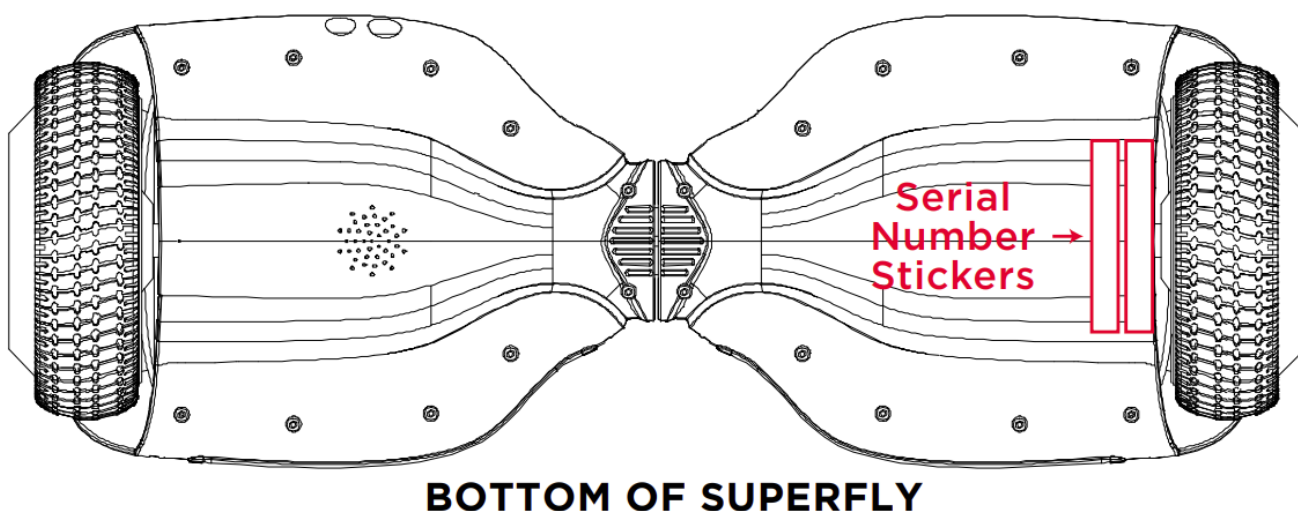

CALIBRATING YOUR HOVER-1 SUPERFLY

If your Superfly is vibrating, spinning, uneven, leaning or unbalanced, a quick calibration is necessary.

- Place the scooter on a flat horizontal surface such as the floor or a table and unplug the charger.
- Press and hold the ON/OFF button for 15 seconds (as shown below). When your Superfly starts beeping, you may release the power button.
- Turn the board off and then back on, calibration is now complete.

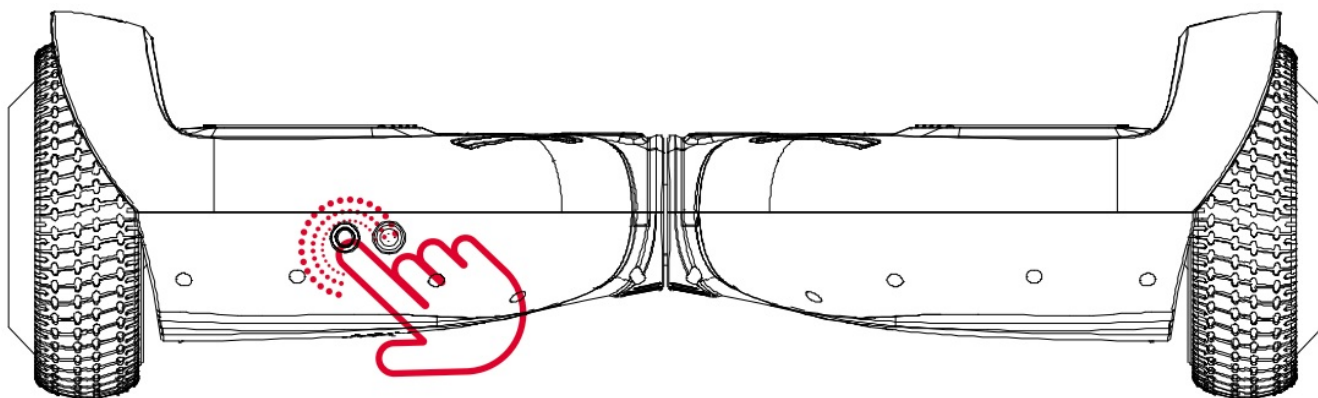



NEED HELP?

For UK Customer Service, please contact

+44 (0) 1355 241222

escooters@letmerepair.co.uk

For other countries, please scan QR code in manual for more information.



Documents / Resources



[HOVER-1 H1-SPFY-BLK Superfly Hoverboards](#) [pdf] Instruction Manual
H1-SPFY-BLK, Superfly Hoverboards, H1-SPFY-BLK Superfly Hoverboards, Hoverboards