



HOVER-1 ROCKER Iridescent Hoverboard Instructions

[Home](#) » [HOVER-1](#) » HOVER-1 ROCKER Iridescent Hoverboard Instructions 

HOVER-1 ROCKER Iridescent Hoverboard Instructions



ROCKER

Original Instruction




EU-UK-RCKR



Read Operator's Manual

HELMETS AAVE LIVES!

Always wear a properly fitted helmet that complies with CPSC or CE safety standards when you ride your scooter.

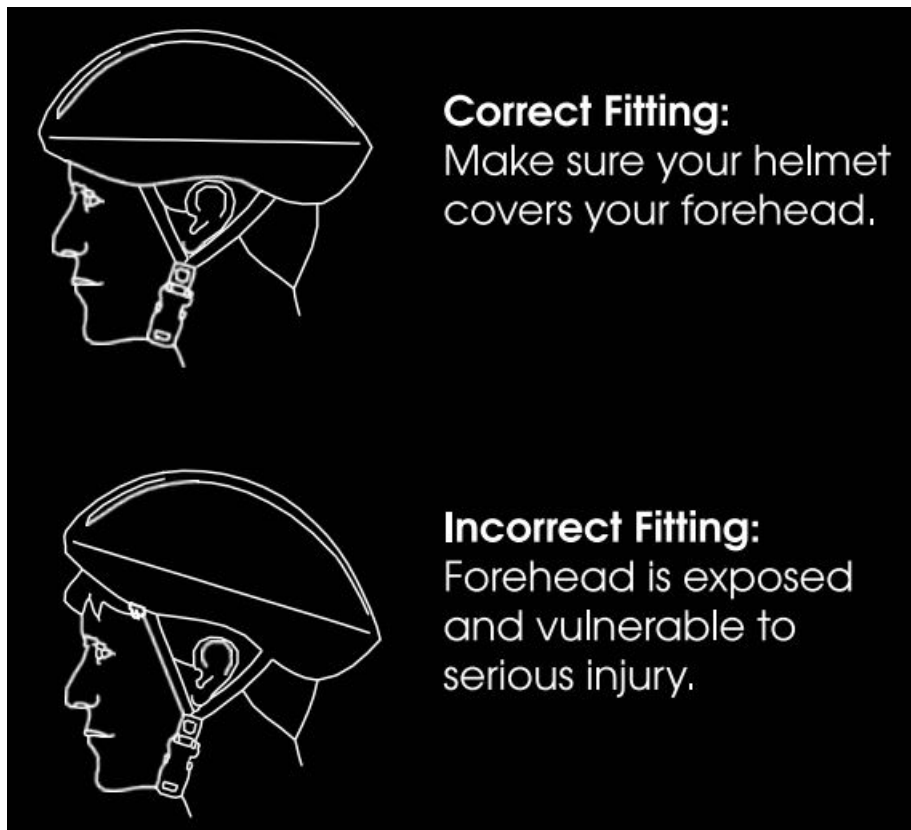

⚠ WARNING!

PLEASE READ THE USER MANUAL THOROUGHLY.

Failure to follow the basic instructions and safety precautions listed in the user manual can lead to damage to your device, other property damage, serious bodily injury, and even death.

Thank you for purchasing the Hover-1 Rocker electric scooter. Please read all instructions carefully before using and retain this manual for future use and reference.

This manual applies to the Rocker scooter.

ATTENTION

1. Use only the supplied charger with this scooter.

Charger Manufacturer: SHENZHEN HYLETON TECHNOLOGY CO., LTD. Model: HLT-118C-4201000

The battery charger HLT-11BC-4201000 is only to be used with the E-Scooter EU-UK-RCKR. If the power supply cord of the charger is damaged, in order to avoid hazards, it must be replaced by Hover-1 only or one of Hover-1 's service agents.

2. The operating temperature range of the Rocker is 32-104° F (Q-400 C) .
3. Do not ride on icy or slippery surfaces.
4. Read the user manual and warning labels before riding.
5. Store the Rocker in a dry, ventilated environment.
6. When transporting the Rocker, avoid violent crashes or impact.

LOW TEMPERATURE WARNING

Low temperature will affect the lubrication of moving parts inside the Rocker scooter, increasing internal resistance. At the same time, in low temperatures, the discharge capacity and the capacity itself of the battery will be significantly decreased.

Use caution when riding the Rocker in cold temperatures (below 40 degrees F) .

Doing so may increase the risk of mechanical failures of the scooter, which may lead to damage to your device, other property damage, serious bodily injury and even death.

SAFETY INSTRUCTIONS

- Keep the device away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the device if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the device.
- Do not use the device if it has been dropped or damaged in anyway.
- Repairs to electrical equipment should only be performed by the manufacturer. Improper repairs voids the warranty and may place the user at serious risk.
- Do not puncture or harm the exterior surface of the product in anyway.
- Keep the device free from dust, lint, etc.
- Do not use this device for anything other than its intended use or purpose. Doing so may damage the device or lead to property damage, injury or death.
- This product is not a toy. Keep out of reach of children.
- Do not expose batteries, battery pack, or batteries installed to excessive heat, such as direct sunlight, or open flame.
- Do not allow hands, feet, hair, body parts, clothing or similar articles to come in contact with moving parts, wheels or drive train, while the engine is running.
- Do not operate or allow others to operate the Rocker until the user understands all instructions, warnings and safety features described in this manual.
- Check with your doctor if you have a medical condition that could affect your ability to use the Rocker.
- Persons with head, back or neck ailments or prior surgeries to those areas of the body are not recommended to use the Rocker.
- Do not operate if you are pregnant, have a heart condition, or have both.
- The Rocker can be used by children aged of 15 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the Rocker in a safe way and understand the hazards involved. Children shall not play with the Rocker. Cleaning and user maintenance shall not be made by children without supervision.

NOTES:

In this manual, the above symbol with the word “NOTES” indicates instructions or relevant facts the user should remember prior to using the device.

⚠ CAUTION!

In this manual, the above symbol with the word “CAUTION” indicates a hazardous situation which, if not avoided, can cause minor or moderate injury.

⚠ WARNING!

In this manual, the above symbol with the word “WARNING” indicates a hazardous situation which, if not avoided, can cause death or serious injury.

SERIAL NUMBER

Please keep the serial number on file for warranty claims as well as proof of purchase.

⚠ WARNING!

WARNING: Prolonged Exposure to UV Rays, Rain and the Elements May Damage the Enclosure Materials. Store Indoors When Not in Use.

Contents

1 INTRODUCTION
1.1 PACKAGE CONTENTS
1.2 FEATURES/PARTS
1.3 OPERATING PRINCIPALS
2 SPECIFICATIONS
3 CONTROLS AND DISPLAY
3.1 TURNING YOUR DEVICE ON/OFF
3.2 MAT SENSOR
3.3 BATTERY INDICATOR
3.4 RUNNING INDICATOR
4 BLUETOOTH® SPEAKER
4.1 PAIRING THE SPEAKER
4.2 LISTENING TO MUSIC
5 SMART PHONE APP
6 BEFORE RIDING
6.1 PRE-RIDE CHECKLIST
7 SAFETY PRECAUTIONS
7.1 SAFETY CHECKLIST
8 RIDING YOUR ROCKER
8.1 OPERATING YOUR DEVICE
8.2 WEIGHT AND SPEED LIMITATIONS
8.3 OPERATING RANGE
9 BALANCE & CALIBRATION
10 SAFETY ALERTS
11 CHARGING YOUR ROCKER
11.1 CHARGING THE DEVICE
12 BATTERY CARE/ MAINTENANCE
12.1 BATTERY SPECIFICATIONS
12.2 BATTERY MAINTENANCE
13 FCC STATEMENT
14 CARE & MAINTENANCE
15 WARRANTY
16 TROUBLESHOOTING
17 WEEE DIRECTIVE
18 EC DECLARATION OF CONFORMITY
19 CHARGER LABEL
20 SCOOTER LABELS
21 Documents / Resources
22 Related Posts


INTRODUCTION

The Hover-1 Rocker is a personal transporter. Our technology and production processes are developed with strict testing for each scooter. Operating the Rocker without following the contents of this manual may lead to damage to your scooter, or bodily injury.

This manual is designed to give you the information you need for the safe operation and maintenance of your scooter. Please read it thoroughly before riding your Rocker.

PACKAGE CONTENTS

- Hover-1 Rocker Electric Scooter
- Wall Charger
- Operation Manual

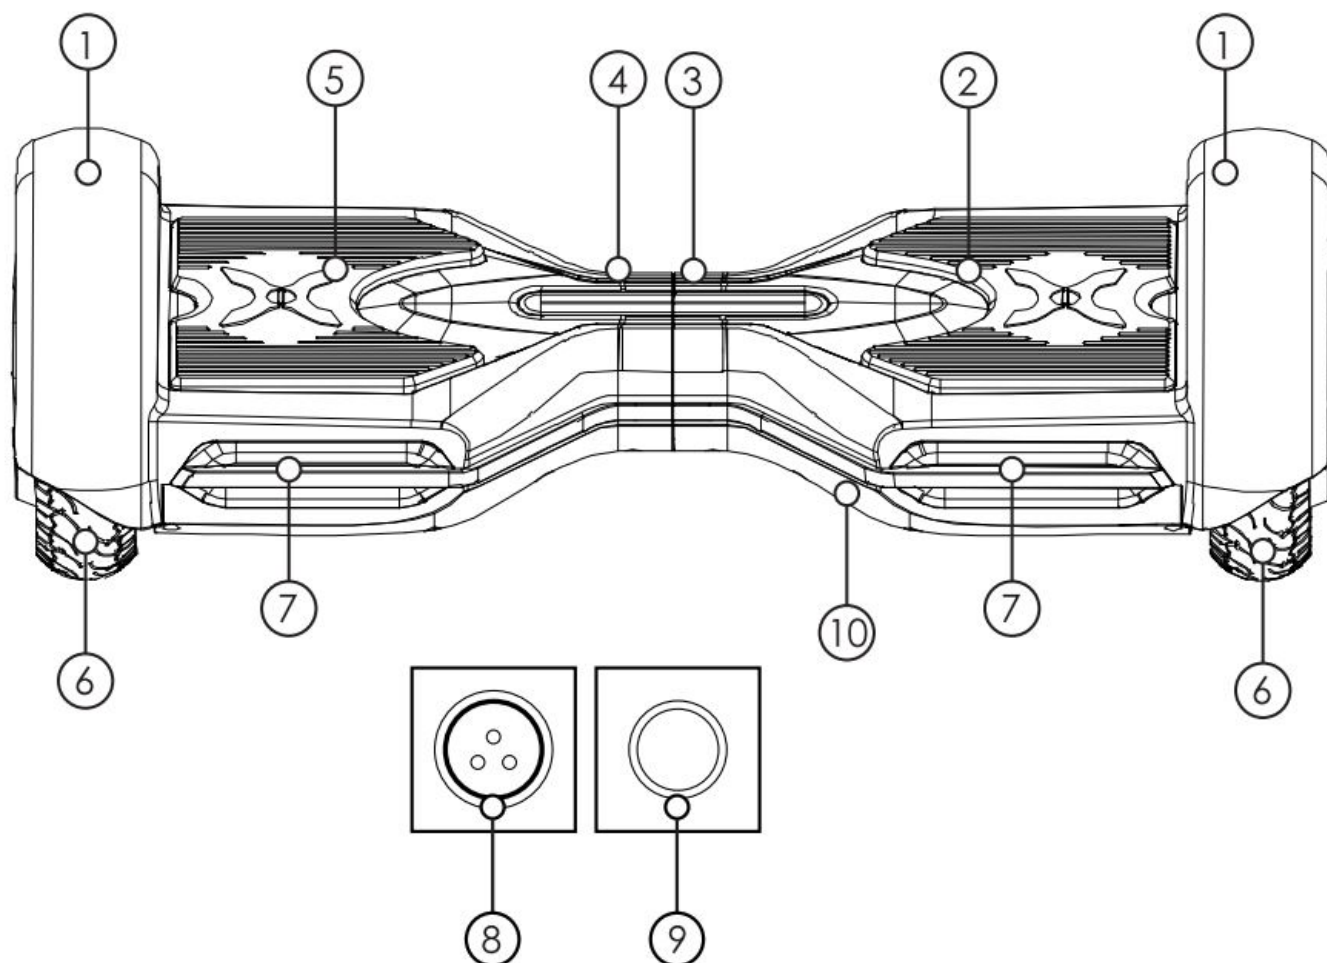

FEATURES/PARTS

1. Fender
2. Left Foot Mat
3. Running Indicator
4. Battery Indicator
5. Right Foot Mat
6. Tire
7. LED Light
8. Charge Port (located in rear)
9. Power Button (located in rear)
10. Wireless Speaker

OPERATING PRINCIPALS

The device uses digital electronic gyroscopes and acceleration sensors to control balance and motion, depending on the user's center of gravity. The device also uses a control system to drive the motors that are located within the wheels. The device has a built-in inertia dynamic stabilization system that can help assist with balance when

moving forward and backwards, but not while turning.

TIP – To increase your stability, you must shift your weight in order to overcome the centrifugal force during turns, especially when entering a turn at higher speeds.

⚠ WARNING

Any Hover-1 Rocker that does not work properly can cause you to lose control and fall. Inspect the en1Te device thoroughly before every ride, and do not ride it until any problems have been corrected.

SPECIFICATIONS

Model:	EU-UK-RCKR - Hover-1 Rocker
Net Weight:	18.95 lbs (8.6 kg)
Load:	44-220 lbs (20-100 kg)
Max Speed:	Up to 7 mph (11.3 km/h)
Max Distance Range:	Up to 12 miles (19.31 km)
Max Incline Angle:	12° degrees
Minimum Turning Radius:	0°
Maximum Continuous Rated Power:	200 W
Battery Type:	Lithium-ion
Battery Voltage:	36 V
Battery Capacity:	4.0 Ah
Power Requirement:	AC 100-240V, 50/60 Hz
Wheel Size:	8 Inches (20.3 cm)
Product size:	24.8x9.05x8.27inch (630x230x210mm)
Bluetooth Range:	Up to 33ft
Bluetooth Speaker:	V4.0 with stereo sound quality
Contains FCC ID:	2AANZRCKR
BT ID:	D042258

CONTROLS AND DISPLAY

PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY

TURNING YOUR DEVICE ON/OFF

Power On: Take your device out of the box and place it flat on the floor. Press the power button (located on the rear of your device) once. Check the LED indicator (located in the center of your device). The battery indicator light should be lit, indicating the device is powered on.

Power Off: Press the power button once.

This model also has a self-balance function. Generally, the scooter will activate the self-balance function when the device is powered on. If the device doesn't activate the self-balance function, please press the power button twice when the scooter is on.

MAT SENSOR

There are four sensors under the foot mats on your Rocker. When riding the scooter, you must ensure you are stepping on the foot mats. Do not step or stand on any other area of your scooter.

The Rocker may vibrate or spin in one direction if weight and pressure are applied to only one foot mat.

BATTERY INDICATOR

The display board is located in the middle of the Rocker.

- Green LED Light indicates the hoverboard is fully charged.
- Red flashing LED light and beeping indicates low battery.
- Yellow light indicates the board is charging.

When the LED light turns red, please recharge the device.

RUNNING INDICATOR

When the operator triggers the foot mats, the Running Indicator LED will light up, which means that the system enters the running state.

When the system has an error during operation, the running LED light will turn red (for more details see SAFETY ALERTS).

BLUETOOTH® SPEAKER

The Rocker has a powerful built-in wireless speaker so you can play your music while riding.

PAIRING THE SPEAKER

1. Turn on your Rocker and the speaker will “Ping” to announce that it’s waiting for a Bluetooth® connection. This will indicate your Rocker speaker is now in pairing mode.
2. Place the Rocker and the Bluetooth® device to which you would like to pair it within the operating distance. We recommend keeping the two devices no further than 3 feet apart during pairing.
3. Ensure Bluetooth® is enabled on your phone or music device. Refer to manufacturer’s instructions for how to enable Bluetooth® on your device.
4. Once you have activated Bluetooth® on your device, select the option “EU-UK-RCKR” from the list of available Bluetooth® devices.
5. If required, enter the PIN code “000000” and confirm the entry.
6. The Rocker will say “Paired” when successfully paired.
7. Please note, pairing mode on the Rocker will last for two minutes. If no devices are paired after two minutes, the Rocker speaker will automatically return to standby mode.
8. If pairing is unsuccessful, turn off the Rocker first and re-pair following the aforementioned steps.
9. If your smart phone is out of range, or the battery is low on your Rocker, your speaker may disconnect from your smart device, and the Rocker will say “Disconnected.” To reconnect, follow the aforementioned steps, or recharge your scooter.

NOTE: Once you have paired the Rocker speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth® is activated and in range. You do not need to re-pair any previously connected devices.

Your scooter can pair up to two multi-point devices. You can reconnect a previously paired device without going through the pairing or PIN process on up to two devices.

LISTENING TO MUSIC

Once the Rocker Bluetooth® speaker is paired to your device, you can stream music wirelessly through it. Only one speaker will play music as the other speaker is strictly for safety alerts from your Rocker. Select the track you wish to listen to on your device to listen via the speaker. All volume and track controls will be made using your music device. Should you encounter any problems while streaming, please refer to your device's user manual.

SMART PHONE APP

Your Rocker is an App-enabled scooter that works with Apple iOS and Android devices. Download the free Hover-1 App in order to access certain features of your Rocker such as headlight colors and skill mode.

Using a QR code reader, hold the camera on your smartphone over the below QR code to download the Hover-1 App. Feel free to search "Hover-1" in your device App store.





For iOS

<https://itunes.apple.com/cn/app/hover-1/id1148555786?mt=8>



For Android

<https://play.google.com/store/apps/details?id=com.hover1bike.hover1>

BEFORE RIDING

It is important that you fully understand all elements of your Rocker. If these elements are not used correctly, you will not have full control of your Rocker. Before you ride, learn the functions of the various mechanisms on your scooter.

Practice using these elements of your Rocker at slower speeds in a flat, open area before taking the device out in public areas.

PRE-RIDE CHECKLIST

Ensure that your Rocker is in proper working order each and every time you ride. If a part of the scooter does not function correctly, please contact our Customer Support Center.

⚠ WARNING

Any Hover-1 Rocker that does not work properly can cause you to lose control and fall. Do not ride an Rocker with a part that is damaged; replace the damaged part before riding.

- Ensure the battery is fully charged before riding your scooter.
- Please wear all appropriate safety and protective gear as previously mentioned in the User Manual before operating your Rocker.
- Make sure to wear comfortable clothes and flat closed-toe shoes when operating your device.
- Please carefully read the User Manual, which will assist in explaining the basic working principles and provide tips on how to best enjoy your experience.

SAFETY PRECAUTIONS

Different localities and countries have different laws governing riding on public roads, and you should check with local officials to ensure you are complying with these laws.

Hover-1 is not liable for tickets or violations given to riders who do not follow local laws and regulations.

- For your safety, always wear a helmet that meets CPSC or CE safety standards. In the event of an accident, a helmet can protect you from serious injury and in some cases, even death.
- Obey all local traffic laws. Obey red and green lights, one-way streets, stop signs, pedestrian crosswalks, etc.
- Ride with traffic, not against it.
- Ride defensively; expect the unexpected.
- Give pedestrians the right-of-way.
- Do not ride too close to pedestrians and alert them if you intend to pass them from behind.
- Slow down at all street intersections and look to the left and right before crossing.

Your Rocker is not equipped with reflectors. It is not recommended that you ride in conditions of low visibility.

⚠ WARNING

When you ride in low-visibility conditions such as fog, dusk, or night, you might be difficult to see, which could lead to a collision. In addition to keeping your headlight on, wear bright, reflective clothing when riding in poor lighting conditions.

Think about safety when you ride. You can prevent many accidents if you think about safety. The safety checklist is a helpful resource for compact riders.

SAFETY CHECKLIST

- Do not ride above your skill level. Ensure you have had enough practice with all functions and features of your Rocker.
- Before stepping on your Rocker, make sure it is placed flat on level ground, the power is on, and the Running Indicator light is green. Do not step on if the Running Indicator light is red.
- Do not try to open or modify your Rocker. Doing so, voids the manufacturer warranty and may cause your Rocker to fail, resulting in injury or death.
- Do not use the Rocker in a manner that would put people or property in danger.
- If riding near others, keep a safe distance to avoid collision.
- Be sure to keep your feet on the foot mats at all times. Moving your feet off your Rocker while driving is

dangerous and may cause the Rocker to stop or veer sideways.

- Do not operate the Rocker while under the influence of drugs and/or alcohol.
- Do not operate the Rocker when you are restless or sleepy.
- Do not ride your Rocker off of curbs, ramps, or attempt to operate in a skate park, empty pool, or in any way similar to a skateboard or scooter. The Rocker IS NOT A SKATEBOARD. Misuse of your Rocker, voids the manufacturer warranty and may lead to injury or damage.
- Do not continuously spin in place, it will cause dizziness and increases risk of injury.
- Do not abuse your Rocker, doing so can damage your unit and cause failure to the operating system leading to injury. Physical abuse, including dropping your Rocker, voids the manufacturer warranty.
- Do not operate in or near puddles of water, mud, sand, stones, gravel, debris or near rough and rugged terrain.
- The Rocker can be used on paved surfaces that are flat and even. If you encounter uneven pavement, please lift your Rocker over and past the obstruction.
- Do not ride in inclement weather: snow, rain, hail, sleet, on icy roads or in extreme heat or cold.
- Bend your knees when riding on bumpy or uneven pavement to absorb the shock and vibration and help you keep your balance.
- If you are unsure if you can safely ride on a specific terrain, step off and carry your Rocker. ALWAYS BE ON THE SIDE OF CAUTION.
- Do not attempt to ride over bumps or objects greater than 0.5 in, even when prepared and bending your knees.
- PAY ATTENTION – look at where you are riding and be conscious of the road conditions, people, places, property and objects around you.
- Do not operate the Rocker in crowded areas.
- Operate your Rocker with extreme caution when indoors, especially around people, property, and narrow spaces.
- Do not operate the Rocker while talking, texting, or looking at your phone.
- Do not ride your Rocker where it is not permitted.
- Do not ride your Rocker near motor vehicles or on public roads.
- Do not travel up or down steep hills.
- The Rocker is intended for use by a single individual, DO NOT attempt to operate the Rocker with two or more people.
- Do not carry anything while riding the Rocker.
- Individuals with lack of balance should not attempt to operate the Rocker.
- Pregnant women should not operate the Rocker.
- The Rocker is recommended for riders ages 15 and older.
- At higher speeds, always take into consideration longer stopping distances.
- Do not step forward off of your Rocker.
- Do not attempt to jump on or off your Rocker.
- Do not attempt any stunts or tricks with your Rocker.
- Do not ride the Rocker in dark or poorly lit areas.
- Do not ride the Rocker off road, near or over potholes, cracks or uneven pavement or surfaces.
- Keep in mind that you are 4.5 inches (11.43 cm) taller when operating the Rocker. Make sure to go through doorways safely.
- Do not turn sharply, especially at high speeds.
- Do not step on the fenders of the Rocker.

- Avoid driving the Rocker in unsafe places, including near areas with flammable gas, steam, liquid, dust, fiber, which could cause fire and explosion accidents.
- Before riding, ensure that tires are in good condition and have sufficient tread remaining.
- Do not operate near swimming pools or other bodies of water.
- Accessories and any additional items which are not approved by the manufacturer shall not be used.
- Traffic in the city has many obstacles to cross such as curbs 1 or steps. It is recommended to avoid obstacle jumps. It is important to anticipate and adapt your trajectory and speed to those of a pedestrian before crossing these obstacles. It is also recommended to get out of the vehicle when these obstacles become dangerous due to their shape, height or slippage.
- Get closer to your seller so he can refer you to an appropriate training organization.
- In any case, anticipate your trajectory and your speed while respecting the code of the road, the code of the sidewalk and the most vulnerable.
- Cross the protected passages while walking.
- Caution, the brake may become hot in use. Do not touch after use.
- Regularly check the tightening of the various bolted elements, in particular the wheel axles, the folding system, the steering system and the brake shaft.
- Eliminate any sharp edges caused by use.
- The self-tightening nuts as well as the other self-tightening fastenings may lose their efficiency and that they may need to be retightened.
- It is necessary to check that the steering system is correctly adjusted, that all connection elements (such as a folding system) are correctly tightened and not broken, and that the brakes and wheels are in good condition.
- Rider should be at least 15 years old and 5 feet tall.
- Keep safe braking distances during wet weather.
- It's strictly forbidden for users themselves to replace any friction components, wear parts, or other components.

Vibrations not exceed 2.5 m/s².

LpA and LWA do not exceed 70 dB(A)

Radio frequency: 2402MHz-2480MHz

Transmitting power: BT2. I :-4.44dBm, BLE:-5.26 dBm

WARNING! As with any mechanical component, a vehicle is subject to high stresses and wear. The various materials and components may react differently to wear or fatigue. If the expected service life for a component has been exceeded, it may break suddenly, therefore risking causing injuries to the user. Cracks, scratches and discoloration in the areas subject to high stresses indicate that the component has exceeded its service life and should be replaced.

WARNING: Keep plastic covering away from children to avoid suffocation.

WARNING

When a hoverboard and a kart (sold separately) are being used, it is NOT ADVISABLE to ride the combo uphill. If using on a steep incline above 5-100, a safety mechanism built into the hoverboard will activate, which will shut down your hoverboard automatically. If this happens, dismount your hoverboard, place it on a flat surface, wait 2 minutes, and then power your hoverboard on again.

WARNING

To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than

one rider.

RIDING YOUR ROCKER

FAILURE TO FOLLOW ANY OF THE FOLLOWING SAFETY PRECAUTIONS CAN AND MAY LEAD TO DAMAGE TO YOUR DEVICE, VOID YOUR MANUFACTURER WARRANTY, LEAD TO PROPERTY DAMAGE, CAUSE SERIOUS BODILY INJURY, AND CAN LEAD TO DEATH.

Before using your device, be sure to familiarize yourself with the operating procedures.


OPERATING YOUR DEVICE

Make sure the device is fully charged before your initial use.

For charging instructions, please follow details under CHARGING YOUR DEVICE.

Stand directly behind your device and place one foot on the corresponding foot mat (as described in the diagram below).

Keep your weight on the foot which is still on the ground, otherwise the device may begin to move or vibrate, making it difficult to step on evenly with your other foot. When you are ready, shift your weight to the foot already placed on the device and step on with your second foot quickly and evenly (as described in the diagram below).

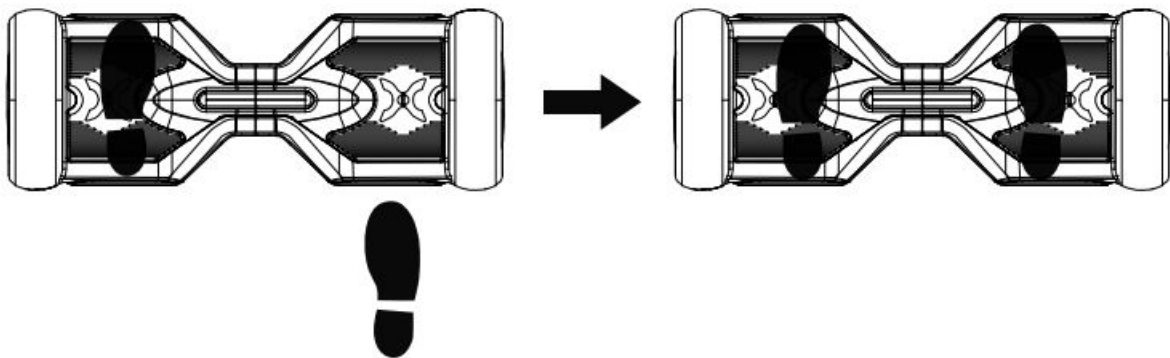

NOTES:

Stay relaxed and step on quickly, confidently and evenly. Imagine climbing stairs, one foot, then the other. Look up once your feet are even. The Rocker may vibrate or spin in one direction, if weight and pressure are applied to only one foot mat. THIS IS NORMAL.

Find your center of gravity. If your weight is distributed correctly on the foot mats and your center of gravity is level, you should be able to stand on your device just as if you were standing on the ground.

On average, it takes 3-5 minutes just to get comfortable standing on your device and maintaining proper balance. Having a spotter will help you feel more secure. The Rocker is an incredibly intuitive device; it senses even the slightest bit of motion, so having any anxiety or reservation about stepping on may cause you to panic and trigger unwanted movement.

When you first begin using your device, the fastest way to move in your desired direction is to focus in that direction. You will notice that just thinking about which way you would like to go will shift your center of gravity, and that subtle movement will propel you in that direction.

Your center of gravity determines which direction you move, accelerate, decelerate, and come to a complete stop. As described in the diagram below, tilt your center of gravity in the direction you wish to move.


To turn, focus on the direction you wish to turn and stay relaxed.

⚠ WARNING

Do not turn sharply or at high speeds to avoid danger. Do not turn or ride quickly along slopes, as it may cause injury.

As you get comfortable on the device, you will notice it becomes easier to manoeuvre. Remember at higher speeds, it is necessary to shift your weight to overcome the centrifugal force.


Bend your knees if you encounter bumps or uneven surfaces, then dismount and carry your Rocker to a safe operating surface.

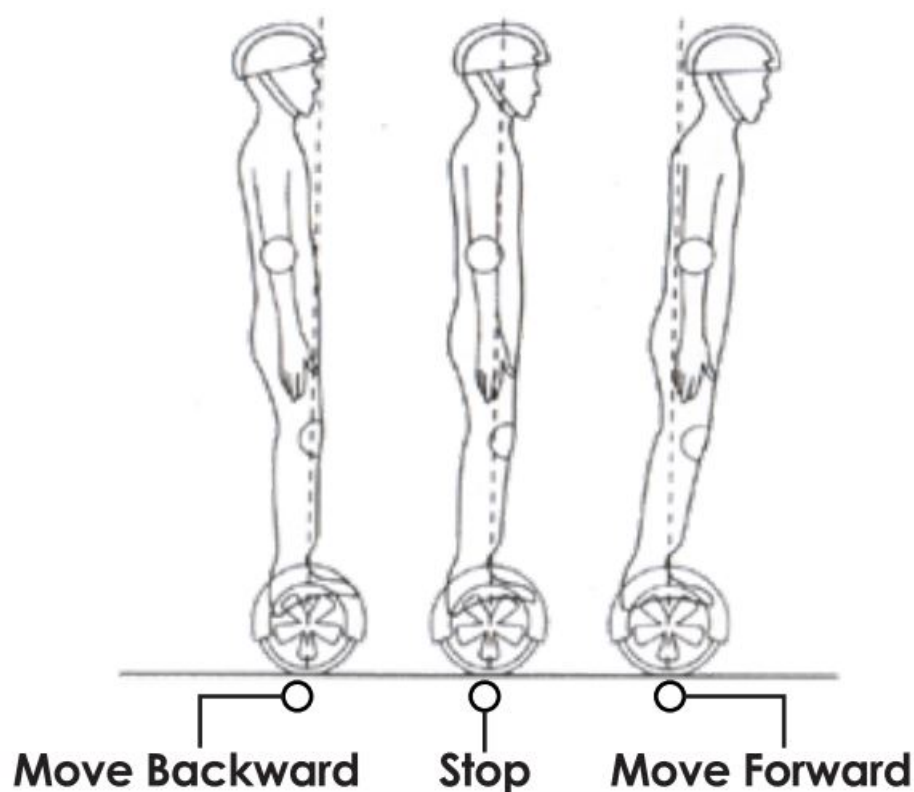

NOTES:

Try staying relaxed and focus on finding your center of gravity to maintain full control of your Hover-1 Rocker.

Dismounting your device can be one of the easiest steps, yet when done incorrectly, may cause you to fall. To properly dismount, from a stopped position, lift one leg up and set your foot back down on the ground (STEPPING BACK). Then step off completely as described in the following diagram.

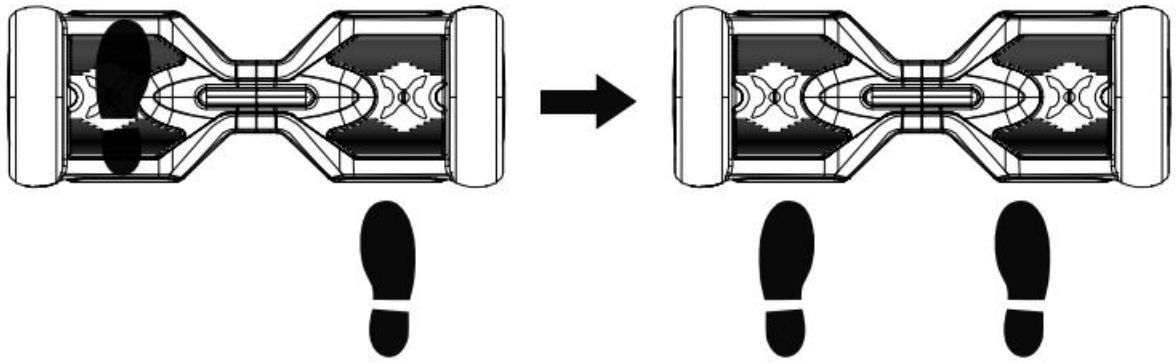

WARNING

Make sure to lift your leg completely off the foot mat to clear the device when stepping back to dismount. Failure to do so may send the Rocker into a tailspin.

WEIGHT AND SPEED LIMITATIONS

Speed and weight limits are set for your own safety. Please do not exceed the limits listed here in the manual.

- Maximum Weight: 220 lbs (100 kg)
- Minimum Weight: 44 lbs (20 kg)
- Maximum Speed: Up to 7 mph

WARNING

Overweight exertion on the Rocker may increase possibility of injury or product damage.

NOTES:

To prevent injury, when max speed is reached, the Hover-1 Rocker will beep to alert the user and tilt the rider slowly back.

OPERATING RANGE

The Rocker can travel a distance up to 12 miles on a fully charged battery in ideal conditions. The following are some of the major factors that will affect the operating range of your device.

- Terrain: Riding distance is highest when riding on a smooth, flat surface. Riding uphill and/or on rough terrain will reduce distance significantly.
- Weight: A lighter user will have further range than a heavier user.
- Ambient temperature: Please ride and store the device under recommended temperatures, which will increase driving distance; battery life, and overall performance of your device.
- Speed and Riding Style: Maintaining a moderate and consistent speed while riding produces maximum

distance. Traveling at high speeds for extended periods, frequent starts and stops, idling and frequent acceleration or deceleration will decrease overall distance.

BALANCE & CALIBRATION

IF YOUR ROCKER IS UNBALANCED, VIBRATING, OR NOT TURNING PROPERLY, YOU CAN FOLLOW THE BELOW STEPS TO CALIBRATE IT.

- First, place the Rocker on a flat, horizontal surface such as the floor or a table. The foot mats should be even with each other and not tilted forward or backward. Make sure the charger is not plugged in and the board is turned off.
- Press and hold the ON/OFF button for a total of 15 seconds. The scooter will turn on, lighting the battery indicator on the board.
- After the light flashes 5 times consecutively you may release the ON/OFF button.
- Turn the board off and then turn the board back on. Calibration will now be completed.

SAFETY ALERTS

While riding your Rocker, if there is a system error or illegal operation performed the device will prompt the user in a variety of ways.

You will notice the Running Indicator Light will turn RED and you will hear a beep sound alerting you to take precaution and cease operation, which may make the device stop suddenly.

The following are common occurrences where you will hear the Safety Alerts. These notices should not be ignored, but appropriate action should be taken to correct any illegal operation, failure or errors.

- Unsafe riding surfaces (uneven, too steep, unsafe, etc.)
- When you step on the device, if the platform is tilted more than 12 degrees forward or backward.
- Battery voltage is too low.
- The device is still charging.
- During operation, the platform self initiates to tilt due to excess speed.
- Overheating, or motor temperature is too high.
- The device has been rocking back and forth over 30 seconds.
- If the system enters protection mode, the alarm indicator will light up and the board will vibrate. This typically occurs when the battery is about to run out of power and stop abruptly.
- If the platform is tilted forward or backward more than 12 degrees, your Rocker will power off and stop suddenly, possibly causing the rider to lose balance or fall off.
- If any or both tires are blocked, the device will stop after 2 seconds.
- When the battery level has depleted below protection mode, the device engine will power off and stop after 15 seconds.
- While sustaining a high discharge current during use (such as driving up a steep slope for a long period of time), the device engine will power off and stop after 15 seconds.

⚠ WARNING

When the Rocker turns off during a Safety Alert, all operation systems will halt. Do not continue attempting to ride

the Rocker when the system initiates a stop. Turn your Rocker off and back on to unlock it from a Safety Lock.

CHARGING YOUR ROCKER

CHARGING THE DEVICE

- Ensure that the charging port is clean and dry.
- Make sure that there is no dust, debris or dirt inside the port.
- Plug the charger into a grounded wall outlet. The charging indicator light ON THE CHARGER will be green.
- Connect the cable with the power supply (1 OOV ~ 240V; 50/ 60 Hz).
- Align and connect the 3-pin charging cable into the charging port of the Rocker. DO NOT FORCE OR BEND THE CHARGING CABLE INTO THE CHARGING PORT, AS IT MAY CAUSE THE PRONGS TO BEND OR BREAK.
- Once attached to the board, the charging indicator light ON THE CHARGER should change to RED, indicating that your device is now being charged.
- When the RED indicator light on your charger turns to GREEN, then your device is fully charged.
- A full charge may take up to 5 hours. While charging, you will see a yellow flashing light on the scooter, which also indicates charging. Do not charge for more than 6 hours.
- After fully charging your Rocker, unplug the charger from your device and from the power outlet.
- Power off your Rocker when charging.

BATTERY CARE/ MAINTENANCE

BATTERY SPECIFICATIONS

Battery Type: Rechargeable lithium-ion battery

Charge Time: Up to 5 hours

Voltage: 36V

Initial Capacity: 4.0 Ah

BATTERY MAINTENANCE

The lithium-ion battery is built into the device. Do not disassemble the device to remove the battery or attempt to separate it from the device.

- When charging the device, please use the enclosed 3-pin charging cable or otherwise ensure that the battery charging conditions are met.
- Do not connect or attach the device or the battery to a power supply plug or directly to a car's cigarette lighter.
- Do not place the device or batteries near a fire, or into direct sunlight. Heating the device and/or the battery can cause additional heating, breaking, or ignition of the battery inside the device.
- Do not continue charging the battery if it does not recharge within the specified charging time. Doing so may cause the battery to become hot, rupture, or ignite.

To preserve natural resources, please recycle or dispose of batteries properly. This product contains lithium-ion batteries. Local, state, or federal laws may prohibit disposal of lithium-ion batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.

⚠ WARNING

Failure to follow the safety precautions listed below could lead to serious bodily injury and/or death.

- Do not attempt to modify, change, or replace your battery.
- Do not use your device if the battery begins to emit odor, overheats, or begins to leak.
- Do not touch any leaking materials or breathe fumes emitted.
- Do not allow children and animals to touch the battery.
- The battery contains dangerous substances, do not open the battery, or insert anything into the battery.
- Only use the charger provided by Hover-1 .
- Do not attempt to charge the device if the battery has discharge or emits any substances. In that case, immediately distance yourself from the battery in case of fire or explosion.
- Lithium-ion batteries are considered to be hazardous materials. Please follow all local, state and federal laws in regards to recycling, handling and disposing of Lithium-ion batteries.
- This battery charger can be used by children aged from 15 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Warning: This battery charger can't recharging non-rechargeable batteries.

During charging, the battery must be placed in a well-ventilated area.

⚠ WARNING

SEEK IMMEDIATE MEDICAL ASSISTANCE IF YOU ARE EXPOSED TO ANY SUBSTANCE THAT IS EMITTED FROM THE BATTERY.



Batteries and accumulators should not be disposed of with household waste. Please recycle them at the collect points A provided for this purpose. Contact the local authorities or your dealer for recycling advice. Proper disposal of old batteries and – accumulators helps preserve the environment and health.



FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CARE & MAINTENANCE

- Do not expose the device to liquid, moisture, or humidity to avoid damage to the product's internal circuitry.
- Do not use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperatures as this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts.
- Do not dispose of the device in fire as it may explode or combust.
- Do not expose the device to contact with sharp objects as this will cause scratches and damage.
- Do not allow the device fall from high places, as doing so may damage the internal circuitry.
- Do not attempt to disassemble the device.
- Use only the charger provided by Hover-1 .

WARNING

Avoid using water or other liquids for cleaning. If water or other liquids enter the Hover-1 Rocker, it will cause permanent damage to the internal components.

WARNING

Users who disassemble the Hover-1 Rocker scooter without permission will void the warranty.

WARRANTY

For warranty information, Please visit us at: www.hover-1.eu

Affix Serial Number Label Here:

Manufacturer: DGL GROUP, LTD
LE5 ITL, UNITED KINGDOM

TROUBLESHOOTING

For UK Customer Service, please contact +44 (0) 1355 241222 / escooters@letmerepair.co.uk

For other countries, please scan QR code below for more information.



<https://www.hover-1.com/europe-support>

WEEE DIRECTIVE



Following information is only for EU-member states: The mark shown to the right is in compliance with the Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE). The mark indicates the requirement NOT to dispose the equipment as unsorted municipal waste, but use the return and collection systems according to local law.

EC DECLARATION OF CONFORMITY

<https://drive.google.com/open?id=10hSqpUBP3MKQJZyWBsMtuLuQyQ2JUQJM>

CHARGER LABEL



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.



Double insulation



For interior use only



The polarity of the output terminals

CAUTION!

RISK OF ELECTRICAL SHOCK.
PLEASE DO NOT OPEN.
FOR INDOOR USE ONLY.
DRY LOCATION USE ONLY.
DO NOT REMOVE THIS TAG.

SCOOTER LABELS

X HOVER-1™ ROCKER

Model: EU-UK-RCKR

Input: 42 V \approx 1.0A

Maximum Weight: 220 lbs / 100 kg

Minimum Weight: 44 lbs / 20 kg

Maximum Speed: Up to 7 mph / 11.3 km/h

Weight: 18.95 lbs / 8.6 kg

Motor: 200 W

Battery Capacity: 4.0 Ah

Battery Type: Rechargeable Lithium-ion battery

Contains FCC ID: 2AANZRCKR BT ID: D042258

Made in: Shenzhen, Guangdong, China

Ref: 20200709EL MFG Date: 07.20

PO: 15875/76/77

Use only with HLT-118C-4201000 supply unit

Manufacturer: DGL GROUP, LTD

LE5 ITL, UNITED KINGDOM

MADE IN CHINA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING - To reduce the risk of injury, user must read instruction manual. Store indoors when not in use.



Documents / Resources



[HOVER-1 ROCKER Iridescent Hoverboard](#) [pdf] Instructions

ROCKER, Iridescent Hoverboard, ROCKER Iridescent Hoverboard, Hoverboard