



HUUM 16204 Drop Embedding Flange User Manual

[Home](#) » [HUUM](#) » HUUM 16204 Drop Embedding Flange User Manual 

Contents



- [1 HUUM 16204 Drop Embedding Flange](#)
- [2 Installation](#)
- [3 Dimension](#)
- [4 EMBEDDING FLANGE](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)




HUUM 16204 Drop Embedding Flange



Installation

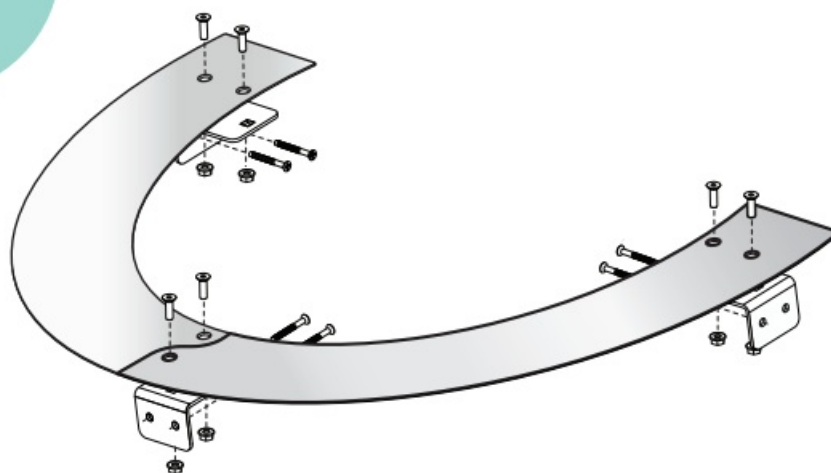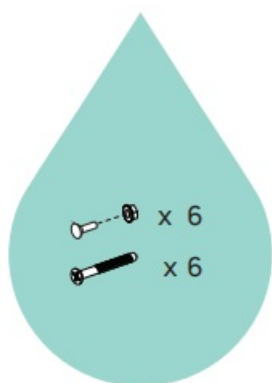

Dimension

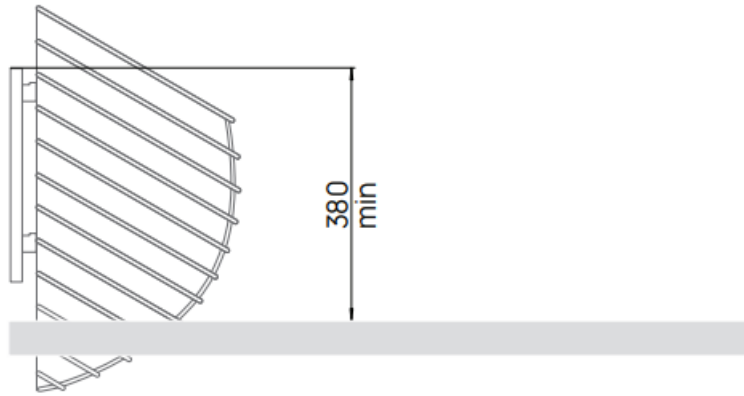

EMBEDDING FLANGE

- Place the plates of embedding flange on the desired place of the boarding. Make sure that the end edges of the embedding flange are against the wall.
- Mark the inner edge of the embedding flange on the boarding of the sauna platform.
- Follow the marked line and draw the second contour 52 mm outwards. We recommend using a 52 mm wide wooden block for that purpose.
- Cut the wider contour by following the aperture.
- Attach the brackets of the embedding flange to the plates by using bolts and nuts.
- Install the embedding flange to the cut aperture, adjust the cut edge, if necessary.
- Attach the brackets to the boards of the platform with screws.
- You can now install the DROP heater. Follow the minimum height from the figure below:

#huumsauna

www.huum.eu

Documents / Resources

	HUUM 16204 Drop Embedding Flange [pdf] User Manual 16204 Drop Embedding Flange, 16204, Drop Embedding Flange, Embedding Flange, Flange
--	---

References

-  [Sauna heaters and innovative sauna controllers – HUUM](#)