

ICOM UT133 Bluetooth Communication Internal Board Installation Guide

[Home](#) » [ICOM](#) » ICOM UT133 Bluetooth Communication Internal Board Installation Guide 

Contents

- [1 ICOM UT133 Bluetooth Communication Internal Board](#)
- [2 INSTALLATION](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)


ICOM

ICOM UT133 Bluetooth Communication Internal Board




Before the installation:


Prepare 2 sponges that comes with the IIC-A120.

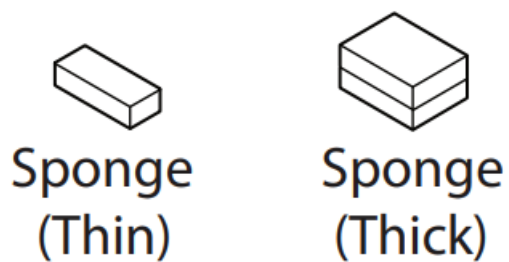**INSTALLATION**


1. Turn OFF the transceiver and disconnect the DC power cable from the power supply.
2. Remove the top cover.

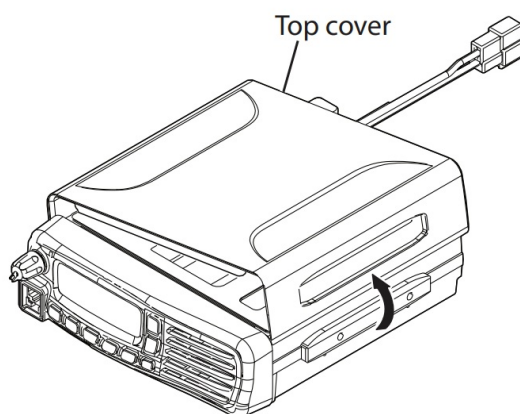


3. Remove the protect sheet from the Thin sponge, and then apply it to the PCB.

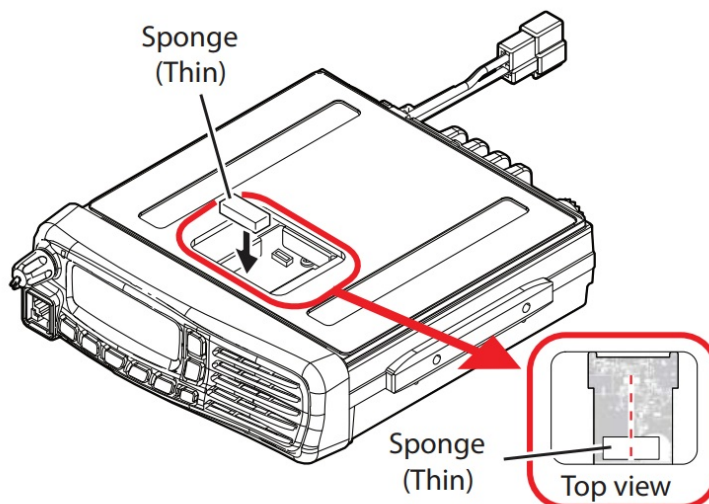


4. Remove the protection sheet from the thick sponge, and then apply it to the U-133.

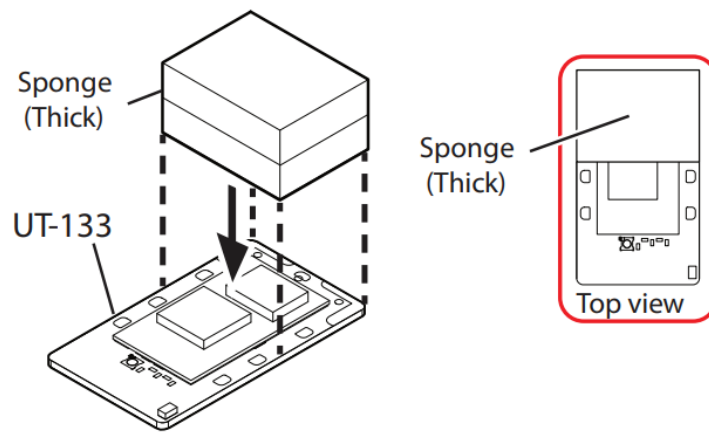

5. Attach the UT-133 to the connector on the PCB

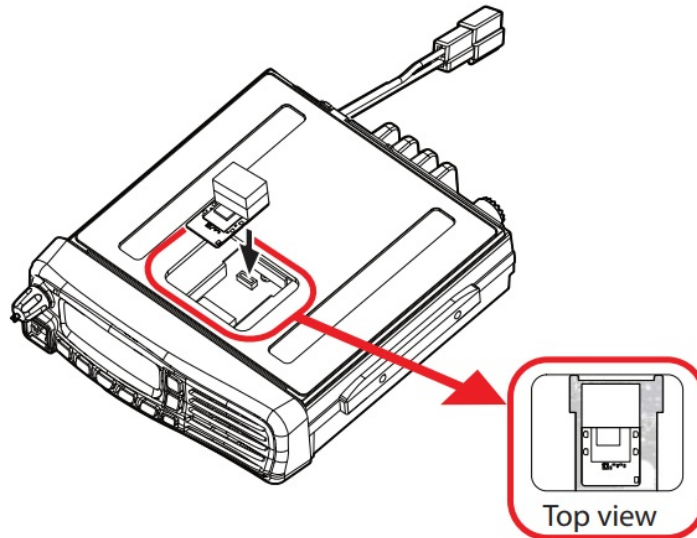

6. Attach the top cover.

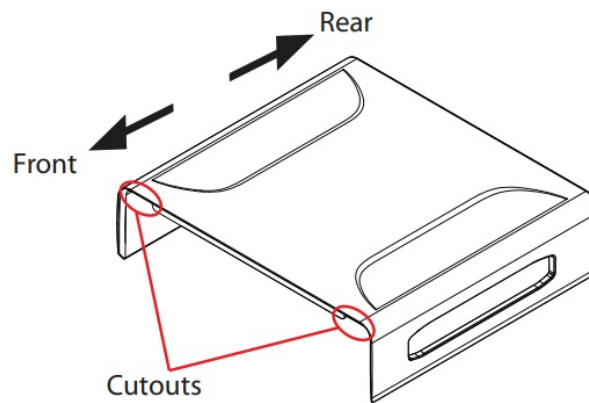

American Communication Systems

Discover the Power of Communications <http://www.ameradio.com>



