



# IMOU Life Motion Sensor User Guide

[Home](#) » [imou](#) » IMOU Life Motion Sensor User Guide 

## IMOU Life Motion Sensor User Guide




## Contents

- 1 Package Contents
- 2 Overview
- 3 Set Up the Device
- 4 Pairing Setup
- 5 Installation
- 6 Cautions and Warnings
- 7 Specifications
- 8 Regulatory Information
- 9 Documents / Resources
  - 9.1 References

## Package Contents

- Sensor x 1
- 3M Sticker x 1
- Quick Start Guide x 1
- Warranty Card x1


## Overview

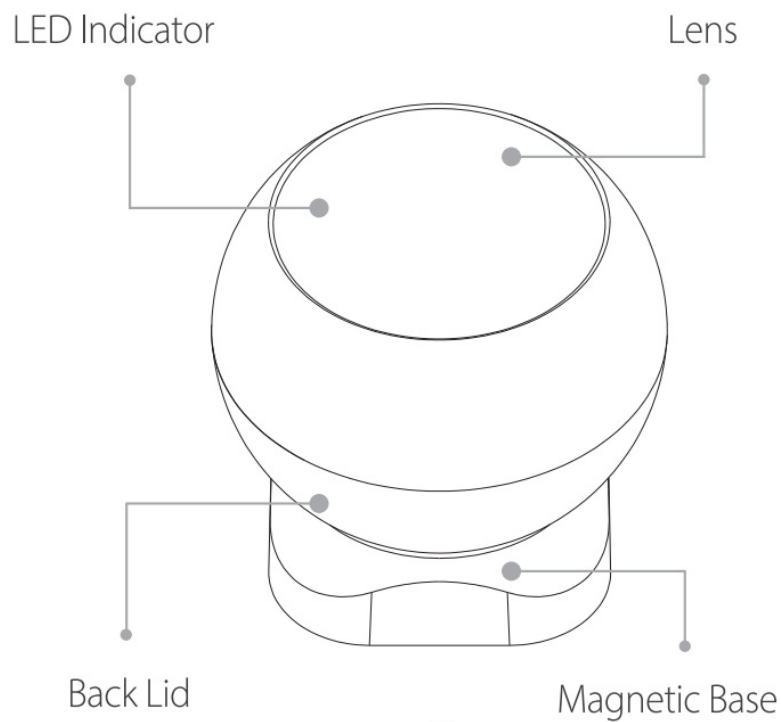



## Set Up the Device

### Get Imou Life App

Scan the QR code below or search for “Imou Life” in the app store to download and install the app.

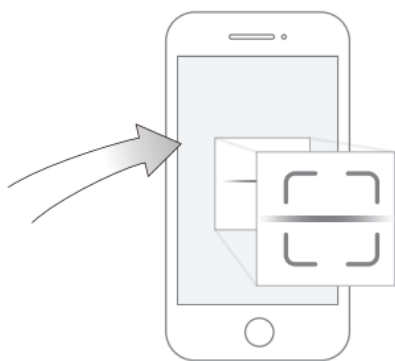


If you already use the app, make sure that you are using the latest version.

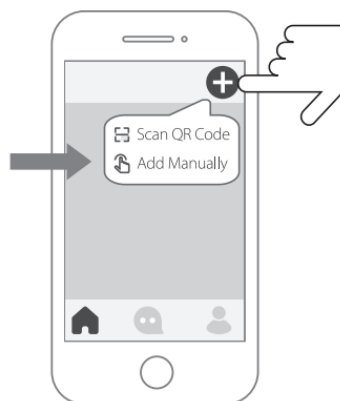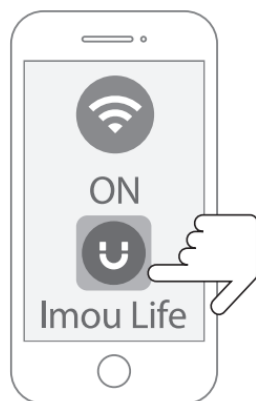


## Pairing Setup

Place the device close to the gateway. Make sure the gateway is powered on. Press the button on the front of the gateway and wait until the indicator slowly flashes blue.


1. Twist the mounting base anticlockwise to remove it.

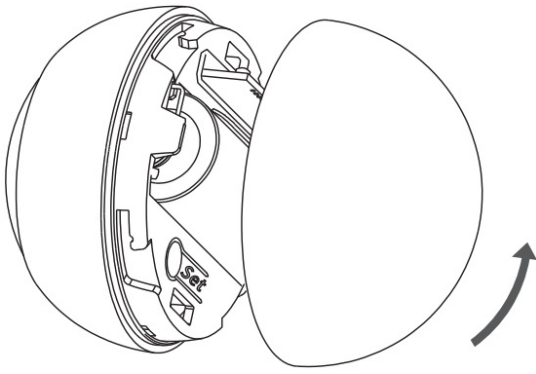

2. Pull out the battery insulation film.

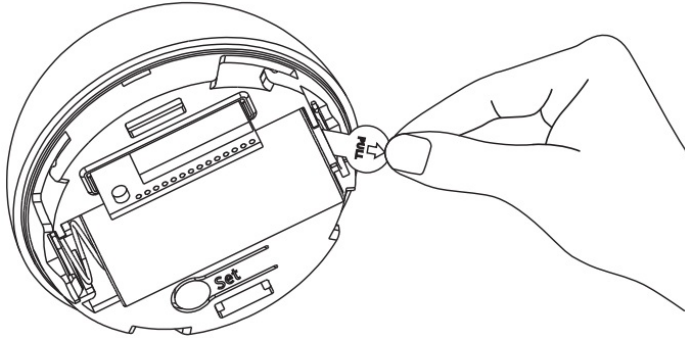


3. Hold down the Set button for 5 s until the LED flashes green to enter the pairing mode.

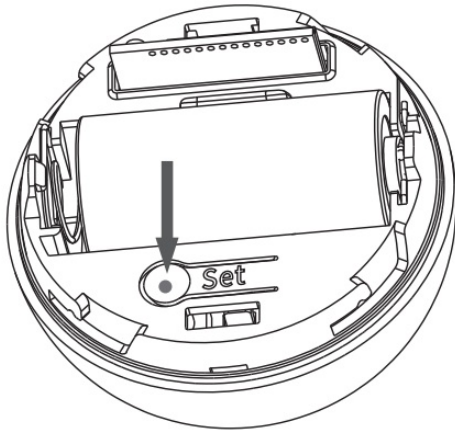


Use the Imou Life app to scan the QR code on the manual and follow the instructions on the app.

## Installation

1. Install the device on the wall about 7.22 ft (220 cm) above the floor

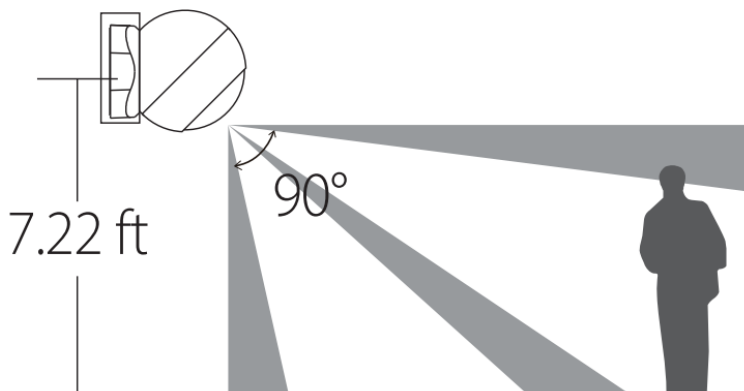

2. Remove the protective film from the 3M adhesive sticker, and attach the magnetic base to where you want to install

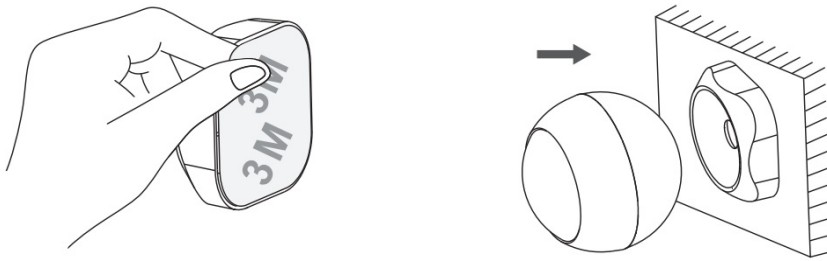

## Cautions and Warnings

- Make sure you don't aim the device at heat sources, like an air conditioner, electric fan, refrigerator or oven.
- Avoid direct sunlight.
- Attach the device at the spot where your pets can't get close to it by climbing on the furniture.

## Specifications

- **Wireless technology:** Zigbee
- **Working voltage:** 3VDC (with CR123A battery)
- **Operating temperature:** -14°F to +131°F (-10°C to +55°C)
- **Low battery notification:** Supports
- **Sensing length:** 26.25 ft (800 cm)
- **Sensing angle:** 90°
- **Installation height:** 7.22 ft (220 cm)

## Regulatory Information

### European Directives Compliance



This product complies with the applicable CE marking directives and standards:

- Low Voltage (LVD) Directive 2014/35/EU.
- Electromagnetic Compatibility (EMC) Directive 2014/30/EU.
- Restrictions of Hazardous Substances (RoHS) Directive 2011/65/EU and its amending Directive (EU) 2015/863.

A copy of the original declaration of conformity may be obtained from Imou.

The most up to date copy of the signed EU Declaration of Conformity (DoC) can be downloaded from:

<https://en.imoulife.com/support/downloadCen-ter/eudoc>

### CE-Electromagnetic Compatibility (EMC)

This digital equipment is compliant with Class B according to EN 55032.

### CE-Electromagnetic Compatibility (EMC)

This digital equipment is compliant with Class B according to EN 55032.

### CE-Safety

This product complies with IEC/EN/UL 62368-1, Audio/video, information and communication technology equipment Part 1: Safety requirements and IEC/UL 60950-1: Safety of Information Technology Equipment.

#### Declaration of Conformity CE (Only for the product has RF function)

Hereby, Imou declares that the radio equipment is compliant with Radio Equipment Directive (RED) 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://en.imoulife.com/support/downloadCenter/eudoc>.

#### RF Exposure Warning

(Only for the product has RF communication function)

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.



[service.global@imoulife.com](mailto:service.global@imoulife.com)



<https://www.imoulife.com/support/faq>




<https://www.imoulife.com>



@imouglobal

# Imou

## Documents / Resources

	<a href="#">IMOU Life Motion Sensor</a> [pdf] User Guide Life Motion Sensor, Life, Motion Sensor, Sensor
---	---

## References

- [User Manual](#)

