

inateck KB04122 Bluetooth Keyboard



# inateck KB04122 Bluetooth Keyboard Instruction Manual

[Home](#) » [inateck](#) » inateck KB04122 Bluetooth Keyboard Instruction Manual 

## Contents



- [1 inateck KB04122 Bluetooth Keyboard](#)
- [2 Product Diagram](#)
- [3 Bluetooth Pairing](#)
- [4 Optional Settings](#)
- [5 Multi-Touch Gestures](#)
- [6 Shortcut Keys](#)
- [7 LED Indicator](#)
- [8 Product Specification](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)

**inateck<sup>®</sup>**

**inateck KB04122 Bluetooth Keyboard**



**Product Diagram**

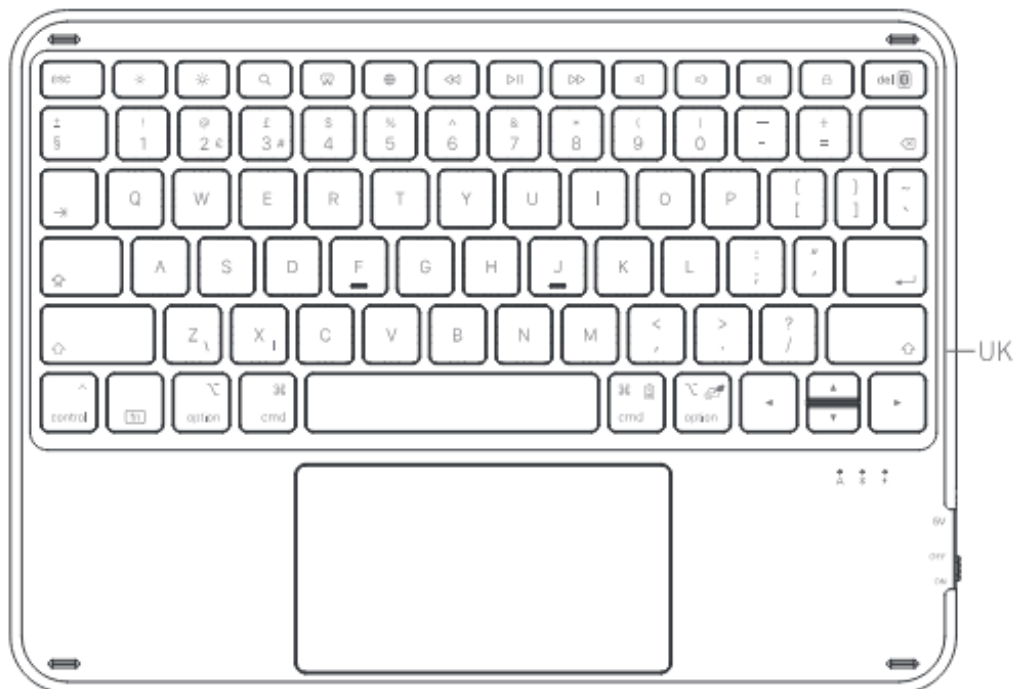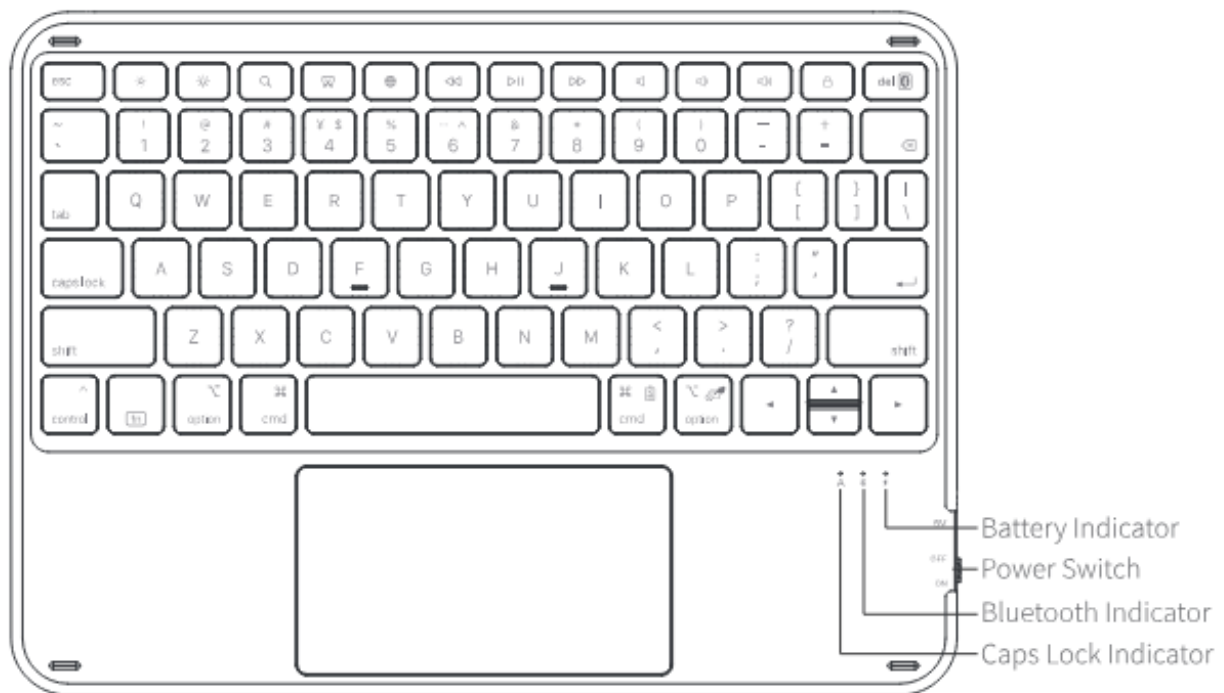

## Bluetooth Pairing

- **Step 1:** Put the iPad case on and slide the keyboard switch to the On position. Hold down f



simultaneously and then the keyboard will enter pairing mode with a blinking blue indicator light.

- **Step 2:** On your iPad, go to Settings > Bluetooth, turn on Bluetooth, and then "Inateck KB04122" will show up in Other Devices"
- **Step 3:** Tap "Inateck KB04122" to pair it with your iPad. The Bluetooth indicator will go off in seconds, which means that Bluetooth pairing is completed.

## Note:

### • 1)Set Up Your iPad:

For a better user experience, please follow steps below to set up your iPad at first use once Bluetooth pairing is completed.

Go to Settings > General > Trackpad and drag the slider to the middle of the tracking speed. Go to Settings > General > Trackpad and turn on “Tap to Click” and “Two Finger Secondary Click” Go to Settings > Accessibility > Touch and turn off AssistiveTouch. Go to Settings > General > Gestures and enable the toggle for the “Four and Five Finger Swipe” setting.


## Optional Settings



**Steps to stop Caps Lock changing your keyboard language:** Go to Settings > General > Keyboard > Hardware Keyboard and turn off Switch Languages using Caps Lock.

### Steps to disable the double tap period shortcut:

Go to Settings > General > Keyboard > Hardware Keyboard and click the switch to turn on “.” Shortcut.


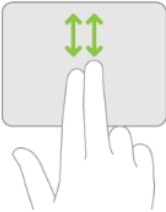



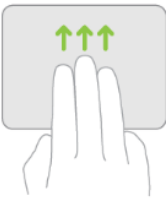
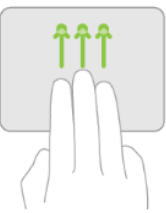

### • 2) Fix Bluetooth Pairing Problems:

**Step 1:** Go to Settings > Bluetooth, find “Inateck KB04122” in My Devices and tap the info button  next to it, then tap “Forget This Device”. If there are multiple pairing records related to the keyboard, please clear all of them.

**Step 2:** Hold  +  simultaneously for 3 seconds and then the three indicators will blink for 3 times once the factory reset is completed.

**Step 3:** Pair your Inateck KB04122 with your iPad.

## Multi-Touch Gestures

	<b>Drag:</b> Click and hold the item until it lifts up and drag it to another location with another finger.		<b>Scroll:</b> Slide two fingers up or down to scroll.
	<b>Swipe:</b> Swipe left or right with two fingers.		<b>Zoom in or out:</b> Pinch with two fingers to zoom in or out.
	<b>Secondary click:</b> Click or tap with two fingers.		<b>Show desktop:</b> Swipe up with three fingers.
	<b>App Exposé:</b> Swipe up with three fingers and pause.		<b>Swipe between full-screen apps:</b> Swipe left or right with three fingers.

## Shortcut Keys

esc	Undo		Brightness-		Brightness+
	Search		Take a screenshot		Switch keyboard layout
	Last track		Play/Pause		Next track
	Mute		Volume-		Volume+
	Lock				



## Common Keyboard Shortcuts

⌘+X	Cut	⌘+C	Copy	⌘+V	Paste
⌘+A	Select all	⌘+Space	Search	control+Space	Switch keyboard layout
⌘+Tab	Switch between Apps				



## LED Indicator

Indicator	Status	Meaning
Caps Lock Indicator	Solid	Caps Lock on
	Off	Caps Lock off
Bluetooth Indicator	Blinking	Bluetooth Pairing
	Off	Bluetooth connected or unconnected
Battery Indicator - Red	Blinking	Low battery
	Solid	Charging
Battery Indicator - Green	Solid	Fully charged

## Restore Factory Defaults

Hold  +  simultaneously for 3 seconds and then the three indicators will blink for 3 times once the factory reset is completed.

## Check Battery Level

Hold  +  cmd simultaneously to check the battery level according to the blinking frequency of the red battery indicator.

Blinking Frequency	Battery Level
Once	0-25%
Twice	25%-50%
Three Times	50%-75%
Four Times	75%-100%

## Charging

When the battery level is under 20%, the battery indicator will blink in red. Please recharge the keyboard in time. The recommended charging voltage and current are 5V and 250mA respectively. To recharge the keyboard, you can connect the included USB cable to the charger of your cellphone or the USB port of a computer. The keyboard will be fully charged in 2~3 hours. The indicator will stay in red when the keyboard is charging and turn green when it's fully charged.

## Sleep Mode

When KB04122 is left idle for 10 minutes, it will enter sleep mode and the Bluetooth connection will be disrupted. The connection can be rebuilt with a press of any key.

**Note:** Tapping the trackpad cannot wake up the keyboard.


Product Specification

Bluetooth Version	Bluetooth 5.3
Bluetooth Range	10 m
Charging Time	2-3h
Operating Time	About 55h
Operating Temperature	-10°C ~ +55°C
Bluetooth Frequency Range	2402-2480MHZ
Actuation Force	60 ± 10g
Battery Capacity	500mAh

Packing List

- KB04122 \*1
- Charging Cable \*1
- Instruction Manual \*1

Documents / Resources

	<a href="#">inateck KB04122 Bluetooth Keyboard</a> [pdf] Instruction Manual 2A2T9-KB04122, 2A2T9KB04122, kb04122, KB04122 Bluetooth Keyboard, KB04122, Bluetooth Keyboard, Keyboard
--	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.