



ISO Tunes LINK Bluetooth Hearing Protector User Manual

[Home](#) » [ISO Tunes](#) » ISO Tunes LINK Bluetooth Hearing Protector User Manual 

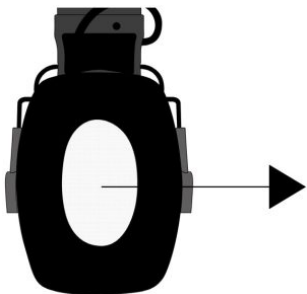





Contents

- [1 Fitting](#)
- [2 Location of Controls](#)
- [3 Charging](#)
- [4 Batteries](#)
- [5 Power On/Off](#)
- [6 Bluetooth Pairing](#)
- [7 Dual Connect Mode](#)
- [8 Pairing Reset](#)
- [9 Music](#)
- [10 Phone Calls](#)
- [11 Siri/Google Assistant](#)
- [12 FCC](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)

Fitting

The headset is labeled and adjustable for your convenience.

1. Remove the white foam padding from each earcup.	2. Check the earcups for Right and Left labels.
	
3. Adjust the earcups, headband, and wires for a snug but comfortable fit.	4. Make sure the earcup labels correspond to the sides of your head and place them on your ears.
	

Location of Controls



1. Next Track
2. Previous Track
3. Volume Up
4. Volume Down
5. Multi-Function Button (MFB)
6. Bluetooth Mic
7. Charge Port
8. LED Charging Indicator
9. Battery Cover Latch

Charging



The Lithium Battery Pack comes fully installed. Please make sure the Battery Pack Cable is plugged into the Battery Pack Port (2).

The Lithium Battery Pack holds a 14+ hour charge.

<p>1. Slide the Battery Cover Latch (9) “up” towards the headband to release the Battery Cover.</p>	<p>2. When using the Lithium Pack, always make sure the Battery Pack’s cable is plugged into the Battery Pack Port in the battery compartment (please note, the battery comes fully installed).</p>
	
<p>3. Please charge with the included cable by plugging it into the Charging Port (7). *Charging voltage should not exceed 5v.</p>	<p>4. While the cable is plugged into the Charging Port (7), LED Charging Indicators (8) will let you know how charged the Lithium Battery</p>
	<p>LED Charging Indicators</p> <ul style="list-style-type: none"> ● Solid Red = Charging (Cable Plugged In) ● Solid Green = Fully Charged (Cable Plugged In)

Batteries

The headset can also be powered by 3 AAA Batteries (not included).
3 AAA Batteries hold a 24+ hour charge and will need to be replaced.

<p>1. Slide the Battery Cover Latch (9) “up” towards the headband to release the Battery Cover.</p>	<p>2. Remove the Lithium Battery Pack and place your 3 AAA Batteries. When using AAA batteries, please ensure you have properly oriented the batteries.</p>
	

Power On/Off



Power On: Press and hold MFB (5) for 3 seconds (you will hear “Power On”)

Power Off: Press and hold MFB (5) for 3 seconds (you will hear “Power Off”)



Bluetooth Pairing

After powering on, the headphones will automatically enter Pairing Mode. (you will hear “Bluetooth Pairing Mode”)

<p>1. Open your Bluetooth settings on your device.</p>	<p>2. Search "ISOtunes Link." Pair and connect. Once connected you will hear "Bluetooth Connected."</p>
	

Dual Connect Mode

This product can connect to two devices at the same time such as your phone and your computer.

1. Pair and Connect to your first device as described in Bluetooth Pairing on page 6.
This will be device A.
2. Press and hold the MFB (5) for 7 seconds until you hear "Bluetooth Pairing Mode" (you will hear Power Off, keep holding the button until you hear "Bluetooth Pairing Mode")
3. Pair and Connect to the 2nd device as described in Bluetooth Pairing on page 6.
This will be device B.
4. On Device A, go to the Bluetooth menu and manually connect to ISOtunes Link.
5. Both devices are now connected.

Pairing Reset

Press and hold the Volume Up **(3)** and the Volume Down **(4)** for 4 seconds.
The product will enter pairing mode.

Music



Play/Pause: Short single press MFB (5)

Next Track: Short single press Next Track (1)

Previous Track: Short single press Previous Track (2)

Volume Up: Short single press Volume Up (3)

Volume Down: Short single press Volume Down (4)

Phone Calls



Answer/End Call: Short single press MFB (5)

Reject Call: Press and hold MFB (5) for 1 second

Siri/Google Assistant

Press and hold MFB (5) for 1 second

Fitting



ANSI S3.19-1974 Table (NRR Table)

A1: Frequency, Hz	125	250	500	1000	2000	3150	4000	6300	8000	NRR
A2: Grand Mean Attenuation, dB	20	22	26	30	38	43	49	44.1	42	
A3: Standard Deviation, dB	3.8	2.9	2.1	2.5	3.7	2.9	3.7	4.1	4.7	

EN352-2:2002 Table (SNR Table)

B1: Frequency (Hz)	125	250	500	1000	2000	8000
B2: Mf (dB)	20	22	27	31	38	49
B3: sf (dB)	3.7	2.9	2.6	3.1	3.6	4
B4: APVf	16	19	24	27	34	45

APVf=MF-SF9 (dB)

B5: SNR=30dB

H=34dB M=27dB L=21dB

Important

Please read, understand, and follow all safety information.

Fitting

1. Pull the earcups apart
2. Place the product on your head
3. Adjust the earcup position by extending the headband to ensure a good fit around the ears

Introduction

Thank you for purchasing ISOtunes® LINK Professional Noise-Isolating Earmuffs. These earmuffs have been specifically designed for use in noisy environments – allowing you to block out much of the surrounding noise so that you can listen to your music or talk on the phone with less interruption. This product has been tested and

meets the European Safety Standard EN352-1:2002, EN352-8:2002, and the ANSI & NIOSH standards for a hearing protector, with a Single Number Rating (SNR) of 36 dB with a Noise Reduction Rating (NRR) of 27 dB. Full testing details are available in the Noise Attenuation section of this booklet.

Noise Attenuation

APPROVAL: ISOtunes® LINK is tested and approved in accordance with ANSI S3.19-1974 Specifications and the European Safety Standard EN 352-1:2002 and EN352-8:2002.

ANSI

S3.19-1974

The level of noise entering a person's ear, when ISOtunes® LINK headphones are worn as directed, is closely approximated by the difference between the A-weighted environmental noise level and the Noise Reduction Rating (NRR). Improper fit of this device will reduce its effectiveness in attenuating noise. Consult the enclosed instructions for proper fitting.

A1: Frequency (Hz)

A2: Mean Attenuation (dB)

A3: Standard Deviation (dB)

Example:

1. The surrounding noise level measured at the ear is 100 dB.
2. The NRR of ISOtunes® LINK is 24 dB.
3. The noise level entering the ear is approximately equal to 76 dB.

Please note that the NRR is based on the attenuation of continuous noise and may not be an accurate indicator of the protection attainable against impulsive noise, such as gunfire.

EN352

The EU declaration of conformity can be accessed at www.isotunes.co.uk/EU-declaration-of-conformity.

The products will be certified to the Product standard EN 3522:2002 and the PPE Regulation 2016/425.

B1: Frequency (Hz)

B2: Mean Attenuation (dB)

B3: Standard Deviation (dB)

B4: Assumed Protection Value (APV) (dB)

B5:

H = Hearing protection estimation for high-frequency sounds ($f \geq 2000\text{Hz}$)

M = Hearing protection estimation for medium frequency sounds ($500\text{ Hz} < f < 2000\text{Hz}$)

L = Hearing protection estimation for low-frequency sounds ($f \leq 500\text{Hz}$)

SafeMax™ Technology

ISOtunes® LINK incorporates SafeMax™ Technology, therefore its volume output has been limited to 85 decibels (IT-30) and 79 decibels (IT-31). ISOtunes® devices with SafeMax™ Technology are OSHA, NIOSH, and ANSI compliant and, when designated, meet the European Safety Standard EN352.

Cleaning and Maintenance

- Clean your ISOtunes Link by gently wiping them with a clean, damp cloth with mild soap.
- Do not immerse the hearing protector in water.
- Do not use abrasive cleaning solvents to clean the hearing protector.

If the hearing protector gets wet from sweat or rain, please discontinue use and turn the earmuff outwards and allow it to dry.

The ear cushions and foam liners should be regularly inspected for deterioration, cracking, or other damage.

Materials:

- Ear Cushion: PU + Memory Foam•
- Casing: ABS
- Key Pad: Silicon
- Headband: Stainless Steel + TPE
- Headband Bracket: ABS

This product comes with a Lithium Battery Pack. The Battery Pack can be recharged by plugging one end of the included cable into a USB outlet and the other end into the product's charging port located underneath the rubber cover on the bottom of the left earcup.

The batteries can be checked by removing the battery cover. Slide the latch to release the door.

The lithium battery pack can be removed from the product and replaced. Lift the battery out. Unplug the battery pack cable. To reinstall, put the battery pack into the compartment and plug the Battery pack cable into the battery pack port. Ensure the battery pack cable is plugged into the battery pack cable port for proper product performance.

Alternatively, three AAA batteries can power the device.

Completely remove the Lithium Battery Pack from the product and install the AAA batteries as indicated on the product. Do not attempt to use the Lithium Battery Pack and AAA batteries at the same time.

Automatic Power Off

ISOtunes® LINK will turn off automatically after 4 hours of use.

WARNINGS

ISOtunes® LINK does an excellent job of blocking outside noise. As such, IStunes® LINK should NOT be used in environments where users need to be fully aware of their surroundings for personal safety reasons. For example, do NOT use them while driving a car or riding a motorcycle. Similarly, do NOT use them when riding a bicycle outside. The user is solely responsible for ensuring that IStunes® LINK is used ONLY in safe environments.

These earmuffs are intended to protect your ears against hazardous noise.

The audibility of warning signals at a specific workplace may be impaired while using the entertainment facility.

This product may be adversely affected by certain chemical substances. Further information may be sought from the manufacturer.

The fitting of hygiene covers to the cushions may affect the acoustic performance of the ear-muffs.

Recommendations

The wearer should ensure the product is properly cleaned and dry before and after use. Storage should be in a clean and dry location between -20 °C and 50 °C. The battery should not be fully discharged before long-term storage.

The wearer should ensure that:

- The hearing protector is fitted, adjusted, and maintained in accordance with the manufacturer's instructions.
- The hearing protector is worn at all times in noisy surroundings.
- The hearing protector is regularly inspected for serviceability.

If these recommendations are not adhered to, the protection afforded by the hearing protector will be severely impaired.

The size range for the earmuff is S M L.

The mean mass of the product is 405g.

Date of Obsolescence: 3 years from purchase date.

Not to be used in Explosive Atmospheres.

Additional Notes

ISOtunes® LINK is compliant with Bluetooth® V4.2. We do not guarantee the compatibility of all functions on every Bluetooth®-enabled device. Please check your device's user manual for compatibility and functionality.

Please note, the hearing protector provides an entertainment audio facility. The ear-muff provides audio signal sound pressure level limitation which limits the entertainment audio signal to 82 dB(A) effective to the ear. This limit is maintained for Bluetooth signal inputs which are standard to the Bluetooth A2DP, HFP, and HSP specifications. There is no analog line input on this product.

For additional information about ISOtunes Link, please visit www.ISOtunes.com/LinkManual. For additional information or questions about ISOtunes® products or spares and accessories, please contact our support team.

Replacement Parts: Hygiene Kit (ear-cushions and foam inserts)

Model Number: IT-83

Replace ear-cushions.

1. Put your finger between the ear cushions and foam.
2. Pull the Foam Earcushion away from the earcup.
3. Remove the foam inserts in the earcup.
4. Install the new foam inserts
5. Snap the new ear-cushion in place on the earcup

FCC

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the users' authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. End-users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

UK & Europe

uk-eurosupport@isotunesaudio.com

North America

support@isotunesaudio.com

1-844-396-3737

Monday-Friday 9-5 ET

Documents / Resources



[ISO Tunes LINK Bluetooth Hearing Protector](#) [pdf] User Manual
LINK, Bluetooth Hearing Protector