

iTOMA CKS208 Alarm Clock with App Control User Guide

Home » iTOMA or iTOMA CKS208 Alarm Clock with App Control User Guide 🖺

Contents

- 1 iTOMA CKS208 Alarm Clock with App Control
- 2 CKS208 Quick Guide
- **3 ALARM SET**
- 4 SNOOZE/ STOP/ TURN OFF THE ALARM
- **5 Documents / Resources**
 - **5.1 References**
- **6 Related Posts**



iTOMA CKS208 Alarm Clock with App Control



CKS208 Quick Guide

TIME SET

• Time \rightarrow Day \rightarrow Year \rightarrow 12/24H

1. STEP 1











Press **CLOCK SET** for 2 seconds to entry time setting.

Press ▲ or ▼ to adjust the Minute. Press ◄ or ► to adjust the Hour.

2. **STEP 2**











Press CLOCK SET to next, Month / Date segment will blink.

Press ▲ or ▼ to adjust the Date.

Press ◄ or ▶ to adjust the Month.

3. **STEP 3**











Press **CLOCK SET** to next, Year segment will blink.

Press I or I to adjust the Year.

4. STEP 4













Press **CLOCK SET** to next, 12H / 24H segment will blink.

Press

or

to adjust the time format.

5. **STEP 5**

Press CLOCK SET again to sotre the time setting, or wait for 40 seconds.

ALARM SET

Time → Volume → Alarm working days

1. STEP 1



Press and hold the AL1 / Al2 for 2 seconds to entry alarm setting.



Press **I** or **I** to adjust the Hour.



Press ▲ or ▼ to adjust the Minute.

2. **STEP 2**



Press AL1 / AL2 again, the current volume level will blink.




the volume.

Press ▲ or ▼ to adjust



3. STEP 3

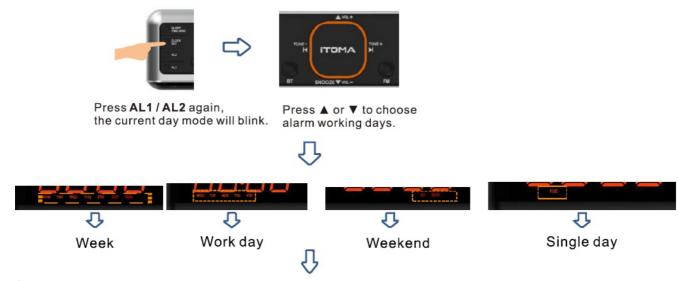

4. STEP 4

Press AL 1 / AL2 again to store the alarm setting, or wait for 40 seconds.

SNOOZE/ STOP/ TURN OFF THE ALARM

1. **SNOOZE**: Alarm will pause 9 minutes for each press, 6 times at most.



2. Stop the alarm: Press AL1 / AL2 when the alarm is ringing. 1138



3. Turn off the alarm completely: Press AL1 / AL2 repeatedly until all the alarm indicator OFF from the display.



Documents / Resources



iTOMA CKS208 Alarm Clock with App Control [pdf] User Guide

CKS208 Alarm Clock with App Control, CKS208, Alarm Clock with App Control, Clock with App Control, App Control, Control

References

- O iTOMA Company Limited
- User Manual

Manuals+, Privacy Policy