

**Contents** [[hide](#)]

- [1 JBC Biron Nano Handle](#)
- [2 Product Usage Instructions](#)
- [3 Packing List](#)
- [4 Connection with B-IRON Station](#)
- [5 ESD Safe Connection](#)
- [6 Features](#)
- [7 Compatible Cartridges](#)
- [8 Inserting C115 Cartridges](#)
- [9 Cartridge Exchanger](#)
- [10 Tool Connection](#)
- [11 Operation](#)
- [12 Tool Status](#)
- [13 Safety Cap](#)
- [14 JBC Software](#)
- [15 App Versions](#)
- [16 App Installation](#)
- [17 Downloading the Tool Firmware Update File](#)
- [18 Executing the Tool Firmware Update File](#)
- [19 Maintenance – Station and Tools](#)
- [20 Safety – Battery](#)
- [21 Specifications](#)
- [22 Warranty](#)
- [23 Frequently Asked Questions](#)
- [24 Documents / Resources](#)
 - [24.1 References](#)



JBC Biron Nano Handle



Specifications:

- Model: BN-A
- Components: Grip Fitters (2 units), Manual (1 unit Ref. 0033729)
- Additional Accessories (Not included, sold separately): Cable USB-A to USB-C, C115 Cartridge, Cartridge Adapters
- Features: Portable Display, Bluetooth Connection, ESD Safe Connection, Power Socket

Product Usage Instructions

Safety Guidelines:

- Read the manual thoroughly before using the product.
- The tool remains operational even if the display is off as long as the batteries are charged.
- The tool can be manually switched off and on by tapping the power button on the display.

Inserting C115 Cartridges:

- Push the cartridges inside the handle until the reference ring rests against the sealing plug.
- Use C115 Cartridge Adapters if needed to store them in the cartridge holder.

Tool Charging and Cartridge Exchanging:

1. Place the tool in the cartridge exchanger to insert/change cartridges safely without switching off the tool.
2. Cartridges are held in place by retention clamps.
3. To charge the tool, place it in the charging holder. Adjust volume using the left button on the display.

This manual corresponds to the following reference: BN-A

Packing List

The following items are included:



**Nano Handle
for B-IRON** 1 unit



**Grip* for
B-IRON Handles** 1 unit
**Available as B1510 (ref. 0031510),
which comes with 4 grips.*



Grip Fitters 2 units



**Sealing Plug* for
B-NANO Handle** 1 unit
**Available as ref. OB5000, which
comes with 10 sealing plugs.*



Manual 1 unit
Ref. 0033729

Available as ref. OB5000, which comes with 10 sealing plugs.

Important

Please read this manual and its safety guidelines thoroughly before using the product.


Note: Even if the display is turned off, the tool remains operational as long as the batteries are charged, even when the cartridge is removed.

The tool can be manually switched off and on by tapping the tool power button on the display (see page 9).

The tool turns off automatically only under the following conditions:

- The tool is out of the charging holder (without safety cap on) and remains completely still for 5 minutes (see page 8).
- The tool has the safety cap on and remains completely still for 60 minutes (see page 9).
- The tool is in the charging holder, and the charging base is disconnected from the mains.

Connection with B-IRON Station

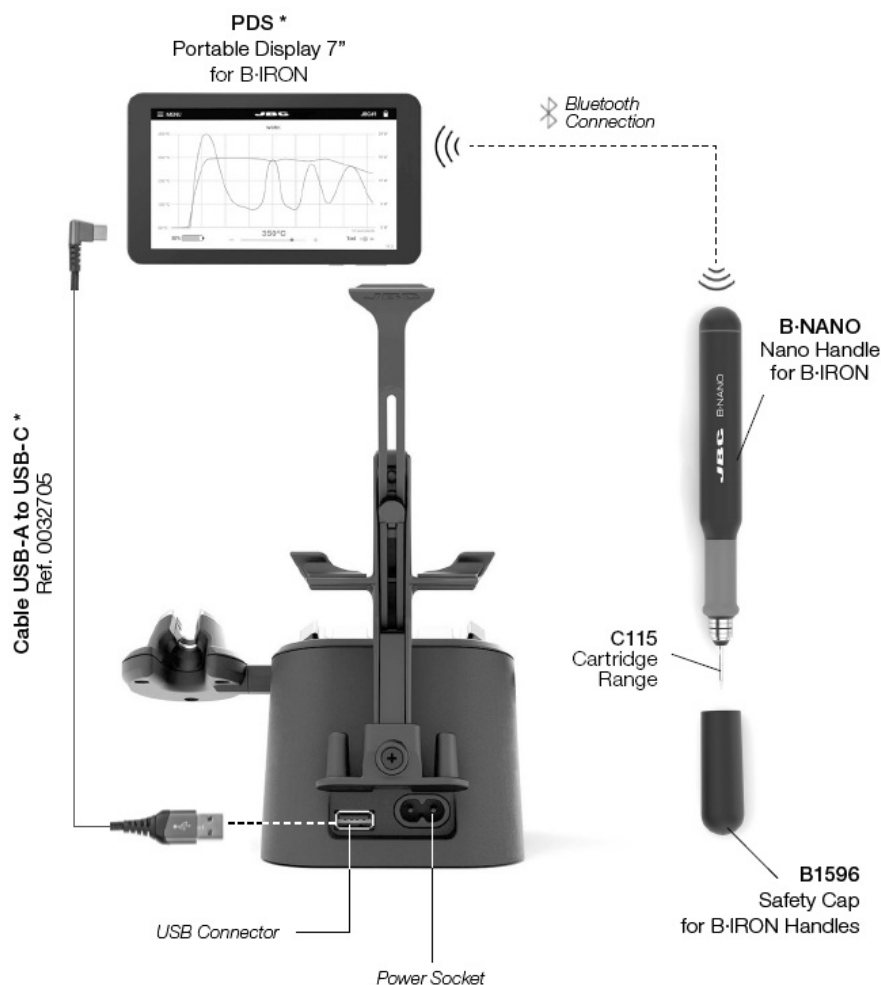


ESD Safe Connection

Note: All B-IRON components comply with CE standards, but the tool by itself is not grounded. Therefore, to comply with ESD regulations, the user of the B-IRON tool must be ESD-compliantly grounded.

JBC offers ESD tablemats, earthing cables, plug,s and wristbands. More information on www.jbctools.com.


Features

B·NANO performs up to 120 SMD soldering joints per charge and is the ideal tool for applications in laboratories or performing individual soldering jobs that require the highest precision in hard-to-reach areas. Note: To charge the tool a B-IRON station is needed.

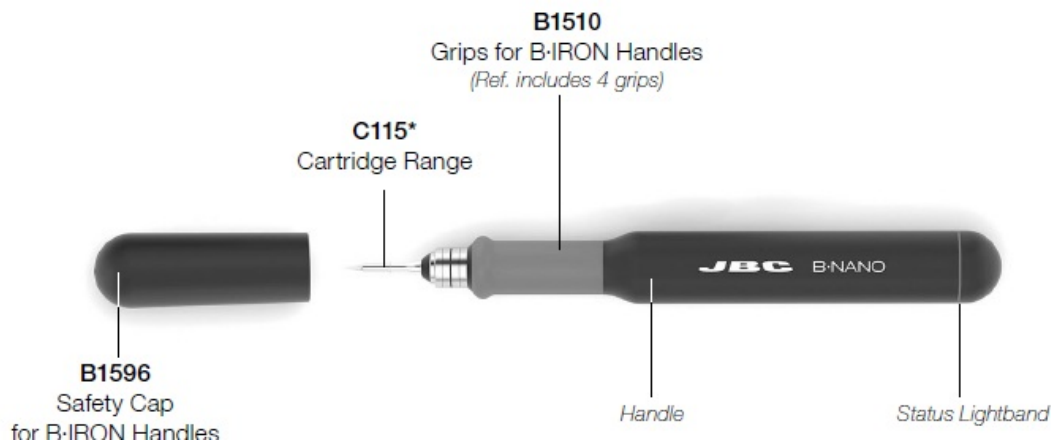


Compatible Cartridges

B·NANO Handle works with C115 Cartridges. Find the model that best suits your soldering needs on www.jbctools.com

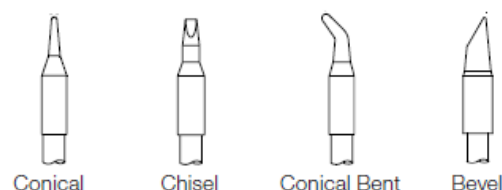

Inserting C115 Cartridges

Push the cartridges inside the handle until the reference ring rests against the sealing plug.

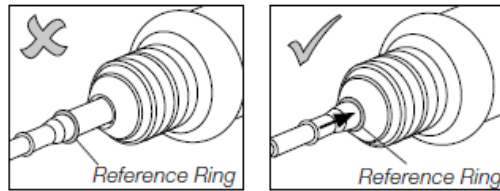


C115 Cartridge Adapters

(Ref. B0643 includes 4 adapt.rs)


Since C115 Cartridges have a smaller diameter than C210 Cartridges, adapters must be used to store them in the cartridge holder.

These adapters must simply be inserted from above into the slots of the cartridge holder.

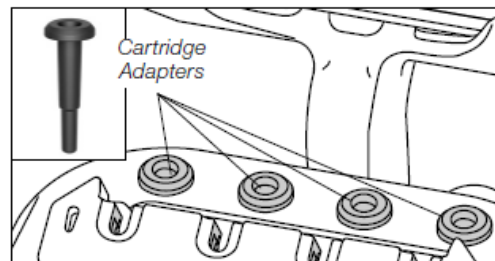

Cartridge Insertion and Tool Charging

Cartridge Exchanger

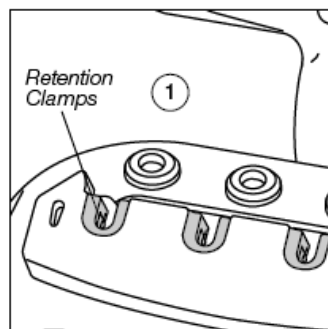


The cartridge exchanger allows inserting / changing cartridges safely without switching the tool off. Cartridges are held in place thanks to the retention clamps (1).

The exchanger is suitable for C115 and C210 cartridges.


C115 Cartridges

The holding area of C115 Cartridges is delimited by the two rings at the cartridge shaft

(x).

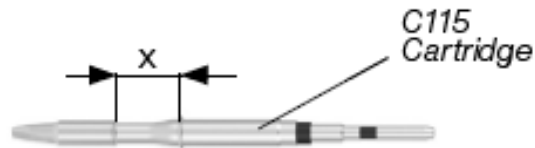


Cartridge Inserting

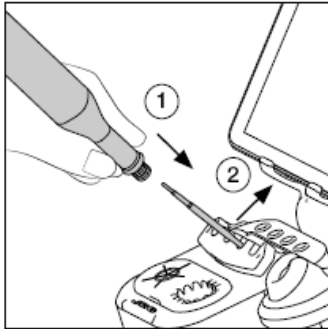


Place the tool over a cartridge and press the tool down to insert the cartridge (1). To release the tool with the cartridge inserted from the extractor, lift the tool upward (2).

Cartridge Fixing

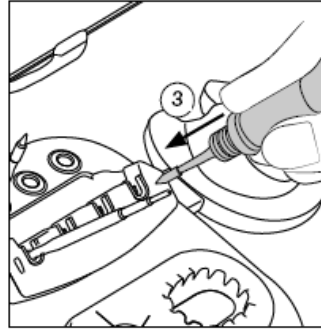

Gently press the tip against the holes on the sides of the cartridge exchanger (3) to ensure that the cartridge is appropriately inserted.

Tool Charging

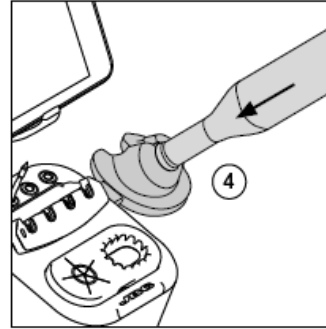

Place the tool in the charging holder (4) to charge it. A beep will sound when the tool is properly placed and charging. The volume can be adjusted using the left button on the display.

Note: Cartridges must be inserted up to the second ring for a proper connection and function.

Important: Charge the tool completely before using it for the first time.

A full charge takes:

- 30 min for B•100
- 60 min for B•500
- 30 min for B-NANO
- 45 min for B-TWEEZERS

Tool Connection

Make sure that the charging base is connected to the mains.

Note: Tools supplied with a station are already connected to the station.

Scanning another tool (this process can take a while):

- Place the tool in the charging holder to activate it.
- The status light band color indicates the charge level (see table below).
- If the scanning process does not run automatically, tap “scan” (6) on the display while the tool remains in the charging holder. When the tool is shown in the device list on the display, select it (11) and tap “connect” (7). Now the tool is ready for soldering.

Tool search function:

When in doubt of which tool corresponds to the tool’s name, use the tool search function. Tap on the magnifying glass symbol (8) next to the tool’s name. The light band on the corresponding tool blinks blue for five seconds to identify it.

Working with two tools (works also for charging bases with only one charging holder):

It is possible to connect up to two tools at the same time. If a tool is already connected, first disconnect it from the device by selecting “Menu” (9) and tapping on “Disconnect”. Place the second tool in the charging holder and scan it (6). The second tool is also shown in the device list on the display (10). To work with two tools, select one from the left-hand column (11) and the other one from the right-hand column (10). Then tap on “connect” (7).

Status Lightband

The status lightband on the tool indicates its status (see table on the right).




Color	Tool Status
Green	More than 50% charged

Orange	Between 20% and 50% charged
Red	Less than 20% charged
Green blinking	Charging (more than 50% charged)
Orange blinking	Charging (between 20% and 50% charged)
Red blinking	Charging (less than 20% charged)
No color	Safety cap on the handle and/or power off
Blue blinking	The Locate Tool function is activated

Operation

- Thanks to the intelligent heat management, the cartridge tip recovers temperature extremely quickly.
- This allows reducing the tip temperature when the device is not in use, resulting in a longer tip lifespan.
- When the tool enters Sleep (1) or Hibernation (2) Modes, the tip temperature lowers automatically below the solder-melting-point temperature.

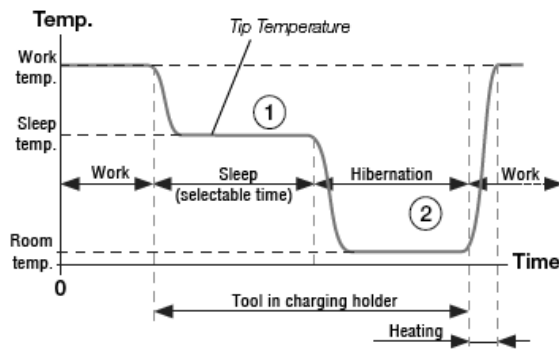

Tool Status

Tip Temperature

The tool can go into a number of statuses under different circumstances (see the diagram on the next page). Depending on the status, the cartridge tip reaches different temperatures:

Tool Status	Tip Temperature
Sleep and charging	Cools down to the set Sleep temperature. Selectable between 70 °C and 150 °C.
Hibernation and charging	Cools down to room temperature.
Working	Heats up to the set work temperature.
Resting without a cap	Cools down to room temperature (after 5 min of being completely still).
Tool with a cap on	Cools down to room temperature.
Hibernation	Cools down to room temperature.
Shut off	Remains at room temperature (tool is shut off).

Sleep and Charging

Sleep Mode can be activated/deactivated (1). If it is activated and the tool is placed in the charger, the tip cools down to sleep temperature, and the tool keeps charging.


Hibernation and Charging

If Sleep Mode is not activated and the tool is placed in the charger, it goes into Hibernation.

The tip cools down to room temperature, and the tool keeps charging.



Tool Status

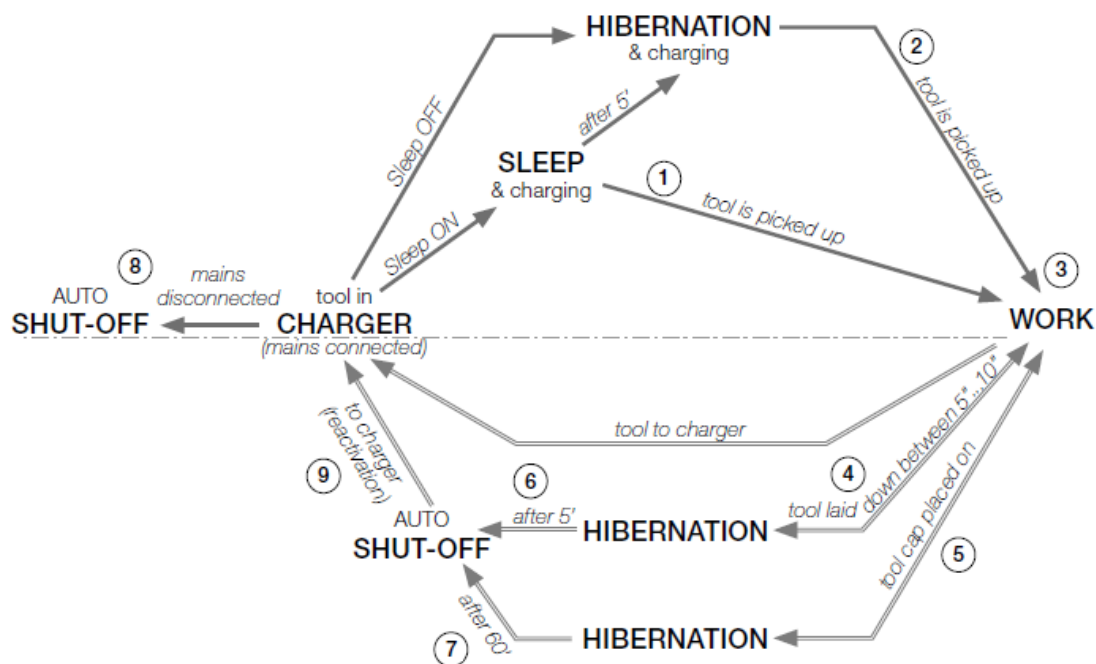

Work

When the tool is taken out of the charger while in Sleep (1) or Hibernation (2) Modes, the cartridge tip heats up to the set work temperature and the tool is ready to use (3).

Hibernation

The tool goes into Hibernation Mode in two different cases:

- a) After working, the tool is laid down (4) and rests for between 5 and 10 seconds (time is adjustable).

- b) After working, when placing the cap on the tool (5).

Note: Before the tool enters Hibernation Mode, it can be picked up to work with it, and the cartridge tip heats up to work temperature.

Auto Shut-off

The tool shuts off automatically in three different cases:

- a) When the tool (without the tool cap) is laid down and remains completely still in Hibernation Mode for 5 minutes (6).
- b) When the tool (with the tool cap on) remains completely still in Hibernation Mode for 60 minutes (7).
- c) When the tool is in the charger and the charging base is disconnected from the mains (8).

Tool Status

Tool Reactivation


Once the tool has automatically shut off, place it back in the charging holder (9) to reactivate it (see diagram on previous page).

Manual Tool Shut-Off

Besides the “automatic shut-off” feature, the tool can also be manually switched off by tapping the tool’s power button on the display.

When it is switched off, the cartridge cools down to room temperature.

Note: To switch the tool back on, tap the same button on the display.

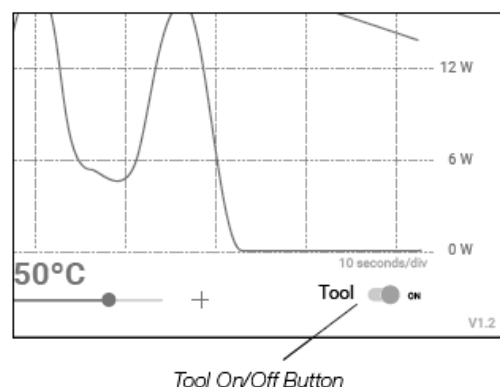

Safety Cap

Safe Tool Transportation

Thanks to the tool's safety cap, B-IRON tools can be carried around safely, even with the cartridge inserted.


When the cap is placed onto the tool, it goes into Hibernation Mode immediately, and the cartridge tip cools down to room temperature.

Note: The purpose of the cap is to allow safe transport, not storage.

Safety Cap Holder

While the tool is in use, the safety cap can be stored on the cap holder located on the back of the charging base.

There is space for two caps.

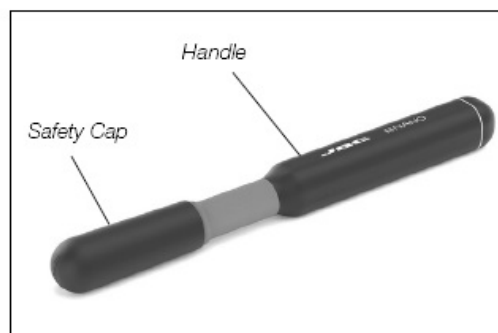

JBC Software

No installation or initial download is required for newly purchased JBC products. Both JBC display and tools come with their current software/firmware installed and updated, and are ready to use.

Note:

App: If a third-party display (tablet or smartphone) is used, the B-IRON app must be downloaded from JBC's web page and installed on the device.

Firmware: The tool's firmware is not automatically updated, and the updates must be carried out manually by the user. To do so, follow the instructions on the next page.

App Versions

Make sure that the required app version is installed on the display (tablet or smartphone):

- Handles require app versions 1.6 or higher.
- Tweezers require app versions 1.7 or higher.

App Installation

- On JBC's portable display (Android), the B-IRON app is already installed.
- On the user's smartphone or tablet (Android / iOS), go to the App Store/Play Store and search for "JBC B-IRON" in the search bar. Note: Internet connection is required to download the app.

Alternatively, scan these QR codes to access the B-IRON app page directly:



App Update

- **Display with Internet connection (Android / iOS)**
 - Update the app via Google Play (Android) or the App Store (OS).
- **Display without Internet connection (Android)**
 - Download JBC's installer program to another device with an Internet connection

from  JBC's website: <https://www.jbctools.com/jbcsoftware.html>.

Installer

Then copy the downloaded program to the internal storage of the display used with B-IRON. Access the internal storage of the display and run the downloaded program. Once the program is completed, the app will be updated to the latest version.

Note: For JBC displays, swipe down to open the internal storage folder.

Downloading the Tool Firmware Update File

Display with Internet connection:

Download the firmware update file to the display used with B-IRON from <https://www.jbctools.com/jbcsoftware.html>. Go to the internal folder and unzip the downloaded file.

Display without Internet connection:

Download the firmware update file to another device with an Internet connection from JBC's website: <https://www.jbctools.com/jbcsoftware.html>, and unzip the downloaded file.

Then do as described in the table.

PDS		
JBC's display (Android)	Other Android devices	iOS devices
Copy the unzipped files onto the device used with B-IRON:		
Folder:	Folder:	Path:


\Internalsharedstorage\Android\data\es.infinitysource.jbc_soldering.JBCBiron\files	\Internalsharedstorage\Android\data\com.jbctools.jbcbiron\files	Files > On my iPad > JBC B.i ron 
--	---	--

Executing the Tool Firmware Update File

- Tool firmware updates are not executed automatically; they must be carried out by the user.
- On the display you are using with B-IRON, and with the latest app version installed, access the B-IRON app:
- Select the tool you want to update. Then, in the main menu,u select “update”.

Note: At least one tool must be connected to see the expanded menu options.

Main menu with expanded menu options

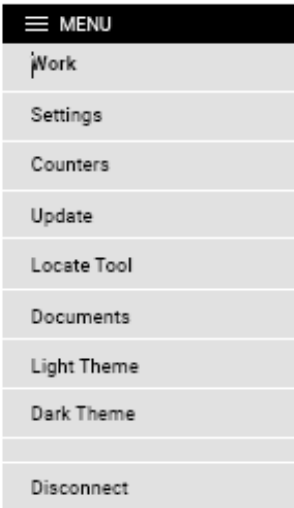

Executing the Tool Firmware Update File (continuation)

If the downloaded tool firmware update file contains a newer version than the one already installed, the current and new versions are displayed (1). Tap “Update” to start the update (2).

The update process takes about 10 minutes.

Note: If the firmware update is interrupted, the app automatically recognizes this and starts a new update process. “Device needs recovery” appears in the top left corner of the display. Press the “Update” button (2) in the pop-up window to continue the firmware update.

- The B-IRON status light continuously changes its color during the update process.
- Once the update is completed, “Tool updated” (3) will be displayed.
- If “No new version available” is displayed (4), no update is possible or required.



Replacement Parts for B-NANO Handles



B1510
Soft Foam Grips for B-IRON
Handles
Reference comes with 4 grips



B1596
Safety Cap for B-IRON
Handles
Reference comes with 1 cap




OB5000
Sealing Plugs for B-NANO
Handles
*Reference comes with
10 sealing plugs*

Maintenance – B-IRON Handles


Replacing Soft Foam Grips – B1510 includes 4 grips

Inserting Fitters

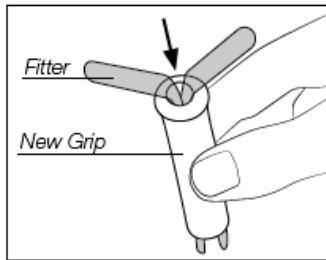


Insert the fitters into the new grip.

Assembling Grips

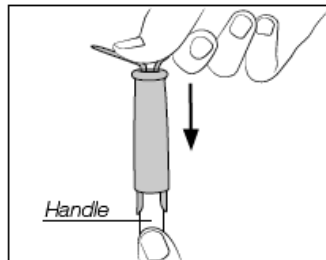

Push the grip with the fitters onto the handle.

Removing Fitters

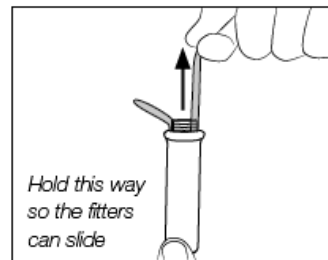

To remove the fitters, hold the grip and pull the fitters out. Use pliers if necessary.

Sealing Plugs


The sealing plug prevents undesirable flux vapors or particles from entering the handle, and its usage is highly recommended. If the sealing plug is not used, this can lead to incorrect cartridge contact and may render the tool unusable.

Note: Check the condition of the plug periodically and replace it as soon as wear or cracking is detected.


Handle	Sealing Plug Ref.
B-NANO	OB5000*
B-100 and B-500	OB4000*

Replacing Sealing Plug for B-NANO Handles – OB5000 comes with 10 sealing plug.s


For B-NANO handles, the use of the sealing plug is mandatory. Without the use of the sealing plug, the cartridges cannot be properly inserted.

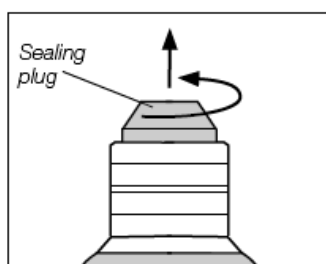

Remove the worn sealing plug by unscrewing it by hand.

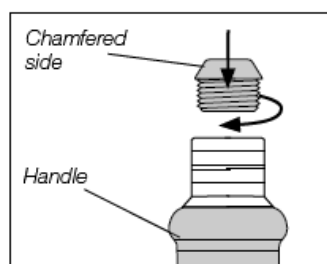

Position the chamfered side upwards and screw the new sealing plug into the handle bushing until it stops.

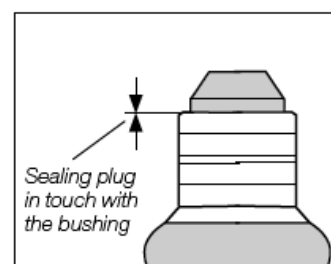

Make sure the sealing plug is placed correctly. The shoulder of the plug must be in touch with the bushing.

Maintenance – Station and Tools

Before carrying out maintenance, always extract the cartridge from the tool and disconnect the charging base from the mains. Allow the equipment to cool down.

- Use a damp cloth to clean the casing and the tool. Alcohol can only be used to clean the metal parts.
- Periodically check that the metal parts of the tool and charging holder are clean so that the charging works properly.
- Keep the tip surface clean and tinned prior to storage in order to avoid tip oxidation. Rusty and dirty surfaces reduce heat transfer to the solder joint.
- Do not use liquids such as alcohol, thinner, or benzene to clean the portable display.
- Repairs should only be performed by a JBC authorized technical service.



Safety – Battery

It is imperative to follow safety guidelines to prevent electric shock, injury, fire, or explosion.

- **Caution:** This product contains lithium-ion batteries. Mishandling or improper use may result in fire, explosion, or personal injury.
- Always use the provided charger. Do not use damaged chargers or batteries.
- Never attempt to disassemble or modify the batteries or the product. Doing so may lead to electric shock, fire, or damage to the product.
- In the event of damage, leakage, or overheating of the batteries, discontinue use immediately and contact customer support or the JBC technical service facility.
- Dispose of devices with batteries inside responsibly according to regulations. They must be disposed of by local regulations so that they can be recycled.
- Do not throw devices with batteries into household waste, and do not dispose of them in fire or water.

Safety

It is imperative to follow safety guidelines to prevent electric shock, injury, fire, or explosion.

explosion.

- Do not use the units for any purpose other than soldering or rework. Incorrect use may cause a fire.
- The power cord must be plugged into approved bases. When unplugging it, hold the plug, not the wire.
- Do not attempt to dismantle or open the housing of the tool as it may cause damage.
- Do not work on electrically live parts.
- The tool should be placed in the charging holder when not in use to charge the batteries.
- The soldering tip, the metal part of the tool and the charging holder may still be hot even when the station is turned off.
- Do not leave the tool unattended when it is on.
- Avoid flux coming into contact with skin or eyes to prevent irritation.
- Be careful with the fumes produced when soldering.
- Keep your workplace clean and tidy. Wear appropriate protection glasses and gloves when working to avoid personal harm.
- Utmost care must be taken with liquid tin waste, which can cause burns.
- This appliance can be used by children over the age of eight and also persons with reduced physical, sensory or mental capabilities or lack of experience provided that they have been given adequate supervision or instruction concerning the use of the appliance and understand the hazards involved. Children must not play with the appliance.
- Maintenance must not be carried out by children unless supervised.
- Do not expose the portable display to high temperatures, humidity or dust. Avoid direct sunlight.
- Do not drop the portable display or the tool, as it may cause damage or malfunction.
- Do not disconnect your device when it is in file transfer mode.
- Do not use the portable display in places where wireless communications are restricted.

Specifications

B·NANO
Nano Handle for B·IRON
Ref.: **BN-A**

- Peak Power (Tool):	15 W
- Battery:	Li-Ion 7.4 V / 120 mAh
- Charge Time:	30 minutes
- Selectable Temperature:	100 - 450 °C / 210 - 840 °F
- Idle Temp. Stability (still air):	±1.5 °C / ±3 °F
- Temp. Accuracy:	±3% (using reference cartridge)
- Connections:	Bluetooth Low Energy (BLE)
- Ambient Operating Temp:	10 - 50 °C / 50 - 122 °F
- Tool Weight (w/o cap):	32 g / 0.07 lb
- Total Net Weight:	66 g / 0.15 lb
- Total Package Dimensions/Weight:	220 x 75 x 30 mm / 110 g
(L x W x H)	8.66 x 2.95 x 1.18 in / 0.24 lb

Complies with CE standards.
ESD safe (to comply with ESD requirements, see page 3).

Warranty

JBC's 2-year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labor.

Warranty does not cover product wear or misuse. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

This product should not be thrown in the garbage.

By the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.

- 0033729-200625
- www.jbctools.com

Frequently Asked Questions


- **Q: How do I know if the tool is charging properly?**

A: A beep will sound when the tool is properly placed in the charging holder and is charging.

- **Q: Can I use C115 Cartridges without adapters?**

A: No, adapters must be used to store C115 Cartridges in the cartridge holder due to their smaller diameter.

Documents / Resources

 <p>JBC www.jbcusa.com INSTRUCTION MANUAL</p> <p>B/NANO Nano Handle for BIRON</p>	<p>JBC Biron Nano Handle [pdf] Instruction Manual</p> <p>0033729, ID-246008, Biron Nano Handle, Biron, Nano Handle, Handle</p>
--	--

References

- [User Manual](#)

0033729, Biron, Biron Nano Handle, Handle, ID-246008, JBC, Nano

JBC Handle

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.