



Jelly Comb MS04 Wireless Mouse with 3 Adjustable DPI User Manual

[Home](#) » [Jelly Comb](#) » Jelly Comb MS04 Wireless Mouse with 3 Adjustable DPI User Manual 

Jelly Comb MS04 Wireless Mouse with 3 Adjustable DPI User Manual



Contents

- [1 Package contents](#)
- [2 Quick Start Guide](#)
- [3 The Key Function Introduction](#)
- [4 Product features](#)
- [5 Data Parameter](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

Package contents


- Wireless Mouse

- Nano Receiver
- Quick start guide


Quick Start Guide

A. Insert the battery (positive and negative right)


Note: Before use, please tear up the battery insulating protective film

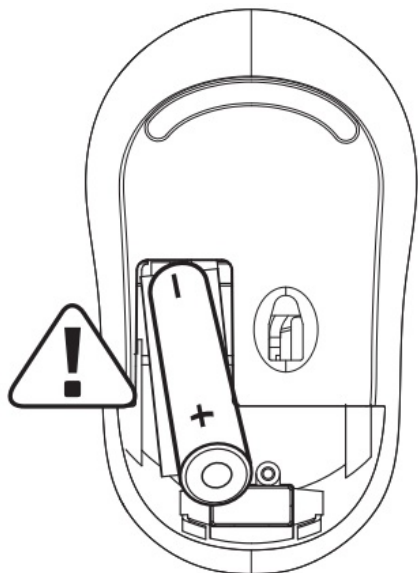


B. Remove the receiver

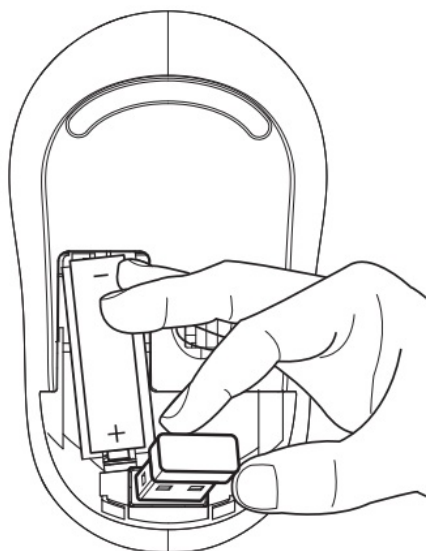

C. Insert the computer USB interface

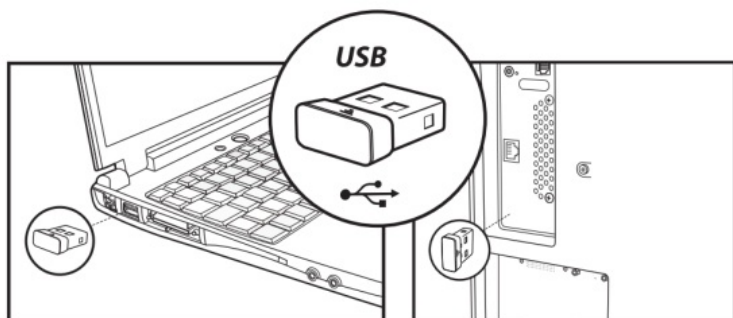

The Key Function Introduction

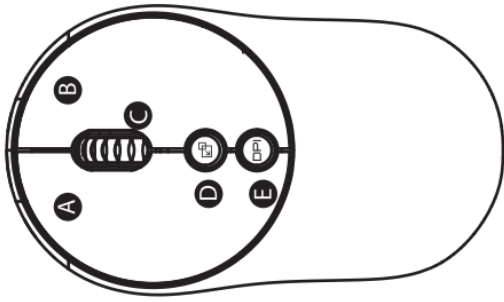

- A. Left Button
- B. Right Button
- C. Scroll wheel & Middle
- D. Screen clear Button
- E. DPI switch Button

Product features

Stable wireless transmission

2.4GHz wireless technology can provide a reliable connection and not subject to any interference in the 360 degrees within 20 meters.

R250 high speed wireless transmission

The rate of return on behalf of the mouse and the computer data transmission rate, 250Hz rate of return can make the wireless mouse in the intense game without delay not skipping, more practical significance for game players in sports.

Than ordinary wireless power-saving five times

The industry's top chip, Five times power-saving than ordinary mice the standby time up to 36 months

High precision optical engine

2.5 times more than ordinary optical engine with high precision optical technology 1600dpi to provide more accurate control.

Data Parameter

Basic:

Data transmission : 1Mbps
Frequency : 2405MHZ-2476MHz
Channel : 16
Engine: Optical
Distance: 20m
Voltage : 1.5V
Current : 11 mA
Mouse Key life: Above 3 millions
Mouse Size: 106x62x40mm
Mouse Weight: 70g

Tracking performance:

Mouse Resolution : 800/1200/1600DPI
Mouse Rate of return : 125-250Hz

System requirement:

IBM or compatible computer

Windows: 2000/ ME/ XP(x64) /Vista / 7/ 8 /10

Mac OS X(More than V10.4) Workable USB port

Step current:


Working current = 11 mA

Standby current = 1.3mA

Dormancy current = 50uA

No receiver state = 10-25uA

Documents / Resources

	<p>Jelly Comb MS04 Wireless Mouse with 3 Adjustable DPI [pdf] User Manual MS04, Wireless Mouse with 3 Adjustable DPI, MS04 Wireless Mouse with 3 Adjustable DPI, 3 Adjustable DPI</p>
---	---