



# Kmart Phone UVC Sanitiser Wireless Charger User Manual

[Home](#) » [Kmart](#) » Kmart Phone UVC Sanitiser Wireless Charger User Manual 

## Contents

- [1 Kmart Phone UVC Sanitiser Wireless Charger User Manual](#)
- [2 Intended Use](#)
- [3 Safety Instruction](#)
- [4 Cleaning And Care](#)
- [5 Before First Use](#)
- [6 Parts](#)
- [7 Operation](#)
  - [7.1 Charging a mobile phone](#)
- [8 Disinfecting](#)
  - [8.1 Aromatherapy Function](#)
- [9 Technical Data](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

## Kmart Phone UVC Sanitiser Wireless Charger User Manual

42953241



## **Intended Use**

This UV sterilizer can be used to disinfect mobile phones, masks, glasses, jewelry, watches, car keys, earphones and similar items that fit into the box. Kill 99.9% of Germs. This device can also charge Qi-compatible smartphones.

## **Safety Instruction**

1. Read this instruction manual thoroughly before use.
2. If you give the device to a third party you must include this user manual.
3. This device complies with the technical standards and applicable safety requirements for electrical appliances.
4. This device is not suitable for use by persons with limited physical, sensory or mental abilities (including children), or use by persons with limited experience and/or knowledge of this device unless they possess the relevant safety knowledge or instructions on how the device is to be used. Children should be supervised to ensure they do not play with the device.
5. Use only the supplied cable.
6. Never immerse the device in water or other liquids.
7. Do not spray liquids of any kind inside the device.
8. Do not expose the device to direct sunlight or extreme temperatures. Do not use it near heat radiating devices such as stoves and radiators.
9. Do not use the device near flammable gases.

10. Do not use the device if it is damaged. To avoid hazards, defective components must only be replaced by the manufacturer, its customer service department or similarly qualified persons.
11. Do not open the housing under any circumstances. Do not insert any objects into the internal part of the housing.
12. Do not perform charging unattended. There is a danger of overheating and fire in the event of short circuit or mechanical damage of the internal batteries.
13. Do not cover the device while charging is in progress.
14. Do not place vessels containing liquid of any kind, or bottles containing medications of any kind, into the device.

**This device is suitable exclusively for private household use.**

- This device is not intended to be used to pre-clean or decontaminate critical or semi-critical medical devices.


## **Cleaning And Care**

- attention! Do not use alcohol, acetone, benzene, aggressive cleaning agents, etc., to clean the synthetic parts of the device. Do not use hard brushes or metallic objects.

## **Before First Use**

- Remove all packaging materials and check the device for damages.

## **Parts**

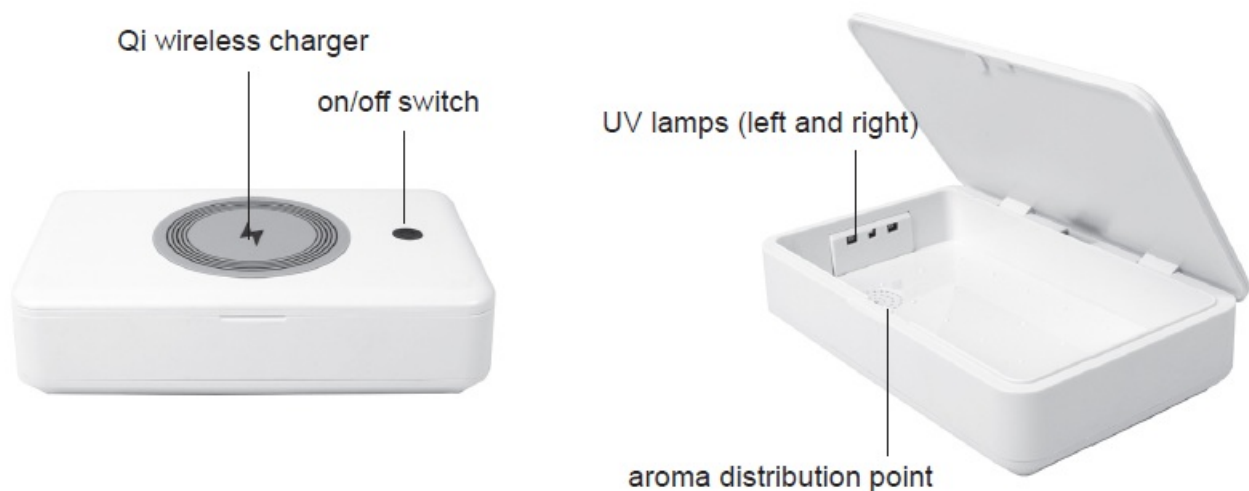

## **Operation**

### **Charging a mobile phone**

1. Plug the micro USB plug of the charging cable (included in the delivery) into the USB socket of the UV box.
2. Connect the other end of the charging cable to an A/C charger (not included) or to a USB power adapter (not included).

3. The blue LED indicator light in the on/off switch lights up.
4. Place your Qi-compatible phone on top of the UV box for charging, the blue LED breathing. during the charging process and is off when the phone is charged.
5. Remove your phone when charging is completed.
6. To achieve fast wireless charging, a QuickCharge 2.0 or above USB power adapter will be required.

**Note:** When power is too low for charging (less than 5V/2A) or a metal object detected on wireless charging area, blue LED indicator light will flashing.

## Disinfecting

1. Connect the UV box to power (see point 1 and 2 of Charging a mobile phone)
2. Open the UV box and place the item you want sterilized inside.
3. Close the UV box and press the on/off button. Additionally to the blue LED, a green LED lights up and one beep tone indicates that the disinfection process has started.
4. After 15 mins, three beep tones indicate the end of the disinfection process. The green LED blinks three times and switches off.

**Note:** If you open the box during the disinfection process, the UV lights will automatically switch off to protect your eyes. The process will resume as soon as the box is closed. To avoid the disinfection process. Do not open the cover during operate.


## Aromatherapy Function

To leave your gadgets with a relaxing smell, you can add a drop of your favorite essential oil (not included) to the aroma distribution point inside the UV box before starting the disinfection process.

## Technical Data

- **Model no.:** 42953241
- **Disinfection power:** 7.8W Max
- **No. of UVC Tube:** 2.5W Max
- **Aromatherapy Power:** 2PCS
- **Input:** DC 5V / 2A, 9V / 2A
- **Output:** 10W Max

## Documents / Resources

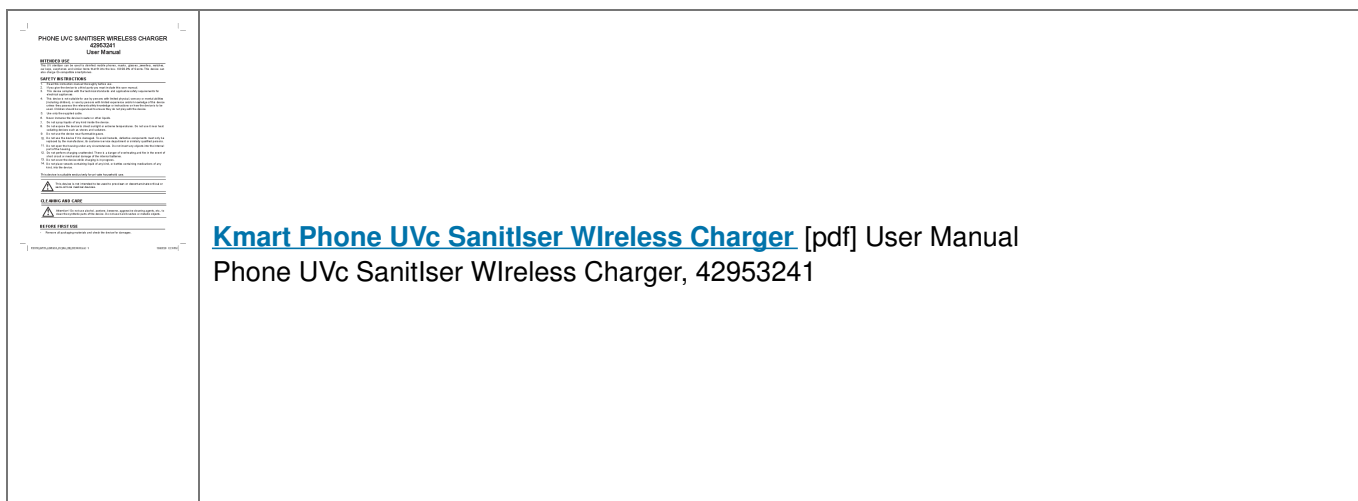

**Kmart Phone UVc Sanitizer Wireless Charger** [pdf] User Manual  
Phone UVc Sanitizer Wireless Charger, 42953241