


Contents [[hide](#)]

- [1 Kramer T-IN2-REC1 Baseline In Table Elegant Tabletop](#)
- [2 Specifications](#)
- [3 INSTALLATION AND USING INSTRUCTIONS](#)
- [4 MORE INFO](#)
- [5 FAQs](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



Kramer T-IN2-REC1 Baseline In Table Elegant Tabletop

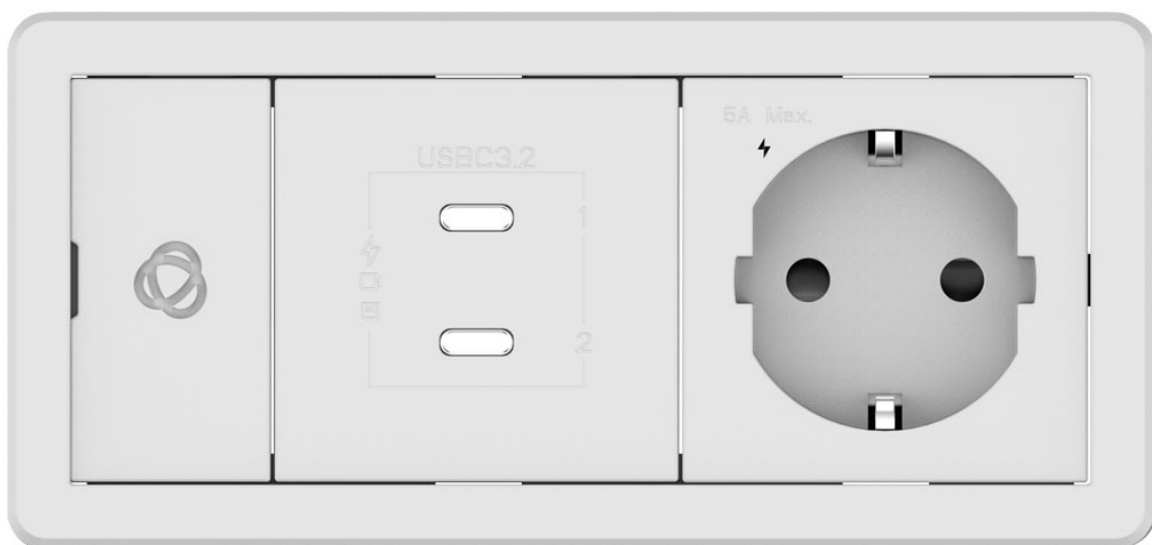

Specifications

- **Models:** T-IN2-REC1, T-IN4-REC1, T-IN6-REC1
- **Color:** Black (White or Aluminum frame and/or White locking device available)

separately)


- **Table Thickness Compatibility:** 10-50 mm (0.39 – 1.97 inches)
- **Quick Start Guide P/N:** 2900-301808 QS,
- **Rev:** 3

INSTALLATION AND USING INSTRUCTIONS

Step 1: Check What's in the Box

 The 4 products listed above represent the basic order.

-  Enclosure sheet met
-  Black Locking device
-  Black frame
-  Cutout template

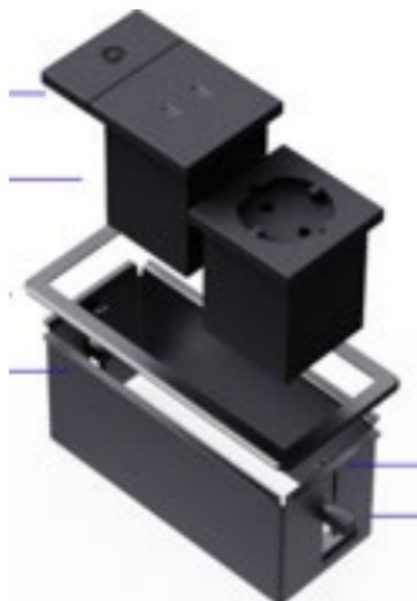

-  For White or Aluminum frame and/or White locking device, order separately frame and locking device accordingly.

Step 2: Table Cutout Dimensions

- T-IN2-REC1 – 131 x 58mm (5.16" x 2.28")
- T-IN4-REC1 – 231 x 58mm (9.09" x 2.28")

- T-IN6-REC1 – 331 x 58mm (13.03 " x 2.28")

 Kramer recommends using the cutout template (packed with device) and a hole saw for maximal accuracy.


Step 3: Place Enclosure – Fasten Screws


1. Tighten screws until the frame is tightly clamped to the table.
2. Fit to standard table thickness between 10-50 mm (0.39" – 1.97").



Step 4: Slide Modules

-  Some modules are missing grooves – please follow the comments in the ‘Modules list’.
- Locking device should be placed on narrow slides as shown below.

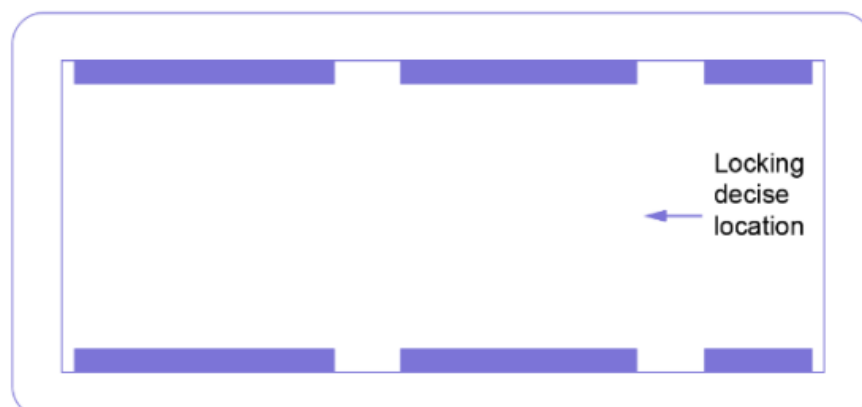


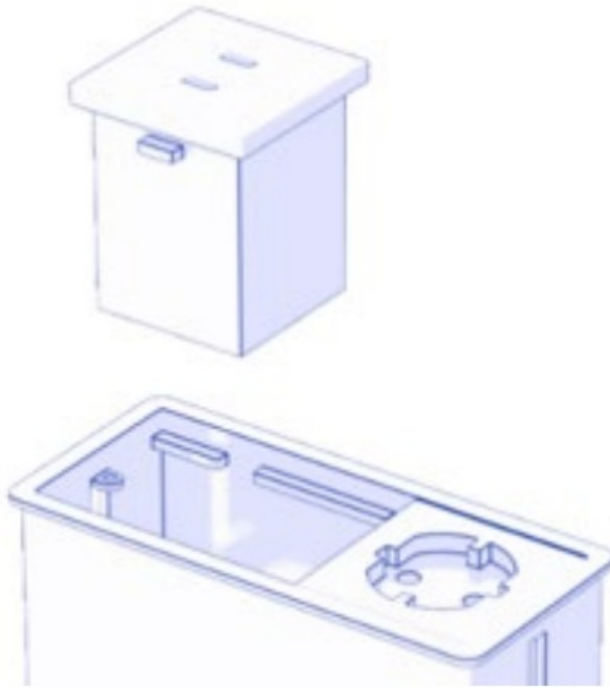

- * Modules listed in Modules List section

Step 5: Lock Module

1. Lift the cover plate and place locking device in position.
2. Lock the modules by turning
 - Locking device mechanism a quarter turn (full turn 360°, half turn 180°, 90° does the job).
3. Place back the cover plate.

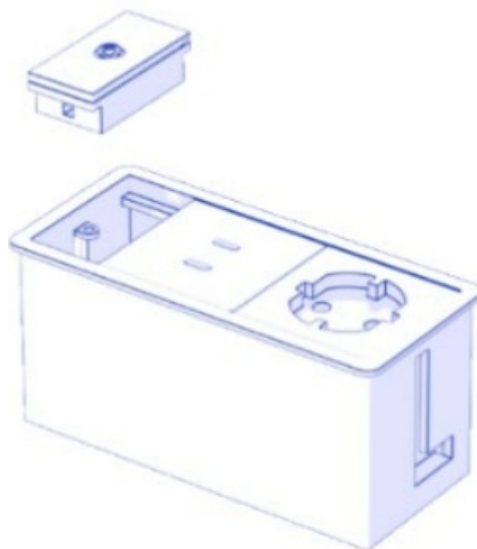



MORE INFO

- This guide helps you install and use your T-IN2-REC1, T-IN4-REC1, T-IN6-REC1 for the first time.
- Go to www.kramerav.com/downloads/T-IN2-REC1, www.kramerav.com/downloads/T-IN4-REC1 & www.kramerav.com/downloads/T-IN6-REC1 to download the latest user manual and check if firmware upgrades are available.
- **Scan to see website**



- kramerav.com.

FAQs

- **Q:** Where can I download the latest user manual and firmware upgrades?
- **A:** Visit www.kramerav.com/downloads/T-IN2-REC1, www.kramerav.com/downloads/T-IN4-REC1, or www.kramerav.com/downloads/T-IN6-REC1.

Documents / Resources



[Kramer T-IN2-REC1 Baseline In Table Elegant Tabletop \[pdf\]](#) User Guide
T-IN2-REC1, T-IN4-REC1, T-IN6-REC1, T-IN2-REC1 Baseline In Table El
elegant Tabletop, T-IN2-REC1, Baseline In Table Elegant Tabletop, Table El
elegant Tabletop, Elegant Tabletop, Tabletop

References

- [User Manual](#)

📁 Kramer

🔍 Baseline In Table Elegant Tabletop, Elegant Tabletop, Kramer, T-IN2-REC1, T-IN2-REC1 Baseline In Table Elegant Tabletop, T-IN4-REC1, T-IN6-REC1, Table Elegant Tabletop, Tabletop

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

[Post Comment](#)

Search:

[Search](#)

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.