



---

[Home](#) » [LEATT](#) » **LEATT ReaFlex Back Protector Instruction Manual** 




**REAFLEX BACK  
PROTECTOR**


## Contents [ [hide](#) ]

- 1 PROTECTION
- 2 MAXIMUM VENTILATION
- 3 FITMENT
- 4 NECK BRACE READY
- 5 Testing and Approval
- 6 Protection provided
- 7 Use
- 8 Protection dimension
- 9 Positioning of Leatt®protection range
- 10 Adjustment
- 11 Marking and labeling
- 12 Cleaning
- 13 Storage and transportation
- 14 Maintenance and obsolescence
- 15 Use with other Personal Protective Equipment
- 16 LIMITED WARRANTY
- 17 Documents / Resources
  - 17.1 References


## PROTECTION

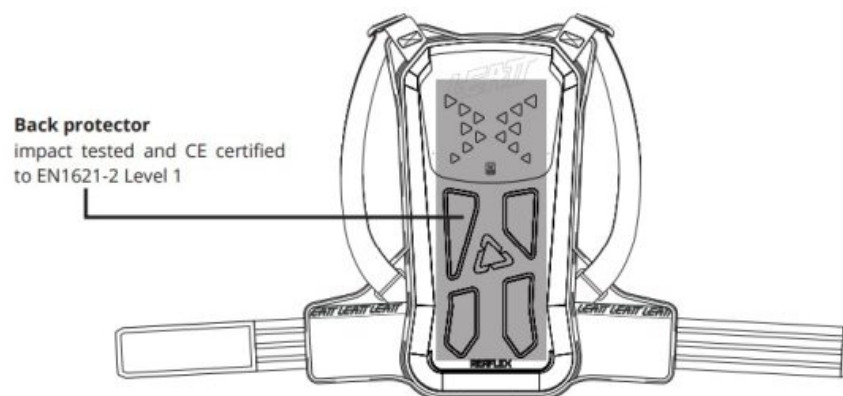


## MAXIMUM VENTILATION

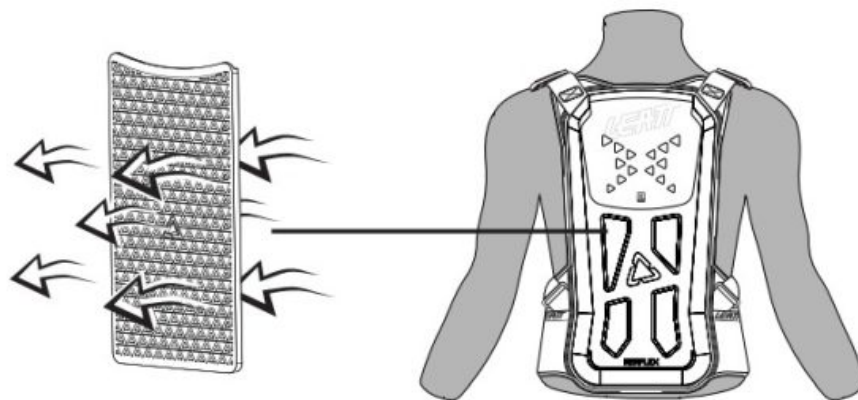

## FITMENT

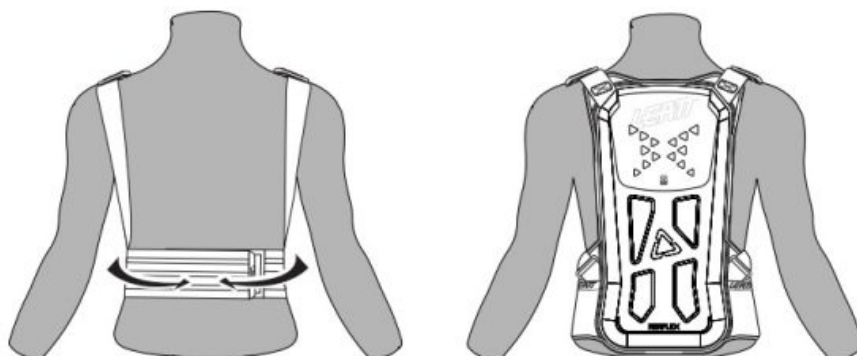

## NECK BRACE READY

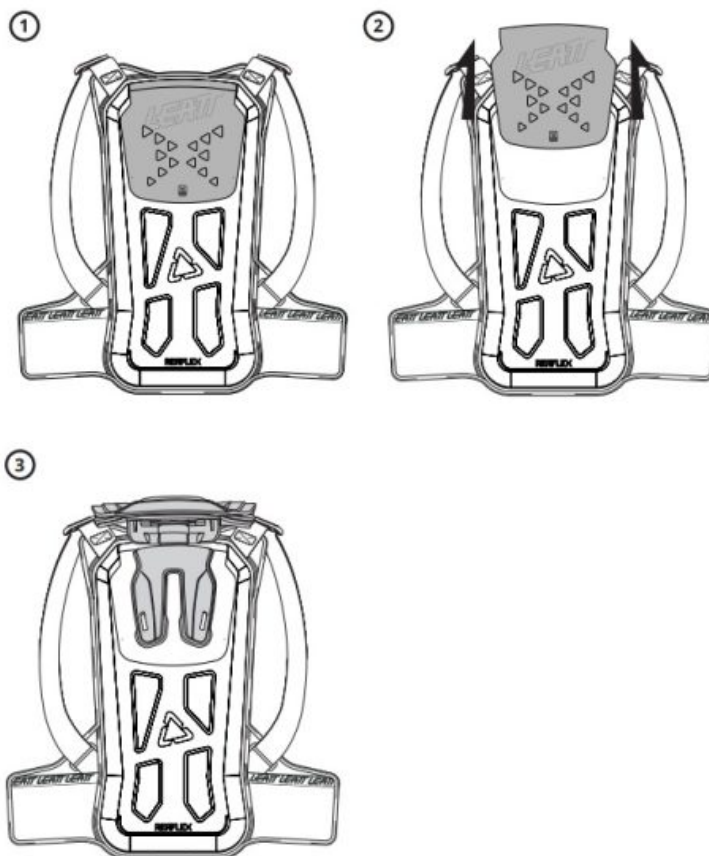

**⚠ WARNING**

Leatt® Corporation's personal protective equipment is not designed or intended to protect a wearer against serious bodily injuries caused by hard collisions or crashes. Protective equipment such as stone shields offer protection only against lofted stones or debris. Protective equipment such as back or lumbar protectors do not protect against spinal injury. No protective equipment can protect the wearer from all foreseeable impacts.

## Testing and Approval

The Leatt® Back Protector Reaflex has been tested against the manufacturer's specifications and EU Type

- Examination certification has been issued by RICOTEST Via Tione, 9 – 37010 Pastrengo (VR), European Notified Body No. 0498. It is CE marked to denote compliance with the Personal Protective Equipment Regulation (EU) 2016/425. The following European Standards have been used in the evaluation of this product:
- EN1621-2 Level 1 – “Motorcyclists’ protective clothing against mechanical impact – Part 2: Motorcyclists’ back protectors”
- EN 13688:2013 – “Protective clothing – General requirements”

**Note 1:** The inclusion of CE approved armor within this garment does not imply that the whole garment is CE approved.

**Note:** To view the Declaration of Conformity to PPE Regulation (EU) 2016/425 please navigate to [leatt.com](https://leatt.com) and select the DOCUMENTS tab on your product's page.

## Protection provided

Protector conforms to the EU Personal Protective Equipment Regulation 2016/425.

Back protection conforms to the Level 1 requirements of EN 1621-2:2014

Leatt® protector back plates have been tested to EN1621-2:2014 and recorded a mean transmitted force of below 18kN from a 50 Joule impact (Level 1).

## Use



Products meeting the requirements of the technical specifications listed above are intended to reduce the severity or incidence of soft tissue injuries such as bruising,

contusions, cuts and abrasions during off-road motorcycling and biking activities, such as Moto-X, Enduro, Downhill MTB, BMX and Adventure Sports.

- Products meeting the requirements of the technical specifications may reduce the severity and/or incidence of some more serious injuries such as minor fractures.
- Products meeting the requirements of the technical specifications cannot significantly mitigate against major injuries, such as serious fractures resulting from extreme impact forces or torsion/flexion/bending/ crushing injuries and neurological spinal injuries. Currently available materials and technology do not allow this level of protection to be attained in products which would be acceptable to wear and which would allow physical activities to be conducted and completed satisfactorily.

**Protection dimension**

The following illustrations demonstrate the dimensions of the zones of protection relative to the coverage provided by the whole product.

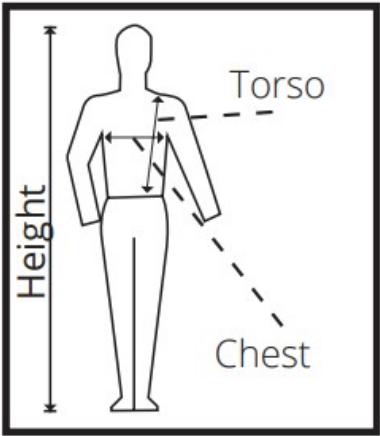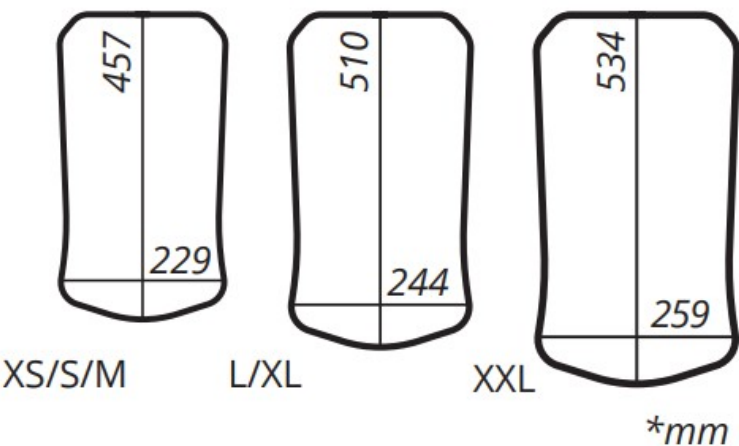

Size	S/M	L/XL	XXL
------	-----	------	-----


Height	160-172	172-184	184-196
Torso	46-50	51-54	55-59

\*cm

## Size range

Leatt Protectors are available in the following sizes [cm]:

Use the following pictogram to identify the measurements provided.



Protected zones in shoulder to waist measurement



*Back*

## Positioning of Leatt® protection range

No single size of body protection can accommodate all body dimensions because of variation in height and shape.

In addition, Leatt® impact protectors can only provide the maximum achievable level of protection when they are correctly positioned and adequately secured on the wearer. Where fitted, the back, chest and limb impact protector components are in fixed positions within the Back Protector and Body Protector, which should always be of a snug fit to the body. In particular users should avoid choosing too big a protector because of the potential of interference with the helmet that, should it occur, can result in a dangerous riding condition. If the primary impact protector components do not correctly fit and cover the following areas, an alternative size may be required: Back protector: Back protectors should be located centrally along the line of the spine, with the widest




part of the back protector extending over the scapulae (shoulder blades) and with the lower edge of the back protector ending as close to the base of the spine as is comfortable.

## Adjustment

Before completely zipping the garment closed, ensure that the back protector is in the correct position. When worn with the user's safety helmet and a LEATT® Neck Brace, the protector should allow the full range of normal head and neck movements (i.e.: looking up, looking down and looking side-to-side, such as when performing an over-the-shoulder check); the protector, LEATT® Neck Brace and the helmet only coming into contact with each other as the full range of normal movement is reached. With your Leatt® protectors in place, check that you are able to.

## Marking and labeling

The following diagrams provide important information about this product and the protection it provides.

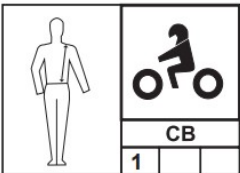
	The "CE " mark denotes compliance with the health and safety requirements of Annex II of the European Personal Protective Equipment Regulation 2016/425.
	The recommendation to read the manufacturer's instructions contained in this booklet
	Denotes that the product is or incorporates a back protector ("CB") which meets Level 1 of European Standard EN 1621-2:2014

## Cleaning

Always follow the washing instructions printed on the label attached to the garments, since when alternative fabrics with specific performance characteristics are used, washing instructions may differ. Touch-and-close fastenings, where fitted, can be cleared of debris using a nail brush. If the protector components have become soiled in use,

wipe the surface with a damp cloth. Use a soft brush, dampened in water, to clean the perforations in the components. Only use tap water. Never use cleaners or detergents, or launder the protector, the product will be damaged by the cleaning process and chemicals and the level of protection provided severely reduced.

Common substances applied to this product (solvent, cleaners, hair tonics, etc.) can cause damage that may be invisible to the user and compromise the effectiveness/safety of your Leatt® product. If in any doubt, please contact the manufacturer before cleaning or laundering your protector. Always refer to the material content label on the Leatt® product. None of the materials used in the construction of the product are known to contain anything that is harmful or might cause an allergic reaction or be dangerous to health.

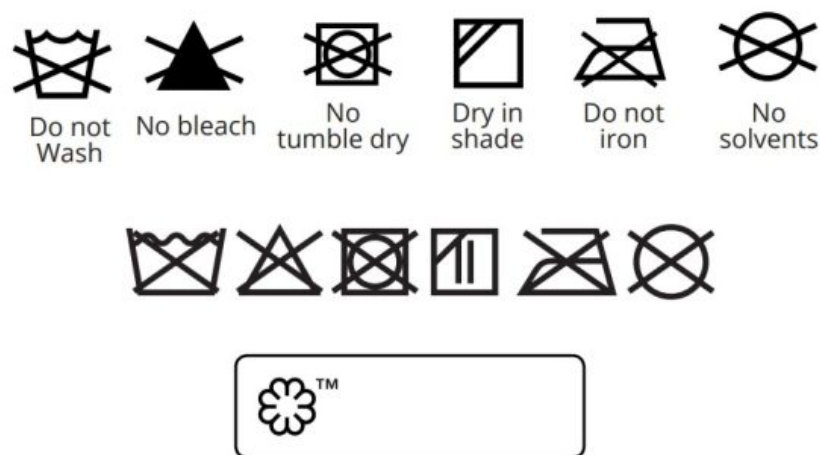

[clevercare.info](http://clevercare.info)

## Storage and transportation

Place the Leatt® product on a clean, dry surface and store in a dry, well-ventilated environment away from direct sunlight and extreme temperature. Do not place heavy objects on top of Leatt® product as this can damage the fabrics and plastic materials. The protection provided by your Leatt® product should not be affected by non-extreme ambient temperature and weather conditions.

## Maintenance and obsolescence

For maximum performance, the Leatt® product must be inspected prior to each use. Stop using the protector if any components show signs of damage or are worn, cracked, and/or deformed, or if the inside padding has deteriorated. Leatt® Corporation recommends that the Leatt® product is replaced every three (3) years under normal use



conditions. Should you experience a collision or if the Leatt® product or any component shows any signs of damage, cracking, deformity and/or the inside padding is deteriorating, return the product to the seller for inspection or destroy and replace it. Please dispose of it in an environmentally-friendly manner. Do not drill holes, paint, cut, heat, bend, apply decals or stickers, or make any other modifications to the elbow guard. Doing so may compromise the effectiveness and safety of your Leatt® product.

## **Use with other Personal Protective Equipment**

Leatt® protectors form part of a protective equipment ensemble available for use by participants in off-road motorcycling and downhill biking activities. Additional PPE, which it is recommended should be worn during off-road motorcycling and downhill biking activities, includes clothing conforming to EN 13595-1:2002, where applicable to the riding environment (may not be suitable for off-road motorcycling or downhill cycling) or other suitable clothing providing full coverage to the body, arms and legs; impact protectors conforming to EN1621-1:2012 (where not already a component of your Leatt® protector or other motorcycle clothing); gloves conforming to EN 13594:2002; boots conforming to EN 13634:2010. Always perform any motor sport activity with caution and use/wear appropriate safety equipment.

### **Leatt® Corporation HQ**

No 12, Kiepersol Crescent, Atlas Gardens, Contermanskloof, Durbanville,  
7550, Cape Town, South Africa

Tel: +27 21 557 7257, Fax: +27 21 557 7381, Email: [info@leatt.com](mailto:info@leatt.com)

### **Post**

Suite 109, Private Bag X3, Bloubaerg, 7443, South Africa.

### **Leatt® Corporation USA**

9555 N Virginia St, Suite 105

Reno, Nevada 89506

Tel: 661 287 9258, Toll Free: 1.800.691.3314, Fax: 661 287 9688

### **Europe:**

G.T. Sales Management

Breitenweg 19, 79426 Buggingen, Germany

Tel: +49 76319379157, Email: [leatt-eu-contact@leatt.com](mailto:leatt-eu-contact@leatt.com)

## UK

Leatt® UK Contact, PO Box 360, Penzance, TR18 9FY, U.K.

Tel: +44 1736 762940 | Email: [leatt-uk-contact@leatt.com](mailto:leatt-uk-contact@leatt.com)

Website: [www.leatt.com](http://www.leatt.com)

## LIMITED WARRANTY

Your Leatt® product is warranted to be free from defects in materials and manufacturing in terms of our Warranty Policy at [leatt.com/warranty](http://leatt.com/warranty). To receive a written copy of our Warranty Policy, please phone us on +1-[661-287-9258](tel:661-287-9258) or send your request in writing to Leatt at 9555 N. Virginia Street, Suite 105, Reno, Nevada, 89506, USA. Leatt® expressly disclaims all other warranties, express or implied, including the warranties of merchantability and fitness for a particular purpose.



<https://leatt.com/warranty>

Use QR Code to see our Warranty Policy

- / Reaflex ventilated soft impact foam
- / CE certified for impact protection: Back protection EN1621-2 Level 1
- / FFM-French Federation Certified
- / Multi-layer, perforated back and chest protectors
- / 3D design ensures a lighter, more comfortable and flexible fit / Antiodor MoistureCool and AirMesh wicking fabrics
- / Elastic chest strap gives more secure protector positioning
- / Easy-to-wear, zip-up compression sock design to maximize evaporation
- / BraceOn™ neck brace fitting system
- / Easy to clean (hand wash)
- / Weight: 1.250g – 2.8 lbs
- / S/M: 160-172cm (5'2" – 5'8" ft)
- / L/XL: 172-184cm (5'8" – 6' ft)

XXL: 184 to 196cm (6' to 6'5 ft)




[LEATT.COM](http://LEATT.COM)




Made in China | Leatt®

## Documents / Resources

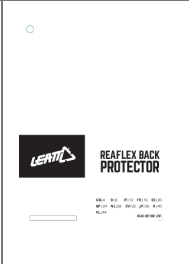	<p><a href="#">LEATT ReaFlex Back Protector [pdf]</a> Instruction Manual</p> <p>Stealth_V5, ReaFlex Back Protector, Back Protector, Protector</p>
---	---

## References

-  [Warranty](#)
- [User Manual](#)

LEATT Back Protector, LEATT, Protector, ReaFlex Back Protector, Stealth\_V5

—Previous Post

[LEATT 4.5\\_EVO Chest Protector Instructions](#)

Next Post—

[Leatt 4.5 Pro Evo Chest Protector Instruction Manual](#)

—

Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.