

# **LENOXX ES40 Folding Electric Scooter Instruction Manual**

Home » lenoxx » LENOXX ES40 Folding Electric Scooter Instruction Manual

#### **Contents**

- 1 LENOXX ES40 Folding Electric
- Scoote
- 2 Product Usage Instructions
- 3 SAFETY AND WARNINGS
- **4 PRODUCT STRUCTURE**
- **5 FOLDING THE SCOOTER**
- **6 OPERATION**
- **7 HARDWARE MAINTENANCE**
- **8 TROUBLESHOOTING**
- 9 CLEANING
- 10 SPECIFICATIONS
- 11 Documents / Resources
  - 11.1 References



**LENOXX ES40 Folding Electric Scooter** 



## **Specifications:**

• Product: Folding Electric Scooter

Model: ES40Batch: PR5084Battery: 36V 7.8AhWeight Limit: 120 kg

• Recommended Rider Age: 16 years and older

## **Product Usage Instructions**

## Safety and Warnings:

Before using the Electric Scooter, please read and understand all safety and warning statements provided in the manual. Ensure that all riders are aware of the safety guidelines.

## Appropriate Riding Attire:

Always wear proper protective equipment such as helmets, knee pads, and elbow pads while riding the scooter.

## • Rider Use and Parental Supervision:

Rider weight should not exceed the specified limit of 120 kg. Ensure that riders understand all safety information and guidelines before using the scooter.

## • Riding Practices and Conditions:

- Obey local laws and regulations regarding the use of electric scooters. Ride defensively, avoiding obstacles and pedestrians. Do not perform stunts or tricks on the scooter.
- Do not activate the speed control unless you are on the scooter in a safe outdoor environment. Always keep a hold with both hands on the handlebars and do not allow more than one person to ride at a time.

Avoid using the scooter near steps, water bodies, or swimming pools to prevent accidents.

#### FAQ:

- Q: What is the recommended rider age for this electric scooter?
  - A: The recommended rider age is 16 years and older. Younger riders should not attempt to ride the scooter.
- Q: Can I exceed the weight limit of 120 kg while riding?
  - A: No, it is important to adhere to the weight limit for the safe operation of the scooter.

#### PLEASE READ AND RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

The illustrations used in this manual are to illustrate the operation method and structure of the product. Where there is a small difference between the physical item and the illustrations, please take the physical as the standard.

#### Note:

Check local laws and regulations to see where and how you may use your electric scooter or ride on. Always wear a Helmet.

#### WARNING

#### **READ BEFORE USE**

Each State and Territory in Australia has a different set of rules and regulations pertaining to the usage of e-scooters (including where e-scooters can legally be used and whether e-scooters need to be registered with the relevant road traffic authority). Any user of this product must ensure that they check and abide by their local by-laws and use it responsibly. Ride with caution and always wear a helmet and protective gear when riding this e-scooter.

#### Safety First!

This section provides safety and warning statements that you should be aware of before you use our Electric Scooter.

## **RISK OF DEATH OR SERIOUS INJURY**

- Whenever you ride the Electric Scooter, you risk death or serious injury from loss of control, collisions, and falls.

  To reduce the risk of injury, you must read and follow all instructions and warnings in the User Manual.
- Always wear a helmet when riding. Use an approved bicycle or skateboard helmet that fits properly with the chin strap in place and protects the back of your head.
- Avoid obstacles and slippery surfaces that could result in a loss of balance or traction and cause a fall.
- All Electric Scooter parts must be properly installed. Never attempt using your Electric Scooter without all parts
  properly installed, this could damage your Electric Scooter and result in serious injury from loss of control,
  collisions, and falls.

#### **WARNING!**

Do not modify the Electric Scooter. Modifications to the Electric Scooter without prior written approval from the manufacturer could interfere with the operation of the Electric Scooter, could result in serious injury and/or damage, and could void the Lenoxx Electronics Australia Pty Ltd Warranty.

## **SAFETY AND WARNINGS**

- Riding an electric scooter can be a dangerous activity. Certain conditions may cause components to fail without
  the fault of the manufacturer. The scooter can and is intended to move and it is therefore possible to lose
  control, fall off, and/or get into dangerous situations that no amount of care, instruction, or expertise can
  eliminate. If such a thing does occur you can become seriously injured or die, even when using safety
  equipment and other safety precautions.
- RIDE AT YOUR OWN RISK AND ALWAYS USE COMMON SENSE.
- This manual contains many warnings and cautions concerning the consequences of failing to inspect, maintain, or properly use your electric scooter. Since any incident can result in serious injury or even death, we do not repeat the warning of possible serious injury or death each time such a possibility is mentioned in this manual.

#### APPROPRIATE RIDING ATTIRE

Always wear proper protective equipment such as:

- Approved safety helmet. (Helmet may be legally required by local law or regulation in your area.)
- · Elbow pads and knee pads
- · Long-sleeved shirt, long pants
- Gloves
- Lace-up shoes with rubber soles, never ride barefoot or in sandals, and ensure that shoelaces are tied and kept out of the way of the wheels and drive system.

#### RIDER USE AND PARENTAL SUPERVISION

- RIDER MUST NOT EXCEED THE WEIGHT LIMIT OF 120 KG.
- Rider weight does not always mean a person's size is appropriate to fit or maintain control of the scooter.
- This manual contains extremely important safety information. It is your responsibility to completely review this information and make sure that all riders understand all warnings, cautions, instructions, and safety topics and assure that all riders can safely and responsibly use this scooter. We advise that you periodically review and reinforce all information in this manual with all riders and that you inspect and maintain your scooter to ensure their safety.
- The recommended rider age is 16 years and older. Any rider that is unable to fit comfortably on the scooter should never attempt to ride it. A parent's decision to allow their child to use a scooter should be based on the child's maturity, skill, and ability to follow rules.
- Do not touch the motor or brakes on the scooter when in use or directly after use as these parts can become extremely hot.
- Keep this scooter away from small children and remember that it is intended for use only by persons who are, at a minimum, completely competent and comfortable while operating this product.

## **RIDING PRACTICES AND CONDITIONS**

- Check and obey any local laws or regulations that may affect the locations where the electric scooter may be used.
- Always ride defensively. Watch out for obstacles that could catch your wheel or force you to turn suddenly or
  lose control. Be careful to avoid pedestrians, other wheeled products (such as skaters, skateboards, scooters,
  bikes, etc.), children or animals who may enter your path. Always respect the rights and property of others.

- Do not activate the speed control on the hand grip unless you are on the scooter and in a safe, outdoor
  environment that is suitable for riding.
- Do not attempt or perform stunts or tricks on this electric scooter. This product is not made to withstand abuse from jumping, curb grinding, or any other type of misuse or stunts.
- Always maintain a hold with both hands on the handlebars.
- Never allow more than one person at a time to ride the scooter.
- · Never use near steps, water, or swimming pools.
- Never ride while using a mobile phone or while wearing headphones.
- Keep your fingers and other body parts away from the belt, motor, steering system, wheels, and all other moving components. Never ride while using a cell phone or wearing headphones.
- Never hitch on to or with another vehicle or pull anyone or anything.
- Never immerse the scooter in water; electrical and drive components could be damaged by water or create other possible unsafe conditions.
- Ride only on flat, dry surfaces such as pavement or level ground without loose debris, such as sand, leaves,
  rocks, or gravel. Water, mud, ice, bumpy, uneven, slick, or rough surfaces could impair traction and contribute
  to possible loss of control. Avoid excessive speeds that can occur from downhill rides which could cause loss of
  control.
- Do not ride at night or in areas of limited visibility.
- · Do not ride in wet weather.
- NEVER use on public roads, hills, sloped driveways, or near motor vehicles or swimming pools.
- Do not ride indoors or on surfaces that could become damaged such as carpet or flooring.
- Before each ride the following checks will need to be performed on the scooter:
  - Ensure that the brake system is functioning properly.
  - All components are properly secured and functioning according to manufacturer specifications.
- Components shall be maintained and repaired by the manufacturer's authorized replacement parts with installation performed by a qualified repair agent.

FAILURE TO HEED TO THE WARNINGS LISTED ABOVE INCREASES THE RISK OF POTENTIAL SERIOUS INJURY. USE THE APPROPRIATE CAUTION WHEN RIDING AND ALWAYS WEAR PROTECTIVE GEAR.

## **GENERAL SAFETY INFORMATION:**

- 1. Do not submerge the scooter or its charger in water or any other liquid.
- 2. Do not charge the scooter with a broken or damaged charger. Please call 1300 666 848 to order a replacement charger.
- 3. Any repairs to the scooter must be carried out by an authorized or qualified service center/repairer.
- 4. The assembly of the scooter must be completed by an adult.
- 5. To avoid suffocation, keep all bags and small parts away from babies and children.
- 6. This scooter is not designed to be used by people (including children) with a physical, sensory, or mental impairment, or people without knowledge or experience unless they are supervised or given prior instructions concerning the use of the scooter by someone responsible for their safety. Children must be supervised to ensure that they do not play with the scooter.

## **BATTERY AND CHARGER:**

- Charge the battery fully before use.
- The battery can be charged at any time to ensure that the battery has power.
- Charge the battery once every three months to maintain its lifespan and charge level.
- The lithium battery can be recharged at least 500 times.

#### **USING THE CHARGER**

- The charger has a charging protection function; when the battery is 100% charged, the charger will automatically stop charging.
- The first initial charge is 5 hours.
- Each subsequent charge time is no more than 4 hours.
- To charge the scooter, open the rubber charging hole protective cover.
- Connect the charge connection to the charging hole.
- Connect the chargers and plug them into a powerpoint.
- · When the charger light is red the battery is charging.
- When the charger light is green, the battery is fully charged.
- The charger should be regularly examined for damage to the cord, plug, enclosure, and other parts. In the
  event of such damage, if any is found, the scooter should not be charged until the charger has been repaired or
  replaced.
- Use only with the supplied recommended charger. Always use caution when charging.
- The charger is not a toy and should be operated by an adult. Never operate chargers near flammable materials
  or liquids. Disconnect the charger and unplug from the scooter when not in use. Do not exceed the
  recommended charging time.
- Always disconnect the charger from the scooter prior to wiping down cleaning.

#### PRODUCT STRUCTURE



- 1. Handlebar
- 2. Screen display
- 3. LED headlight
- 4. Horn
- 5. Lock lever
- 6. Folding hook
- 7. Battery charging jack
- 8. Folding lever
- 9. Lock bolt
- 10. Rear brake


## **FOLDING THE SCOOTER**






## Folding steps

- 1. Open the lock lever, in the direction of the arrow, as shown in Figure (a).
- 2. Press the red button in Figure (b), at the same time press down the handlebars as shown in Figure (c), and push the lock lever to the lock position.
- Hold the handlebar with both hands and push buttons (1) shown in Figure (d).
   Pull out the handlebar grips (figure d), up to the maximum, and fold downwards to the maximum like in Figure B, from the previous page.
- 4. Push the handlebar forward when you press the folding lever in the direction of the arrow in Figure (f).
- 5. Continue folding the scooter until the folding hook reaches the opening located on the rear brake.

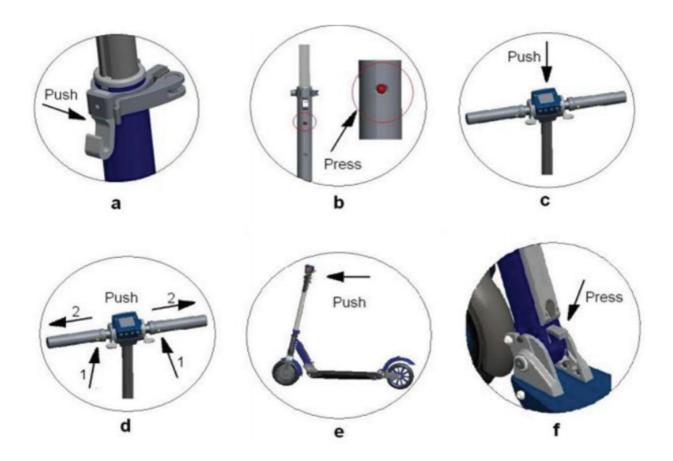


## **Unfolding steps**

- 1. Press the rear brake in the direction of the arrow in Figure (a) until the folding hook is released from the opening located on the rear brake. Then, lift the handlebar until it reaches the working position and the locking bolt comes into place, like in Figure (b).
- 2. Raise the two handles of the handlebar until they automatically return to the work position, figure (c).
- 3. Push the lock lever in the direction of the arrow in Figure (d) and lift the handlebars to the desired height. Now press the button shown in Figure (e) and fix it in one of the two holes, as desired.

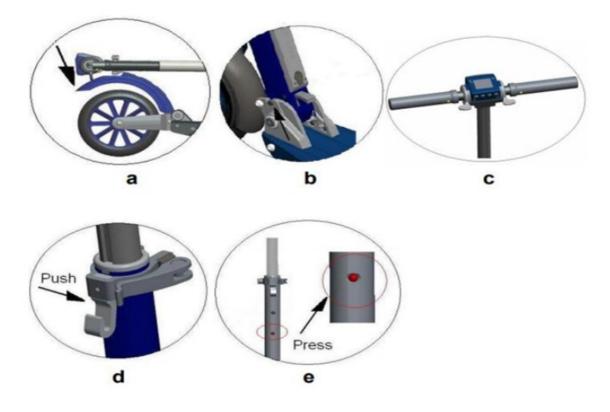

#### **OPERATION**

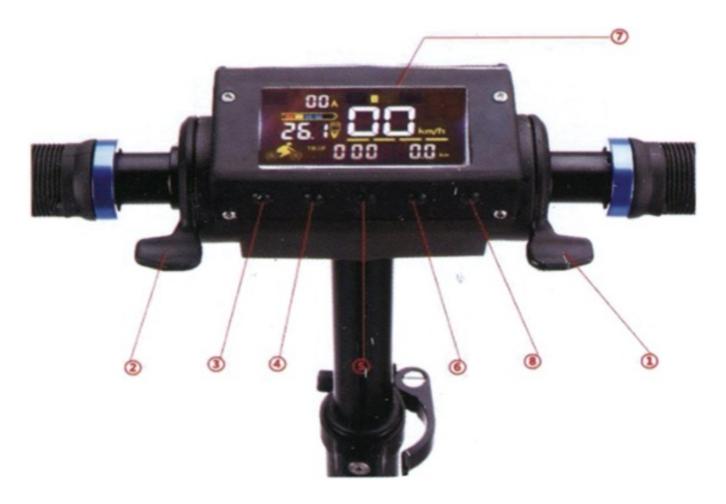

- 1. Thumb Accelerator
- 2. Thumb Brake
- 3. Horn Button
- 4. Setting Button
- 5. On/Off button
- 6. Light button
- 7. LCD display
- 8. Speed level button

## **Operation instructions:**

#### MBON/OFF

- Press the on/Off for 1 second, and the display will light be indicating the power is on.
- Press for 3 seconds if you want to turn it off.
- It will turn off automatically if you don't use it for 1 hour.

## NBSpeed control

- Press the right thumb accelerator to control the speed (1-25km/h).
- The speed control can only be used to increase speed.
- If you need to slow the scooter down, use the brake.

## · Speed level button:

There are three-speed levels, press the speed level button repeatedly to change between the options. The three speed levels are 15km/h, 20km/h, and 25km/h.

### NBBreaking Control

- Press the left thumb brake and the brake will operate.
- The greater pressure you put; the greater the braking force will be.

#### Horn

- Press the horn button to sound the horn.
- Press and hold on to the horn button for a continual horn sound until the button is released.

#### LED headlight.

- Press the light button to turn on the LED headlight.
- An indicator will be shown on the LCD display screen to indicate that the headlight is turned on.
   Press the light button again to turn the LED headlight off.

## Mileage Show

- When power is on, it displays three mileage modes; total, trip, and time.
- Press the setting button to change the mileage displayed.
- In 'trip' mode, press the setting button (S) for 3 seconds and it will clear the trip.

## Emergency

- In an emergency, it's recommended to use the foot brake.
- In an emergency, stamp on the rear foot brake.
- Simultaneously the electronic magnetic front brake and rear wheel friction brake will engage. Under normal riding circumstances, please do not use the emergency brake at high speed.

#### Settings button

Press the settings button repeatedly to view information relating to:

- · Riding time
- Trip distance
- Odometer
- RPM
- Volts: Power remaining on battery
- Amps used
- Temperature

#### **RIDING OPERATION**

- For your safety, please limit the speed to 0 − 20 Km/H.
- At night, it is recommended to limit the speed to 15 km/H or less and use the LED headlight. Choose a suitable venue for riding.
- Adjust the T-pipe to the suitable height according to your height.

#### Start

- 1. Press the on/off button to turn on the power.
- 2. Stand one foot on the scooter and leave another foot on the ground.
- 3. Gently press down on the right thumb accelerator, and the scooter will immediately move forward slowly. Place the foot which is on the ground on the scooter.

With the big finger of your right hand press the right thumb accelerator, the greater the pressure you put, the faster

it will go.

#### **Brake**

Under normal circumstances, by pressing the left thumb electronic magnetic brake, the scooter will be immediately de-energized and then it will brake. The greater the pressure you add, the greater the braking force will be.

#### HARDWARE MAINTENANCE

#### Brake

Check the brakes for proper function. When you squeeze the lever, the brake should provide positive braking action. When you apply the brake with the speed control on, the brake cut-off switch should stop the motor. Make sure that the brakes are not rubbing.

#### Frame, Fork, and Handlebars

Check for cracks or broken connections. Although broken frames are rare, aggressive riders can run into a curb or wall and bend or break a frame. Get in the habit of inspecting your scooter regularly.

#### Battery

Make sure the power switch is turned off whenever the scooter is not in use. Never store the product in freezing or below-freezing temperatures! Freezing will permanently damage the battery.

#### Lubricating

Please add a small amount of grease or lubricants to handle the folded position every six months. Please check the scooter every three months if the screws are loose.

#### · Placement and daily care

Do not expose the scooter to the sun or wet places for too long time. Please keep the scooter clean and dry. For cleaning use a damp cloth and mild detergent.

#### Charger

Only use the supplied battery charger. If the charger is damaged discontinue use immediately and replace it with a Lenoxx-recommended charger.

#### Wheels

Wheels and drive system components are subject to normal wear and tear. It is the responsibility of the user to regularly inspect wheels for excess wear and adjust and replace drive-train components as required.

#### **Battery care and disposal**

Do not store the battery in temperatures above 21°C (70°F) or below 0°C (32°F).



THIS SCOOTER CONTAINS SEALED LEAD ACID BATTERIES WHICH MUST BE RECYCLED BY YOUR LOCAL AND STATE LAWS. PLEASE CAREFULLY READ AND UNDERSTAND THE FOLLOWING DISPOSAL INSTRUCTIONS:

## Disposal:

This product contains sealed lead acid batteries which must be disposed of or recycled in an environmentally safe manner. Do not dispose of the batteries in your household trash. Do not dispose of the batteries in a fire, this could

cause the batteries to leak or explode. The incineration, disposal in landfills, and or placing of sealed lead acid batteries with household trash is prohibited by law in most areas. Return exhausted batteries to a state or federal-approved lead acid battery recycler or check with your local retailer of vehicle batteries.

## **WARNING:**

Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

## **TROUBLESHOOTING**

Problem	Possible Cause	Solution
The scooter will not run	The battery is not charged	Fully charge the battery. The first charge should be 5 h ours and up to 4 hours for subsequent recharges.
	Wires or connectors are loose o r unplugged	Check to ensure that the charger is tightly plugged into both the wall and the scooter.
Scooter run time is short	Battery requires charging	Fully charge the battery. The first charge should be 5 h ours and up to 4 hours for recharges.  Check to ensure that the charger is tightly plugged into both the wall and the scooter.
	The battery will not accept a full charge	Make sure the power flow to the wall outlet is on.  The battery may need to be replaced. Even with prope r
		care, rechargeable batteries do not last forever. The average rechargeable battery life is 1 to 2 years depending on scooter conditions and use.  Replace only with Lenoxx-recommended replacement batteries.
Scooter runs sluggishly	Scooter is overloaded	Make sure you do not overload the scooter by exceeding 120 KG.  maximum weight limit, going up steep inclines, or towing objects behind the scooter.  Avoid overloading the scooter as this will prematurely wear out the batteries and componentry.  Avoid overloading the scooter as this will prematurely wear out the batteries and componentry.
	Unsuitable riding conditions	Ride only on solid, flat, clean, and dry surfaces such a s pavement or level ground.

### 1. LED display black screen

- Reason: Exposure under the sun for too long.
- Solution: Place it in shadow and it will return to normal after a period.

## 2. No information on digital display

- Reason: Bad battery contacts or the battery is dead.
- **Solution:** Turn off the power then restart again, if the problem still occurs, please contact your local reseller.

In case the product still does not operate normally, please contact your local vendor or reseller.

#### **CLEANING**

- Clean the scooter with a soft damp cloth. Do not use any wax or spray liquids for cleaning. It could erode the power switch.
- Do not submerge scooter or charger into water or other liquid at any time

#### **SPECIFICATIONS**

Product Size: 101\*113\*43CM unfold /92\*34\*20CM fold

Product weight: 11.2 KGBattery: 36 V. 7.8Ah battery

Travel range: EW4 max distance: 20-25km.
Charger: 100-240V(Input)/42V(Output)/2A

• Motor: 350W motor

• 8" Rubber solid tire, no need to worry about air leakage. safe and convenient driving

Pre-set speed levels: 15KM/H, 20KM/H, 25KM/H

Waterproof rating: IP44Load capacity: 120 KG

#### Disclaimer:

- The mentioned speeds and distances are based on factory conditions.
- They may vary on a range of factors which include the weight of the rider, the speed of the ride, and the incline of the ride.

## **LENOXX**

- www.lenoxx.com.au
- 1300 666 848
- LenoxxElectronics
- LenoxxElectronics

## **Documents / Resources**



<u>LENOXX ES40 Folding Electric Scooter</u> [pdf] Instruction Manual ES40, PR5084, ES40 Folding Electric Scooter, ES40, Folding Electric Scooter, Scooter, Scooter

#### References

## • User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.