



Lightspeed C25 Cascadia Networked Instructional Audio System User Guide

[Home](#) » [lightspeed](#) » Lightspeed C25 Cascadia Networked Instructional Audio System User Guide 




Quick Start Guide Cascadia Networked Instructional Audio System

Contents

- [1 POWER STATUS](#)
- [2 USING THE CLEARMIKE](#)
- [3 USING THE SHAREMIKE](#)
- [4 CHARGE MICROPHONES NIGHTLY](#)
- [5 HOW TO PLACE A CALL FROM YOUR CLEARMIKE](#)
- [6 PAIRING MICROPHONES TO THE C25](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

POWER STATUS


When the C25 is powered and ready to use, the Power light will glow.
The C25 will enter a low-power mode after one hour of inactivity and the Power light will turn off. Removing a paired microphone from the cradle charger will wake up the C25.

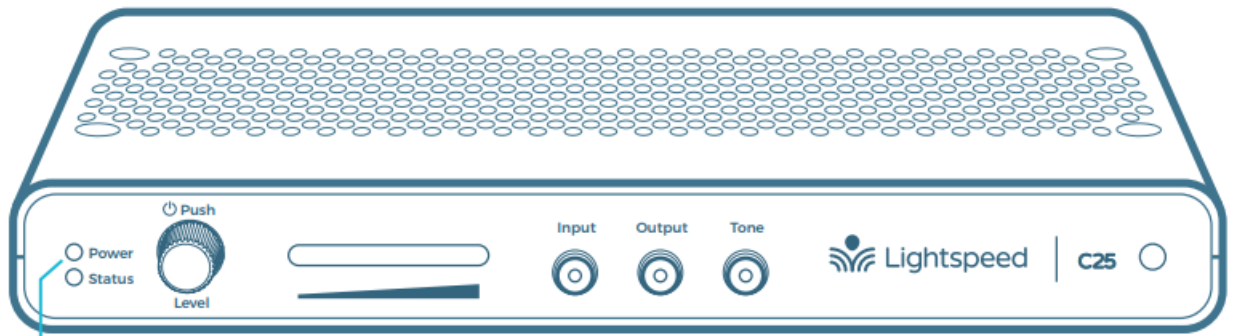


POWER LIGHT

USING THE CLEARMIKE

Remove microphone from charger. Press the power/mute button to unmute, hold near your mouth and begin speaking.

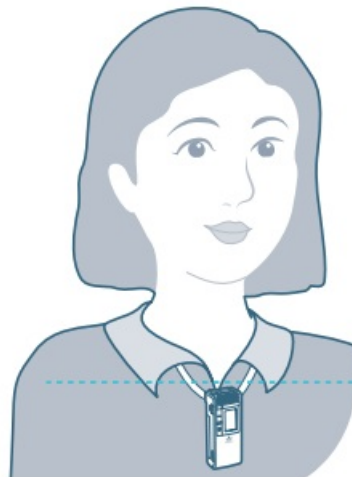


ALIGN WITH
COLLARBONE

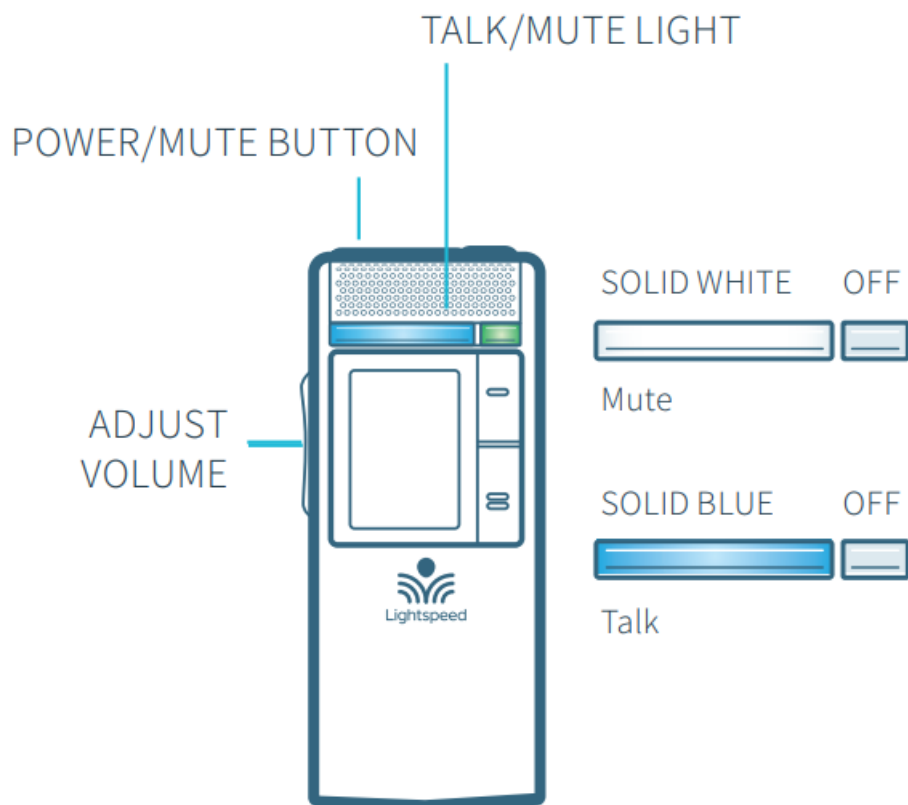

USING THE SHAREMIKE




Remove microphone from charger and press the mute button to begin speaking.

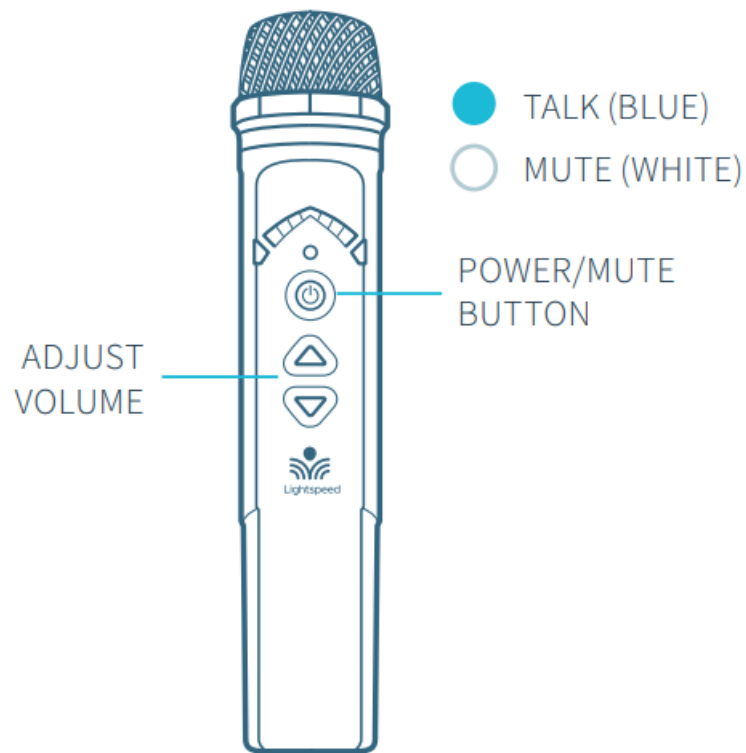

CHARGE MICROPHONES NIGHTLY

- Place the microphones into the cradle charger.
- The Power Status light will glow red when it is charging.
- It takes about 5-6 hours to fully charge the battery.
- When charging is complete, the Power Status light will glow green.

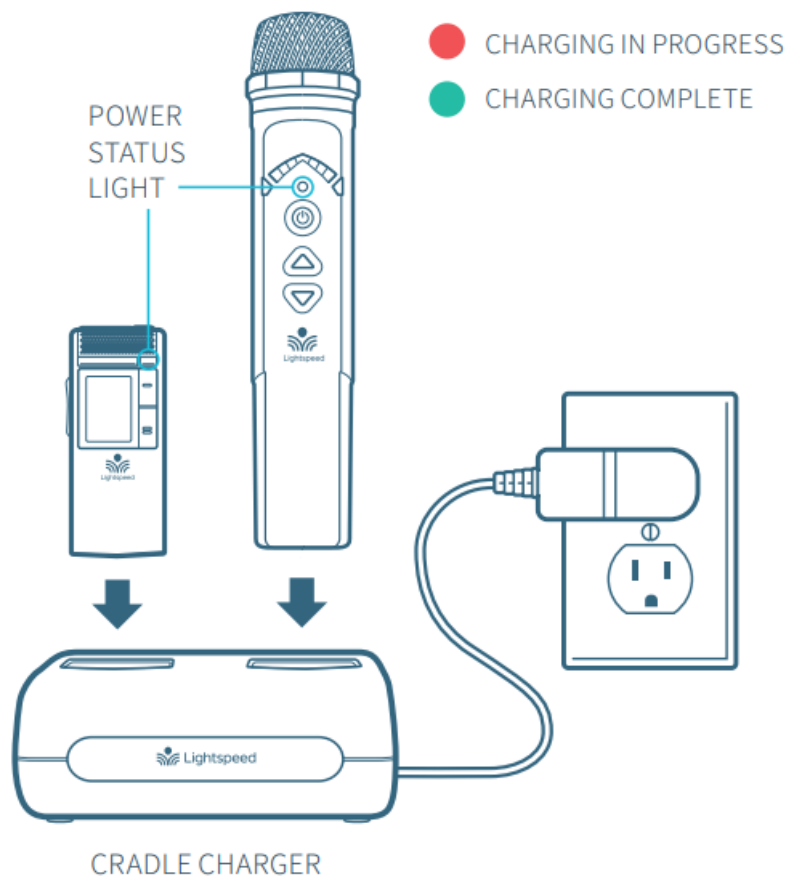


CLEARMIKE OPERATION (default screen shown)

NOTE: Alert functions only available if integration is connected/enabled during setup.


PROGRAMMABLE ALERT FUNCTIONS

- BLANK: No function
- CALL: Initiate call
- HELP: Request help
- CHECKIN: Check-in during emergencies

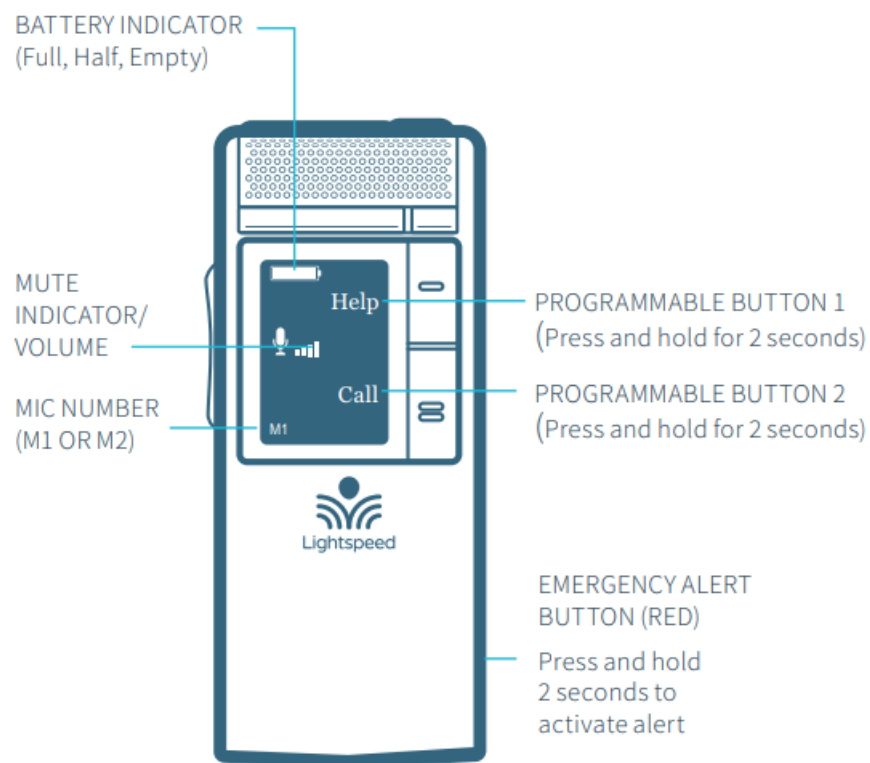

HOW TO PLACE A CALL FROM YOUR CLEARMIKE

NOTE: Function only available if feature was enabled during intital setup.

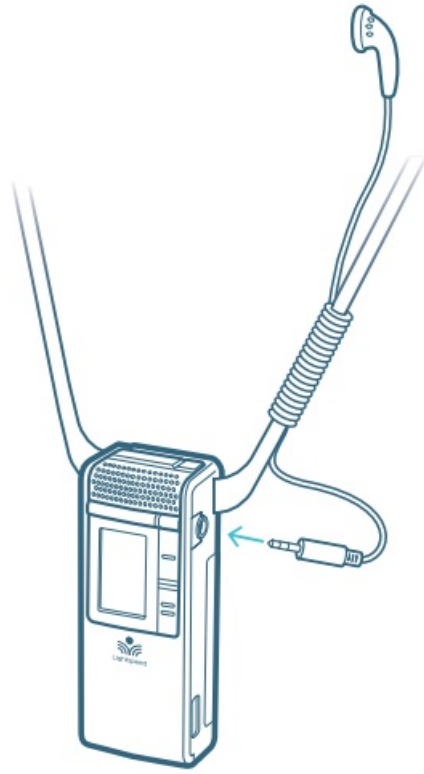

1. Plug earbud into the 3.5mm jack on the microphone.
2. Insert earbud into ear.
3. Push and hold the button on the microphone with a Call label for 2 seconds.
4. Display will change to "Calling".
5. When call connects display will change to "Call in progress".
6. Press "Cancel" to hang up call.

PAIRING MICROPHONES TO THE C25



Your system is shipped with microphones and base units pre-paired for quick and easy use. If you ever need to pair new components, follow the pairing process below.

PLEASE NOTE: Microphones should be out of the charger while pairing.

1. POINT CLEARMIKE AT C25

From a powered off state, point the IR transmitter lens toward the C25.


2. PRESS AND HOLD POWER BUTTON

Press and hold the Power/Mute button for 5 seconds until the Talk/Mute light starts flashing blue and white.

The Power Status light on the C25 will also start flashing blue and white.

3. CONFIRM STATUS

When complete, the Power Status light on the C25 will turn blue, the Talk/Mute light on the microphone will be white, and the display on the microphone will say "Pair Success".

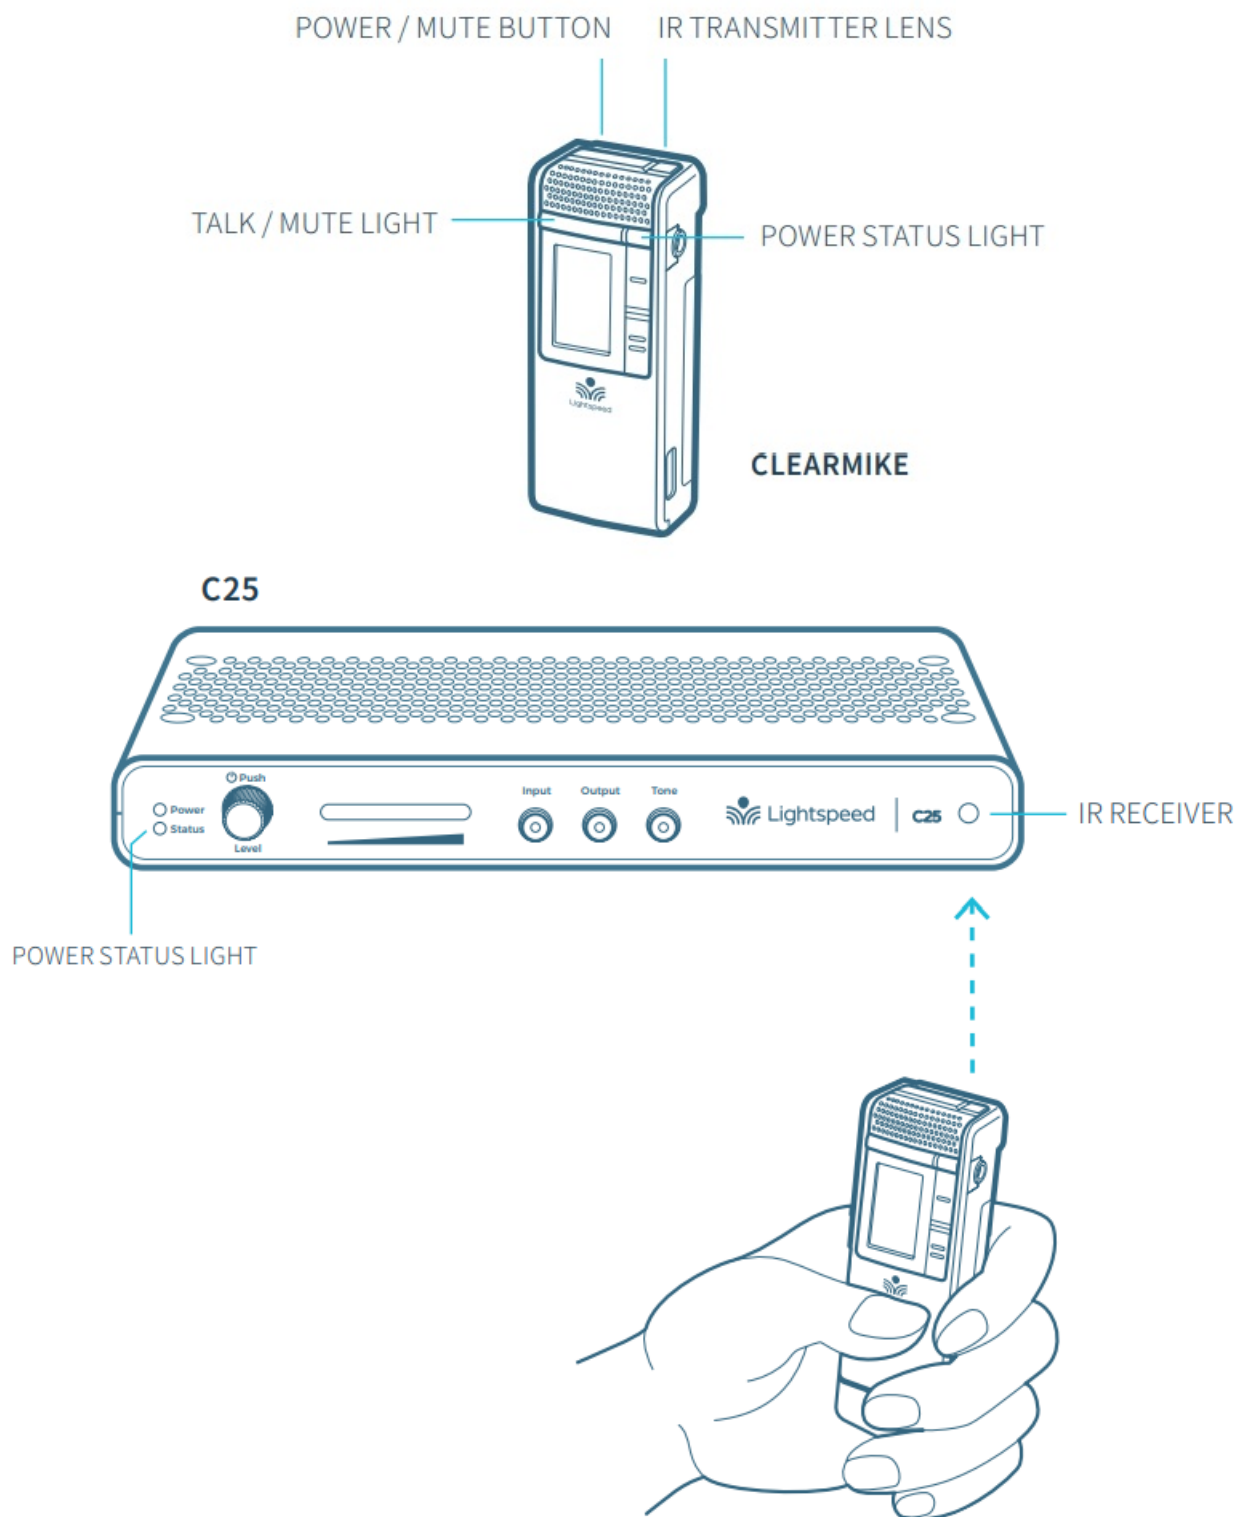

INSTALLATION GUIDE

For installation instructions, go to www.lightspeed-tek.com/C25-installation-guide (or scan the QR code).



<http://www.lightspeed-tek.com/C25-installation-guide>

USER MANUAL

For complete operating instructions, go to www.lightspeed-tek.com/C25-usermanual (or scan the QR code).




<http://www.lightspeed-tek.com/C25-usermanual>

QS0677US01-1



81-C25-A

Documents / Resources

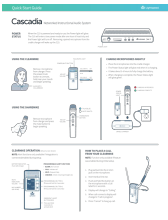	<p>Lightspeed C25 Cascadia Networked Instructional Audio System [pdf] User Guide C25, C25 Cascadia Networked Instructional Audio System, Cascadia Networked Instructional Audio System, Networked Instructional Audio System, Instructional Audio System, Audio System, System</p>
---	--

References

- [User Manual](#)