

Logitech KEYS-TO-GO Portable Wireless Keyboard User Manual

[Home](#) » [Logitech](#) » Logitech KEYS-TO-GO Portable Wireless Keyboard User Manual

Contents [[hide](#)]

- [1 Logitech KEYS-TO-GO Portable Wireless Keyboard](#)
- [2 Know your product](#)
- [3 Set up your product](#)
- [4 Charge the battery](#)
- [5 Charging your battery](#)
- [6 Hot keys](#)
- [7 Function keys](#)
- [8 Use your product](#)
- [9 Connecting to a different iOS device](#)
- [10 Battery disposal at product end of life](#)
- [11 Visit Product Support](#)
- [12 Troubleshooting](#)
- [13 What do you think?](#)
- [14 Specs & Details](#)
 - [14.1 Dimensions](#)
 - [14.2 Technical Specifications](#)
 - [14.3 Warranty Information](#)
 - [14.4 Part Number](#)
 - [14.5 California Warnings](#)
- [15 Read More About:](#)
- [16 Download](#)
- [17 FAQ – Frequently Asked Questions](#)
- [18 Related Posts](#)


Logitech KEYS-TO-GO Portable Wireless Keyboard

Logitech KEYS-TO-GO Portable Wireless Keyboard

User Manual

One keyboard, all your devices. Keys-to-Go is a portable, wireless, Bluetooth keyboard that seamlessly works with all of your Apple devices, including your mobile devices, computer, and smart TV.


Know your product

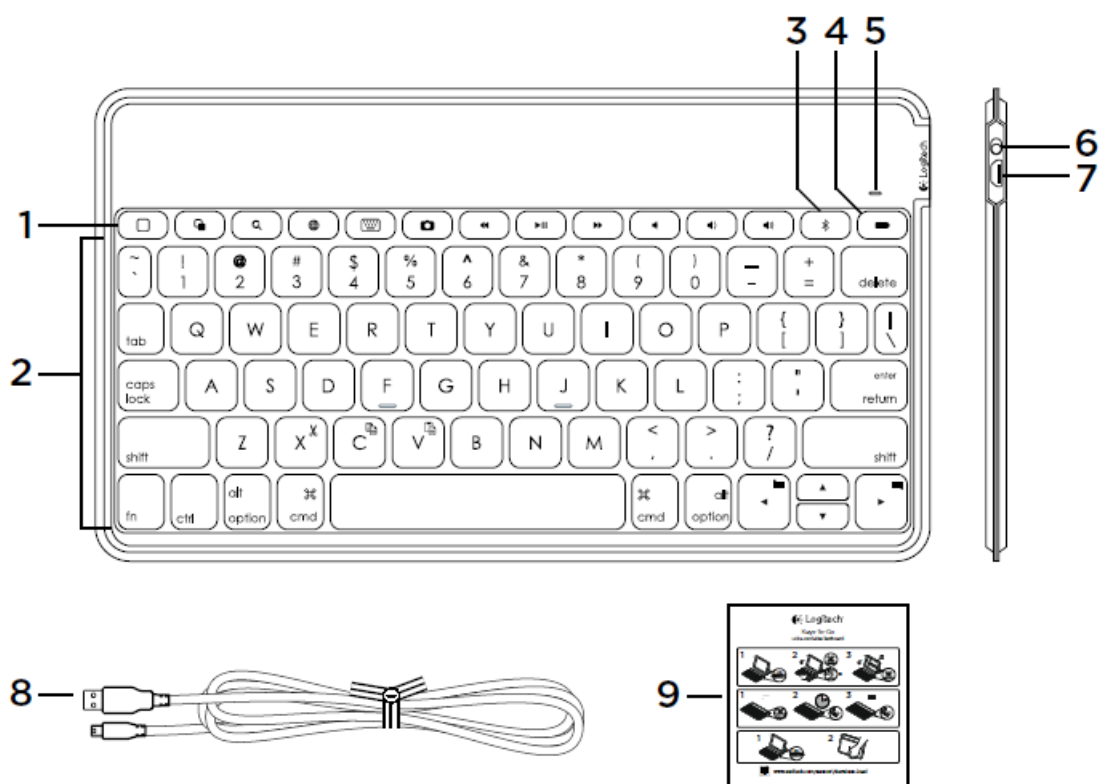

1. Hot keys
2. Keyboard
3. Bluetooth® connect key
4. Battery check key
5. Bluetooth and battery status light
6. On/off switch
7. Micro-USB charging port
8. Micro-USB charging cable
9. Documentation


Set up your product

1. Turn on the keyboard:

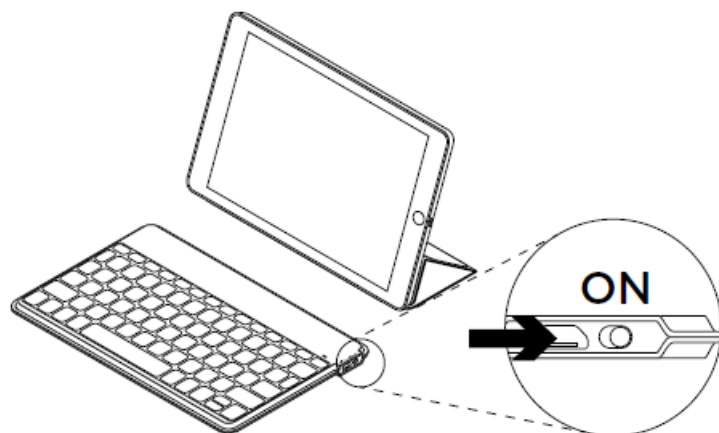

Bluetooth discovery starts automatically and continues for 15 minutes. The status light blinks blue. If the status light briefly turns red, charge the battery. For more information, see “Charge the battery.”

2. Establish Bluetooth connection:

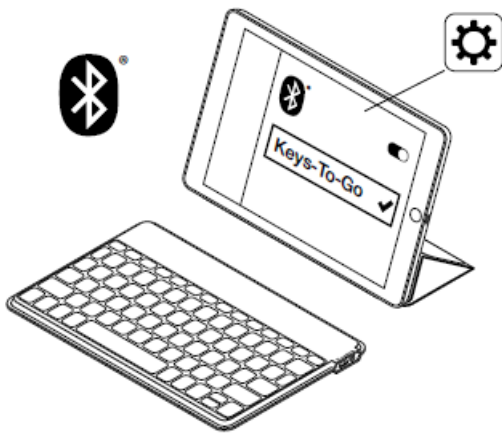

On your iPad, make sure Bluetooth is on.

Select Settings > Bluetooth > On.


Select “Keys-To-Go” from the Devices menu.

Tip: If “Keys-To-Go” isn’t in the list, try pressing and holding the Bluetooth connect key on your keyboard for 2 seconds.

Charge the battery

You should charge the battery when:

- The status light turns red briefly when you turn on the keyboard, or
- The status light blinks red when you press the battery check key:

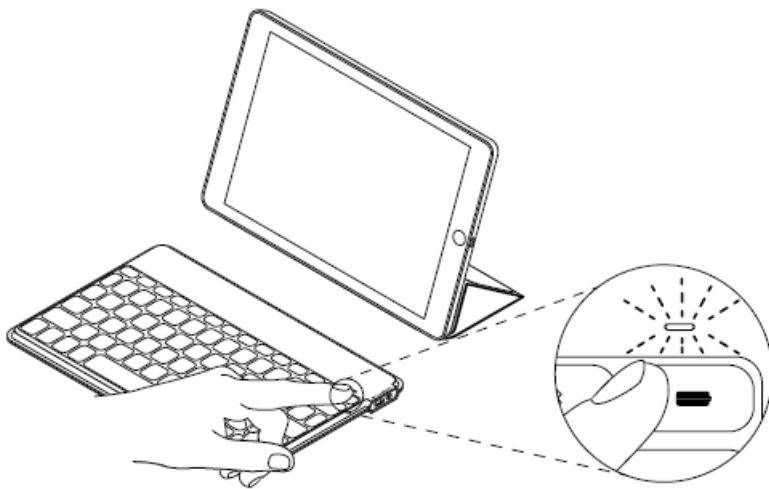


A fully charged battery provides about 3 months of power when the keyboard is used about two hours a day

Charging your battery

1. Use the micro-USB charging cable provided to connect the keyboard to your computer or a USB power adaptor.



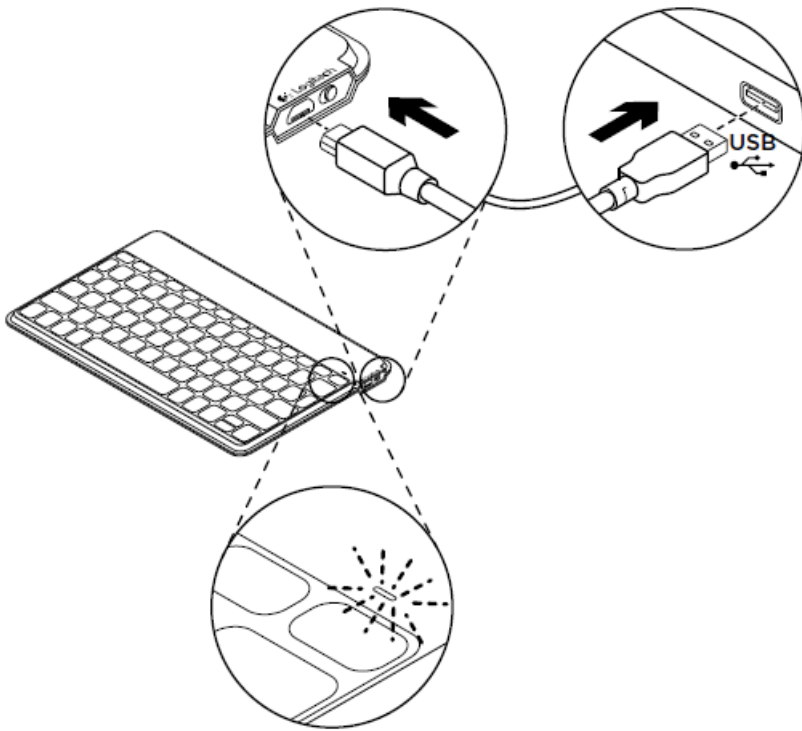











The status light blinks green while the keyboard is charging.

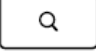

2. Charge your keyboard until the status light turns solid green.
Each minute of charging gives you about two hours' use.

Note: This ratio is approximate and is based on the standard user experience. Your result may vary.
It takes 2.5 hours to fully charge the battery.

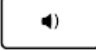Hot keys

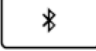	Home = iPad Home screen		Previous track
	Switch applications		Play/Pause
	Search Type keywords in the search bar for contacts, music, notes, events, mail, web, Wikipedia, and more		Next track
	Switch language Switches the keyboard language		Mute
	Virtual keyboard Shows/hides the virtual keyboard		Volume down
	Screen Shot		Volume up
			Bluetooth connect
			Battery check

Function keys



Fn + X = Cut



Fn + C = Copy



Fn + V = Paste



Fn + Left cursor = Select left

Selects text on the left,
word by word



Fn + Right cursor = Select right


Selects text on the right,
word by word

Note:

- To select a function key, press and hold the Fn key, and then press the key indicated above.

Use your product


Status light indications

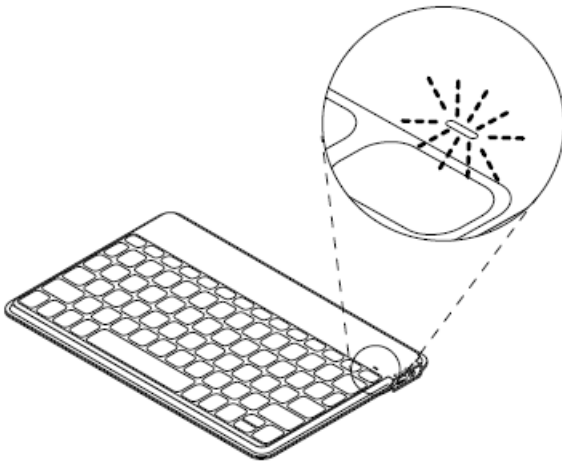



Light	Description
Blinking green	The battery is charging.
Solid green	When charging, indicates that the battery is fully charged (100%). When you press the battery check key, solid green for 2 seconds indicates that the battery power is good (above 20%).
Blinking red	Battery power is low (less than 20%). Recharge the battery.
Solid red	When you first turn on your keyboard, the status light shows solid red briefly if battery power is low.
Blinking blue	Fast: The keyboard is in discovery mode, ready for pairing. Slow: The keyboard is trying to reconnect to your iPad.
Solid blue	Bluetooth pairing or reconnection is successful.

Connecting to a different iOS device

1. Make sure the keyboard is turned on.
2. On your iOS device, check that Bluetooth is turned on.
Select Settings > Bluetooth > On.
3. Press and hold the Bluetooth connect key on the keyboard for 2 seconds. The keyboard turns discoverable for 3 minutes.
4. Select “Keys-To-Go” from the Devices menu.

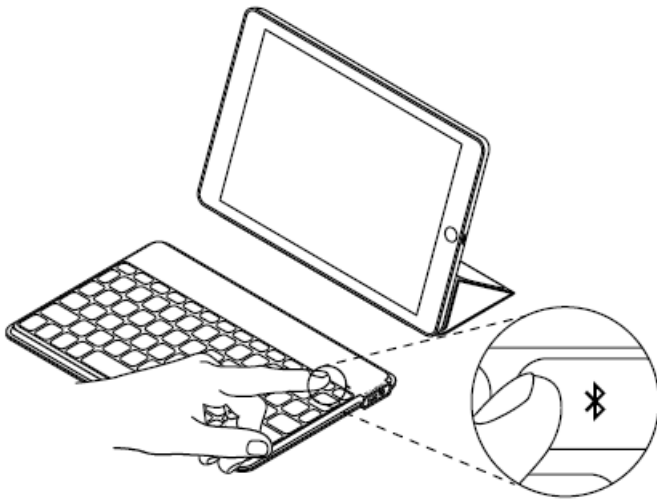


- When you've finished using your product
- When not in use, turn off the keyboard to conserve battery power.

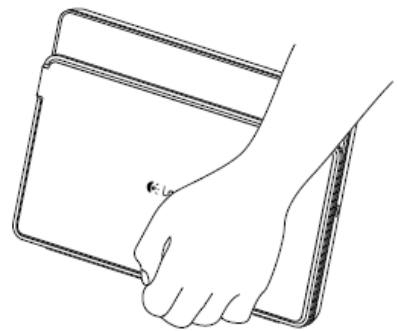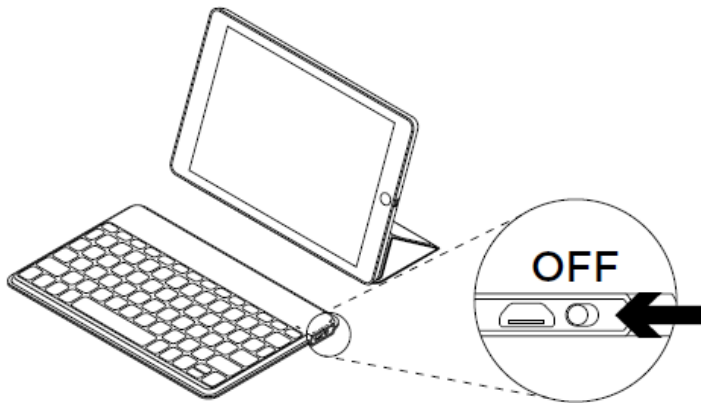


Note: The keyboard enters sleep mode if powered on and not used for 2 hours. To exit sleep mode, press any key.

Battery disposal at product end of life


1. Cut along the fabric at the top edge of the keyboard:

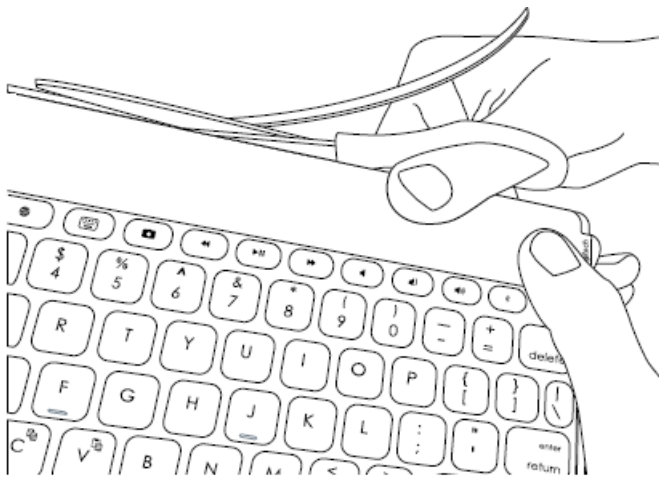


2. Use a screwdriver to pry the fabric away from the area around the on/off switch:

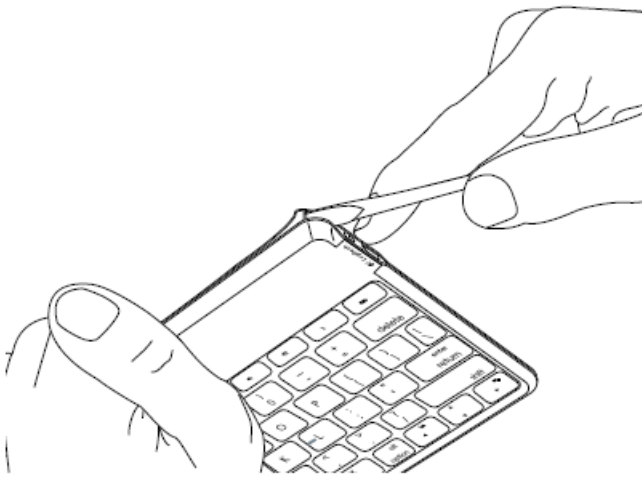

3. Separate the inner and outer fabric layers, and pull them away from the corner:

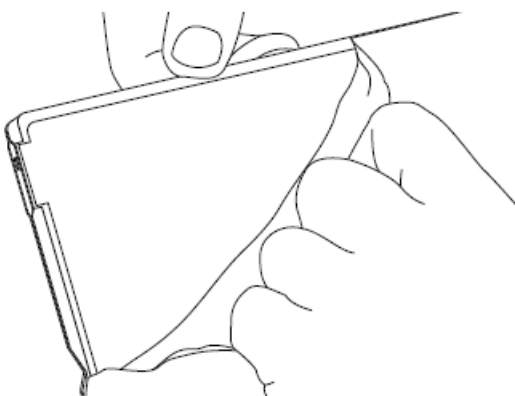

4. Pull back the yellow plate to reveal the battery and remove it:

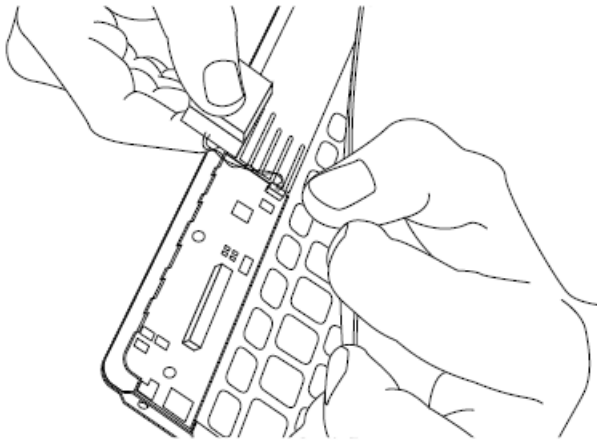

5. Dispose of the battery according to local laws.



Visit Product Support

There's more information and support online for your product. Take a moment to visit Product Support to learn more about your new Bluetooth keyboard.

Browse online articles for setup help, usage tips, and information about additional features. If your Bluetooth keyboard has optional software, learn about its benefits and how it can help you customize your product.

Connect with other users in our Community Forums to get advice, ask questions, and share solutions. At Product Support, you'll find a wide selection of content including:

- Tutorials
- Troubleshooting
- Support community
- Online documentation
- Warranty information
- Spare parts (when available)

Go to: www.logitech.com/support/keystogo-ipad

Troubleshooting

The keyboard does not work

- Press any key to wake the keyboard from sleep mode.
- Turn the keyboard Off and then back On.
- Recharge the internal battery. For more information, see "Charge the battery."
- Re-establish the Bluetooth connection between the keyboard and your iPad:
- On your iPad, check that Bluetooth is turned on.

- Press and hold the Bluetooth connect key on your keyboard for 2 seconds.
- Choose “Keys-To-Go” from the Devices menu on your iPad.

The status light briefly turns blue after the Bluetooth connection is made.

What do you think?

Thank you for purchasing our product.

Please take a minute to tell us what you think of it.

www.logitech.com/ithink

Specs & Details

Dimensions

Height: 5.39 in (137 mm)

Width: 9.53 in (242 mm)

Depth: 0.24 in (6 mm)

Weight: 6.35 oz (180 g)

Technical Specifications

Power and Connectivity

- Powered by rechargeable battery
- Single charge lasts 3 months (2 hours of typing per day)

Keyboard

- Keyboard with sealed edges
- 0.67 in (17 mm) key pitch
- Scissor Keys (0.05 in key travel)
- Keys wrapped in spill-proof, crumb-proof covering
- Full row of iOS shortcut keys

Keys-To-Go with iOS Shortcut Keys (Left to Right)

- Home
- Brightness up
- Brightness down
- Virtual Keyboard
- Search
- Previous track / Rewind
- Play/pause
- Next track / Fast forward
- Volume mute
- Volume down
- Volume up
- Lock

- Bluetooth connect
- Keyboard battery check

Warranty Information

1-Year Limited Hardware Warranty

Part Number

- **Classic Blue Keyboard with Orange iPhone Stand:** 920-010040
- **Stone Keyboard with White iPhone Stand:** 920-008918
- **Black Keyboard with White iPhone Stand:** 920-006701
- **Blush Keyboard with White iPhone Stand:** 920-010039

California Warnings

- WARNING: Proposition 65 Warning

Read More About:

[Logitech KEYS-TO-GO Portable Wireless Keyboard](#)

Download

Logitech KEYS-TO-GO Portable Wireless Keyboard User Manual – [[Download PDF](#)]

FAQ – Frequently Asked Questions

Battery life and charging for the Keys-To-Go keyboard

The Keys-To-Go keyboard uses a micro USB cable to charge the battery. To charge the keyboard, connect the included cable to any USB power source. Charging times may differ depending on the power source.

The battery life of your keyboard varies with usage. On average, the battery charge will last up to three months when used for about two hours a day.

iOS-specific function keys on the Keys-To-Go keyboard













Your keyboard has special function keys and hot keys that perform iOS-specific functions.

Function keys To select a function key, hold down the **fn** key, and then press one of the keys listed in the table below.

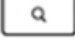Key	Function	Key	Function
	Cut		Select text on the left, word by word
	Copy		Select text on the right, word by word
	Paste		

Hot keys

NOTE: You don't need to press the **fn** key to activate hot key functions.

Key	Function	Key	Function
	Home		Previous track
	Switch applications		Play/Pause
	Search		Next track
	Switch language		Mute
	Virtual keyboard		Volume down
	Screen shot		Volume up

Keys-To-Go keyboard LED status indicators

Your keyboard has an LED on the top right to indicate Bluetooth and battery status. You can also press the key with the battery icon on the top right of the keyboard to show the current battery status.

Power and battery

- Green, blinking — battery is charging.
- Green, solid — battery is charged.
- Red, solid — battery is low (less than 20%). You should charge your tablet keyboard when you can.


Bluetooth

- Blue, quickly blinking — keyboard is in discovery mode, ready for pairing.
- Blue, slowly blinking — keyboard is trying to reconnect to your Apple device.
- Blue, solid — pairing or connection is successful. The light then turns off to save energy.

Use the arrow keys to scroll on the Keys-To-Go keyboard

The arrow keys on your keyboard will function in an application only if the app developer has configured it to use keyboard keys.

If you have questions about how the arrow keys function within an application, and if they can be used to scroll, see the documentation for the app or contact the developer.

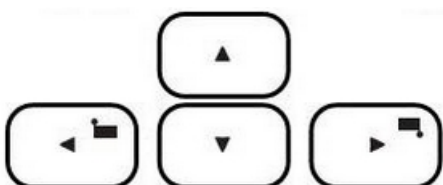

NOTE: Most current iPad and iPhone apps rely on gesture commands to scroll and don't support arrow-key scrolling.

Supported devices with the Keys-To-Go keyboard

This product was designed for use with these devices:

– iPad, iPhone, and Apple TV

NOTE: Keyboard function and special keys may not work as intended with non-Apple devices.

Use the Keys-To-Go keyboard

Connect for the first time

iPad/iPhone

1. Turn on the keyboard. On first connection, your keyboard enters Bluetooth discovery mode. The status indicator will blink blue rapidly.
2. Go to the Bluetooth settings on your iPad or iPhone and select "Keys-To-Go" in the **Devices** list. Once the connection is made, the status indicator will turn solid blue. Your keyboard is ready to use.

Apple TV

1. On your Apple TV, go to **Settings > General > Bluetooth** and select "Keys-To-Go".
2. When prompted, enter the pairing code on the keyboard and press the **Return** or **Enter** key. The Apple TV will confirm that the pairing process is complete.

Connect to a different iPad or iPhone

If you've already connected the Keys-To-Go to one device and want to connect it to another device:

1. Turn on the keyboard. You should see the status indicator glow green, and then blink blue.
2. Press the Bluetooth connection button on the right side of the keyboard for two seconds to make your keyboard discoverable. The status indicator should blink blue rapidly.
3. Go to the Bluetooth settings on your iPad and select "Keys-To-Go" in the **Devices** list. Once the connection is made, the status indicator will turn solid blue. Your keyboard is now ready to use

Resolve connectivity issues with the Keys-To-Go keyboard

- Go to the Bluetooth settings on your device and check if Bluetooth is active.
- Make sure your keyboard is charged. Turn your keyboard on by sliding the switch on the side of the keyboard to the On position. The status indicator will be red if your keyboard has less than 20% battery life left. Connect it to a power source.
- Try moving away from other wireless or Bluetooth sources — you could be experiencing interference.
- On your device, turn Bluetooth off and then back on again.
- Try un-pairing and re-pairing your keyboard with your device. Here's how:

iPad/iPhone

1. On your iPad or iPhone, tap **Settings** and then **Bluetooth**.
2. Find "Keys-To-Go" in the **Devices** list, tap the arrow to the right and then tap **Forget this device**.
3. Turn your keyboard on and press the Bluetooth connection button on the right side of the keyboard for two seconds to put it into discovery mode.
4. On your iPad or iPhone, tap **Settings** and then **Bluetooth** settings, find "Keys-To-Go" in the **Devices** list, and select it. Once the connection is made, the indicator will turn solid blue. Your keyboard is ready to use.

Apple TV

1. On your Apple TV, go to **Settings > General > Bluetooth**.
2. Select "Keys-To-Go" and then select **Forget this device**.
3. Turn your keyboard on and press the Bluetooth connection button on the right side of the keyboard for two seconds to put it into discovery mode.
4. On your Apple TV, go to **Settings > General > Bluetooth** and select "Keys-To-Go".
5. When prompted, enter the pairing code on the Keys-To-Go keyboard and press the **Return** or **Enter** key. The Apple TV will confirm that the pairing process is complete.

What devices fit in the Keys-To-Go Stand?

All generations of iPhones (without cases) will comfortably rest on the Keys-To-Go stand.

[Manuals+](#), [home](#) [privacy](#)