




# LogTag UTREL30-WIFI 30 Day WiFi Low Temperature Logger User Guide

[Home](#) » [LogTag](#) » LogTag UTREL30-WIFI 30 Day WiFi Low Temperature Logger User Guide 

## LogTag<sup>®</sup> UTREL30-WiFi

Quick Start Guide  
Version C – August 2022  
[www.logtag-recorders.com](http://www.logtag-recorders.com)

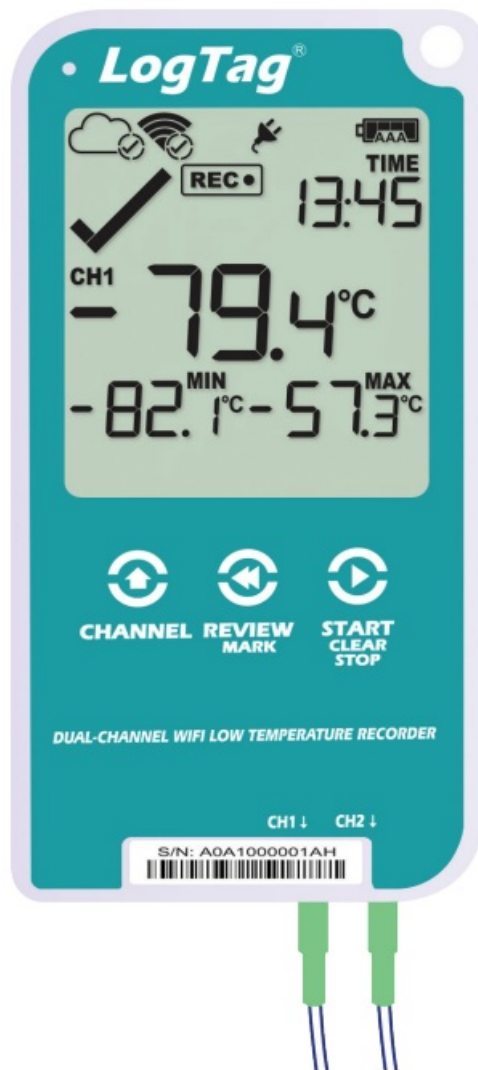

## Contents

- 1 What's Included
- 2 Battery Installation
- 3 Running the Connection Wizard
- 4 Remote Configuration through LogTag Online
- 5 Downloading LogTag Analyzer
- 6 Configuration through LogTag Analyzer
- 7 Installing the Wall Mount
- 8 Starting your UTREL30-WiFi
- 9 Viewing Second Temperature Channel
- 10 Documents / Resources
  - 10.1 References
- 11 Related Posts

## What's Included

Please check you have each of the items shown below before continuing with setting up your UTREL30-WiFi.




UTREL30-WiFi



USB Cable



AC Adapter  
(US and EU  
adapter only)

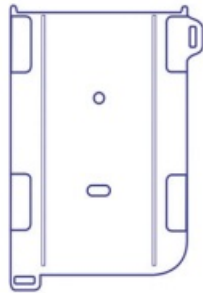

Wall mount  
(Not Included)



2x AAA Battery  
(Not Included)




ST100 External  
Probe  
(Not Included)

## Battery Installation



A permanent power supply should be connected to the USB socket at the bottom of the device. Two AAA batteries are required as the back up source to ensure your device continues to log in the event of a power outage or accidental removal of power.

1. Remove the back cover of the UTREL30-WiFi case using the Phillips (cross-shaped) screwdriver.

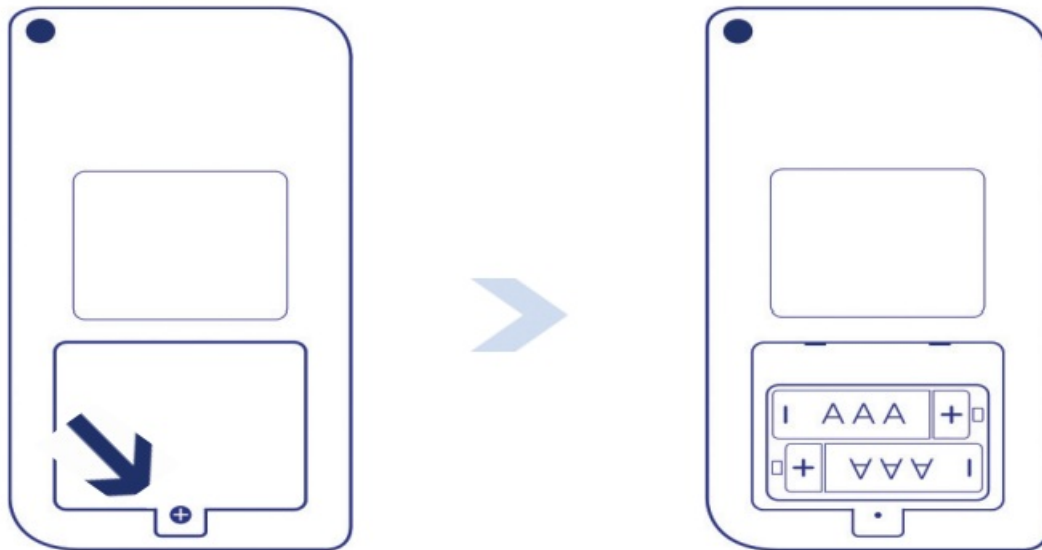

2. Install the two AAA batteries taking note of the direction to install each battery.
3. Replace the battery cover to secure the batteries in place.

## Running the Connection Wizard

Alternatively, to connect your logger using Bluetooth® connection capabilities on the LogTag Mobile application refer too the Bluetooth® Connection Guide.

**Note:** Please ensure there is internet connection on your computer prior to starting this process.  
Download the latest Connection Wizard from the LogTag website.

<https://logtagrecorders.com/download/software/connectionwizard.exe>

1. Select Start and follow the instructions.



## Running the Connection Wizard (continued)

2. Sign in with your LogTag Online account and select SIGN IN.



**LogTag®Online** Connection Wizard

Sign in to your LogTag®Online Account below and the Wizard will assist in registering your WiFi device(s). If you do not have an account, click "Create an Account". Return to this Wizard when your account setup is complete.

EMAIL

PASSWORD

[Forgot your Password?](#)

[Create a LogTag®Online Account](#)

[Help](#) Ver: 1.0.9.11 Skip SIGN IN

Select the Create a LogTag Online Account if you do not have an account. You can also click or copy the following link and follow the on-screen instructions;

<https://logtagonline.com/signup>

**Note:** If you selected Skip, you will need to manually register the device on LogTag Online or repeat the LogTag Online Connection Wizard.

#### Running the Connection Wizard (continued)

3. The Connection Wizard will scan for connected LogTag devices. Your device will be automatically registered to your LogTag Online account as soon as your device has been identified.



**LogTag®Online** Connection Wizard

The wizard is scanning for USB connected LogTag® WiFi devices.

Scanning...


Serial:	Configured WiFi:	Status:
A0A100003550	LogTag24	Registering



Scan Again

[Help](#) Ver: 1.0.4.14 Cancel


Select Scan Again if your device was not found.

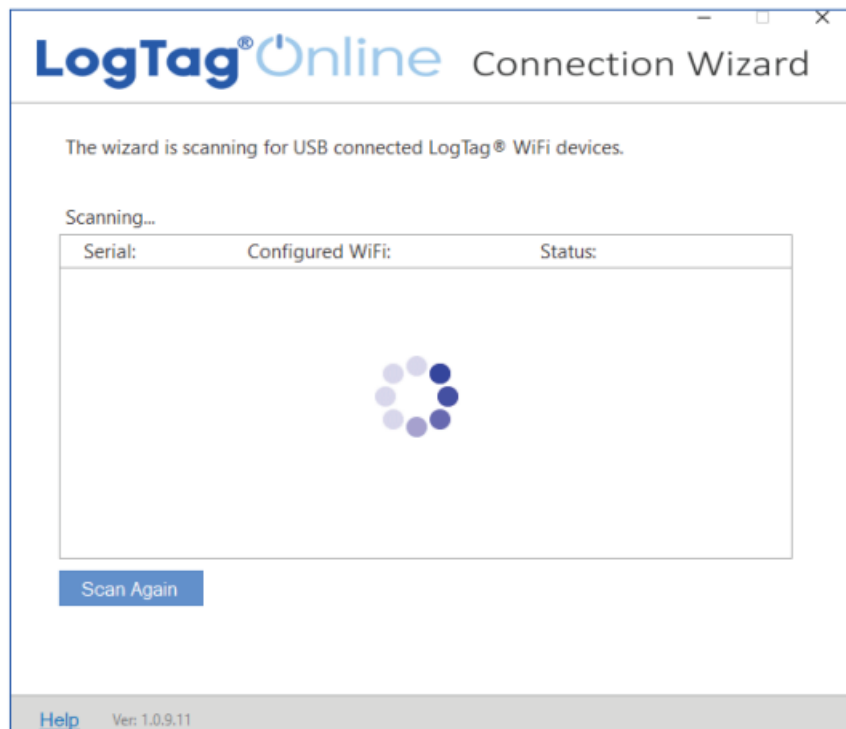

Double-check your devices are plugged-in to your computer using the USB cable provided before scanning again.

#### Connecting to your WiFi Network


4. Connect your device to the network by selecting your Wi-Fi network name (or SSID) and providing the network password, then select Next.

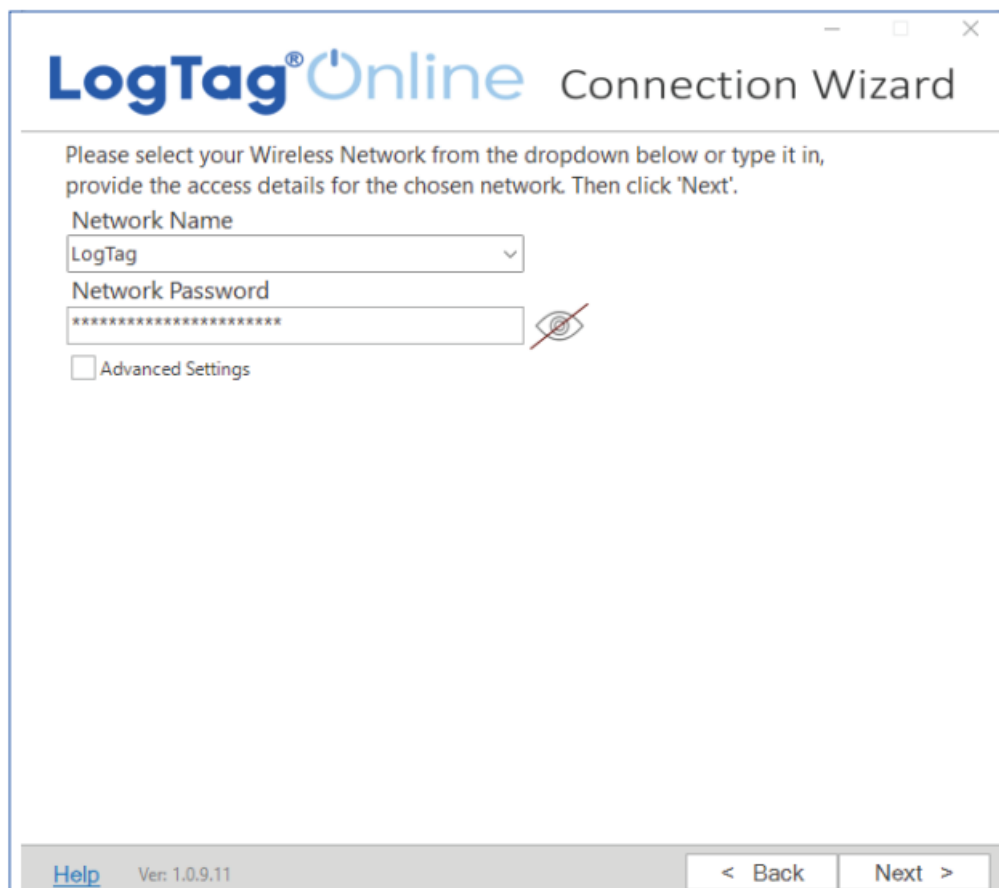

Passwords are case-sensitive. Select the eye icon to view the password you entered.

**Note:** Incorrectly entered password is a common reason why your device failed to connect to your network. Some Wi-Fi Networks won't appear in this list for security purposes. If your network is one of those, you can manually type the name of your network (SSID) in the Network Name field.

5. Your device will connect to your local network using the provided Wi-Fi credentials (network name or SSID and password). It will also check its' connection to LogTag Online. This typically takes 10 seconds. Select Close once the connection was successful.

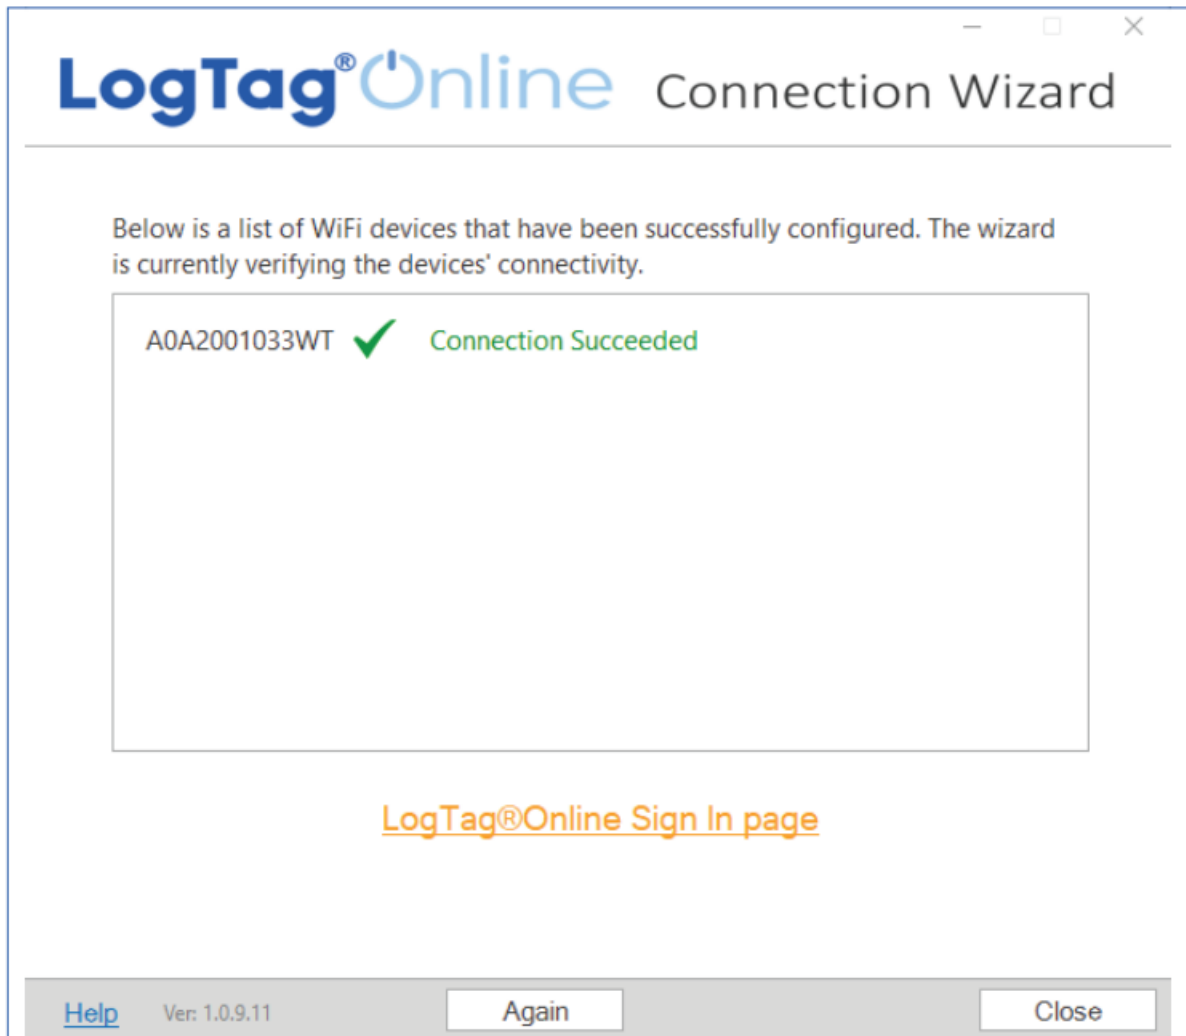

Select Again to repeat the steps to connect to your network.

6. Select the LogTag Online Sign In page link to login to LogTag Online.

## Remote Configuration through LogTag Online

LogTag Online is a secure online application that stores the data recorded from your logger against your account. Once your device is connected to your network, it can be configured remotely through LogTag Online. Profile and timezone can be onfigured for the logger.

Ensure your device is plugged-in to your computer using the USB cable provided. If the profile is shown as pending configuration, you can speed up the connection between your logger and LogTag Online by pressing and holding both the CHANNEL FUNCTION and REVIEW/MARK buttons on the logger simultaneously for approximately 6 seconds.

Edit Device ?

DEVICE NAME

UTREL30-WIFI

DEVICE CONFIGURATION PROFILE

Profile Name: Generic Ambient Status: Pending

DELETE DEVICE

CLOSE SAVE

## Remote Configuration through LogTag Online (continued)

### Signing in to your LogTag Online Account

1. Login to LogTag Online;

<https://logtagonline.com>

Willkommen добро пожаловать

CUSTOMER LOGIN

Email Address

Password

Forgot your Password?

SIGN IN

Create an Account

OR

LOGGER TRANSIT DATA


Logger Serial Number

VIEW

Terms and Conditions 1.10.4 1.10.0

The location for the first channel will be displayed in the pinned locations of the Dashboard.



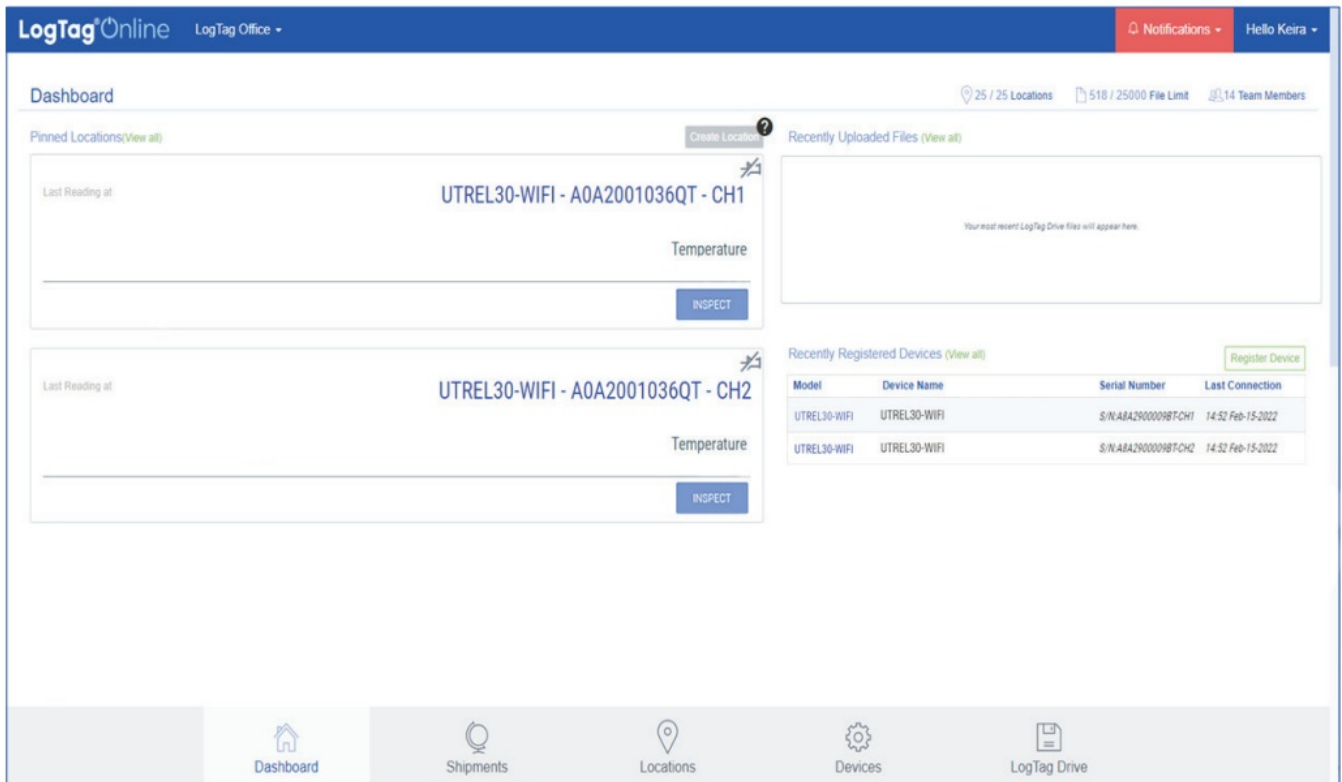

## Remote Configuration through LogTag Online (continued)

Manually register your device if you cannot see the location. The second location will need to be created manually. Each channel can be assigned to its location. Please refer to the Activation Codes section in the LogTag Online User Guide for more information.

The probe inserted into the loggers CH2 port will automatically register as CH1 in the location description when only one probe is inserted into the logger.

**Note:** When registering your UTREL30-WiFi Dual Channel

Logger to your LogTag Online account, a location is autocreated for the first channel when your team has a location lot available from your current activation code;

- As soon as your device has been identified through the Connection Wizard,
- Manual registration by selecting Register Device in the registered devices table on the Dashboard or in the Devices screen.

2. Navigate to Location screen and select to edit the location created for the first channel of your registered device.

## Remote Configuration through LogTag Online (continued)

The screenshot shows the 'Settings' tab of the LogTag Recorder interface. It is divided into two main sections: 'Location Details' and 'Team Details'.

**Location Details:**

- LOCATION NAME:** Vaccines (Pharma Depot St AKL, A0A2001036QT-CH1)
- DESCRIPTION:** Vaccines Pharmaceutical Goods Depot
- LOGGER ATTACHED TO LOCATION:** UTREL30-WIFI - #A0A2001036QT-CH1
- LOGGER CONFIGURATION PROFILE:** Generic Ambient (Note: Some profile settings will affect both channels.)
- LOGGER TIMEZONE:** (UTC+12:00) Auckland, Wellington (Note: for multi-sensor devices this setting will apply to all Locations connected to the device.)
- COMMENTS:** Add a comment...

**Team Details:**

- PRIMARY COORDINATOR\*:** George Harper
- SECONDARY COORDINATOR:** Please select
- EMERGENCY COORDINATOR:** Please select

At the bottom right, there are three buttons: 'EDIT NOTIFICATIONS' (orange), 'DELETE' (red), and 'SAVE' (green).

3. In the settings tab of the Location Details screen, select the profile to apply to your logger from the Logger Configuration Profile drop-down that best suits your needs.
4. Select the time zone for the location from the Logger Timezone drop-down.
5. Select Save to apply the configuration.
6. Navigate to the Devices tab and select on your devices name. The configuration profile will be shown along with its current status.

## Downloading LogTag Analyzer

The minimum recommended version is LogTag Analyzer 3.2.0

1. Download LogTag Analyzer from the LogTag website:



<https://logtagrecorders.com/software/LTA3/>


2. Double-click the downloaded file to open the LogTag Analyzer Setup Wizard and follow the on-screen prompts to install.
3. Select Finish to exit the setup wizard.
4. Open the LogTag Analyzer application.

**Note:** If you already have LogTag Analyzer installed, please see whether you need to update to the latest version by clicking 'Check Internet for updates' from the 'Help' menu.

**Warning:** Please ensure no other LogTag software is currently running on your computer before running the Analyzer software.

## Configuration through LogTag Analyzer

Connect your UTREL30-WiFi to your computer via the USB cable provided. The USB socket on the device is located on the bottom, protected by a rubber seal.

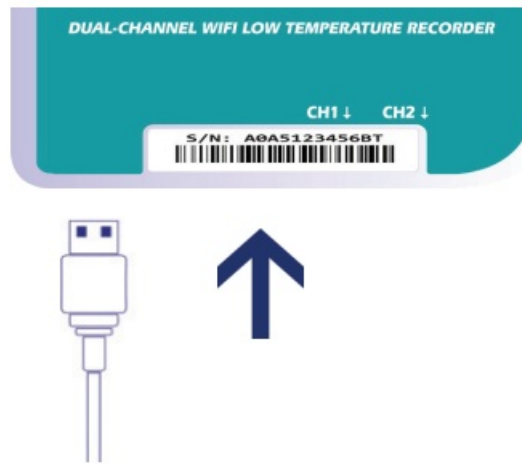

1. Select Configure from the LogTag menu or select the Wizard icon.
2. Adjust your logger configuration settings as required. For more information on configuration settings, please refer to Configuring the UTREL30-WiFi in the Product User Guide or press F1 for help.
3. Select Configure to upload the configuration settings to the logger.
4. Select Close to complete and exit the configuration page.

## Installing the Wall Mount

Setup of your UTREL30-WiFi is complete.

Attach the Wall Mount Bracket on the side of your refrigerator or freezer, preferably at eye-level with the adhesive strip provided with the Wall Mount. Before sticking on the Wall Mount, make sure the probe cable and the USB cable from the UTREL30-WiFi can both reach the device comfortably without obstruction or at risk of being accidentally disconnected if knocked.

Insert the UTREL30-WiFi into the Wall Mount, connect the USB and sensor cables. The display should show the word "READY" as seen in the image (right).

**Note:** Both the cloud and WiFi symbols are showing in the top left with a tick in each to confirm successful setup of the device.




### Starting your UTREL30-WiFi

Press and hold the START/Clear/Stop button.  
STARTING will appear along with READY.  
Release the button once READY disappears.  
The UTREL30-WiFi now records temperature data.



The Logger will not start if:


- You release the button before READY disappears.
- You keep holding the button for more than 2 seconds after READY disappears.
- The backup battery is critically low and the Logger is not connected to power.

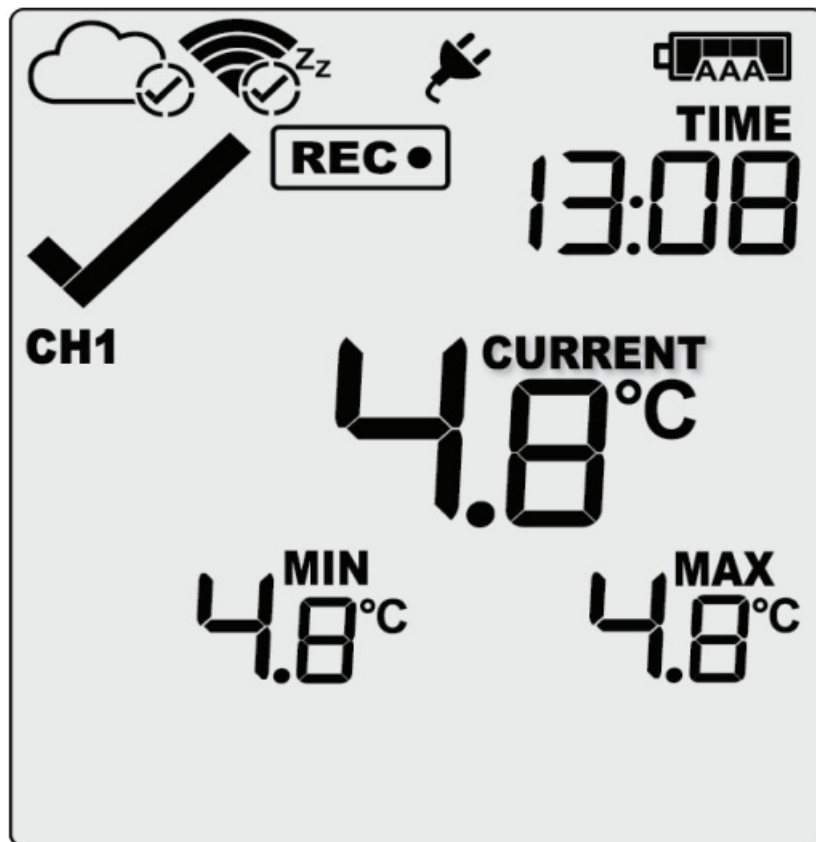

### Viewing Second Temperature Channel

Press the CHANNEL FUNCTION button to change the channel on screen. In this example, the display switched from CH1 to CH2.

The device will toggle between the two channels if both external probes are configured.

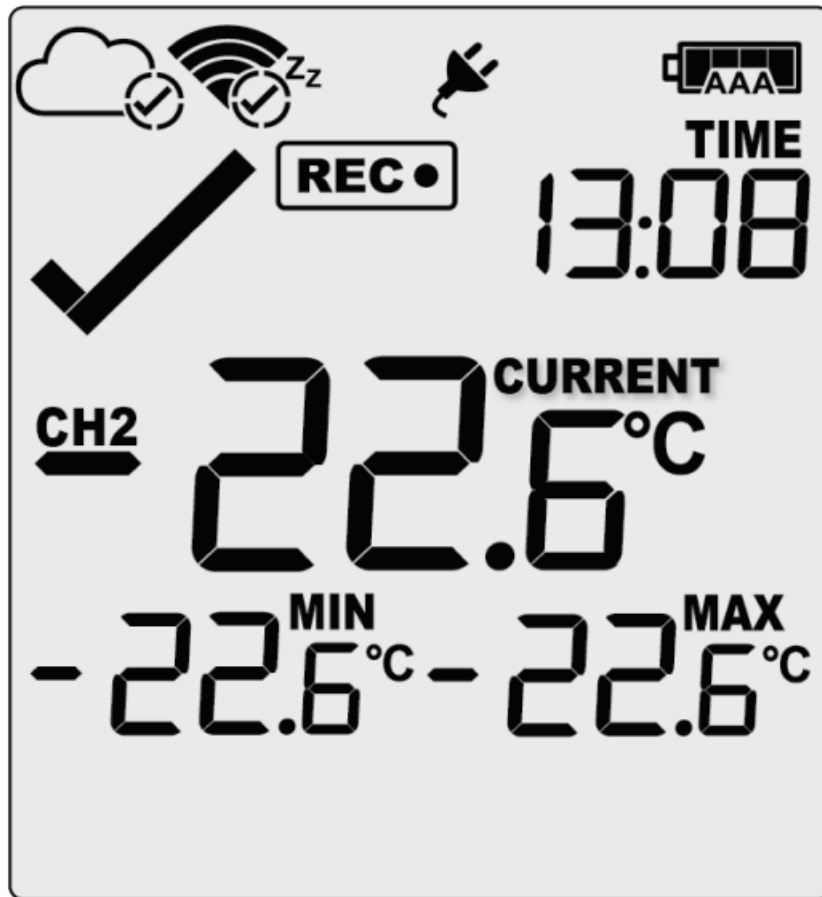


**Note:** The probe cover can be inserted in an unused channel port.

The Bluetooth ® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LogTag North America Inc. is under license. Other trademarks and trade names are those of their respective owners.

[www.logtag-recorders.com](http://www.logtag-recorders.com)

## Documents / Resources

 <p><b>LogTag UTREL30-WiFi</b> Quick Start Guide Version 1.0 - August 2022 www.logtag-recorders.com</p>	<p><a href="#">LogTag UTREL30-WiFi 30 Day WiFi Low Temperature Logger</a> [pdf] User Guide UTREL30-WiFi, 30 Day WiFi Low Temperature Logger, UTREL30-WiFi 30 Day WiFi Low Temperature Logger, WiFi Low Temperature Logger, Low Temperature Logger, Temperature Logger, Logger</p>
--	---

## References

- [LogTag Data Loggers](#)
- [LogTag Online](#)
- [LogTag Online](#)
- [LogTag | LTA3](#)