

LumiCharge LC3 Smart LED Desk Lamp Instruction Manual


[Home](#) » [LumiCharge](#) » LumiCharge LC3 Smart LED Desk Lamp Instruction Manual 

Contents

- [1 LumiCharge LC3 Smart LED Desk Lamp](#)
- [2 Product Specs](#)
- [3 Key Product Features](#)
- [4 Technical Specs](#)
- [5 LED Display Operation](#)
- [6 LED Screen Functions](#)
- [7 Operating and Setting the LED Screen](#)
- [8 Setting the Date and time](#)
- [9 Setting the Alarm and snooze](#)
- [10 The Wireless Charging](#)
- [11 MOTION SENSOR NIGHT LIGHT](#)
- [12 Quick Start](#)
- [13 Connect to the “Tuya” APP](#)
- [14 Adjustment Capabilities](#)
- [15 Warranty Card](#)
- [16 Product Registration Card](#)
- [17 FCC Statement](#)
- [18 Documents / Resources](#)
- [19 Related Posts](#)





LumiCharge LC3 Smart LED Desk Lamp

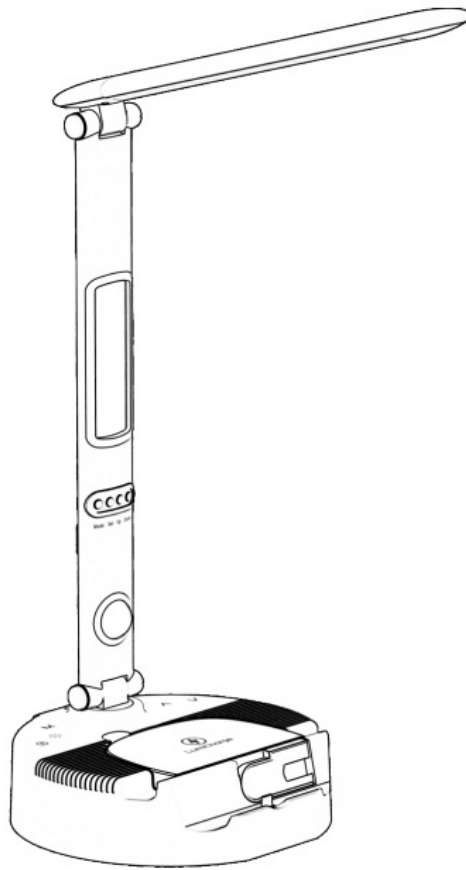

Thank you for purchasing your Lumicharge Smart Lamp. Please read the manual carefully and keep for later use.
www.thelumicharge.com

Product Specs

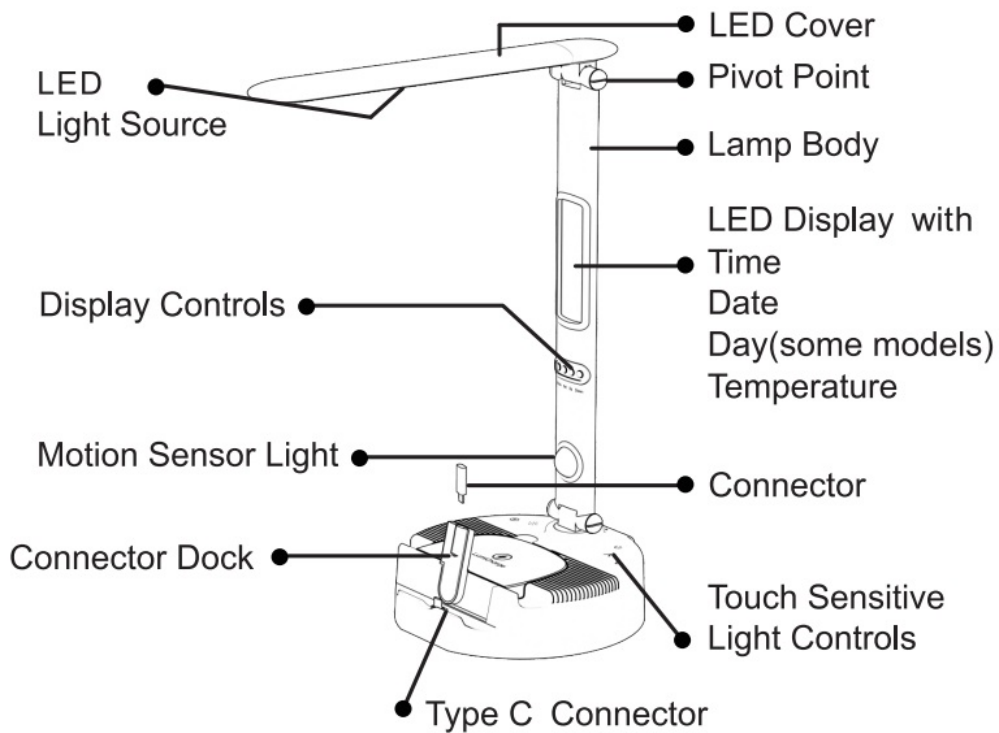

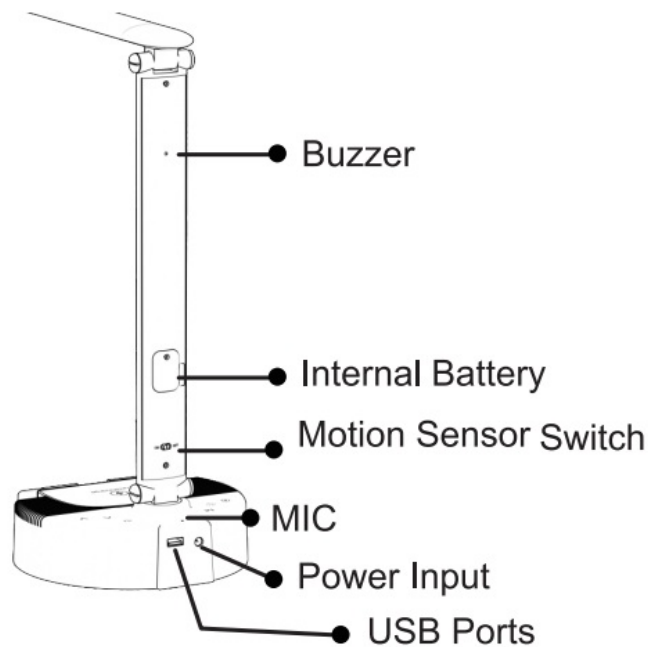


Key Product Features

- Motion Sensor Light. Lights up a dark room to make it easier to find where you are.
- High Quality LED Light Source. 3 different Hues: Soft White, White & Yellow.
- Touch Sensitive Light Adjustment. Easily select from 10 levels of intensity to fit any environment.
- Extra USB Port. The lamp base contains 1 additional USB port for convenience.
- Support wireless Bluetooth music play back with Hi Fi speaker.
- Clock Time Sync with phone through Tuya App. Supports typeC.

Technical Specs

- **Shell Material:** ABS + Acrylic
- **USB Output:** DC 5V
- **Net Weight:** 666g
- **Product Size:** 7"X7"x15.8
- **Color Temperature**
 - **White:** 5500-6000K
 - **Soft White:** 3750-4250K
 - **Yellow:** 2800-3200K
- **Speaker:** (40/5W*2)

LED Display Operation

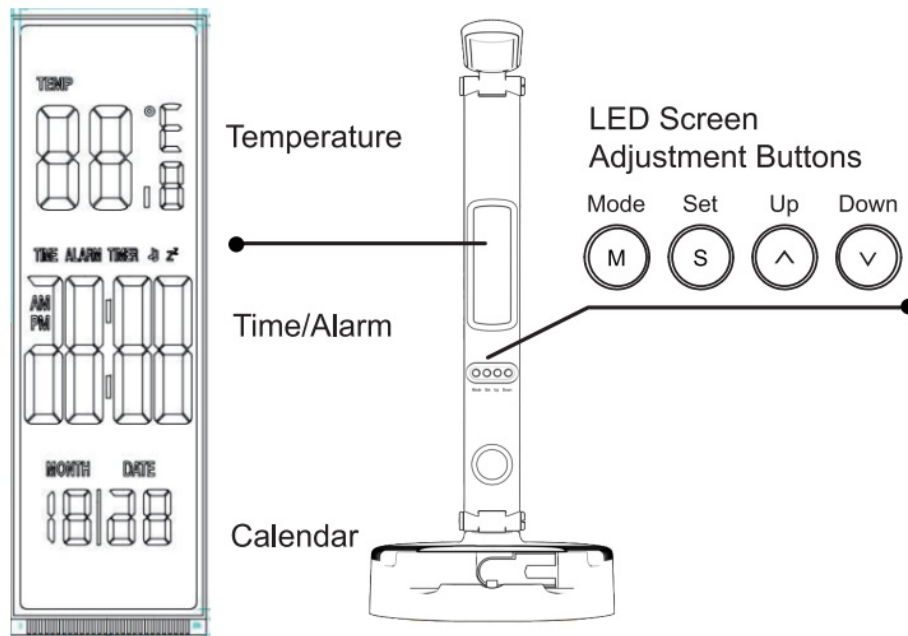

LED Screen Functions

1. Time Display

Shows time of the day, date(Month and Day), day of the week, and temperature. The time display can be set for 12 or 24 hour view.

2. Alarm Clock

The alarm clock can be set so sound is played at the time that the alarm is set for.

3. Temperature

Ambient temperature is displayed. When the lamp is idle, pressing the Down button below of the display will change the display between Celsius& Fahrenheit.

Operating and Setting the LED Screen

- When powering on your Lumicharge you are put into “Standby” mode.
From here you can set Time, Date and Alarm
- In Standby mode, press the set button to cycle through the available functions
Standby Mode> Hour> Minutes >Year>Month> Day> Exit.
- To change the time standard between 12/24 hours, go into Standby mode, press Up button.
- To change the temperature reading from C to F, go into Standby mode and press Down button


Setting the Date and time

1. In the Standby mode state, press the SET button to start the setting function of date and time, press again to enter the setting of the next option, the order of setting is: Time minutes – year – month day exit.
2. Press the Up and Down button to set.
3. In the Standby mode, press the Mode button or no operation for 1 minute to exit the setting and display the time immediately.

Setting the Alarm and snooze

1. In the Standby mode, press Mode button to enter alarm mode, and the clock icon is off.
2. In the alarm mode, press the SET button to enter the alarm mode, and press again to enter the Settings of the next option. The order of setting is: time minutes snooze music exit.
3. Press the Up and Down keys to set.
4. In the Alarm mode, press the Up and Down button to turn on and off the alarm and snooze function, press again to enter the Settings of the next functional markers. The order of setting is: turn on the alarm- turn on the snooze — turn off the alarm — turn off the snooze.
5. When it reaches the alarm time, the alarm will last for 1 minute, and when it reaches the snooze time, the alarm will ring again. Press the SET button or any button to stop the ringer.

The Wireless Charging

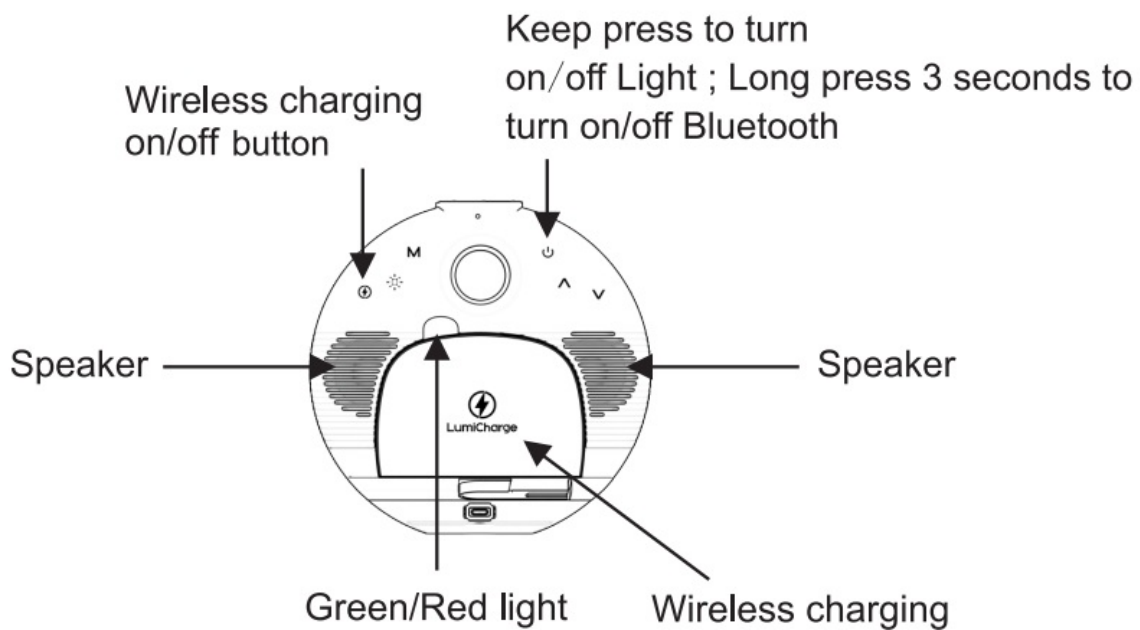


- Wireless Charging: Touch/Tap the wireless charging button, the red light is turned on, Place the mobile device with wireless charging function on the charging mat to charge your phone.
- Green light is turned on when the phone is charging.
- PLEASE MAKE SURE YOUR PHONE/DEVICE Can support wireless charging.
- PS: Wireless charging may need the cell phone cover/case to be removed depending on the case thickens and material

MOTION SENSOR NIGHT LIGHT

When it is dark and LumiCharge detects a motion in the room night light will turn on and will stay on till there is on motion detected in the room. Use the switch at the back to Turn ON/OFF this function/light.

Quick Start

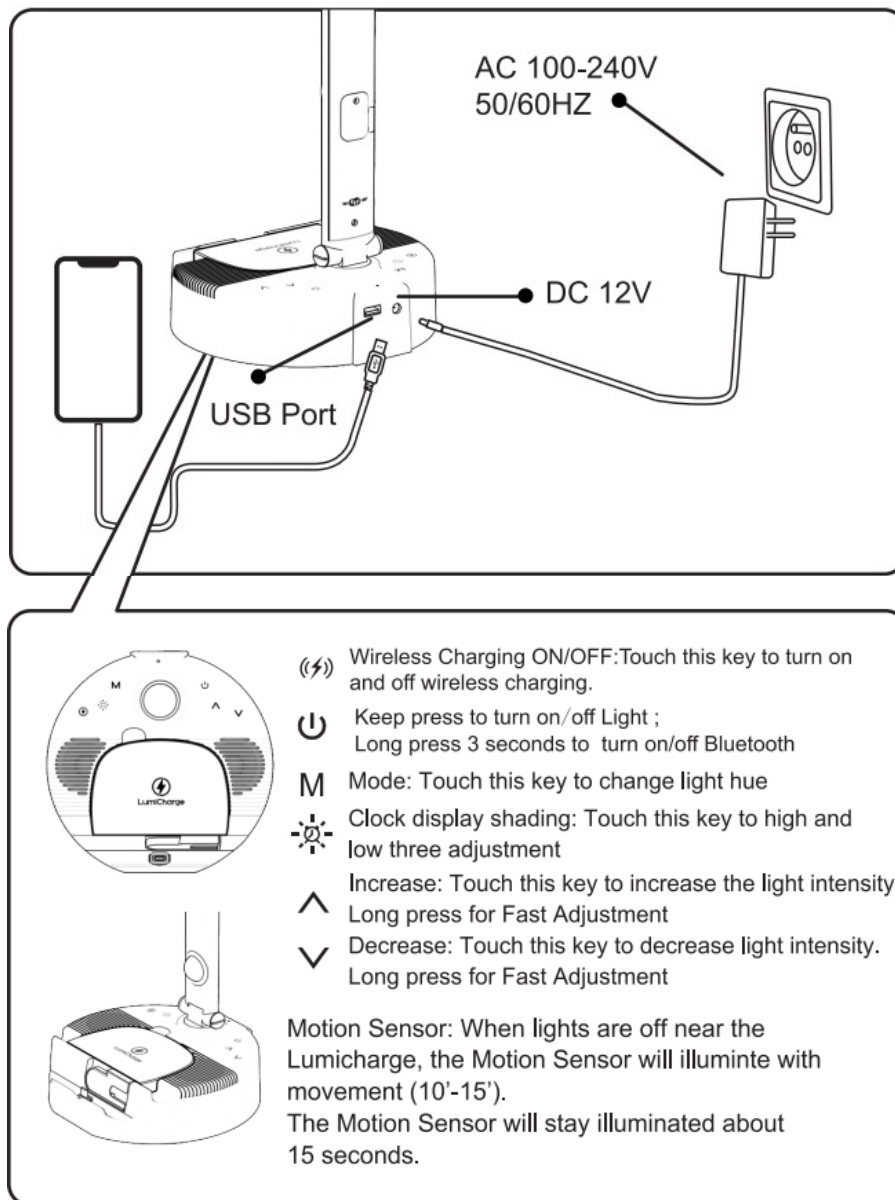


Connect to the “Tuya” APP

1. Install Tuya App” on your phone and register your account to log in, if you have an account, please login directly to enter



2. After power on, long press the Mode key at the bottom of the LCD screen to reset the device, when the device emits a a “beep beep” sound to indicate a successful reset, then you can start onnecting to the new phone.

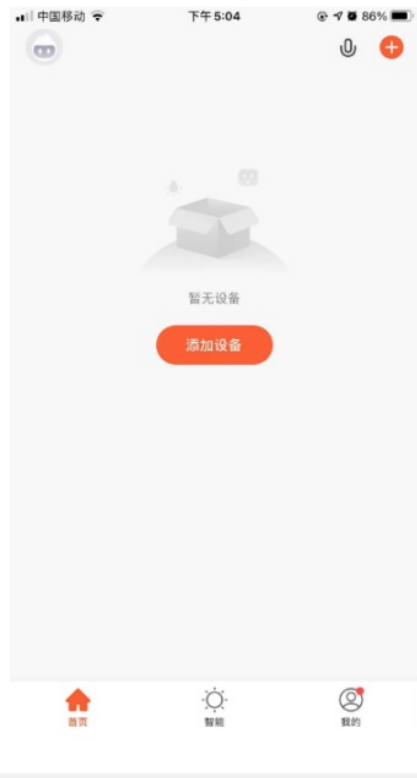


3. Open “Tuya App”, click “Add Device”, find the “Switch (Bluetooth)” icon to start adding devices.




4. Click on the next step




5. After the device is detected, click the “+” icon

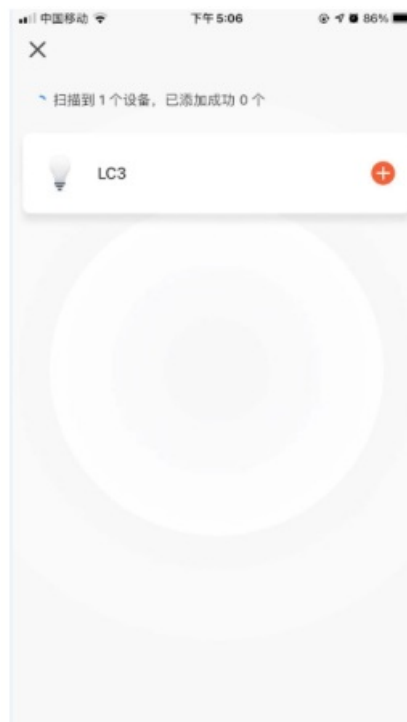


6. The process of adding devices will show the progress of adding.

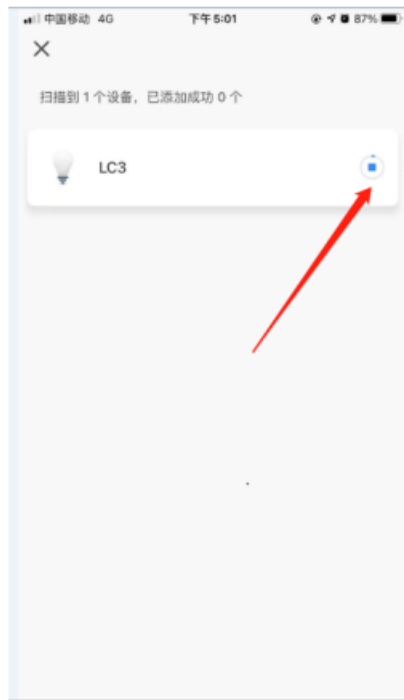

7. Finally click “Finish

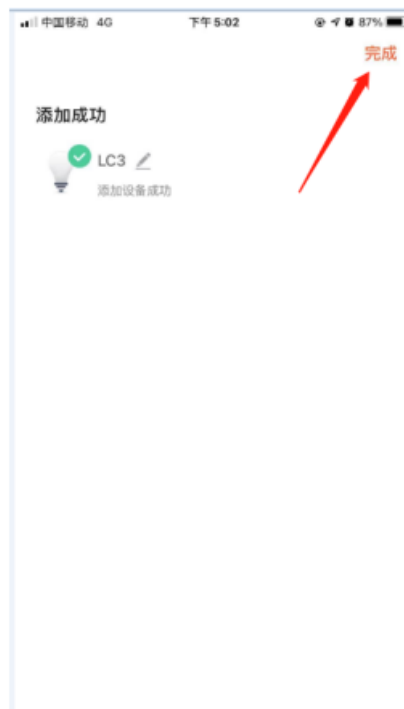

8. After the device is added, Clock Time Sync and can turn on/off the lights,adjust the brightness and color temperature in the APP

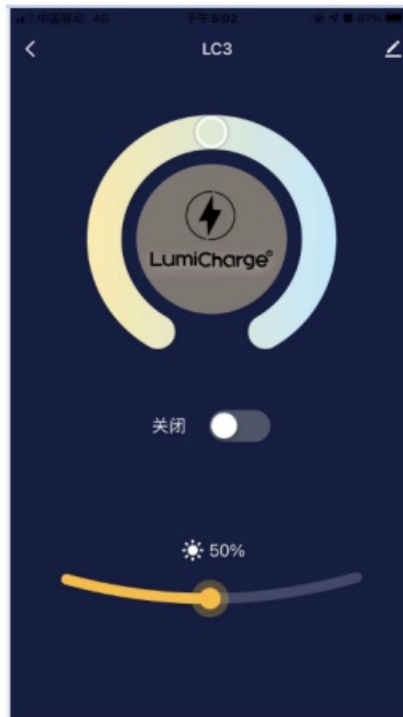


Adjustment Capabilities

The Lumicharge lamp head and body can be adjusted for wide Angle lighting area coverage.

Lamp Head Angle Adjustment


- The lamp head has a 180 range of motion
- When adjusting the lamp head, be sure to hold the base of the lamp for stability.

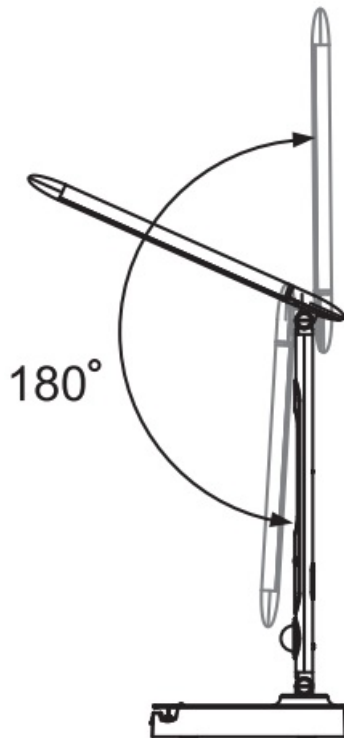

Lamp Body Forward and Backward Rotation


- The lamp body has a forward and backward range of motion of 100

- When adjusting the lamp body, be sure to hold the base of the lamp for stability.

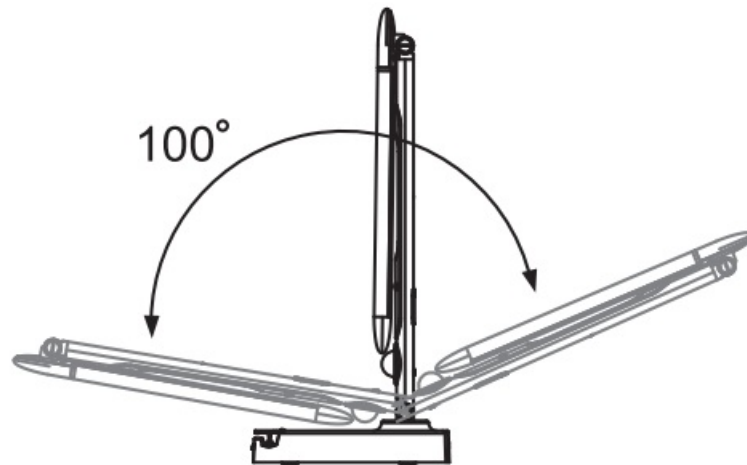

Lamp Head & Body Side Rotation

- The lamp body has a left and right range of motion of 60°
- When adjusting the lamp body, be sure to hold the base of the lamp for stability.

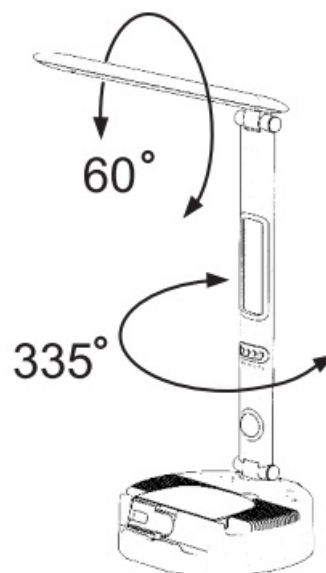

Warranty Card

This certificate extends the warranty for a period of 6 months from the date of purchase for Registered products. This warranty covers components and workmanship only. Replacement or Repair decision is at the discretion of the manufacturer. This certificate does not provide coverage for lost or damaged parts due to improper usage of the product. The warranty is not valid if we determine there was improper usage of the product.

- **Product Name:**
- **Product Color:**
- **Purchase Date:**

Product Registration Card

Thank You for your interest in our product. We are happy to have you as a valued customer. Please register your

product with us for future communication with us. Please register your product at www.thelumicharge.com

- **Product Name/Color:**
- **Purchased From:**
- **Purchase Date:**
- **Customer Name:**
- **Contact Email:**

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is Subject To the following two conditions:

1. This device may not cause harmful interference
 2. this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not explicitly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Note: this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and candidate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For BT

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

For WPT

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. During the operation of device a distance of 15 cm surrounding the device and 20 cm above the top surface of the device must be respected.

Documents / Resources



[LumiCharge LC3 Smart LED Desk Lamp](#) [pdf] Instruction Manual
LC3, 2AOLV-LC3, 2AOLVLC3, LC3, Smart LED Desk Lamp, LED Desk Lamp, Smart Desk Lamp, Desk Lamp, Lamp