



**Affordable. Reliable. Home Improvement.**

## **ROOF RACK**

**MODEL: HJ-RB023B,HJ-RB023-S**

Technical Support and E-Warranty Certificate  
[www.vevor.com/support](http://www.vevor.com/support)

# VEVOR

Affordable. Reliable. Home Improvement.

## ROOF RACK

**MODEL: HJ-RB023B,HJ-RB023-S**



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.


## PRODUCT PARAMETERS

Model	Maximum Load Capacity	Applicable Vehicle Models	Material
HJ-RB023B	200 lbs	SUBARU FORESTER 2014-2021	Aluminium
HJ-RB023-S	200 lbs	SUBARU Crosstrek 2018-2024	Aluminium
<b>Warning:</b> When loading cargos, the speed of the car should not exceed <b>80 km/h (50 mile/h)</b> , and large items should be covered with a windproof cover or safety net.			

## SAFETY & WARNING

- Read and understand this entire manual before assembling, installing, operating, or servicing this product. Failure to follow these warnings and instructions can cause death, personal injury, or damage to valuable property.
- Adhere to all Department of Transportation (D.O.T.) requirements when using this product. Use ropes and tie-downs to securely hold all cargo in place.
- Do not overload the Roof Rack. Never exceed the maximum weight capacity of 200 lbs.
- Before and after each use, check to make sure that all hardware is tightly secured. Regularly inspect for damage. If fraying or distortion is found, immediately discontinue use.
- Make sure the vehicle's engine is OFF, with the parking brake set, before loading or unloading the Roof Rack.
- Do not use to hold or restrain human or animal weight in any manner.
- Use common sense when working. Stay alert and concentrate when setting up and using the Roof Rack. Never work while under the influence of alcohol, drugs or medications.
- While assembling and using the Roof Rack, keep the work area clean and well-lighted. Keep spectators and children out of the work area.

## ACCESSORY LIST

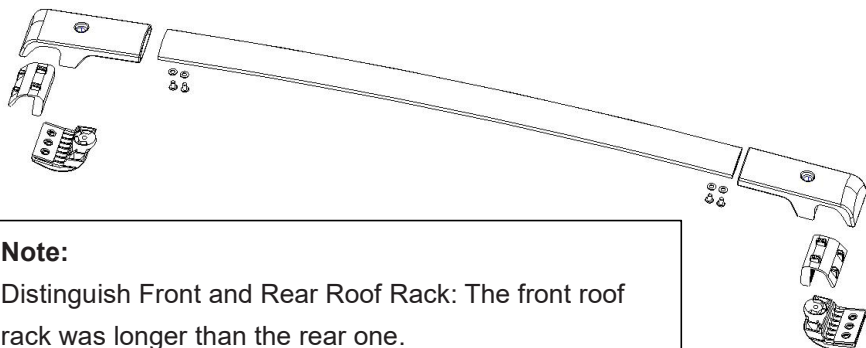

### Note:


Distinguish Front and Rear Roof Rack: The front roof rack was longer than the rear one.

SUBARU Forester : (with two set Adaptor spacer)

SUBARU Crosstrek : (with one set Adaptor spacer)

NO	PICTURE	NAME	QTY
A		Front Roof Rack (Longer)	1
B		Rear Roof Rack (Shorter)	1
C		Adaptor	4
D		5mm Allen Key	1
E		6mm Allen Key	1
F		Adaptor Spacer A (HJ-RB023-S into Adaptor )	4
G		Adaptor Spacer B (HJ-RB023-S not include)	4
H		M6 Flat Washer	8
I		M6 Screw	8

## OPERATION

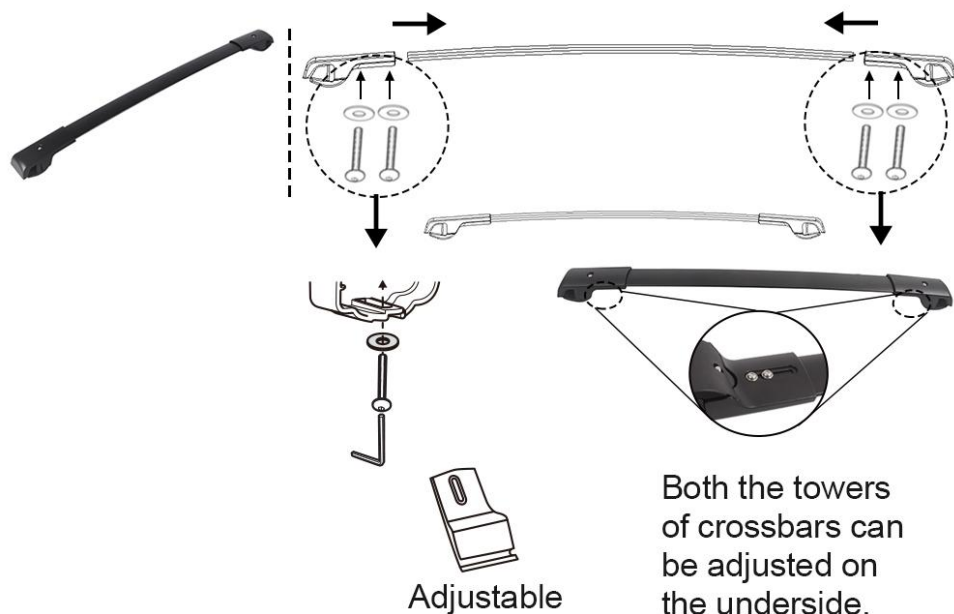

1. First, install and fix the left and right adaptor on the left and right sides of the front and rear aluminum tubes, respectively, and fix them with M6 screws+M6 spacer; then install them to the roof rack as shown in the picture.

**Tips:** Do not tighten the hexagon socket bolts yet .



2. Loosen the Allen head bolts.

Note: The lower arm/clamp cannot be completely separated from the adapter. The degree of loosening of the upper screws of the adapter is: the lower arm/clamp can rotate 90 degrees.

3. Rotate the lower arm 90 degrees.

4. Place the roof rack in the proper position on the roof rail, and guide the rail into the slot.

5. Rotate the lower arm back to its original position.

6. Tighten the upper Allen bolts.

7. Tighten the lower Allen bolts.

8. Place the other roof rack 24"-32" away from the first one. Repeat steps 2 to 7 to install.

9. Tighten and check before daily use.

**Address:** Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

**Imported to AUS:** SIHAO PTY LTD, 1 ROKEVA STREETEASTWOOD NSW 2122 Australia

**Imported to USA:** Sanven Technology Ltd., Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

<b>UK</b>	<b>REP</b>
-----------	------------

YH CONSULTING LIMITED.  
C/O YH Consulting Limited Office 147, Centurion House,  
London Road, Staines-upon-Thames, Surrey, TW18 4AX

<b>EC</b>	<b>REP</b>
-----------	------------

E-CrossStu GmbH.  
Mainzer Landstr.69, 60329 Frankfurt am Main.



**Technical Support and E-Warranty Certificate**  
**[www.vevor.com/support](http://www.vevor.com/support)**