

Technical Support and E-Warranty Certificate www.vevor.com/support

PROJECTION SCREEN USER MANUAL

MODEL NO.:

TL-100BG TL-110BG TL-120BG TL-130BG TL-135BG TL-155BG

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.





Projection Screen

MODEL NO.: TL-100BG TL-110BG TL-120BG TL-130BG TL-135BG TL-155BG



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Please read this manual carefully before using the product. Failure to do so may result in serious injury.

ASSEMBLY PRECAUTIONS

- 1. Assemble only according to these instructions. Improper assembly can create hazards.
- 2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
- 3. Keep the assembly area clean and well-lit.
- 4. Keep bystanders out of the area during assembly.
- 5. Do not assemble when tired or when under the influence of alcohol, drugs or medication.
- 6. The product capabilities apply to properly and completely assembled products only.
- 7. Assemble on a flat, level, hard and smooth surface capable of safely supporting the Projection Screen.
- 8. For additional information regarding the parts listed in the following pages, please refer to the Assembly Diagram of this manual. Unwrap and separate all parts in a clean work area.

SAVE THESE INSTRUCTIONS

USE PRECAUTIONS

TO PREVENT SERIOUS INJURY AND DEATH FROM TIPPING:

- 1. This product is not a toy Do not allow children to play with or near this item.
- 2. Do not exceed weight capacities, before moving.
- 3. Use only on a flat, level, hard and smooth surface capable of safely supporting a fully loaded Projection Screen.
- 4. Use as intended only. Inspect before every use; do not use if parts are loose or damaged.

TECHNICAL SPECIFICATIONS

Model	TL-100BG	TL-110BG	TL-120BG
Product			
Dimensions	2340*1360*40	2550*1485*40	2770*1610*40
(LxWxH)(mm)			
Packing	1450*310*115	1575*310*115	1695*310*115
Size(LxWxH)(mm)	1430 310 113	1373 310 113	1093 310 113
Screen Size	100 inch, 16:9	110 inch, 16:9	120 inch, 16:9
Net Weight(kg)	About 7.4	About 8.3	About 9
Gross Weight(kg)	About 10.7	About 11.25	About 12.2

Model	TL-130BG	TL-135BG	TL-155BG
Product			
Dimensions	3000*1740*40	3110*1800*40	3550*2050*40
(LxWxH)(mm)			

Packing Size(LxWxH)(mm)	1830*310*115	1905*310*115	2145*310*115
Screen Size	130 inch, 16:9	135 inch, 16:9	155 inch, 16:9
Net Weight(kg)	About 9.9	About 10.2	About 13.2
Gross Weight(kg)	About 13.05	About 13.45	About 16.9

PACKAGE CONTENTS


name	picture	quantity
Angle code (with screws)		8 pcs
Wall hanging (small)		4 pcs
Wrench		1 pcs
Spring retractor		2 pcs
Expansion bolt (with screw)		8 pcs

^{*}Products such as specifications, appearance, and design are subject to modification without prior notice.

		TL-100BG: 70PCS
	W	TL-110BG: 75PCS
tension spring		TL-120BG: 80PCS
, ,	(51)	TL-130BG: 85PCS
	(TL-135BG: 90PCS
		TL-155BG: 100PCS
		TL-100BG/TL-110BG/
Strut		TL-120BG/TL-130BG/
		TL-135BG: 1 PCS
	7	TL-155BG: 2 PCS
M5*8 screw		4 pcs
INIO O COIGN		1 200
	9	
Glass fiber tube		6 pcs
		- 1
	6	
Screen		1 pcs
	0)	
	- Marie	
Transverse		_
frame	9	4 pcs
Mullion	No. of	2 pcs
	1.00	


ASSEMBLY STEPS



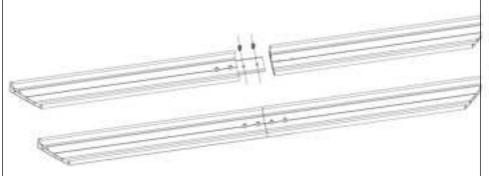


Splice the long borders together.

STEP 2

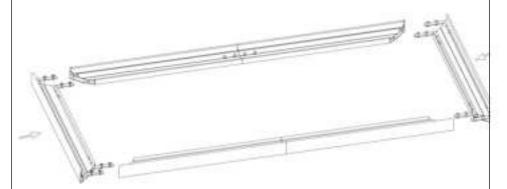

Insert the corner codes into the slots at both ends of the short frames, insert the two short frames into the two long frames, and tighten the screws. After installing the frame, turn the frame over, and check the gaps at the four corners of the frame of the suede (front). If the gap is too large, it needs to be readjusted.

STEP 3

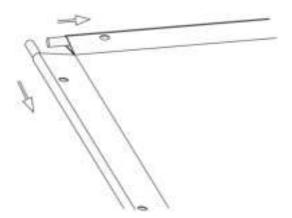


Unfold the curtain, and thread the glass fiber tube according to the long and short sides.


STEP 4

Hang the spring Place the projection face of the curtain down, centered and flat on the frame. Then:

(1) First, hang the curtain on the four corners diagonally.

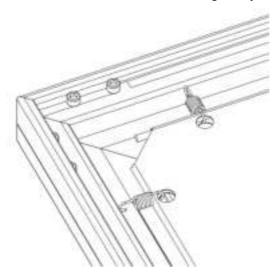


(2) Clamp the support rod on the groove between the upper and lower

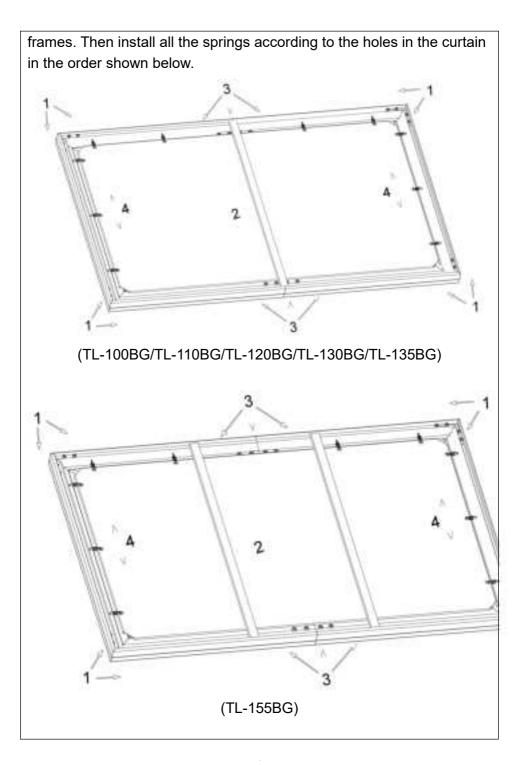


STEP 5

Measure the width w and height h of the frame curtain. Firstly, two wall pendants are installed on the wall through the expansion rubber plug. Note: The two wall hangings must be at the same level. (The following steps are not necessary): Turn the other two wall hangings upside down and install them under the first row of wall hangings. Distance between the centers of the upper and lower rows of holes H1=H-40mm. As shown in the figure. Hang the screen on the wall in the first row. Then, press down the lower frame of the picture frame curtain with a little force, and push the screen towards the wall at the same time, so that the lower frame of the screen is stuck on the wall hanging in the second row, and the installation is completed.

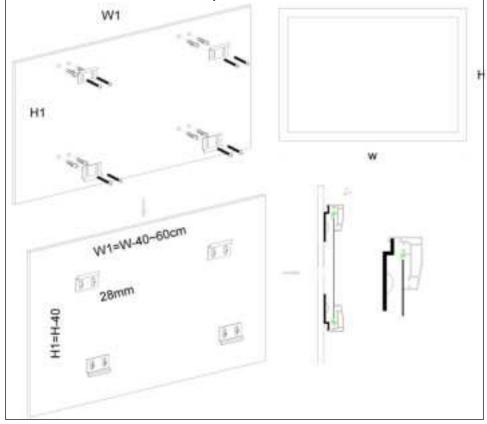

COMPLETION

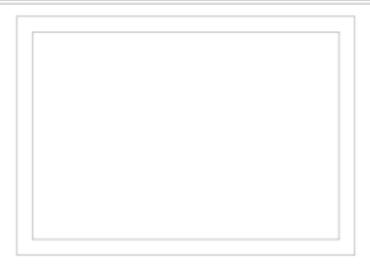

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi,

baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA

STREETEASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166

Anaheim Place, Rancho Cucamonga, CA 91730

EC REP

E-CrossStu GmbH Mainzer Landstr.69, 60329 Frankfurt am Main.

UK REP

YH CONSULTING LIMITED.
C/O YH Consulting Limited Office 147,
Centurion House, London Road,
Staines-upon-Thames, Surrey, TW18 4AX



Technical Support and E-Warranty Certificate www.vevor.com/support