

NEEWER

You Create. We Illuminate.



BP300 LED Video Light

Instruction Manual



Package Contents



LED Video Light × 2



Mount Adapter × 2



User Manual × 1




Light Stand × 2


Using the Light Stand

EN

① Spread the legs downward. Loosen the knobs on the telescopic center column and adjust the height. Tighten the knobs to keep the legs in the set position.

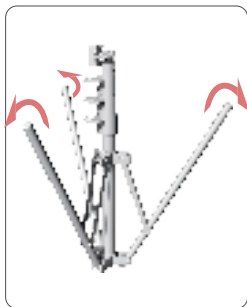


Using the Light Stand

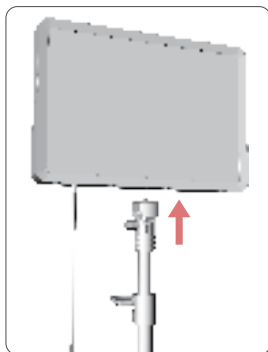

② The base of the light is connected to the 1/4" screw piece located on top of the light stand by turning the small thumbwheel. This should be done gently to avoid threading.

EN


Using the LED Light

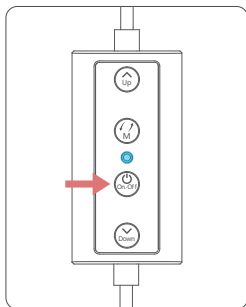

① Powering On/Off

Connect the light to a USB power adapter (5V/2A input) or other USB power source. When the blue LED indicator lights up, press the ON/OFF button to turn the light on or off.


Using the LED Light

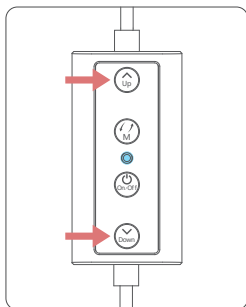

② Brightness Adjustment

When the light is on, press "Up" or "Down" buttons to adjust the brightness across 5 levels.

EN

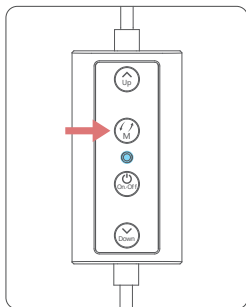

③ Color Temperature Adjustment

Push the "M" button to cycle through 5 color temperature levels.

Safety Precautions

1. Do not look directly at the light source to prevent vision impairment.
2. Do not attempt to disassemble the product and modify its circuit panel.
3. Do not touch the product with wet hands to prevent circuit damage.
4. Do not cover the product with fabric materials to ensure good heat dissipation.
5. Turn off the power after each use.
6. The product should not be exposed to the sun for long periods of time.

Specifications

Weight (Light Only)	1lb/420g
Size (Light Only)	10.8"×7.6"×1.1"/274×193×28mm
Max Light Stand Height	4.92ft / 1.5m
Cable Length	6.6ft / 2m
Rated Power	10W
Input	5V / 2A
Number of LEDs	300
Max Illuminance	750lux / 0.5m
CRI	95

If you have any questions about product ,
we are glad to help.



US +1 732-623-9777
UK +44 (0) 3330113494



Send us an email
vip@neewer.com



www.neewer.com



UK REP

Lingfeng Electronic (UK) Ltd
International House, 10 Churchill Way, Cardiff,
CF10 2HE, United Kingdom
office.lingfeng@gmail.com



Facebook

EC REP

NW Formations GmbH
Hoferstrasse 9B, 71636 Ludwigsburg, Germany
info.nwformations@gmail.com



Tiktok

Shenzhen Neewer Technology Co.,Ltd
深圳市纽尔科技有限公司

Room 1903, Block A, Lu Shan Building No. 3023
Chunfeng Rd Luo Hu District, Shenzhen
Guangdong 518001, China
vip@neewer.com



www.neewer.com