



OWNERS MANUAL

Lectric XP™ 3.0

Lectric XP™ Step-Thru 3.0

V 1.2 | 2025

www.lectricebikes.com

602.715.0907



To prevent PROPERTY DAMAGE, SERIOUS INJURY, or DEATH, you should read, understand, and follow the warnings and instructions in this manual. Keep for future reference.



WELCOME TO THE LECTRIC EBIKES FAMILY

Thank you for purchasing a Lectric eBike.

Please read this Owner's Manual carefully before setting up your bicycle and riding. You should become thoroughly familiar with the proper operation of your Lectric eBike, its features, capabilities, and limitations. To ensure a long, trouble-free life for your Lectric eBike, provide it with the proper care and maintenance as described in this manual. Of course, it is not practical or possible to warn you about all of the hazards associated with operating or maintaining your Lectric eBike, for this, you must use your own good judgment.

For replacement parts and accessories, you should always use Lectric eBikes approved parts, as they have been specially designed for your bicycle and manufactured to meet Lectric eBikes' demanding standards.

This manual should be considered a permanent part of your bicycle and should remain with the bicycle when it is sold.

If you need any assistance, please do not hesitate to reach out to us.

CONTACT INFORMATION

Email: contact@lectricebikes.com

Phone: (602) 715-0907

Website: lectricebikes.com

Lectric Help Center: help.lectricebikes.com

Please record your bicycle's serial number in the space below. The serial number is located on the head tube of your bicycle. Refer to page 15 for the location of the serial number.

SERIAL NUMBER

TABLE OF CONTENTS

Important Safety Information	4
Getting Started	14
Features	22
Cockpit System	26
Preparing to Ride	36
Your First Ride	40
Battery Pack	41
Storing Your Lectric eBike	53
Transporting Your Lectric eBike	53
Disposal of Your Lectric eBike	53
Troubleshooting	54
Maintenance	55
Legal	58

IMPORTANT SAFETY INFORMATION

Read and Understand Owner's Manual Before Riding

Read this entire Owner's Manual before you take the first ride on your new eBike and keep it for reference. This Owner's Manual contains important safety, performance, and service information. The latest version of your manual is available at lectricebikes.com/manual

Like any sport, bicycling involves risk of injury and damage. By choosing to ride a bicycle, you assume the responsibility of that risk: you need to know and practice the rules of safe and responsible riding as well as proper use and maintenance. Proper use and maintenance of your bicycle reduces the risk of injury. If you have any questions or do not understand any aspect of using or maintaining your bike, take responsibility for your safety and consult with your local bicycle shop, or contact us for assistance.

This manual is not intended as a comprehensive use, service, repair or maintenance manual. Please see your local bicycle shop for all service, repairs, or maintenance. Your local bicycle shop may also be able to refer you to classes, clinics, or books on bicycle use, service, repair, and maintenance.

Your Lectric eBike is classified as an EPAC (Electrically Power Assisted Cycle, otherwise known as a Pedelec), and is referred to in this manual as a bicycle unless otherwise noted.

Rider's Responsibility Regarding Regulations

It is the rider's responsibility to obey the regulations that apply to your Lectric eBike.

The regulations covering the use of your Lectric eBike vary by state, and even municipality in certain locations. You must comply with the local regulations related to the minimum age of the rider, driver's license, insurance, license plate, traffic, and maximum speed regulations, and any other regulations. These regulations may change at any time.

Intended Use

The intended use of your Lectric eBike is to be ridden by one adult rider (age 18 and up) at an appropriate time and place for general transportation and/or recreational use. Any other use is prohibited and may result in SERIOUS INJURY or DEATH.

Your bicycle is NOT INTENDED for off-road or mountain bicycle use, or for any kind of jumping. Some of these bicycles have suspension features, but these features are designed only to add comfort, not off-road capabilities.

Riders should be proficient cyclists (ages 18+), riding on paved surfaces where the tires are always on the ground, on roadways, or dedicated bicycle-only lanes where permitted by law (not on pedestrian-use shared lanes or sidewalks). Your bicycle should not be used to tow another bicycle. For trailer towing, consult this Owner's Manual and the trailer owner's manual for towing instructions and towing compatibility.

Safety Messages



To prevent serious injury or death:

- **Read all safety warnings and all instructions.**
- **Always ride within your limits and the limits of your Lectric eBike.**
- **Bicycles are only for use by persons 18 years of age and above.** Riders must have the physical coordination, reaction, and mental capabilities to control a bicycle and manage traffic, in addition to managing road conditions and sudden situations with respect to the laws and instructions governing bicycle use. Persons with any mental or physical conditions that may make them susceptible to injury, impair their physical dexterity or mental capabilities to recognize, understand, and follow safety instructions—or understand the hazards inherent to its use—should not use or be permitted to use products inappropriate for their abilities.
- **Never ride under the influence of drugs and/or alcohol.**
- **Consult a doctor before using the device if you have any medical condition or issue that affects your ability to safely perform physical activities, or if you:**
 - are or may be pregnant;
 - have heart, respiratory, back, joint, or other orthopedic conditions;
 - have high blood pressure;
 - have difficulty with physical exercise; or
 - have been instructed to restrict physical activity.
- **Always keep small parts away from children.** Some eBike accessories may present a choking hazard to small children.
- **Never modify your frame or bicycle in any way.** Do not sand, drill, file, or remove parts from your bicycle. Do not install incompatible components or hardware.
- **Always use proper lifting techniques to prevent injury.** Your eBike may be significantly heavier than a bicycle without a battery pack and a motor.
- **Take responsibility for your own SAFETY.** If you have any questions or do not understand any aspect of using or maintaining your bicycle, contact Lectric eBikes at contact@lectricebikes.com or call (602) 715-0907.

Helmets

- **Always wear a helmet. Wearing a helmet properly may reduce the risk of a severe head injury.** When riding, always wear a helmet that meets or exceeds the standards of the Consumer Product Safety Commission (CPSC). Check the manual that comes with your helmet.
- **Ensure your helmet fits your head and is properly secured. If you attach a child's seat to the bicycle, the child must wear a properly fitted helmet at all times.**
- **Read your helmet manual to make sure it is adjusted properly according to the fitting instructions provided by the helmet manufacturer.**
- **A proper-fitting helmet should be comfortable and should neither rock forward/backward nor side to side.**

Follow eBike Regulations On and Off the Road

- **Be aware of eBike regulations in your area.** Generally, the regulations for the use of an electric bicycle are the same as those for a standard bicycle. However, there may be local differences such as where you can ride, minimum rider age, or required equipment and license and registration regulations. It is your responsibility to know the local regulations that apply to an electric bicycle and to obey them.

Ride at Your Own Risk and Use Common Sense

- **Always keep both hands on the handlebar grips and the brake levers so they are within reach while riding.**
- **Do not ride distracted. Always remain alert to all riding conditions. Using the Display or other technology (including your mobile phone or music player) could distract you from riding. Only adjust the Display when stationary and in a safe start-up position.**
- **Never use headphones or a cell phone to talk or text when riding.**
- **Always ride defensively.** Watch out for potential obstacles that could force you to swerve suddenly or lose control. Braking while steering may reduce your ability to control your bicycle.
- **Look ahead and brake sooner.** You may be moving faster on your

eBike, and it may be heavier compared to a bicycle, which means you may need to react and brake sooner when riding. Other road users may not expect you to be traveling at higher speeds. Riding faster may increase your risk of a crash.

- **Stop pedaling well before approaching corners to avoid entering a corner too quickly.** You should also pay particular attention to terrain conditions as you may approach obstacles faster than expected.

Riding in Wet Conditions

- Use caution when riding in wet conditions as it will take longer to brake and to stop. Your tires may slip when turning. Risk of a crash is dramatically increased in wet conditions.
- Your electric bicycle can withstand light rain and small splashes, but it is not designed to be subjected to inclement weather, extremely heavy showers, or submersion in water. The electric bike's components have an IP rating of 65. Water damage is not covered under the warranty.

Pre-Ride Safety Checklist

Lectric eBikes recommends going through each item on the pre-ride safety checklist before and after each ride. Spending time to make sure all of the bike's components are in good working order before a ride is a crucial step along the way to a safe and fun ride.

This checklist is not intended to function as a detailed service manual. Be sure to read your entire owner's manual before riding or repairing your bike. If you do not have the expertise required to perform any of these checks, Lectric eBikes recommends having your local bike shop mechanic perform a detailed safety check of your bike in regular intervals. Ensure your local mechanic is experienced and reputable.

- ☐ Before each ride, inspect your eBike for damage. If damage is found, do not ride.
- ☐ Verify that the front and rear axles are secure.
- ☐ Check that the front and rear tire pressure is within the recommended pressure range printed on the tire sidewall.

- ☐ Pull the brake levers to ensure the brakes are working properly and adjust if necessary.
- ☐ Visually inspect the bike for damage or anything out of the ordinary.
- ☐ Turn on the lights, especially if riding at night.
- ☐ Make sure all hardware is tightened to the recommended torque specifications found on p. 21 of the owner's manual.
- ☐ Verify that the frame folding latch is securely closed and locked.
- ☐ Verify that the stem folding latch is securely closed and locked.
- ☐ Check that the handlebar stem is inserted past the minimum insertion point. The minimum insertion point is labeled near the bottom of the handlebar stem.
- ☐ Check that the handlebar stem collar and clamp are closed and tightened to 6 Nm or till it leaves an impression on your hand.
- ☐ Check that the seatpost is inserted past the minimum insertion point. The minimum insertion point is labeled on the seatpost.
- ☐ Check that the seatpost collar and clamp are closed and tightened to 18 Nm or till it leaves an impression on your hand.
- ☐ Check that the seat cannot be twisted out of position, and set the height to a safe position that makes it easy to mount and dismount the bike.
- ☐ Make sure the pedals are locked in a flat position.
- ☐ Check the condition of the chain to see if it needs cleaning or lubrication.
- ☐ Wear a helmet and high visibility clothing.
- ☐ NEVER exceed the maximum total weight limit of 330 lbs. (150 kg). The rear rack can hold a maximum of 150 lbs. (68 kg). As an example, if you have 40 lbs. (18 kg) of cargo, then the maximum weight of the rider would be 290 lbs. (131 kg)
- ☐ Only carry the cargo you need. More weight will drain the battery faster and affect how the bike handles.
- ☐ Ensure all components are properly secured.
- ☐ Make sure your battery is fully charged.

Riding at Night

- Riding at night comes with more risks than riding during the day due to decreased visibility; riders are encouraged to exercise increased caution in nighttime conditions.
- Turn lights ON for safety. For increased visibility, ensure that the front headlight and rear taillight are turned ON and adjusted such that other people on the road can see them clearly. Also check your front and rear wheel reflectors.
- Riders should wear reflective clothing at night. You may want to attach additional flashing lights to your clothing or helmet.

California Proposition 65

⚠ WARNING: The wires of this product contain lead. Lead compounds and other chemicals are known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

Signal Words

⚠ DANGER	Indicates a hazardous situation that, if not avoided, will result in death or serious injury.
⚠ WARNING	Indicates a hazardous situation that, if not avoided, could result in death or serious injury.
⚠ CAUTION	Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.
<i>NOTICE</i>	Indicates information considered important, but not hazard-related (e.g. messages relating to property damage).

Symbol Index



Safety Alert Symbol. This symbol is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible serious injury or death.




Safety Alert Symbol. Read, understand, and follow the warnings and instructions in this manual.


On-Product Warning Labels

There are warning labels on your Lectric eBike for your protection. If a label is missing or is not legible, contact Lectric eBikes for a replacement.


Stem label

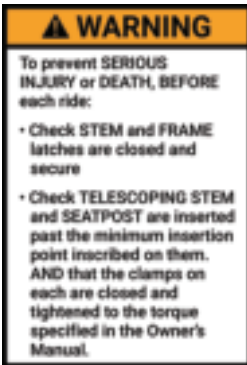

Class 2 label

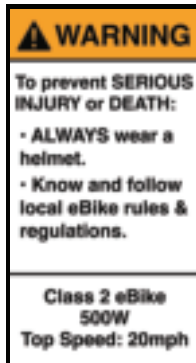

Class 3 label

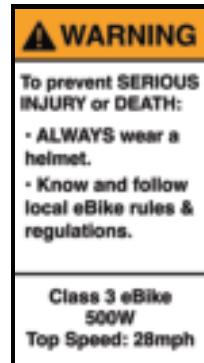


States that recognize three classes of eBikes require a label to be placed on the bicycle denoting the class of your Lectric eBike, the motor's wattage rating, and the top speed of your Lectric eBike. Your bicycle comes as a Class 2 bicycle by default and has a label with this information posted under the carry handle, near the seat post on the bicycle.

If you change your bicycle's top speed, you must remove this label from the bicycle and replace it with a Class 3 label, detailing your Lectric eBike's class, top pedal-assisted speed, and motor wattage. The Class 3 label is located directly under the Class 2 label.

On-Product Warning Tags

There are warning tags on your Lectric eBike for your protection. If a tag is missing or is not legible, contact Lectric eBikes for a replacement.

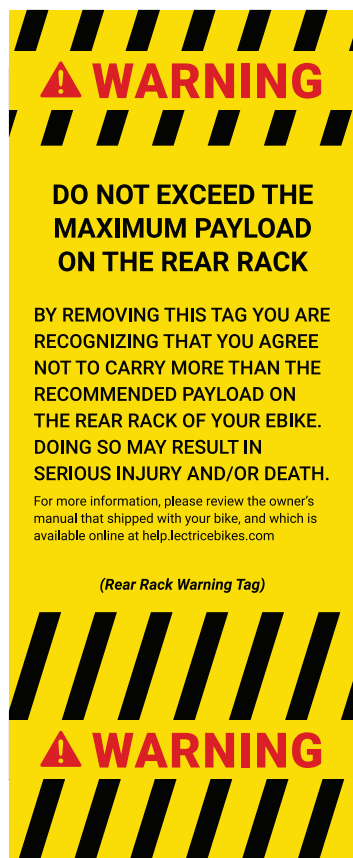

⚠ WARNING

**DO NOT EXCEED THE
MAXIMUM PAYLOAD
ON THE REAR RACK**

BY REMOVING THIS TAG YOU ARE
RECOGNIZING THAT YOU AGREE
NOT TO CARRY MORE THAN THE
RECOMMENDED PAYLOAD ON
THE REAR RACK OF YOUR EBIKE.
DOING SO MAY RESULT IN
SERIOUS INJURY AND/OR DEATH.

For more information, please review the owner's
manual that shipped with your bike, and which is
available online at help.lectricebikes.com

(Rear Rack Warning Tag)




⚠ WARNING

HELMET WARNING TAG
WARNING: ALWAYS WEAR A HELMET WHILE RIDING A BIKE. FAILURE TO DO
SO COULD RESULT IN SERIOUS INJURY AND/OR DEATH. For more information,
please review the owner's manual that shipped with your bike, and which is
available online at help.lectricebikes.com

ETIQUETA DE ADVERTENCIA DE CASCO
ADVERTENCIA: USE SIEMPRE UN CASCO MIENTRAS ANDA EN BICICLETA. SI
NO LO HACE, PODRÍAN PRODUCIRSE LESIONES GRAVES Y/O LA MUERTE.
Para obtener más información, revise el manual del propietario que se envió
con su bicicleta y que está disponible en línea en help.lectricebikes.com

(Helmet Warning Tag)



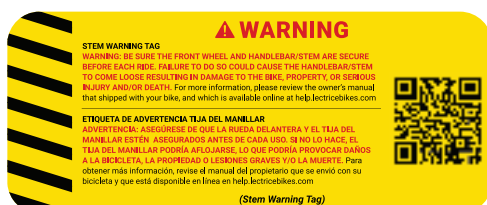

⚠ WARNING

STEM WARNING TAG
WARNING: BE SURE THE FRONT WHEEL AND HANDLEBAR/STEM ARE SECURE
BEFORE EACH RIDE. FAILURE TO DO SO COULD CAUSE THE HANDLEBAR/STEM
TO COME LOOSE RESULTING IN DAMAGE TO THE BIKE, PROPERTY, OR SERIOUS
INJURY AND/OR DEATH. For more information, please review the owner's manual
that shipped with your bike, and which is available online at help.lectricebikes.com

ETIQUETA DE ADVERTENCIA TUAJA DEL MANEJADOR
ADVERTENCIA: ASEGURESE DE QUE LA RUEDA DELANTERA Y EL TUAJA DEL
MANEJADOR ESTÉN ASEGURADOS ANTES DE CADA USO. SI NO LO HACE, EL
TUAJA DEL MANEJADOR PODRÍA AFLOJARSE, LO QUE PODRÍA PROVOCAR DAÑOS
A LA BICICLETA, LA PROPIEDAD O LESIONES GRAVES Y/O LA MUERTE. Para
obtener más información, revise el manual del propietario que se envió con su
bicicleta y que está disponible en línea en help.lectricebikes.com

(Stem Warning Tag)





⚠ WARNING

FRONT WHEEL WARNING TAG
WARNING: BE SURE THE FRONT WHEEL IS PROPERLY INSTALLED BEFORE EACH
RIDE. FAILURE TO DO SO COULD CAUSE THE WHEEL TO COME LOOSE WHILE
RIDING, RESULTING IN DAMAGE TO THE BIKE, PROPERTY, OR SERIOUS INJURY
AND/OR DEATH. For more information, please review the owner's manual that
shipped with your bike, and which is available online at help.lectricebikes.com

ETIQUETA DE ADVERTENCIA DE LA RUEDA DELANTERA
ADVERTENCIA: ASEGURESE DE QUE LA RUEDA DELANTERA ESTÉ
CORRECTAMENTE INSTALADA ANTES DE CADA USO. SI NO LO HACE, LA RUEDA
PODRÍA AFLOJARSE MIENTRAS CONDUCE, LO QUE PODRÍA PROVOCAR DAÑOS
A LA BICICLETA, LA PROPIEDAD O LESIONES GRAVES Y/O LA MUERTE. Para
obtener más información, revise el manual del propietario que se envió con su
bicicleta y que está disponible en línea en help.lectricebikes.com

(Front Wheel Warning Tag)





⚠ WARNING

BATTERY WARNING TAG
WARNING: FAILURE TO FOLLOW THESE AND OTHER WARNINGS AND
INSTRUCTIONS PROVIDED IN THE OWNER'S MANUAL MAY RESULT IN PRODUCT
FAILURE, VOIDING THE WARRANTY, OR SERIOUS INJURY OR DEATH OR
PROPERTY DAMAGE. For more information, please review the owner's manual that
shipped with your bike, and which is available online at help.lectricebikes.com

ETIQUETA DE ADVERTENCIA DE LA BATERÍA
ADVERTENCIA: EL INCUMPLIMIENTO DE ESTAS Y OTRAS ADVERTENCIAS E
INSTRUCCIONES PROPORCIONADAS EN EL MANUAL DEL PROPIETARIO PUEDE
PROVOCAR LA FALLA DEL PRODUCTO, LA ANULACIÓN DE LA GARANTÍA, O
LESIONES GRAVES O LA MUERTE O DAÑOS A LA PROPIEDAD. Para obtener más
información, revise el manual del propietario que se envió con su bicicleta y que
está disponible en línea en help.lectricebikes.com

(Battery Warning Tag)





⚠ WARNING

MACHINE OPERATION WARNING TAG
WARNING: MUST BE 18
YEARS OF AGE OR OLDER
TO OPERATE

**ETIQUETA DE ADVERTENCIA DE
FUNCIONAMIENTO DE LA MÁQUINA**
ADVERTENCIA: DEBE
TENER 18 AÑOS DE EDAD
O MÁS PARA OPERAR



⚠ WARNING

SEAT POST WARNING TAG
WARNING: BE SURE THE SEAT HEIGHT IS CORRECTLY SET AND THE SEAT POST IS
SECURED BEFORE EACH RIDE. FAILURE TO DO SO COULD CAUSE THE SEAT POST TO
COME LOOSE RESULTING IN DAMAGE TO THE BIKE, PROPERTY, OR SERIOUS INJURY
AND/OR DEATH. For more information, please review the owner's manual that
shipped with your bike, and which is available online at help.lectricebikes.com

ETIQUETA DE ADVERTENCIA DEL POSTE DEL ASIENTO
ADVERTENCIA: ASEGURESE DE QUE LA ALTURA DEL ASIENTO ESTÉ PORCIONADA
CORRECTAMENTE Y QUE EL TUAJA ESTÉ ASEGURADO ANTES DE CADA USO. SI NO
LO HACE, EL TUAJA PODRÍA AFLOJARSE, LO QUE PODRÍA PROVOCAR DAÑOS A LA
BICICLETA, LA PROPIEDAD O LESIONES GRAVES Y/O LA MUERTE. Para obtener más
información, revise el manual del propietario que se envió con su bicicleta y que está
disponible en línea en help.lectricebikes.com

(Seat Post Warning Tag)






**LECTRIC
eBIKES**

⚠

Your cables, spokes, and chain will stretch after an initial break-in period
of 50-100 mi or 80-160 km, and bolted connections can loosen. Always
have a reputable bike mechanic perform a tune-up on your bike after your
initial break-in period. Regular inspections and tune-ups are very
important to ensure your bike remains safe and fun to ride.

(Rear Wheel)

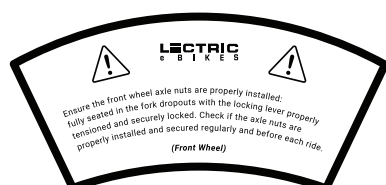

**LECTRIC
eBIKES**

⚠

Ensure the front wheel axle nuts are properly installed:
fully seated in the fork dropouts with the locking lever properly
tensioned and securely locked. Check if the axle nuts are
properly installed and secured regularly and before each ride.

(Front Wheel)

67"

25^A

GETTING STARTED

Your bicycle comes fully assembled. These instructions are intended to assist you in setting up and getting familiar with your new bicycle.




After you make your first adjustments and inspect your bicycle, we recommend seeking professional help from a reputable and certified bicycle mechanic to check your bicycle before your first ride.

Before removing the packaging material from your bicycle, remove all items from the box and make sure you have the following:

What's in the box:



**Lectric
XP eBike**

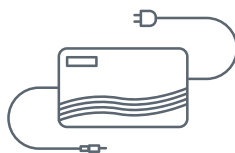

**Lectric XP
eBike Charger**



**2 Battery
Keys**


If anything is missing or is damaged, contact Lectric eBikes immediately for assistance.

For a video about how to unfold your bicycle, visit our YouTube page: Lectric eBikes, [youtube.com/LectriceBikes](https://www.youtube.com/LectriceBikes)

Serial Number

Your serial number is located on the head tube of the bicycle as shown below. Please write it down inside the front cover of this manual.

You may be asked for your bicycle's serial number as part of a warranty request. You may also be asked to provide this number to law enforcement if your bicycle is stolen.

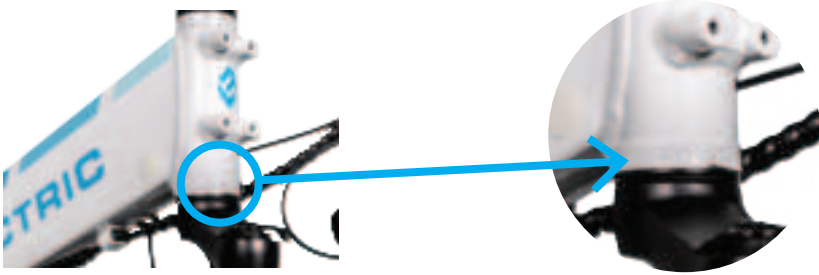

Setting Up Your eBike

NOTE: This manual is not intended to be an extensive reference book about service, maintenance, and/or repairs. You can find more information on our website: lectricebikes.com

Folding and Unfolding

Stem

To unfold:

1. Begin with handlebars in the folded position.
2. Pull the handlebar stem to its upright position.
3. Push the latch in firmly until it locks in position.
4. Pull on the latch to confirm it is locked and the handlebars cannot fold.



Stem Continued

To fold:

1. Pull up on the silver button labeled “open” to unlock the latch.
2. Pull the latch away from the stem while still holding the “open” button.
3. Fold the stem by lowering it to the side.




Frame

To unfold:

1. To unfold the bike frame, stand near the frame where the battery is exposed. Grab the stem and rear end of the bike. Lift the bike slightly off the ground and swing to the closed position.
2. Push down the latch firmly until it locks into position. Pull on the latch to confirm that the latch has locked and that the frame cannot fold.

To fold:

3. To unlock the bike frame and return it to the folded position, start by sliding the switch labeled “open” to the right.
4. Pull the latch while still holding the switch to the “open” position. You may now fold the bike.

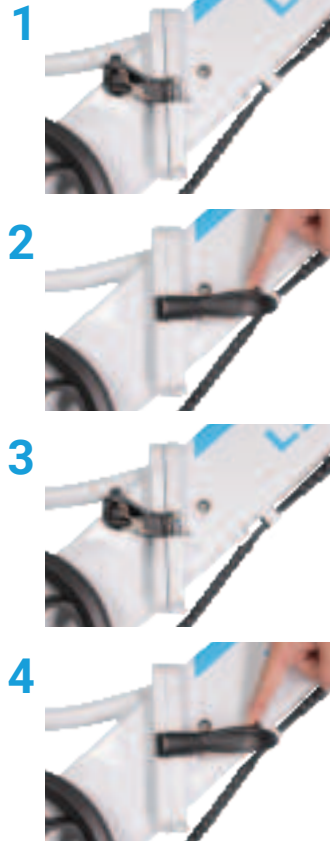

Pedals

To unfold:

1. Pull each pedal out until you hear an audible click as they lock into position.



To fold:


2. Grasp pedal and push lightly toward bicycle.
3. Continue pushing while raising pedal into its folded position.
4. The pedal will click into the folded position.



Adjust Handlebar Height

⚠ WARNING! ⚠

- Always tighten fasteners to the correct torque to prevent serious injury or death. Bolts that are too tight can stretch and deform. Bolts that are too loose can move and fatigue. Either condition can lead to a sudden failure of the bolt and result in a crash. See Tightening Torque (p. 21).
- Always insert the telescoping stem past the minimum insertion point marked on the stem. A stem that is positioned too high can damage the bike and can cause you to lose control and crash.

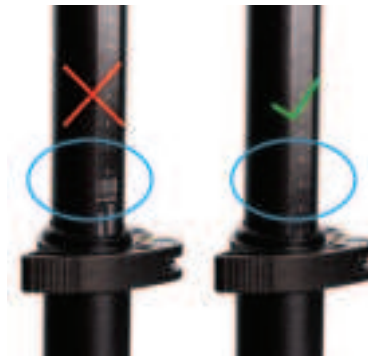

Select a height that is comfortable for you. DO NOT extend past the minimum insertion point. To adjust your handlebars, unlatch the clamp. Move the handlebars to the desired height and close the clamp. Re-tighten the stem clamp to the recommended torque. See Tightening Torque (p. 21).

Adjust Seat Height

⚠ WARNING! ⚠

- Always tighten fasteners to the correct torque to prevent serious injury or death. Bolts that are too tight can stretch and deform. Bolts that are too loose can move and fatigue. Either condition can lead to a sudden failure of the bolt and result in a crash. See Tightening Torque (p. 21).
- **ALWAYS** insert seat post past the minimum insertion point marked on the seat post. A seat post that is positioned too high can damage the bike and can cause you to lose control and crash.



Correct seat adjustment is an important factor in getting the most performance and comfort from your bicycle. If the seat position is not comfortable for you, you may want to go to your local bicycle shop for assistance.

To achieve correct seat height:

- Sit on the seat;
- Place one heel on a pedal;
- Rotate the crank until the pedal with your heel on it is in the down position and the crank arm is parallel to the seat tube.

If your leg is not completely straight, your seat height needs to be adjusted. If your hips must rock for your heel to reach the pedal, the seat is too high. If your leg is bent at the knee with your heel on the pedal, the seat is too low.

To adjust seat height:

- Loosen the seatpost clamp. The open and closed positions of the seatpost clamp are shown below (open position on left, closed position on right);
- Raise or lower the seat post in the seat tube;
- Check that the seat is straight before and after; and
- Re-tighten the seat post clamp to the recommended torque. See Tightening Torque (p. 21).



Adjust Seat Position

WARNING!

Always tighten fasteners to the correct torque to prevent serious injury or death. Bolts that are too tight can stretch and deform. Bolts that are too loose can move and fatigue. Either condition can lead to a sudden failure of the bolt and result in a crash. See Tightening Torque (p. 21).



Front and back adjustment: Loosen nuts on both sides of the seat. Make sure the clamp mechanism is clamping on the straight part of the seat rails and is not touching the curved part of the rails. Ensure that you are using the recommended torque on the clamping fastener(s). See Tightening Torque (p. 21).

Seat angle adjustment: Most people prefer a horizontal seat; but you may prefer the seat nose angled slightly up or down. Loosen the clamp bolt to allow any serrations on the clamp mechanism to disengage before changing the seat angle, and to fully re-engage the serrations before you tighten the clamp bolt to the recommended Tightening Torque (p. 21).

Charge Battery Before First Use

Locate charging port on the side of the battery pack. Use this port to charge when battery pack is installed or not installed.

You should fully charge your battery before your first ride.



Fire and explosion hazards. Never leave your battery pack unattended while charging to prevent serious injury or death.

See Battery Pack section (p. 38) for additional information.

Tightening Torque

Spec

Bottom Bracket	30 Nm
Brake Caliper Mounting Bolts	8 Nm
Brake Lever Clamp Bolts	6 Nm
Crank Bolts	35 Nm
Disc Rotor Mounting Bolts	4 Nm
Fender Mounting Bolts	4 Nm
Headlight Mounting Screw	4 Nm
Headset Compression Bolt	4 Nm
Kickstand Mounting Bolts	7 Nm
Pedals	30 Nm
Rear Derailleur Cable Clamp Bolt	7 Nm
Rear Derailleur Mounting Bolt	12 Nm
Seat Rail Binder	20 Nm
Seatpost Clamp	18 Nm
Shifter Clamp Bolt	5 Nm
Spokes	160-190 (KGF)
Stem Clamp Bolts	10 Nm
Stem Faceplate Bolt	10 Nm
Torque Arm Bolt	4 Nm
Wheel Axle Nuts	35 Nm

FEATURES

WARNING!

Never modify your frame or bicycle in any way as this could cause serious injury or death. Do not sand, drill, file, or remove parts from your bicycle. Do not install incompatible components or hardware.

Motor

WARNING!

To prevent serious injury or death:

- **Do not open the drive unit yourself.** The drive unit must only be repaired by qualified personnel using only original parts. This will ensure that the safety of the drive unit is maintained. Unauthorized opening of the drive unit will render warranty claims null and void.
- **All components fitted to the drive unit and all other components of your Lectric eBike PAS system (e.g. chainring, chainring receptacle, pedals) must only be replaced with identical components or components that have been specifically approved by Lectric eBikes.** This should help protect the motor from overloading.
- **Always remove the battery pack from your Lectric eBike before beginning work (e.g. inspection, repair, assembly, maintenance, work on the chain, etc.), transporting it with a car or on an airplane, or storing it.** Battery pack removal should prevent unintentional activation of your Lectric eBike.
- **Do not make any modifications to your Lectric eBike or attach any other products that might increase the performance of your Lectric eBike.** Doing so will generally reduce the service life of the system and risks damaging the drive unit and the bicycle. You also run the risk of losing the guarantee and warranty claims on the bicycle you have purchased.
By handling the system improperly you are also endangering your

safety and that of other road users, thus running the risk of high personal liability costs and possibly even criminal prosecution in the event of accidents that can be attributed to manipulation of the bicycle.

- **Under extreme conditions, such as continuously high loads at low speed when riding up hills or carrying loads, parts of the motor can reach high temperatures.**

7-Speed Gear System

Your Lectric eBike comes with a 7-speed freewheel. The freewheel is the cluster of sprockets on the rear wheel of your bicycle.


While pedaling in 1st gear (lowest gear using the largest sprocket), it will be easier to pedal up hills. In 7th gear (highest gear using the smallest sprocket), it will be easier to reach higher speeds on flat or downhill terrain.

To shift up:

Press the lower button marked with the plus (+) sign.

To shift down:

Push the upper lever marked with the minus (-) away from you.

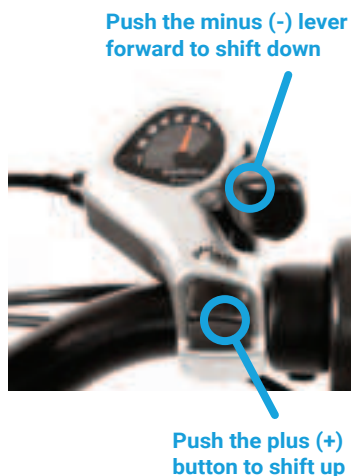

Throttle

The right handlebar features a half-twist throttle.

To operate:

Check that the Pedal Assist (PAS) level is set above 0, then twist the throttle back slowly to achieve your desired speed and acceleration.

Mechanical Disc Brakes

Your Lectric XP is equipped with mechanical disc brakes.



To prevent serious injury or death:

- **ALWAYS apply right brake lever (rear wheel) before and during use of the front brake.**
- **ALWAYS apply even pressure to both brake levers when slowing down or stopping.**

If only the front brake is applied while slowing or stopping quickly, you may be ejected over the front handlebars.

Before riding, check to ensure brake levers do not touch the handlebars when fully applied. If either lever touches the handlebars, screw or unscrew the barrel adjuster to increase tension in the brake cable. If this does not fix the problem, take your bicycle to an experienced bicycle mechanic for further adjustment.

To brake the rear wheel:

Pull right brake lever to activate rear brake.

To brake the front wheel:

Pull left brake lever to activate front brake.



Disc brake rotors will become hot during use and will stay hot for a short period after use. To prevent burns, do not touch the disc rotor right after use.

Suspension Fork

The suspension fork will affect the handling of the bicycle, primarily when going over bumps and stopping. In some situations, it may be advantageous to lock the suspension so it is fully rigid.

Check to ensure your suspension fork is properly adjusted for the terrain and your weight. The black cap not have a function.



To increase stiffness:

Turn the black knob clockwise towards the “lock” direction indicated.

To reduce stiffness:

Turn the black knob counterclockwise towards the “open” direction indicated.

To fully lock suspension:

Turn the black knob clockwise towards the “lock” direction indicated until it cannot be turned further.

Front and Rear Lights

Your Lectric eBike comes with integrated front and rear lights.

To turn lights ON: Hold plus (+) button on the display control pad for about 3 seconds until the lights turn ON.


To turn lights OFF: Hold plus (+) button on the display control pad for about 3 seconds until the lights turn OFF.



Always turn lights ON for your safety, especially when riding at night or in low visibility situations.

COCKPIT SYSTEM

Cockpit Instruments

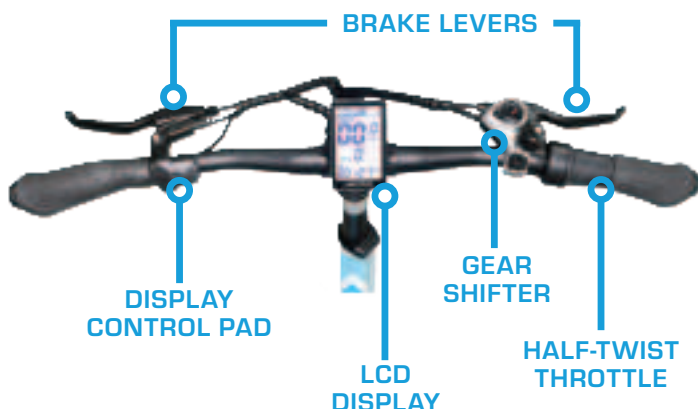

Display Controls



Overview

When does the Pedal Assist activate?

Pedal Assist (PAS) functions only when you are pedaling. If you do not pedal, the PAS will not activate. The motor output always depends on your pedaling and the PAS level you have set.

PAS automatically switches off at the maximum speed set for your Lectric eBike (up to 28 mph). When the speed falls below the maximum set speed, PAS automatically becomes available again.

You can also use your Lectric eBike as a normal bicycle without assistance at any time, either by switching the Cockpit System power button OFF, or by setting PAS to 0. If the battery needs to be charged, PAS will not function.

When the bicycle has not been used for 10 consecutive minutes, the display will automatically shut down. The PAS and throttle features will no longer work when the display is OFF.

WARNING!

To prevent serious injury or death:

- **Do not allow yourself to be distracted by the display. If you do not concentrate on the traffic around you, you risk being involved in a crash. If you want to change any settings other than the PAS level, always stop before changing the settings or display.**
- **Set the display brightness such that you can adequately see important information like speed or warning symbols. Display brightness that is incorrectly set can result in dangerous situations.**
- **The electrical components on the bicycle are not waterproof. The electrical components on the bike have an IP rating of 65.**
- **Check the display and plug. If damage is detected, do not use the display. A damaged display or cables or plugs increase the risk of a fire, explosion and personal injury.**
- **Do not disassemble the display. There are no user serviceable parts inside the display. Incorrect reassembly or damage may result in fire or explosion.**

Pedal Assist and Shifting Gears

You should shift gears on your Lectric eBike in the same way you would shift with a normal bicycle.

By selecting the proper gear, you can increase your speed and range while applying the same amount of force.

You should test the range of your Lectric eBike under different conditions and terrains before planning longer and more demanding trips. Refer to the Range Estimates section below to learn about the factors to consider when planning longer rides.

Range Estimates

The range the bicycle can go on a single battery charge can vary significantly between riders, terrain, wind conditions, user input, and additional cargo weight. The following table shows estimates of potential ranges riders may expect in different conditions.

All tests were performed with:

- Flat ground
- Few bumps
- Little to no wind
- Top speed set to 20 mph
- CST BFT tires at ~30 PSI
- Few starts and stops
- No additional cargo
- Temperature ~75°F
- Rider weight ~180 lbs.
- 10.4 Ah Battery

Range Estimates Under Test Conditions	Throttle and PAS Level
---------------------------------------	------------------------

Up to 25 miles	• Pure throttle use • Mostly PAS level 5
----------------	--

Up to 35 miles	• Little use of throttle • Mostly PAS level 3
----------------	---


Up to 45 miles	• Very little use of throttle • Mostly PAS levels 1-2
----------------	---

Tips to Increase Range

To get the maximum range out of each battery charge, there are some simple things you can do:

- Ride at a lower PAS level
- Use lower PAS levels and pedal when climbing hills
- Pedal when starting from a standstill

Display Functions

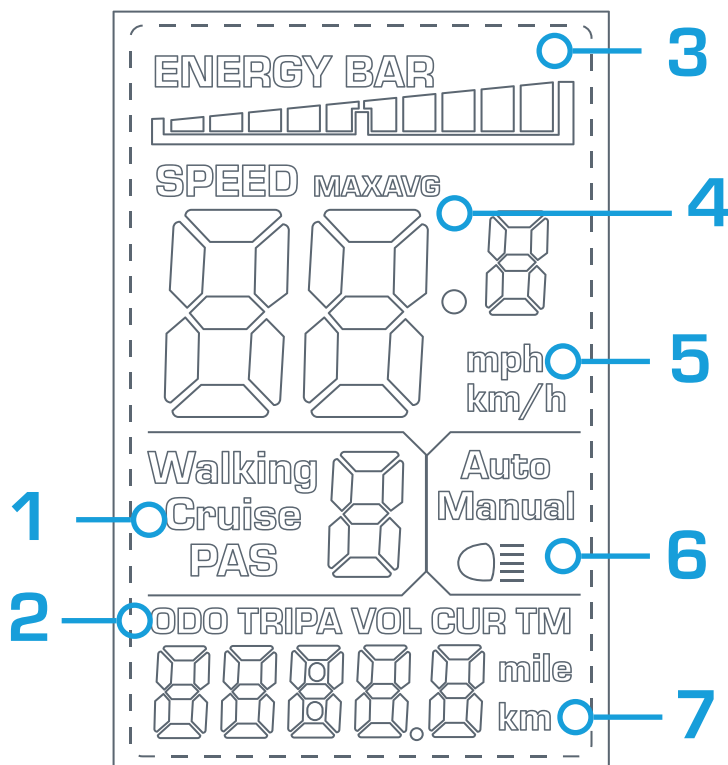

1 Walk Mode, Cruise Control, and Pedal assist (PAS) Level Indicator

2 Odometer, Trip A, Voltage, Current, Trip Timer (TM) readouts

3 Battery level indicator bar

4 Maximum and Average Speed

5 Speedometer in MPH or KM/H

6 Light On/Off Indicator

7 Mile and kilometer indicators

Battery Level Indicator Bar

The “Energy Bar” near the top of the display is your battery indicator and shows the estimated charge level remaining in your battery pack.

As the battery charge depletes, the remaining marks will display the approximate remaining charge in the battery pack.

The battery display will flash when there is no charge remaining.



OPERATING COCKPIT SYSTEM

Turn the bicycle ON/OFF

Press and hold  button

Increase PAS Level

Press plus (+) button

Decrease PAS Level

Press minus (-) button

Turn lights ON/OFF

Press and hold the plus (+) button for about 3 seconds or until lights turn ON; repeat to turn OFF

Toggle Odometer, Trip A, Voltage, Current, Trip Timer (TM)

Press  button

Max Speed and Average Speed

Press and hold the plus (+) button and  button simultaneously to toggle between the speedometer, max speed and average speed

Passenger Mode

Hold (-) and  button simultaneously for 5 seconds to activate 10mph max mode

NOTE: The trip meter, as well as maximum and average speed will reset when the bicycle is powered OFF.

Settings Menu



Do not tamper with your bicycle. Tampering is defined as removing or replacing any original equipment, or modifying your bicycle in any way that may change its design and/or operation. Such changes may seriously impair the handling, stability, and other aspects of the bicycle, making it unsafe to ride. Tampering can void the warranty and render your bicycle noncompliant with the applicable laws and regulations. Lectric eBikes is not responsible for any direct, incidental, or consequential damages, including, without limitation, damages for personal injury, property damage, or economic losses due to tampering.

To change display settings, hold the plus (+) and the minus (-) buttons simultaneously to enter into the Settings Menu. Press the (⏻) button to toggle between each numbered setting. To adjust the value of each setting, click the plus (+) and the minus (-) buttons as needed.

There are 21 settings (P01-P21). You should only change the settings listed below.



To prevent serious injury or death, DO NOT change settings excluded from the table. Changing setting not listed in the following table may cause your bike to stop working properly. If you need the default setting values of setting not listed, contact Lectric eBikes. DO NOT ride your bicycle until the default settings have been restored.

Setting	Function	Default	Explanation
P01	Brightness	2	Backlight display brightness. The darkest level is 1 and the brightest level is 3.
P02	Distance Units	1	0: KM; 1: MILE.
P04	Sleep	10	LCD Display sleep timer. The default setting will turn the display OFF after it has not been used for 10 minutes.
P06	Tire Size	22	Used to compute speed and distance traveled.
P08	Speed Limit	32	16: Lectric "Passenger Mode" 32: Class 2 100: Class 3
P09	Throttle Zero Start	0	0: Throttle active from standstill. 1: Throttle active only when already moving.
P10	Mode Toggle	2	0: PAS Active, Throttle Inactive 1: PAS Inactive, Throttle Active 2: Both PAS and Throttle Active
P11	PAS Sensitivity	3	When set to higher numbers, it will take more crank rotations for the motor to turn ON. Lower numbers will take fewer crank rotations to turn the motor ON.

Setting	Function	Default	Explanation
P12	PAS Strength	1	When set to higher numbers, the motor will come on stronger. Lower numbers will be more gentle.
P16	Odometer Reset	NA	Hold the plus (+) button for 5 seconds to reset odometer.
P21	Walk Mode Toggle	1	0: Walk Mode disabled 1: Walk Mode enabled

Changing Top Speed

Your Lectric eBike ships with a maximum speed set at 20 miles per hour (mph). This means it is a Class 2 electric bicycle in states that recognize three classes of eBikes. In most states that only recognize eBikes generally, the 20 mph top speed is legal for use on public roads.

Class	Pedal Assist Speed Limit	Throttle Speed Limit
Lectric "Passenger Mode"	10 mph	10 mph
1	20 mph	Throttle not allowed
2 (Default)	20 mph	20 mph
3	28 mph	20 mph

WARNING!

ALWAYS check your local laws and regulations to determine if it is lawful to ride Class 3 eBikes on public roads before increasing your bicycle's top speed. Laws vary by territory, state, trail, path, and road so you will need to check the applicable regulations in each new location you ride.

Class 3 Label

If you increase your bicycle's top speed, you must remove the Class 2 label that displays your Lectric eBike class, top pedal assisted speed, and motor wattage. This label is posted under the carry handle, near the seat tube on the bicycle. Peel back the Class 2 label to reveal the Class 3 label located underneath the Class 2 label.

WARNING!

Ride within your limits to prevent serious injury or death. Riding at higher speeds poses an increased safety risk. ALWAYS wear a helmet and obey the rules of the road.

To increase maximum speed:

1. Press and hold the plus (+) and minus (-) buttons on the control pad simultaneously until the screen says "P1".
2. Press the ⏻ button on the control pad to cycle through the settings.
3. Go to setting "P08" and change this value from 32 to 100.
NOTE: This setting represents the top speed in kilometers per hour. For Class 2 performance, this speed setting must not exceed 20 mph (32 km/h). For Class 3 performance, this setting will be set at 100, indicating the bike has been completely unlocked to enable speeds of up to 28mph. Please note: The maximum achievable top speed will vary by tire inflation pressure, road conditions, total payload, battery charge level and other factors.
4. Press and hold the plus (+) and the minus (-) buttons on the control pad to exit Settings Menu.
5. Power bicycle OFF by holding the ⏻ button to save the settings.

Passenger Mode

Passenger Mode is designed to add an additional level of protection when a passenger is on the bike. Passenger Mode will limit the top speed of your Lectric XP to 10mph. You and your passenger will need to continue to practice caution on the Lectric XP.

To engage Lectric “Passenger Mode”:

1. Press and hold the (-) and ⏻ buttons on the control pad simultaneously for 5 seconds until the screen flashes PAS and speedometer.
2. Check setting has been activated by riding without passenger and speed has been limited to 10mph.

To disengage:

1. Turn your Lectric XP OFF and then ON. Or change your P08 setting to 32 or 100 and Passenger Mode will deactivate.

Walk Mode

Electric bicycles are heavier than bicycles. To make walking the bicycle easier, your Lectric XP is equipped with Walk Mode, which can be toggled on or off in the settings menu. Walk Mode may be subject to local regulations. Check your local regulations to determine if allowed.

To activate:

Hold down the minus (-) button on the display control pad and the motor will engage at a speed similar to a slow walk.

NOTE: When Walk Mode is active, “Walking” will appear on the display.



ALWAYS keep wheels in contact with the ground when using Walk Mode.

To deactivate:

Pull either brake lever to disengage Walk Mode OR press and hold the minus (-) button on the display control pad.

Cruise Control

Cruise control on your Lectric XP works similarly to cruise control on a car. The bike will try to maintain a speed based on the position of the throttle when cruise control was activated. For example, if the throttle is twisted all the way from its resting position (to a position that would normally maintain 20 mph) and the minus button is held, cruise control will be activated and set at 20 mph. Even if the bike is currently going slower than 20 mph, the bike will try to accelerate and maintain that speed because it was set based on that throttle position.

To activate:

Hold the minus (-) button while twisting the throttle.

To cruise at low speeds, only slightly twist the throttle and hold the minus (-) button.

NOTE: When Cruise Control is active, "Cruise" will appear on the display.

To deactivate:

Pull either brake lever to disengage Cruise Control.

PREPARING TO RIDE



To prevent serious injury or death go through the pre-Ride Safety Checklist on pg. 9 of your Owner's Manual before each ride.

Carrying a Passenger

Do not exceed the load limit of the rear cargo rack or optional console attachment. The Lectric XP or XP Step-Thru 3.0 rear cargo rack is designed for no more than 150 lbs (68 kg) of total cargo, regardless of any third-party rear rack accessories which might carry a higher weight rating. Heed this 150 lbs (68 kg) limit, or damage to your bike, property, and/or cargo, and serious injury or death of the rider and/or passenger can occur.

Foot pegs are designed as a footrest only, for use by a passenger while they are sitting on the rear passenger seat. A passenger must always keep both feet on the foot pegs when the bike is in motion. If the passenger cannot always keep contact with the foot pegs, they should ride in an appropriate child seat or should not ride as a passenger on the Lectric XP or XP Step-Thru 3.0. Do not stand on or otherwise misuse foot pegs, or damage to the product, serious injury, and/or death may occur.

You **MUST** hold onto the Lectric XP or XP Step-Thru 3.0 whenever loading cargo and/or a passenger. The kickstand is not designed to be used for loading cargo. Do not assume the bike is stable and balanced when using the kickstand. Always hold onto the bike when cargo is being loaded, in place, or attached to the bike.

It is always the user's responsibility to ensure the passenger and/or cargo loaded on the Lectric XP or XP Step-Thru 3.0 do not interfere or impact the user's ability to safely operate the Lectric XP or XP Step-Thru 3.0. Failure to ensure the passenger and/or cargo does not interfere with the rider's safe operation could cause damage to the bike property, serious injury, and/or death.

Bike total maximum payload:	330 lbs (150 kg)
Rear cargo rack maximum payload:	150 lbs (68 kg)
Foot pegs:	39 lbs (18 kg) per side

NOTICE

Check all regulations where you operate the Lectric XP or XP Step-Thru 3.0 to ensure carrying a child, passenger, or cargo is allowed. The following list provides important tips for the safe operation of the Lectric XP or XP Step-Thru 3.0 when used for carrying a passenger.

- A passenger incapable of riding a bike on their own should not ride as a passenger. Use your best judgment as a parent or guardian to keep a child or an adult passenger and the rider safe.
- When carrying a passenger, you must have the foot pegs, and the seat appropriate for the rider, and the rear fender is

recommended, which all help ensure hands and feet are kept clear of the moving wheel.


- Follow the stated weight limits for the bike and accessories; do not overload Lectric XP or XP Step-Thru 3.0.
- Increased weight from a passenger will increase the time it takes to slow the bike when braking. Plan your stops accordingly and ensure both front and rear brakes are properly adjusted, maintained, and applied.
- Ensure that both the rider and passenger are wearing a properly fitted and approved helmet.
- Hold onto the bike when loading cargo and/or passengers. Ensure passenger sits over or forward of the rear wheel.
- Do not allow passengers to sit sideways or backward on the rear cargo rack.
- Do not allow passengers to stand or kneel on the rear cargo rack or foot pegs.
- Ensure that passengers are safely seated before beginning to ride.
- A passenger should sit on the rear passenger seat directly over or forward of the rear wheel axle, hold onto the passenger handlebars, rider's hips, or waist (but not shoulders), and keep their feet on the foot pegs when the bike is in motion.
- Since passengers sit behind the rider, they cannot see bumps or upcoming turns; instruct passengers to brace for bumps and be prepared for turns, braking, and other maneuvers.

WARNING!

It is the user's responsibility to ensure a passenger on the Lectric XP or XP Step-Thru 3.0 is adequately experienced and fit enough to safely ride as a passenger. Serious injury or death can occur if a passenger is inexperienced, in poor health or fitness, and/or intoxicated, all of which could impact their ability to ride as a passenger.

Carrying a Child

The use of certified and approved child seat and/or equipment is required whenever carrying a child. A child incapable of riding a bike independently or under the age of four should not ride as a passenger on the Lectric XP or XP Step-Thru 3.0 unless seated in a properly fitted and approved child safety seat. The Lectric XP or XP Step-Thru 3.0 rear cargo rack is equipped with a mounting window, called “Yepp window,” for the Thule Yepp Maxi Easyfit child carrier. For installation instructions (including how to remove the passenger seat to access the rack), safety notices, general information, and tips on safe operation of the Thule Yepp Maxi Easyfit child carrier accessory, visit the manufacturer’s website online at www.thule.com and contact Lectric eBikes.

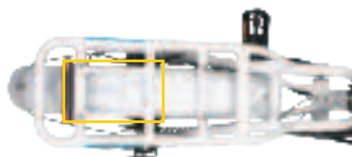

⚠ WARNING! ⚠

Children too large or heavy for the Thule Yepp Maxi Easyfit child carrier must have legs long enough to always maintain contact with the foot pegs anytime the bike is in motion. If they cannot always maintain contact with the foot pegs when the bike is in motion, they should not ride as a passenger. Serious injury or death can occur if clothing or body parts contact the rear wheel while the bike is in motion.

A Note for Parents and Guardians

As a parent or guardian, you are responsible for the activities and safety of your child. The Lectric XP or XP Step-Thru 3.0 is not designed to be ridden by a child under the age of 18. If you are carrying a passenger in a child safety seat, they should also be wearing a helmet. Additional safety information regarding helmets can be found in the Helmet section of this manual.

YOUR FIRST RIDE

The acceleration of your Lectric eBike may be faster than anticipated, and may feel unusual at first. Before your first ride, you should use the lowest level of pedal assist (PAS 1) and become familiar with the operation of your Lectric eBike by practicing starting, stopping, cornering, and navigating obstacles in a safe environment away from other bicycles, pedestrians, and/or vehicles. You should also pay particular attention to terrain conditions as you may approach obstacles faster than expected.

The Pedal Assist may be activated as soon as you step onto the pedals and the bicycle is in motion. ALWAYS be seated on the bicycle and engage at least one brake before starting to pedal. DO NOT place one foot on a pedal then throw your other leg over the bicycle or your eBike could accelerate unexpectedly.

To start:

1. Insert key and turn counterclockwise to the ON position. The key will be parallel with the frame. The keys must remain in the bike to use.
2. Hold down the  button located on the left handlebar until the display comes on.
3. Select a Pedal Assist (PAS) level using the plus (+) and minus (-) buttons. PAS 0 provides no motor assist. PAS 1 is the lowest level of assist and PAS 5 is the highest level of assist.



To prevent serious injury or death:

- **Exercise extreme caution when using the twist throttle. When at a complete stop with the bicycle turned ON, be careful not to twist the throttle or the bicycle could accelerate and cause you to crash.**
- **Do not engage Walk Mode when riding or sitting on your Lectric eBike. Holding the minus (-) button will engage the motor up to a walking speed.**

To end your ride:

When the bicycle is at a complete stop, press and hold the  button to turn the display OFF. This ensures the motor will not activate until the display is turned ON again and you are ready to ride.

BATTERY PACK

The term **battery pack** refers to all original Lectric eBikes battery packs.

The safety of both our customers and our products is important to us. Our eBike batteries are lithium ion batteries, which have been developed and manufactured in accordance with the latest technology. We comply with or exceed the requirements of all relevant safety standards. When charged, these lithium ion batteries contain a high level of energy. If a fault occurs (which may not be detectable from the outside), in very rare cases and under unfavorable conditions, lithium ion batteries can catch fire.

Take care when using and charging your battery. Failure to follow the guidelines below could result in damage to property and/or serious injury. Contact Lectric eBikes immediately if you have any questions regarding battery safety.

Your Lectric eBike battery must not be opened, even for repairs. There is a risk your eBike battery could catch fire, e.g. due to a short circuit. This risk increases if an eBike battery which has already been opened is reused at a later point in time. Do not attempt to repair an eBike battery in the event of a fault. Have it replaced with an original Lectric eBike battery pack.

The battery is protected against deep discharge, overloading, overheating, and short-circuiting by Electronic Cell Protection (ECP). In the event of a fault, a protective circuit switches the battery pack off automatically.

Battery Safety



Only use original Lectric eBike batteries for your eBike. Using other batteries can lead to injuries and pose a fire hazard. Lectric eBikes accepts no liability or warranty claims if other batteries are used.

To prevent serious injury or death:

- **Do not leave your battery unattended while charging.**
- **When removing the battery, unplug the rubber stopper on the charging point.**

- Always charge your battery in temperatures between 32°F – 113°F (0°C – 45°C).
- For an optimum service life, operate your Lectric eBike battery at temperatures between 32° F -104° F (0°C-40°C).
- Battery leakage may occur under extreme usage or temperature conditions. Avoid contact with skin and eyes. Battery liquid is caustic and could cause chemical burns. If battery liquid comes in contact with skin, wash quickly with soap and water. If the liquid contacts your eyes, immediately flush eyes with water for a minimum of 15 minutes and seek medical attention.
- Always remove the battery from the bicycle when not in use and store in a secure location to prevent unauthorized use.
- Do not submerge the battery in liquid of any kind.
- Do not touch the terminals on your battery.
- Turn display OFF when not in use and before removing battery pack.
- The battery pack should not be excessively difficult to insert or to remove. Do not force the battery pack in or out of the bike frame.
- Battery charging times may increase with battery age and usage.
- Only grab the charger by the plug and not the cable when plugging and unplugging from the wall.
- If the battery has trouble charging, stop charging and contact Lectric eBikes immediately.
- Do not puncture or crush the battery pack. Do not impact the battery pack or modify it in any way. Do not use the battery pack if it shows visible damage. The aforementioned can increase danger of fire or explosion.
- Protect the battery pack from heat (e.g., temperature >140°F), fire, and immersion in water. The aforementioned can increase danger of fire or explosion.
- Always remove the battery pack before beginning work (e.g. inspection, repair, assembly, maintenance, work on the chain, etc.) on your Lectric eBike, transporting it via car or airplane, or storing it. Unintentional activation of the Lectric eBike poses a risk of injury.
- Do not open the battery. There is a risk of short circuiting. Opening the battery voids any and all warranty claims.
- When the battery is not in use, keep it away from paper clips, coins, keys, nails, screws, or other small metal objects that could make a connection from one terminal to another. A short circuit between the battery

terminals may cause burns or a fire. Short circuit damage which occurs in this instance voids any and all warranty claims against Lectric eBikes.

- Avoid mechanical loads and exposure to high temperatures. These can damage the battery cells and cause the flammable contents to leak out.
- Do not place the charger or the battery near flammable materials. Ensure the battery is completely dry and placed on a fireproof surface before charging. There is a risk of fire due to the heat generated during charging.
- Your Lectric eBike battery must not be left unattended while charging.
- If used incorrectly, liquid may leak from the battery. Contact with this liquid should be avoided. If contact occurs, rinse off with water. If the liquid comes into contact with your eyes, seek additional medical attention. Liquid leaking from the battery may cause irritation or scalding.
- Batteries must not be subjected to mechanical shock. If battery is dropped or struck with another object, the battery may be damaged.
- The battery may give off fumes if it becomes damaged or is used incorrectly. Ensure the area is well ventilated and seek medical attention should you experience any adverse effects. The fumes may irritate the respiratory system.
- Only charge the battery using original Lectric eBikes chargers. When using chargers that are not made by Lectric eBikes, the risk of fire cannot be excluded.
- Use the battery only in conjunction with your Lectric eBike. This is the only way in which you can protect the battery against dangerous overload.
- Use only original Lectric eBikes battery packs that the manufacturer has approved for your eBike. Using other batteries can lead to injuries and pose a fire hazard. Lectric eBikes accepts no liability or warranty claims if other batteries are used.
- Keep the battery away from children.
- Always turn display OFF before removing the battery pack.
- Always remove the key from the battery pack after each use. This prevents both unauthorized use of the powered features of your Lectric eBike and removal of the battery by unauthorized persons when your Lectric eBike is not in use. Failure to secure your bicycle from unauthorized use can result in death or serious injury to others.

Charging

Locate the charge port on the side of the battery. You can charge the battery from this port while the battery is in or out of the bicycle.

WARNING!

To prevent serious injury or death:

- Do not leave your battery unattended while charging.
- Do not connect the battery pack to the charger until it has reached an allowable charging temperature.
- Do not charge the battery with chargers other than the charger provided by Lectric eBikes.
- Only charge the battery indoors and in dry spaces which are not excessively hot or cold (within 10°F of room temperature).
- Ensure there are no flammable items, dirt or debris nearby when using the charger.
- The charger will automatically stop charging once the battery reaches its full capacity.
- The light on the charger will be red when the battery is charging and will turn green when charging has finished.
- Avoid leaving the charger plugged in when the battery is fully charged.
- Do not charge the battery if you notice the battery is damaged, excessively hot, leaking, smells, or is discolored.
- Charging the battery should take approximately 4-6 hours if the battery is mostly empty.
- Store the battery indoors in a dry space, away from heat or flame sources and out of direct sunlight.
- The charger may get hot (>165°F) when charging. Use caution and avoid touching the body of the charger.
- To reduce risk of injury, charge only batteries of your Lectric eBike. Other types of batteries may burst, causing personal injury and damage.
- Only charge Lectric eBikes approved lithium ion battery packs. The battery pack voltage must match the battery pack charging voltage of the charger. Otherwise, there is risk of fire and explosion.

- Do not expose the charger to rain or wet conditions. If water enters a charger, there is a risk of electric shock.
- Only use the original Lectric eBikes battery charger supplied with your eBike or one approved for your eBike by the manufacturer and purchased from a trusted source. Bypassing the battery charger or the use of a non-approved or counterfeit battery charger can lead to death or serious injury.
- Keep battery charger clean. Contamination can lead to the risk of an electric shock. Clean only with the use of a damp cloth (mild soap/water).
- Always check the charger, cable, and plug before use. Stop using the charger if you discover any damage. Do not open the charger. Damaged chargers, cables, and plugs increase the risk of electric shock.
- Do not operate the charger on an easily ignited surface (e.g. paper, textiles, etc.) or in a flammable environment. There is a risk of fire due to the charger heating up during operation.
- Take care if you touch the charger while it is charging. The charger can get very hot, especially when the ambient temperature is high.
- The battery may give off fumes if it becomes damaged or is used incorrectly. Ensure the area is well ventilated and seek medical attention should you experience any adverse effects. These fumes may irritate the respiratory tract.
- Batteries must not be subjected to mechanical shock. There is a risk of damage to the battery pack.
- Keep the battery charger away from children. This will ensure that children do not play with the charger.
- Persons who are not capable of safely operating the charger because of their physical, sensory, or mental limitations, or because of their lack of experience or knowledge, may only use this charger under supervision or after having been instructed by a responsible person. Otherwise, there is a risk of operating errors and injuries.
- Note the household voltage! The voltage of the power supply must correspond to the specifications given on the battery charger nameplate.
- Damage to your ebike's electrical system caused in any manner, including water intrusion, can lead to battery failure, electrical

system malfunction, or electrical fire and consequent property damage, injury, or death. Follow all recommendations to minimize chance of water damage. If you have any questions, contact Lectric eBikes.

- **Keep battery charger clean. Contamination can lead to the risk of an electric shock. Clean only with the use of a damp cloth (mild soap/water) when the charger is unplugged from both the wall and the bike.**
- **Keep the rubber plug inserted into the battery any time the battery is in the bike to prevent water ingress.**

CAUTION

To reduce the risk of fire, connect only to a circuit provided with 10 amperes maximum branch circuit overcurrent protection in accordance with the National Electrical Code, ANSI/NFPA 70. Never use extension cords with your Lectric eBikes charger provided with the purchase of your ebike, after sales service, or warranty charging devices.

WARNING!

Using a damaged battery or charger can create additional bike damage or a fire hazard. Stop using your battery and charger and contact Lectric eBikes immediately if any of the following occur:

(1) Your charger's flexible power cord or output cable or any of the electrical cables on your bike is frayed, has broken insulation, or any other signs of damage, **(2)** Your battery or charger is physically damaged, non-functional, or performing abnormally, **(3)** Your battery or charger experienced a significant impact from a fall or crash, with or without obvious signs of damage, or **(4)** Your charger becomes too hot to touch (it's designed to get warm with normal use), gives off an odor, or shows other signs of overheating. Store any damaged battery or charger in a safe location and, as soon as possible, recycle or otherwise dispose of it according to local rules. Contact Lectric eBikes if you have any questions or to purchase a compatible replacement battery or charger.

Battery Charging Information

- **Check the charger, charger cables, and battery for damage before** beginning each charge.
- **Always charge in a safe area** that is cool*, dry, indoors, away from direct sunlight, dirt, or debris, in a clear area away from potential to trip on the charging cords, or for damage to occur to the bike, battery, or charging equipment while parked and/or charging.
*Always charge your battery in temperatures between 32°F – 113°F (0°C – 45°C).
- **The battery can be charged on or off the bike.** To remove the battery see instructions “Installing and Uninstalling Battery Pack” on page 48.
- **The battery should be recharged after each use**, so it is ready to go the full range per charge next ride. There is no memory effect, so charging the battery after short rides will not cause damage.
- **Charging the battery normally takes 4-7 hours.** In rare cases, it may take longer to allow the battery management system to balance the battery, particularly when the bike is new or after long periods of storage.
- **The charge indicator light** will show red while the battery charges. When charging is complete, the charging indicator light will turn green. Ensure the lights face upward when charging.
- **Remove the charger from the battery within one hour of the green light indicating a complete charge.** The charger is designed to automatically stop charging when the battery is full, but unnecessary wear of the charging components could occur if the charger is left attached to the battery and a power source for longer than 12 hours. Detach the charger as soon as possible once the green light indicates a complete charge to avoid unnecessary wear of charging components.
- **Never charge a battery for more than 12 hours at a time.**
- **Do not leave a charging battery unattended.**

To Charge:

1. Plug the cable from the charger into the port on the side of the battery pack.
2. Plug the charger power cable into an electrical mains wall socket.

Note: Use only the supplied input connection: standard AC power cord when connecting to the household electrical supply.

Note: The charging process is only possible when the temperature of your Lectric eBike battery is within the permitted charging temperature range.

After charging is complete and the light on the charger is green, disconnect the cable from the battery port and power cord from wall socket. If you have charged the battery in the bicycle frame, carefully insert the rubber plug after charging, so that no dirt or water can enter the battery port.

Installing and Uninstalling Battery Pack



To prevent serious injury or death:

- **Only place battery pack on clean surfaces.** Avoid getting dirt, e.g. sand or soil, in the charging port and contacts.
- **Do not charge or use battery pack if it is damaged.** Contact Lectric eBikes to order a replacement.

Your bike comes with a 48V lithium-ion battery. The bike's battery comes with a unique set of keys that are used to turn it on/off as well as keep it unlocked/locked to the frame.


The battery has 3 key positions: UNLOCKED, OFF, and ON. These positions are marked on the battery and can only be seen when the battery is removed from the bike.



To install:

Images are point of view from bottom of bike

1. Fully insert battery pack into the bicycle frame with the key removed. The locking pin will be retracted.

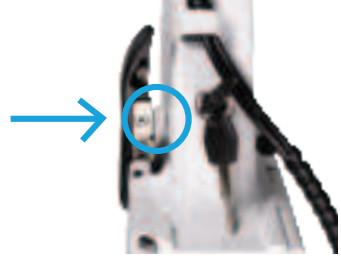

Locking Pin retracted

2. Key position shown: UNLOCKED.
Insert the key into the battery through the hole in the bottom of the frame. Push the key into the battery and continue pushing until you have twisted the keys to the desired position.




NOTE: When the battery is locked, the locking pin will protrude through the frame and will be visible. The locking pin is located behind the frame latch.




Locking Pin protruding through frame

3. Key position shown: OFF.
Turn the key clockwise. There will be one audible click, and the locking pin will now protrude through the frame. In this position, the battery pack will be secured to the frame, but the power will not be active.

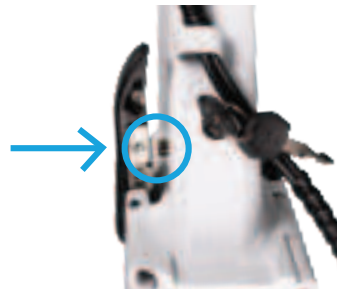

Key position shown: ON.

Turn the key clockwise so the key is parallel with the frame. The key must be turned to the ON position to turn on the bike.

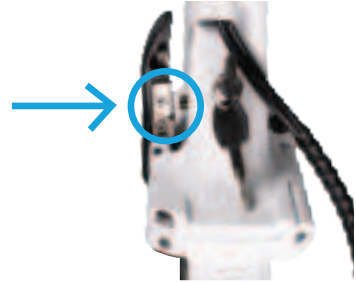

To uninstall:

To unlock the battery and remove it from the frame, follow the steps listed above in reverse order. Be sure to remove the key from the battery before removing the battery from the bicycle. If the key is still in the battery, it will prevent the battery from being removed from the frame.



When unlocking and removing your battery pack from the frame, take care that it does not slide out while the bicycle is folded. If your battery impacts the ground and is damaged, discontinue use and contact Lectric eBikes immediately.

Storing

Charging Battery Pack Before and During Storage

When the battery pack will not be used for weeks or months, remove it from the eBike and store the battery pack at about 60 % charge as indicated by the Energy Bar on the display. At about 60% charge, the battery will degrade less, compared to higher charge levels.

Every 2-3 months check the battery charge level and recharge to 60%, if necessary.

Note: If the battery is stored with no charge for an extended period of time, it may be damaged despite the low self-discharge and may reduce the battery capacity.

For optimum service life for your battery pack, charge the battery pack to 100% a few hours before you plan to ride. For example, if you ride the bicycle and the charge level falls to 50% but you plan to use the bicycle again in a few days, wait until the day before you plan to use it again to charge it to 100%.



DO NOT charge battery unattended or leave battery connected to charger overnight.

Leaving the battery permanently connected to the charger is not recommended.

As the battery pack ages, capacity will diminish and the battery pack will eventually need to be replaced. A significantly reduced operating period after charging indicates that the battery pack is worn out and must be replaced. You may replace it yourself by purchasing a replacement battery pack from Lectric eBikes.

Storage Conditions

If possible, store the battery pack in a dry, well-ventilated place. Protect it from moisture and water.

Always store your Lectric eBike battery pack in a location that:

- Is in a room with a smoke alarm;
- Is away from combustible or easily flammable objects; and
- Is away from heat sources.

For an optimum service life, operate your Lectric eBike battery at temperatures between **32° F -104° F** (0°C-40°C).

Make sure the maximum operating temperature is not exceeded. Do not leave the battery in your car during the summer, for example, and store it away from direct sunlight.

NOTE: Leaving the battery installed on the bicycle for long-term storage is not recommended.



WARNING!



Failure to follow Battery Charging & Storage Best Practices could result in unnecessary wear to the charging components, battery, and or charger, and could lead to an underperforming or non-functional battery and replacement will not be covered under warranty.

Troubleshooting

If you have any questions at all regarding the basic troubleshooting below, reach out to Lectric eBikes customer support by email at contact@lectricebikes.com, or call (602) 715-0907.

Issue

Most Common Solutions

Charging indicator lights do not illuminate.

1. Check that the cord is connected to the charger.
2. Check power availability at the main plug location.
3. If the battery does not charge, unplug and contact Lectric eBikes. Do not attempt to repair cord or charger.

Charging indicator light is always red.

Battery pack may be defective. Contact Lectric eBikes customer support for assistance.

Battery Recycling

When your battery is no longer usable, dispose of your battery according to state and federal regulations. State regulations regarding battery disposal vary so it is important you find out and follow the rules in your state.

Lithium Ion batteries cannot be put in with standard garbage bins.

STORING YOUR LECTRIC EBIKE

Please observe storage temperatures for your Lectric eBike. Protect the Drive Unit, Cockpit System, and Battery Pack against extreme temperatures (e.g. from intense sunlight without adequate ventilation). Extreme temperatures can cause the components (especially the battery) to be damaged.

TRANSPORTING YOUR LECTRIC EBIKE

WARNING!

To prevent serious injury or death:

- **Always remove the battery pack before transporting your Lectric eBike on a bicycle rack mounted on your vehicle.**
- **Always use a bicycle rack that is compatible with your Lectric eBike. Check your bicycle rack manual to be sure your rack has sufficient capacity. Overloading a bicycle rack could cause the rack to fail and your eBike to be damaged.**
- **Never attempt to use a roof-mounted bicycle rack. ONLY use hitch-mounted racks.**
- **Always use proper lifting techniques when lifting your Lectric eBike. Electric bicycles are generally heavier than bicycles.**

DISPOSAL OF YOUR LECTRIC EBIKE

When your Lectric eBike is no longer usable, dispose of your eBike according to state and federal regulations. The motor, display, battery, speed sensor, accessories, and packaging should be disposed of in accordance with these regulations. State regulations regarding electronics disposal vary, so it is important you abide to the rules in your state.

NOTE: Do not dispose of eBikes and their components with household waste.

TROUBLESHOOTING

If you have any questions at all regarding the basic troubleshooting below, reach out to Lectric eBikes customer support by email at contact@lectricebikes.com, or call (602) 715-0907.

Issue

Most Common Solutions

Bicycle will not turn ON.

1. Charge the battery until the light on the charger turns from red to green. This may take up to 8 hours.
2. Insert key in the battery and turn counterclockwise to the ON position, or until the key is parallel with the frame. Then press and hold the  button to turn ON.
3. Follow the cable coming from the display down to the quick plug. You may need to unravel some of the plastic wrapping to access it. With a quick pull (do not twist), unplug the quick plug, inspect both sides of the plug, and reconnect by lining up the arrows on both ends. After checking the quick plug, press and hold the  button on the display control pad to turn on.

Pedal assist or throttle do not work.

1. Check that the PAS level is set between 1-5.
2. To test if PAS is working, do not operate throttle.
3. To test if the throttle is working, do not pedal.
4. Check all quick plugs.

Error Codes

The components of your Lectric eBike are continuously monitored automatically. If a fault is detected, the corresponding error code will appear on the display.

Error Code	Meaning	Most Common Solution
E003	PAS Sensor Fault	Check PAS quick plug
E006	Battery Undervoltage	Fully charge battery
E007	Motor Fault	Check motor quick plug
E008	Throttle Fault	Check throttle quick plug
E009	Controller Fault	Check controller connections
E010	Display Communication Reception Failure	Check display quick plug
E011	Display Communication Send Failure	Check display quick plug
Hot	High Temperature Fault	Stop use and allow bike to cool

MAINTENANCE

You should have your bicycle maintained at regular service intervals at your local bicycle shop.



To prevent serious injury or death:

- **NEVER open any of the components, including the battery, display, motor, or PAS sensor.** Service should only be performed by a bicycle repair shop.

- **Always remove the battery pack before performing any bicycle inspection, maintenance, or repair.**
- **If you suspect that something is loose, do not ride your bicycle.** All nuts, bolts, and screws require the proper tightening force. Too little force and the fastener may not hold securely. Too much force and the fastener can strip threads, stretch, deform, or break. Either way, incorrect tightening force can result in component failure, which can cause you to lose control and crash. Take your bicycle to a bicycle repair shop for service.
- **Do not paint any components of your Lectric eBike as they may cause premature failure of the component.**
- **Do not submerge your Lectric eBike or its components in water or use a pressure washer to clean.**

Caring for Your eBike

Always observe the operating and storage temperatures of your Lectric eBike and its components. Protect motor, display, and battery pack against extreme temperatures (e.g. from intense sunlight without adequate ventilation). Extreme temperatures can damage components (especially the battery pack).

Please have your Lectric eBike serviced at least once a year.

WARNING!

Do not tamper with your bicycle. Tampering is defined as removing or replacing any original equipment or modifying your bicycle in any way that may change its design and/or operation. Such changes may seriously impair the handling, stability, and other aspects of the bicycle, making it unsafe to ride. Tampering can void your warranty and render your bicycle noncompliant with the applicable laws and regulations. Lectric eBikes is not responsible for any direct, incidental, or consequential damages. This includes, without limitation, damages for personal injury, property damage or economic losses due to tampering.

To ensure safety, quality, and reliability, use only original parts or Lectric eBikes authorized replacements for repair and replacement.

Tune-Ups

100 Mile Tune-Up

After 100 miles, or 5 full battery charge cycles, have the following services performed at a bicycle shop:

- Brake cables may need to be adjusted and tensioned properly.
- Shifting cables will stretch during the wear-in period. The derailleur may need to be adjusted.
- All hardware should be adjusted to the specified Tightening Torque (p. 21). If any hardware is damaged, it may need to be replaced by a bicycle mechanic.

Monthly (or about every 250-500 miles)

- Inflate tires to pressure within recommended range printed on tire sidewalls.
- Lubricate chain.
- Check that all hardware is tightened to the torque specifications listed in the Tightening Torque (p. 21) section of this manual.
- Check your brake pads for signs of wear. Replace if necessary.
- Check your bicycle's shifting performance. Adjust the derailleur if necessary.
- Clean the bicycle with low residue cleaner and dry completely. Lubricate after cleaning where necessary.
- Check spoke tension and adjust if necessary. See Tightening Torque (p. 21).

Quarterly (or about every 750-1500 miles)

- Check all items on the monthly service list above.
- Check tire tread for excessive wear. Replace if necessary.
- Check electrical connectors and cable housings are secured away from moving parts and are free from damage. Replace if necessary.

Cleaning



Do not submerge your Lectric eBike or its components in water, or use a pressure washer to clean.

Clean your Lectric eBike carefully with a soft, damp cloth (using only mild soap and water). Rinse with water. The electrical components on your Lectric eBike are IP 65 rated.

LEGAL

Warranty

LECTRIC EBIKES WARRANTS TO THE ORIGINAL REGISTERED PURCHASER THAT LECTRIC eBIKES SHALL BE FREE FROM ALL DEFECTS IN MATERIAL AND WORKMANSHIP FOR A PERIOD OF ONE YEAR FROM THE DATE OF PURCHASE.

DISCLAIMER OF CONSEQUENTIAL AND INCIDENTAL DAMAGES: THE ORIGINAL REGISTERED PURCHASER OF THIS BIKE, SUBSEQUENT OWNERS AND ALL OTHER INTENDED AND UNINTENDED USERS OF THIS BIKE, SHALL NOT BE ENTITLED TO RECOVER FROM LECTRIC eBIKES ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES. THERE IS NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. The warranty is non-transferable and only applies to the original owner. This warranty gives you specific rights and purchasers may also have other rights, which may vary from state to state. Damage caused by failing to follow instructions in the manual, acts of God, accident, misuse, neglect, abuse, commercial use, alterations, modification, improper assembly, installation of parts or accessories not originally intended or compatible with the Lectric eBike as sold, operator error, water damage, extreme riding, stunt riding, or improper follow-up maintenance is not covered under this warranty. Warranty parts will only be shipped within the continental United States and Canada.

Parts covered by the warranty: frame, forks, stem, handlebars, headset, seat post, saddle, brakes (excluding brake pads), lights, bottom bracket, crank set, pedals, rims, wheel hub, freewheel, cassette, derailleur, shifter, motor, throttle, controller, wiring harness, display (excluding damage due to water), kickstand, reflectors, and hardware. The battery warranty does not include damage from power surges, use of 3rd party charger, improper maintenance or other such misuse, normal wear, or water damage (including rust).

Accessories sold on lectricebikes.com are not covered under warranty.

Stolen bikes are not covered under warranty.

Necessary precautions must be taken to ensure the bike and battery are not exposed to severe weather conditions. Exposure to very wet,

hot, or cold conditions may void the warranty.

Lectric eBikes will replace any parts deemed to have been damaged during shipping. Shipping damage must be reported to Lectric eBikes within 14 days of shipment arrival. This applies to all products, including bikes and accessories.

You will NOT be refunded as compensation for your time or efforts replacing damaged parts.

Replacement parts will not be sent until photographic evidence has been provided to Lectric eBikes. Lectric eBikes may request additional documentation (such as video) to assist with accurately diagnosing the problem and processing the warranty claim.

Most warranty parts are fulfilled 1-10 business days after the request is put into our system by a customer service representative. Warranty parts are sent using USPS First Class, FedEx Express, or FedEx Ground, depending on the size of the part. Warranty parts will not be expedited.

Items including the chain, tires, wheels, rims, tubes, battery handle, brake rotors, brake pads, cables and housings, grips, and spokes are considered wear items. These items wear down with normal use and are not covered under warranty. You are responsible for replacing and maintaining these wear items.

Any unauthorized alterations or repairs are not covered and may void this warranty.

For warranty services, please contact Lectric eBikes' online support by email at contact@lectricebikes.com. Bikes or parts returned without proper documentation may result in delayed service or denied warranty coverage. Warranty return shipping costs along with duties and taxes are the responsibility of the claimant. All unauthorized returns will be refused.

Note that your insurance policies may not provide coverage for accidents involving Lectric eBikes. To determine if coverage is provided, you should contact your insurance company or agent. Damage as a result of an accident is not covered under this warranty, and Lectric eBikes is not responsible for repair or replacement of damaged bikes or parts.

Lectric eBikes reserves the right to change its warranty at any time and without notice.

Any action, lawsuit or other proceeding, under this warranty or otherwise related to the bike must be commenced within ninety (90) days after expiration of the one-year warranty period.

THIS WARRANTY GIVES THE ORIGINAL REGISTERED PURCHASER SPECIFIC LEGAL RIGHTS AND YOU MAY HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Bike Performance Disclaimer

The bikes listed range and top speed are estimates (not guarantees) of expected performance. Performance will vary with rider weight, cargo weight, rider/cargo shape (both contribute to drag), terrain, tire pressure, brake adjustment, throttle vs PAS usage, pedal power, battery charge level, ambient temperature, and wind conditions. Under certain conditions it is possible to get ranges and top speeds that are different from the listed estimates.

Liability Disclaimer

Riding any kind of bicycle comes with inherent risks and dangers that cannot be predicted or avoided. These dangers could result in a serious accident, injury, or death of the rider. It is the sole responsibility of the rider to become properly educated and prepared to ride safely. Once in possession of the bike, Lectric eBikes strongly encourages and recommends that all customers have a certified and reputable bicycle mechanic complete a full inspection of each component on the bicycle to ensure it is safe for operation. Lectric eBikes makes no claims or guarantees that the brakes, battery, frame, motor, motor controller, display, electrical cables, electrical cable housings, fasteners, grips, fork, stem, shifters, headset, seat post, seat post clamp, handlebar stem clamp, saddle, wheel hubs, handlebars, spokes, rims, tires, tubes, derailleur, freewheel, cassette, throttle, kickstand, lights, reflectors, hardware, bottom bracket, or any other part or accessory, will be properly secured and adjusted upon arrival. Before every ride, fully inspect your bicycle to ensure everything is secured and adjusted properly.

Under no circumstances is Lectric eBikes responsible for any damage resulting from damaged, defective, or improperly secured parts. This includes, but is not limited to, damage to personal property, personal injury, or death.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with radio frequency exposure limits set forth by the FCC for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 5 mm between the device and the user or bystanders.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

