


# INSTRUCTION MANUAL

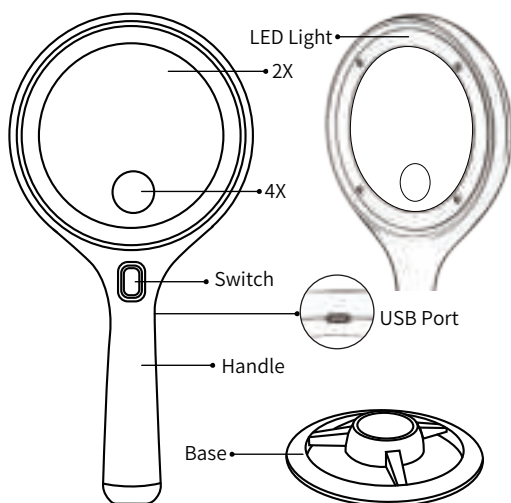

## Specifications:

Lens Diameter:	90MM
Magnification:	2X/4X
Material:	ABS
LED:	16PCS
Charge:	Under 5V 1.5A
Duration:	5 Hours
Battery:	1200mAh Lithium Battery

## How to charge:

1. Plug the micro USB end of the cable into the Micro USB port on the magnifier
2. Plug the USB end of the cable into a USB adapter, power bank, computer, etc.
3. When the device begins to charge, the “Power” light on the handle will turn on. A red light indicates that the battery is currently charging and a green light indicates that the charging is complete.

## Accessories:

1. Magnifier
2. Manual
3. Cleaning Cloth
4. Type-C Cable

## Usage Method:



This handheld magnifier comes with three adjustable brightness levels.

1. Turn ON: touch power button once (maximum brightness)
2. Touch button again to switch to medium brightness (second setting)
3. Touch button again to switch to low brightness (third setting)
4. Touch the power button a fourth time to turn the light OFF

## Warnings:



1. Do not place the magnifying glass in direct sunlight. Reflection of direct sunlight by the glass could cause a fire.
2. Wipe the lens with the included cleaning cloth to prevent scratching.
3. Never use detergent, gasoline, furniture polish, paint thinner, or other chemicals to clean any part of the magnifying glass, as it will damage the lens.
4. The unit is not waterproof and should never be used in wet conditions.