edaiser

User Manual

for iPad 12.9-inch / 11-inch / 10.9-inch

CONTENTS

COMPATIBLE INFORMATION
SPECIFICATION & ACCESSORY INCLUDED
INSTALLATION 3
POWER SOURCES 4
LED INDICATOR
BLUETOOTH CONNECTION 6-7
KEYBOARD FUNCTION for iPad 11"/10.9"(P11 Plus)
KEYBOARD FUNCTION for iPad 12.9"(P129 Plus)
TRACKPAD & KEYBOARD FUNCTION 10-1
TROUBLE SHOOTING
WARRANTY & TECHNICAL SUPPORT

COMPATIBLE INFORMATION

Note: If compatibility information is updated without prior notice, You may refer to selling link or contact our seller on Amazon to confirm the latest compatitible information.



 Find your iPad model number in settings a, Go to iPad>>Settings>General>About b, >>Tap on the model number and a model of AXXXX will be appeared.

2. Find your iPad model number on the back of your iPad.

VERIFY YOUR IPAD IS FULLY MATCHED BEFORE INSTALLATION

Compatible for iPad Air 10.9-inch

iPad Air 10.9 inch 5th Generation 2022 (A2588、A2589、A2591) iPad Air 10.9 inch 4th Generation 2020 (A2324、A2325、A2072、A2316)

Compatible for iPad Pro 11-inch

iPad Pro 11 inch 4rd Generation 2022 (A2759、A2435、A2761、A2762) iPad Pro 11 inch 3rd Generation 2021 (A2377、A2459、A2301、A2460) iPad Pro 11 inch 2nd Generation 2020 (A2228、A2068、A2230、A2231) iPad Pro 11 inch 1st Generation 2018 (A1980、A2013、A1934、A1979)


Compatible for iPad Pro 12.9-inch

iPad Pro 12.9 inch 6th Generation 2022 (A2436、A2764、A2437、A2766) iPad Pro 12.9 inch 5th Generation 2021 (A2378、A2461、A2379、A2462) iPad Pro 12.9 inch 4th Generation 2020 (A2233、A2229、A2069、A2232) iPad Pro 12.9 inch 3rd Generation 2018 (A1876、A2014、A1895、A1983)


SPECIFICATION & ACCESSORY

- Bluetooth operating distance: 10 meters
- Modulation system: GFSK
- Power supply: DC 5V/9V Type-C Charging Port
- Rechargable battery:500mAh
- Standby time: 90 days
- Charging time: <3hours
- Working time: <5 hours(with backlight)<180hours (with backlight off)
- Works system: iPadOS (above14.6 above)

ACCESSORY INCLUDE

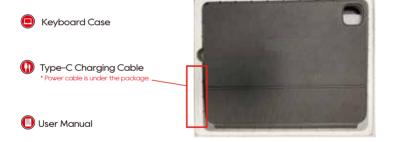

INSTALLATION



Important: Make sure the back of the iPad is fully attached to the magic cover before folding the cover down or the iPad maybe fall down.





POWER SOURCES



POWER SUPPLY

The keyboard case is charged by TYPE-C



POWER ON/OFF

for iPad Pro 12.9 (P129 Plus)

Holding press the power button (1) to turn on the iPad keyboard case. And the LED will be flashed by 3 times once turn it on or off (to press any keys to wake it up during standby mode)



POWER ON/OFF

for iPad Pro 11/iPad Air 10.9(P11 Plus)

Double -click(touch) to Power On or Off. (note: single touch time/click is 3 seconds) (the power button is a touch style)

*How to detect the battery level of the keyboard or ensure that the battery level has been successfully charged?

1. If the LED charging indicator lights up in red for a long time, it means that is charaina.

2. After the keyboard is successfully connected to the iPad. swipe right on the iPad home screen. The keyboard battery life is subjeted to the bluetooth icon, see jpg 1.



JPG1

LED INDICATOR

@ INDICATION FOR IPAD PRO 12.9 (P129 Plus)

MODEL NO: P129 Plus









LED BLUE

- LED Blue Flashing:Bluetooth is waiting for pairing
- LED Blue Lighting:Bluetooth is paired

LED RED

- LED Red Flashing: the battery is low
- LED Red Lighting: the battery is charging

LED GREEN


The battery is fully charged.

WHITE LIGHT

The light is on when the upper case is written,
 and the light is off when the lower case is written

@ INDICATION FOR IPAD PRO 11 & IPAD AIR 10.9 (P11 Plus)

MODEL NO: P11 Plus



• LED1

Blue Flashing: Bluetooth is waiting for pairing Blue Keep Lighting: Bluetooth is paired

IFD2

White: Caps mode is On/Off: Caps mode is Off


LED3

Red Flashing: Low-battery warning
Red Keep Lighting: Undering charging mode
Green: Battery is full charged

BLUETOOTH CONNECTION

NOTICE BEFORE CONNECTING:

- 1. Make sure your iPad ios system up to 14.6 or above
- 2. iPad Assistive Touch toggle function on (Setting/Accessibility/Touch/AssistiveTouch)

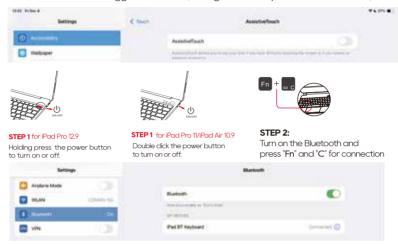

STEP 3:
Find the Pair name on your iPad Settiina - Bluetooth list: " iPad Keyboard "



STEP 4: Confirm the pairing request on your iPad.

BLUETOOTH CONNECTION

STEPS FOR CONNECTION: for iPad Pro 12.9 (P129 Plus)

- 1. Holding press the power button \bigcirc to turn on the iPad keyboard case. (The RGB backlight will turn on and then turn off automatically a second)
- 2. Then to press combination keys "Fn" and "C" together, blue wireless indicator will flash which shows the keyboard is waiting for pairing mode.
- 3. Turn on your iPad >>>Setting >>>Bluetooth, and search the "ipad-keyboard" on list, then tap it for connection.(device is connected when Bluetooth indicator stops flashing.)

STEPS FOR CONNECTION: for iPad Pro 11/iPad Air 10.9(P11 Plus)

- 1. Double click/touch the power button (1) to turn on the iPad keyboard case. (The RGB backlight will turn on and then turn off automatically a second).
- 2. Then to press combination keys "Fn" and "C" together, blue wireless indicator will flash which shows the keyboard is waiting for pairing mode.
- 3. Turn on your iPad >>>Setting >>>Bluetooth, and search the "ipad-keyboard" on list, then tap it for connection. (device is connected when Bluetooth indicator stops flashing).

*HOW TO DO IF THE KEYBOARD CAN'T CONNECT TO YOUR IPAD?

- 1. Make sure a keyboard has already paired via Bluetooth.
- 2. The Bluetooth keyboard is charged.
- 3. The Bluetooth keyboard is within 33 feet.
- 4. Please delete all devices on your iPad Bluetooth list, then restart your iPad Bluetooth and restart the keyboard.
- 5. Not compatible with multiple device connections, only supports one by one connection.
- 6. When the battery is low, the Bluetooth connection may be interrupted.
- 7. When the keyboard is turned on, if there is no signal input for more than 10 minutes, it will automatically enter sleep mode. At this time, you only need to double-click any button to re-active the keyboard again.

(do not need to turn on/off the power and reconnected again)

8. When reconnecting Bluetooth, the touchpad will a slight delay of about 3 seconds, which is normal, because the touchpad needs to retrieve Bluetooth and connect to it.

KEYBOARD FUNCTION for iPad 11"/10.9"(P11 Plus)

A FULL ROW OF HOTKEYS AND MEDIA KEYS

for iPad Pro 11/iPad Air 10.9(P11 Plus)



@ (b) ... (b)

Home	▶II Play/Pause
* Reduce iPad brightness	► Following song
☆ Increase iPad brightness	Mute
Q Search	Decrease the volume
Virtual keyboard	(1)) Increase the volume
Intelligent Voice	Lock screen key
✓ Previous song	

RGB BACKLIGHT:

- 1. 7 Backlight modes: Press fn + to switch 7 different backlight modes or turn off the RGB backlight.
- 2.3 Brightness backlight mode: press have brightness of the backlight or turn off the backlith

NOTE:

For power saving, if you don't touch keyboard for 5 seconds, the backlit would go off automatically, it will light up again when you press any key.

KEYBOARD FUNCTION for iPad 12.9"(P129 Plus)

A FULL ROW OF HOTKEYS AND MEDIA KEYS

for iPad Pro 12.9 (P129 Plus)



- * To type the character in below grey areal, hold shift and press the desired character
- * Long Hold-app specific shortcut shows up (e.g. when you are in an App, hold this key and you will see all the shortcuts that can be used in this App)

Home

- Following song
- * Reduce iPad brightness
- Mute
- ☼ Increase iPad brightness
- Decrease the volume

Virtual keyboard

- Increase the volume
- Screen capture key
- Brightness adjustable(backlit)
- Previous song
- Switch the backlit color

►II Play/Pause

() Switch

RGB BACKLIGHT:

- 1.7 Backlight modes: Press to switch 7 different backlight modes or turn off the RGB backlight.
- 2.3 Brightness backlight mode: press to adjust the brightness of the backlight or turn off the backlit.

NOTE:

For power saving, if you don't touch keyboard for 5 seconds, the backlit would go off automatically, it will light up again when you press any key.

TRACKPAD GESTURE DESCRIPTION

One Finger



Tap: Press with one finger until it feels a little bit. Tap and hold: Press and hold with one finger.



Open the Dock: Swipe the pointer across the bottom of the screen with one finger.

Go to the home screen: When the dock appears, swipe the pointer across the bottom of the screen again.



Open 'Notification Center': Move the pointer to the status icon in the upper left corner of the screen with one finger, then tap or swipe up again with one finger.

Open 'Control Center': Move the pointer to the status icon in the upper right corner of the screen with one finger, then tap or swipe up again with one finger.



Drag: Tap and hold the item, then slide your finger on the touch pad to move it.

Double Fingers



Auxiliary tap: Move the cursor to the APP icon with one finger, then tap or tap with two fingers to open the APP menu.



Scroll up or down: Swipe up or down with two fingers. Scroll left or right: Swipe left or right with two fingers.



Turn on the Today view: When the home screen or lock screen is visible, swipe right with two fingers.

Open search from the home screen:

Swipe down with two fingers.



Zoom: Place two fingers close together, spread to zoom in,or pinch to zoom out.

Three Fingers



Go to the home screen: Swipe up with three fingers



Open the APP switcher: Swipe up with three fingers, pause and then lift your finger



Switch between open apps! Swipe right with three fingers, then swipe left or right to switch.

Numeric Key Touchpad



Double clik the digtal power point: to switch the functions between touchpad / number pad.



Single click: to input Number

Notice

- 1. The numeric touchpad only can be used for digital input and can not be used as a calculator function.
- 2. The touchpad only can be working after keyboard connects to you ipad successfully.
- 3. If the model you purchased does not have digital numeric pad function, please ignore this part.

KEYBOARD FUNCTION

*How to updating your iPadOS to 14.6?

To upgrade your iPadOS to the leatest version:

- 1. Open your device's Settings > General > Software Update.
- 2. Tap Download and Install.* If you see Resume Download, tap that instead



*Be sure that touchpad can be used on your iPad as below steps:

- 1. After successful connect to Bluetooth, you need to complete below settings: Settings -> General -> Touchpad Tap to Tap / Two-finger assist point (open) Assistive Touch On.
- 2. Make sure your iPad Software Version is up to 14.6 or above version (device must support touch).
- Choose right "Keyboard" on your iPad General/Keyboard/Keyboards/English (US)/QWERTY
- Sensitivity setting: Settings General-Touchpad-Trackingspeed (adjust to appropriate speed)
- 5. Press combination keys Fn + T to turn On and Off the touchpad function.
- 6. After successfully turn on the touchpad, when moving the touchpad with your hand you will see a cursor appear on the iPad screen.
- The shortcut gestures are based on default setting. Kindly refer to our gesture instruction manual.
- 8. Kindly mind your hands on touchpad when typing, otherwise your cursor may move randomly. You can simply to turn it on or off.
- 9. When every time to connect the Bluetooth, the touchpad will a slight delay of about 3 seconds, which is normal, because the touchpad needs to retrieve Bluetooth and connect to it.

TROUBLESHOOTING

*You can adjust the cursor tracking speed as one of below settings:

 Settings/Accessibility/Touch/Assistive: Touch On the bottom of this page, you can adjust tracking sensitivity, cursor will be slower when it's closer to tortoise, and be more sensitive when it's close to the rabbit.

2. Settings/General/Trackpad&Mouse: You can adjust tracking sensitivity, cursor will be slower when it's closer to tartoise and be more sensitive when it's close to the rabbit

*How to confirm the keyboard need to be charged?

1. When the low battery indicator(red sign) blinks, please use the included TYPE-C cable with your iPad charger to recharge it. The red indicator stays on during recharging. After the charging completed, the green indicator would light up.

If you do not use the keyboard for a long time. Please recharge your keyboard in time (once of two months).

Note: Keep at normal temperature and charge atnormal voltage. If you don' tuse it for long time, you need to charge your keyboard in time (once of two months).

*How to do if those keys "U", "I", "O", "J", "K" and "L" can not be used normally?

 Go to iPad Settings/Accessibility/Touch/Accessive Touch / Mouse Keys, and then turn off the Mouse Keys

*How to press symbol buttons?

After bluetooth connected well , just press combination Keys: "Shift" and " any symbol ". For example, "Shift" and " @ " then you will get "@" on your iPad.

*Why i press A but get a Z

Go to seetings / keyboard/ Keyboards/English(US) /QWERTY.

TROUBLESHOOTING

*How to change between lowercase and uppercase on the keyboard?

- 1. The caps lock default function is switch languages. So to type capital letters on the keyboard, please turn off the cap lock default function first.
- 2. Go to your iPad settings—Keyboards setting—hard ware keyboard—turn off the toggle of switch languages using caps lock", then you can change between lowercase and uppercase by press the caps lock key.

*How to do if the space bar doesn't work?

- 1. You can try below settings firstly:
- Settings/Accessibility/Keyboards/Full KeyboardAccess/Commands/
- Then change settings for "Space" from "activate" to "Clear". If it comes back, then you can also turn Off Full KeyboardAccess.
- 3. Once it is cleared, the space bar would work fine.

*How to do if some keys don't work?

Some of the keys do not work, please try to reset the keyboard by pressing and hold the combination key"L+S+Z" for 3s, you'll see the indicator flash once. It shows the keyboard has been reset. After resetting the keyboard, please pair the keyboard with your iPad again.

*If there is delay after you press keys, please kindly check one of iPad Settings as below:

Settings/Accessibility/Keyboards/Slow Keys Off.
Settings/Accessibility/Keyboards/Slow Keys On 0.1 Seconds.


* If there is repeated characters after you press certain key, please kindly check one of ipad Settings as below:

Settings/Accessibility/Keyboards/Key Repeat On 0.1 SecondsSettings/Accessibility/Keyboards/Key Repeat Off.T

TROUBLESHOOTING

*If you have unwanted auto-correction or punctuation, please follow these steps:

- 1. Open Settings app > General> Keyboard > Hardware Keyboard;
- 2. Toggle OFF Auto-Capitalization, Auto-Correction, and "." shortcut (Please refer to the picture below).

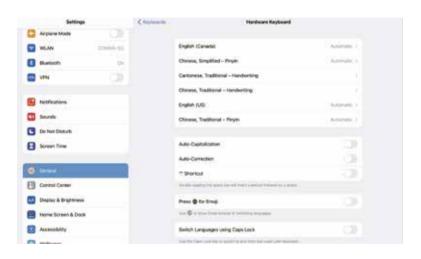

WARRANTY & TECHNICAL SUPPORT

Thanks for purchasing edaiser Magic Keyboard Case with trackpad series, each unit was manufactured and under strict quality control. Each products is covered by a one year warranty. If you have any questions about the product, please contact our brand support a support@edaiser.com. And you are most welcom to contact us for latest user manual. Thanks for your support always!

