


Bone Conduction Wireless Headphones

User Manual

H16

- Thank you for purchasing Krcong Bone Conduction Wireless headphones.
- Warning: Please make sure to follow the safety precautions for this and all electrical products, failure to do so and misuse may result in a fire or personal injury. This manual contains important information to prevent accidents.
- After reading the manual completely, please use the product correctly and keep the manual in a safe place for future reference.

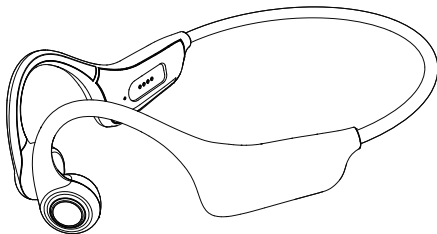


219-219044

HX210902025974

This product will not provide after-sales service outside the United States.
H16 Manual Version 1.03

1. Package List

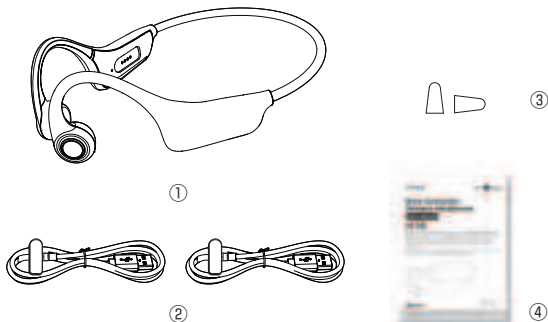

Please check the Package List first





Before use, please check that all the items in the package are included. If any of the components are damaged or missing, please contact the store where you purchased the product immediately.









Package List




① Bone conduction headphones	-----	1
② Charging cable	-----	2
③ Earplugs	-----	2
④ English manual	-----	1

2. Precautions

To avoid personal and property harm, please follow the precautions listed below for safe use and storage.

 Danger	
	Do not short the terminals of the power supply. Do not carry or store the power supply with small metal objects such as metal necklaces, keys, and coins.
	Do not heat it, place it on or near heat sources, and do not throw it in fire. Do not charge, use or place it at high temperature; doing so may cause overheating, ignition or explosion.
	Do not submerge it or use to charge when wet; to prevent risk of electrical shock never use in wet areas.

 Warning	
	Due to the influence of emitted sound waves, do not use while on an airplane or close to medical equipment.
	To prevent accidents when using it outdoors, please be aware of the surrounding traffic environment.
	Do not disassemble, tamper, or modify the unit.
	If you have a pacemaker, you must keep this device at a distance of more than 22 cm (8.66 inches) away from it.
	Never charge it with wet hands, to prevent electrical shock.
	Avoid throwing the device or hard impact to it.
	Always keep it out of the reach of infants and children as they may accidentally wrap the headphone cord around their neck or swallow the earpiece and cause suffocation.

 Note	
	Please use and store the device in a dry and dust-free environment.
	When using this product, do not turn up the volume too much. Long-term use at high volume may adversely affect hearing. To avoid the impact of an initial very high volume, switch the volume to low and gradually increase the volume to adjust as needed.

3. Bluetooth Wireless Technology and Specifications

What is Bluetooth


For computers, audio systems, digital cameras, etc., Bluetooth is a wireless technology for short-distance communication between digital devices, without having to use USB and/or audio cables; you can enjoy music and make calls through wireless communication up to a distance of about 10m (32.8 feet) between this device and the main source.

Specifications

Communication method	Bluetooth V5.0 (BK3288)
Built-in battery	Rechargeable lithium battery (3.7V 180mAh)
Impedance	8 Ω / 88dB
Model	Bone conduction
Maximum communication distance	The connectable distance is about 10 m (Class2)
Modulation method/frequency band	2.402--2.480MHz
Play frequency band	150Hz - 20KHz
Charging time	About 2 hours
Playable/Call time	Approximately 8 hours (35% volume)
Standby time	About 200 hours
Allowable working temperature/humidity	Temperature: 0-40°C Humidity: 20-80% (No condensation)
Waterproof performance	IPX7
Dimensions	Width 105mm x Height 42mm x Depth 142mm
Mass	About 33g
Accessories	Charging cable, earplugs, operating Instruction

4. Product Overview & Wearing Instructions

Product Overview

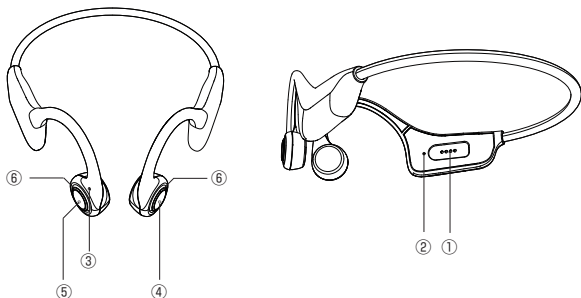

① Charging Interface

② LED Indicator

③ Microphone

④ Left Button

⑤ Right Button

⑥ Breathing Light


Wearing Instructions

- Refer to the picture on the right, place the bone conduction headset on the front of the ear and turn the hook back to wear it.
- This product comes with earplugs. If you are bothered by the surrounding sounds, use the earplugs as needed.




When using, twist the tip of the earplugs and insert into the ear canal.

Never place earplugs deep in the ear canal.

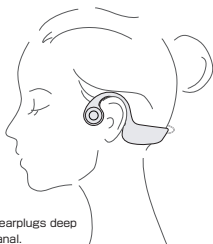

5. Operation

Turning on or off

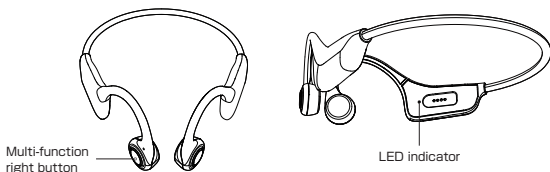

On

Press and hold the right button for 3 seconds to turn on main units.

The LED on the main unit flashes for 3 seconds in blue, then the LED on the main unit flashes alternately in red and blue, and you will hear a tone through the headphones[Power on], then the units is turned on.

Off

Press and hold the right button for 5 seconds to turn off main units.

When you want to turn off the device, press and hold the right button for 5 seconds, the LED on the main unit flashes in red and you will hear a tone through the headphones[Power off], then the units is turned off.

Breathing Light Mode

When Listening to music

The indicator light turns green when playing music.

When the music is paused, the light goes out.

When Calling

When you receive an incoming call, the indicator light flashes in green.

The indicator light turns green during the call.

How to turn on or off the breathing LED light

Press and hold the multi-function right button for 2 seconds to turn off/on the breathing LED light. When you restart the headphones, the Breathing LED will light up.

How To Pair (First Pairing)

Pairing is the operation of initially connecting this Bluetooth headset to a playback device (such as a mobile phone, etc.) via Bluetooth technology.

Please make sure to complete Bluetooth pairing before the first use.

- 1 The headset must be fully charged and disconnected from the power source. Prepare the headset and Bluetooth device.**
 - Do not place any obstacles between the two devices, and keep both devices at a maximum distance of 10m (approximately 32.8 feet).
 - Make sure that the Bluetooth device is turned on.
- 2 Long press the power button on the right for about 3 seconds.**
 - While the power is turned on, the LED indicator turns blue and hold for 3 seconds, then the red and blue LEDs flash alternately.
 - Enter search mode (search for available devices). In the search mode, The red and blue LEDs flash alternately and you will hear the [Pairing] tone through your headphones. Wait for the name H-16 to appear on your screen and follow the pairing steps.


3 Connect and pair

How to connect and pair

When the name H-16 of this product (headphone) is displayed on the Bluetooth device, select it and perform connection pairing.

Once successfully paired


The headset is ready to start playing when you hear the voice prompt [Connected].

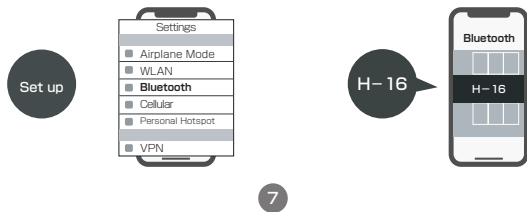

4 Note:

- Supportable configuration files: This main units supports Bluetooth standard Ver.5.0 (profile. HSP / HFP, A2DP, AVRCP).
- Some devices that support multiple configuration files require configuration file selection. In this case, please choose one of the files on the above. We cannot guarantee that the main units supports other configuration files other than the above files.
- When the units you are trying to connect to is performing Bluetooth communication with other peripheral units, it will not be able to pair with this unit. In this case, please disconnect from the other device before pairing with this unit.
- After adding it, if the connection is abnormal or cannot be connected normally during use, please try pairing it again.
- When a device that has been connected to a Bluetooth headphones before is turned on the Bluetooth function, the headphones will automatically connect to the previous device. But if you use a new device that was not connected to a Bluetooth headphones, please attempt to reconnecting the device with the operation instructions.
- If the headphones are connected to a device that you did not expect, please turn off the device or turn off the Bluetooth, and then try pairing it again.
- These units can pair up to 8 Bluetooth devices. After each connection, if you do not delete the connection record on the phone, it can connect automatically next time. However, when the wireless headphones have been connected to more than 8 Bluetooth devices, the earliest device of the eight will be forgotten to make room for newer devices.

Audio Control

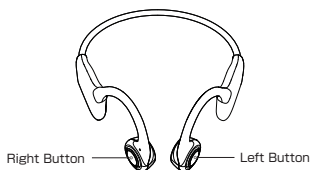


Listening to music	How to control
To play or pause a music track	Press once the left or right function key
To skip to the previous music track	Press the left function key 3 times consecutively
To skip to the next music track	Press the right function key 3 times consecutively
To increase the volume	Press the right function key twice consecutively
To decrease the volume	Press the left function key twice consecutively

Example: To increase the volume while listening to music or calling, press the function key twice consecutively. Please note that if the function key is not pressed rapidly twice the device will not adjust the volume as desired.

Calling

Calling	How to control
To answer an incoming call	When wearing your H16 headphones, press the button of either the left or right to answer a call.
To reject an incoming call	When wearing your H16 headphones, long press the button of either the left or right for 2 seconds.
To end a call	When wearing your H16 headphones, press the button of either the left or right to end a call.

Charging

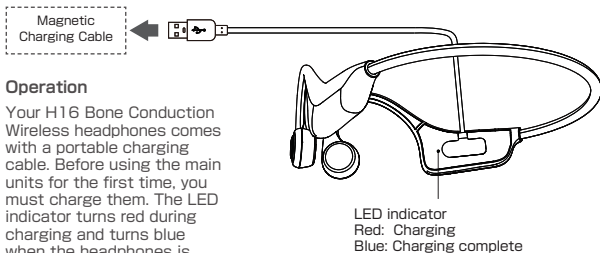

Operation

Your H16 Bone Conduction Wireless headphones comes with a portable charging cable. Before using the main units for the first time, you must charge them. The LED indicator turns red during charging and turns blue when the headphones is fully charged.

Note

- The maximum communication distance, charging time, playing/calling time and standby time are for reference only and may vary depending on use conditions.
- When using for the first time, please fully charge the battery before use.
- This product cannot be used while charging.
- Always use the included cable for charging. If it is connected through another charging cable, it will not charge correctly. Do not use the supplied charging cable with other devices.
- If the unit is connected to a computer, the computer will not be able to charge normally after it enters the power saving mode.
- When charging from a household power outlet, please use a USB charging AC power adapter (sold separately).
- If the battery is not used for a long time, the battery life may be shortened. After repeated charging and discharging several times, it can be fully charged.

Krcong Contact Information

If you have any questions or concerns about the product, please feel free to contact us via the information provided below.

Warranty and After-sales Service

The warranty period is one year from the date of purchase.

We make every effort to ensure the quality of our products, but if the product is damaged or defective, please contact us via email.

We will reply to you shortly, regarding the return/exchange procedure for your device.

➔ **US@krcong.com**

Krcong Contact Guide

In order to provide better after-sales support to customers who have purchased our products, please refer to the following webpage for details.

URL:

<http://www.krcong.com/>

User Manual English
**Bone Conduction
Wireless Headphones**

英語取扱説明書

For USA only
アメリカ国外でのアフターサービスは出
来ません。

➡ **US@krcong.com**

URL:
<http://www.krcong.com>



日本語取扱説明書

骨伝導イヤホン

User Manual Japanese

日本国外でのアフターサービスは出来ません。

For Japan only

➡ **JP@krcong.com**



携帯電話から

2 次元コードよりご確認ください。

パソコンから

<https://survey.zohopublic.com/zs/S4CNQT>

Krcong 公式サイト

<http://www.krcong.com>



Krcong の相談窓口のご案内

本機についてご不明な点や技術的なご質問、故障と思われるときのご相談については、下記のお問い合わせ先をご利用ください。

保証とアフターサービス

保証期間は、お買い上げ日より **1 年間** です。

商品の品質につきましては万全を期しておりますが、万一商品が破損・汚損していた場合、メールにてご連絡ください。

メールでのお問い合わせは

➡ **JP@krcong.com**

調子が悪いときはまずチェックを



携帯電話から

2 次元コードよりご確認ください。

パソコンから

<https://survey.zohopublic.com/zs/S4CNQT>

※本ウェブサイトのサービスは日本国内のみ対応しております。予告なく中止、または内容や条件を変更する場合があります。あらかじめご了承ください。


Krcong 公式サイト

Krcong は、製品をご購入いただいたお客様のサポートの充実を図るため、製品登録をお願いしております。詳しくはウェブ上の案内をご覧ください。

ホームページ

<http://www.krcong.com>

充電のしかた

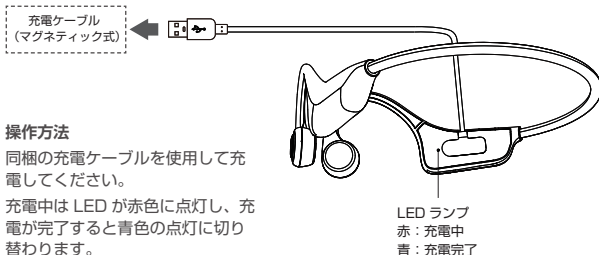

操作方法


同梱の充電ケーブルを使用して充電してください。

充電中は LED が赤色に点灯し、充電が完了すると青色の点灯に切り替わります。

ご注意

- 最大通信距離、充電時間、再生・通話可能時間、待受可能時間、はあくまで目安であり、使用状況によって異なります。
- はじめてお使いになる時は、十分に充電してからご使用ください。
- 充電中は本製品を使用できません。
- 充電には必ず付属の充電ケーブルをご使用ください。他の充電ケーブルなどを經由して接続すると、正しく充電されません。また、付属充電ケーブルは他の製品には使用しないでください。
- 本機とパソコンを接続中にパソコンが省電力モードになると、正しく充電されません。
- 家庭用コンセントで充電する場合は USB 充電 AC 電源アダプター（別売）をご利用ください。
- 長い間使わなかったときは、充電式電池の持続時間が短くなることがあります。何回か充放電を繰り返すと、十分に充電できるようになります。

オーディオコントロール

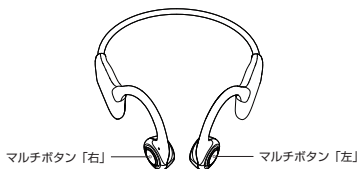

機能	操作方法
音楽再生 / 一時停止	マルチボタン「左」を 1 回押し / マルチボタン「右」を 1 回押し
前の曲にスキップ	音楽再生時にマルチボタン「左」を 3 回押し
次の曲にスキップ	音楽再生時にマルチボタン「右」を 3 回押し
音量 を上げる	音楽再生・通話時にマルチボタン「右」を 2 回押し
音量 を下げる	音楽再生・通話時にマルチボタン「左」を 2 回押し

着信・通話操作

機能	操作方法
電話に出る	着信時にマルチボタン「左」を 1 回押し / マルチボタン「右」を 1 回押し
通話を拒否する	着信時にマルチボタン「左」を 2 秒間長押し / マルチボタン「右」を 2 秒間長押し
電話に切る	通話時にマルチボタン「左」を 1 回押し / マルチボタン「右」を 1 回押し

4 ご注意

- 対応プロファイル：本機は Bluetooth 標準規格 Ver.5.0(プロファイル .HSP/HFP、A2DP、AVRCP) に対応しています。
- 複数のプロファイルに対応している機器の中には、プロファイルの選択が必要な機種もあります。その場合は、上記のいずれかを選択してください。上記以外のプロファイルでの動作は保証しかねます。
- 接続しようと思っている相手側機器が他の周辺機器と Bluetooth 通信を行なっているときは、本機とのペアリング操作ができないことがあります。その際は、他機との接続を解除したうえで本機とのペアリングを行なってください。
- 一度登録後、ご使用中に接続がうまく行かなくなったり、正常に動作しなくなったときは、ペアリング操作を再度行なってください。
- 最後に使用したペアリング済み相手側機器の電源が入っており、Bluetooth 機能も有効なときは、本機の電源を入れると自動的に接続されます。ただし、機種によってその都度接続操作が必要な場合は、機器付属の取扱説明書を参照し、本機との接続を確立してからお使いください。
- 意図しない機器と接続されてしまう場合は、その機器の電源を切るか Bluetooth 機能をオフにしてから操作をやり直してください。

ペアリング（初期登録）のしかた

ペアリングとは、本機をイヤホンとして使用する Bluetooth 機器（相手側機器：携帯電話やスマートフォンなど）に本機を初期登録する操作のことです。

はじめて使うときは必ずペアリングを行ってください。


- 1 本機の電源が切れていることを確認し、
手元に本機と Bluetooth 機器を用意します。
 - 両機器の間に障害物を置かず、10 m以内にしてください。
 - 相手側の Bluetooth 機器は電源が入った状態にします。
- 2 電源ボタンマルチボタン「右」を約 3 秒間長押しします。
 - 電源が入ります。青色の LED が 3 秒に点灯してから、赤色と青色の LED が交互に点滅します。
 - サーチモード（接続可能な相手側 機器を探している状態）になります。サーチモードでは、赤色と青色の LED が交互に点滅し、ヘッドホンから Paring「英語」音が聞こえます。
- 3 Bluetooth 機器側で本機を登録してください。

本機を登録する

お使いの Bluetooth 機器側で本機の名称「H-16」が表示されたら、それを選択して登録します。


本機との接続が完了すると

ヘッドホンから「Connected」音声案内し、本機を使用できる状態になります。

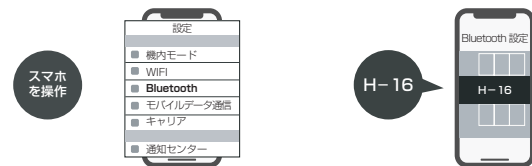

5. 操作

電源のオン / オフ

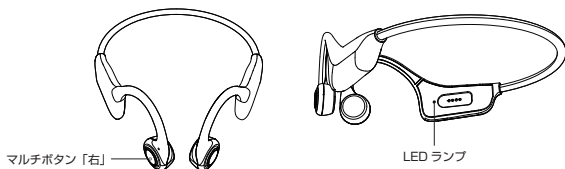

電源オン

マルチボタン「右」を 3 秒間長押し、電源が入ります。

青色の LED が 3 秒に点灯してから、赤色と青色の LED が交互に点滅します。

ヘッドホンから Power on「英語」音が聞こえます。

電源オフ

電源が入っているときに

マルチボタン「右」を 5 秒間長押し、電源が切れます。

LED が赤色点滅し、ヘッドホンから Power off「英語」音が聞こえます。

呼吸 LED ライト

音楽再生・停止モード

音楽再生ときに、ライトが緑に点灯します。

音楽停止ときに、ライトが消します。

着信・通話モード

着信ときに、ライトが緑に点滅します。

通話時に、ライトが緑に点灯します。


「呼吸 LED ライト」オフ / オン

マルチボタン「右」を 2 秒間長押しすると、呼吸 LED ライトがオフ / オンにします。

イヤホンを再起動するとき、呼吸 LED ライトがオンにします。


4. 各部の名称 & 装着方法

各部の名称

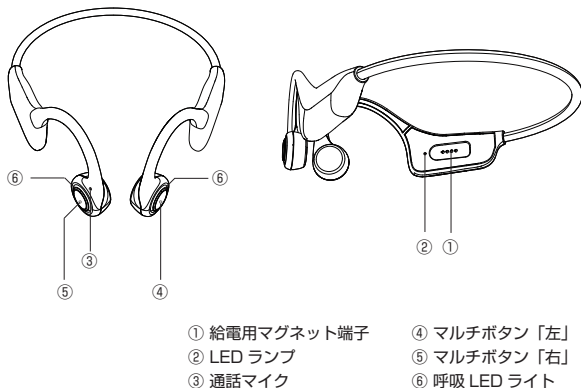

装着方法

右図を参照し、骨伝導イヤホンを耳の前方部分に当て、フックを後ろに回して装着してください。本製品は、耳栓が付属しています。周囲の音が気になる時は、必要に応じてお使いください。

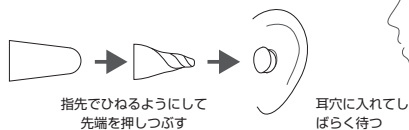

3. Bluetooth 無線技術 & 主な仕様

Bluetooth とは

Bluetooth は、パソコンやオーディオシステム、デジタルカメラなど、比較的距離の短いデジタル機器間で通信を行なう無線技術です。USB やオーディオケーブルで 2 つの機器間をつなぐ必要がなく、近距離（最大約 10m 以内）であれば、どこにいても無線通信により音楽や通話を楽しむことができます。

主な仕様

通信方式	Bluetooth V5.0 (BK3288)
内蔵バッテリー	充電式リチウム電池 (3.7V 180mAh)
インピーダンス	8 Ω / 88dB
型式	骨伝導
最大通信距離	見通し 約 10 m (Class2)
変調方式 / 周波数帯域	2.402---2.480MHz
再生周波数帯域	150Hz - 20KHz
充電時間	約 2 時間 (残量ゼロからフル充電まで)
再生・通話可能時間	約 8 時間 (35%音量)
待受可能時間	約 200 時間
許容動作温度 / 湿度	温度 : 0 ~ 40℃ 湿度 : 20 ~ 80% (結露なしにて)
防水性能	IPX7
外形寸法	幅 105mm x 高さ 42mm x 奥行 142mm
質量	約 33g
付属品	専用充電コード、耳栓、取扱説明書

仕様及び外観は改善のため予告なく変更することがあります。予めご了承ください。

2. 安全のために


お使いになる方や他の人への危害、財産への損害を未然に防止するため、必ずお守りいただくことを、次のように説明しています。記載している絵表示についての内容をよく理解してから本文をお読みになり、必ずお守りください。

⚠ 危険	
⊘	端子をショートさせない。 また金属制ネックレスやコインなどの金属小物と一緒に携帯または保管しない。
⊗	火の中に投入したり、加熱しない。 高温での充電・使用・放置をしない 発熱や発火、破裂の原因になります。
⊘	水没させない・濡れた状態で充電しない

⚠ 警告	
⊘	航空機内や医療機器の近くで使わない・電波の影で作動の原因になるおそれがあります。
⚠	屋外でご使用になる場所は、周囲の交通に十分注意する。
⊗	分解、改造しない。
❗	心臓ペースメーカーを使っているときは装着部位から22cm以上離す。
⊗	ぬれた手で充電を行わない。
⊘	強い衝撃を与えたり、投げつけたりしない。
⊘	幼児、子供の手の届く場所に置かない。 誤ってヘッドホンケーブルを首に巻き付け、窒息を起こす原因になります。 誤ってイヤークリップを飲み込む恐れがあります。

⚠ 注意	
⚠	湿気やほこりの少ない場所で使用・保管する
⚠	本製品を使用するときは、音量を上げすぎない。 耳を刺激するような大きな音量で長時間続けて使用すると、聴力に悪い影響を与えることがあります。 はじめてから音量が上げすぎると、突然大きな音が出て耳をいためることがあります。音量は徐々に上げましょう。

1. 梱包品の確認

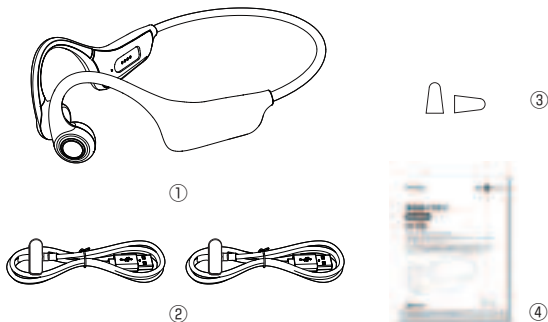

最初にご確認ください

お使いになる前に、セット内容がすべて揃っているかご確認ください。
万が一、開梱時に内容物の損傷や欠品などが発見された場合は、ただちにお買い上げになった販売店までご連絡ください。

パッケージ内容

① 骨伝導イヤホン本体	-----	1 台
② 専用充電ケーブル	-----	2 本
③ 耳栓	-----	2 個
④ 日本語取扱説明書	-----	1 冊

骨伝導イヤホン

取扱説明書

H16


お買い上げいただきありがとうございます。



警告

電気製品は安全のための注意事項を守らないと、火災や人身事故になることがあります。

この取扱説明書には、事故を防ぐための重要な注意事項と製品の取り扱いかたを示しています。**この取扱説明書をよくお読みのうえ、製品を安全にお使いください。**
お読みになったあとは、いつでも見られるところに必ず保管してください。

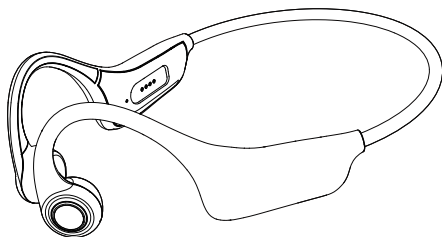

☎ 219-219044

📄 HX210902025974

この製品は日本国外でのアフターサービスは出来ません。
H16 Manual Version 1.03

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.