

Aton Remedy Kit

@cybex

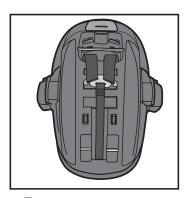

- 1. Turn seat over to access harness adjuster strap and splitter plate.
- 1. Turn seat over to access harness adjuster strap and splitter plate.

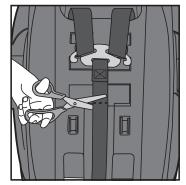


- 2. Cut the adjuster strap below splitter plate. Cut it in a straight line, and only cut once. Do not pull adjuster strap out of slot.
- 2. Cut the adjuster strap below splitter plate. Cut it in a straight line, and only cut once. Do not pull adjuster strap out of slot.




- 3. Remove harness straps from splitter plate.
- 3. Remove harness straps from splitter plate.




- 4. Attach new adjuster strap to the harness splitter plate, ensuring that tag faces seat.
- 4. Attach new adjuster strap to the harness splitter plate, ensuring that tag faces seat.

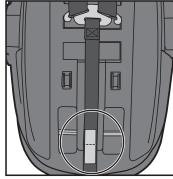


- 5. Tape new adjuster strap to original adjuster strap with supplied tape as shown. Press tape firmly in place. Do not let tape extend over the edge of strap.
- 5. Tape new adjuster strap to original adjuster strap with supplied tape as shown. Press tape firmly in place. Do not let tape extend over the edge of strap.

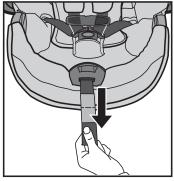


- 6. Pull adjuster strap through the harness adjuster slot. Pull until original strap is out and new strap is through the slot.
- 6. Pull adjuster strap through the harness adjuster slot. Pull until original strap is out and new strap is through the slot.

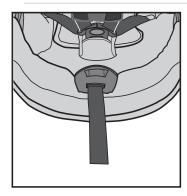

- 7. Remove original strap and tape, and discard.
- 7. Remove original strap and tape, and discard.

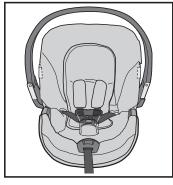

- 8. Seat is now ready to use.
- 8. Seat is now ready to use.

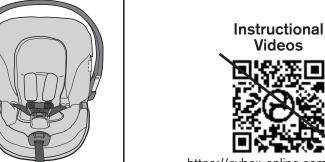

https://cybex-online.com/en-us/ safety-notice-and-recalls/sirona-m

> Cybex Customer Care: 1-877-242-5676

