



## IN CASE OF EMERGENCY

### SPECIAL FUNCTION

Display the emergency contact information. You can record 3 emergency contacts via the application



#### CAUTION

1. Please read the user manual carefully before first use and keep it properly for future references.
2. Only use included cable for charging.
3. Please don't leave the device charging alone.



- **FR:** L'équipement de marque Ice-Watch et de modèle KW205 satisfait aux exigences de la Directive européenne RED 2014/53/EU. Le document intégral est disponible à l'adresse [www.ice-watch.com](http://www.ice-watch.com)
- **EN:** The Ice-Watch equipment model KW205 complies with the requirements of the European Directive RED 2014/53/EU. The full document is available at [www.ice-watch.com](http://www.ice-watch.com)
- **NL:** De Ice-Watch apparatuur model KW205 voldoet aan de eisen van de Europese richtlijn RED 2014/53/EU. Het volledige document is beschikbaar op [www.ice-watch.com](http://www.ice-watch.com)
- **DE:** Die Ausrüstung der Marke Ice-Watch und des Modells KW205 erfüllt die Anforderungen der europäischen Richtlinie RED 2014/53/EU. Das vollständige Dokument ist unter [www.ice-watch.com](http://www.ice-watch.com) abrufbar.
- **SP:** El equipo Ice-Watch modelo KW205 cumple con los requisitos de la Directiva Europea RED 2014/53/UE. El documento completo está disponible en [www.ice-watch.com](http://www.ice-watch.com)
- **IT:** L'apparecchiatura Ice-Watch modello KW205 è conforme ai requisiti della direttiva europea RED 2014/53/UE. Il documento completo è disponibile su [www.ice-watch.com](http://www.ice-watch.com)
- **PT:** O equipamento Ice-Watch modelo KW205 está em conformidade com os requisitos da Directiva Europeia RED 2014/53/UE. O documento completo está disponível em [www.ice-watch.com](http://www.ice-watch.com)

### SAR/DAS:

- **FR:** Tête DAS : 0.01 W/Kg / Poignet DAS : 0.01 W/kg
- **EN:** Head SAR : 0.01 W/Kg / Wrist SAR : 0.01 W/kg
- **NL:** Hoofd SAR : 0.01 W/Kg / Pols SAR : 0.01 W/kg
- **DE:** Kopf SAR : 0.01 W/Kg / Handgelenk SAR : 0.01 W/kg
- **SP:** Cabeza SAR : 0.01 W/Kg / Muñeca SAR : 0.01 W/kg
- **IT:** Testa SAR : 0.01 W/Kg / Polso SAR : 0.01 W/kg
- **PT:** Cabeça SAR : 0.01 W/Kg / Pulso SAR : 0.01 W/kg



## Notes:

- The company reserves the right to modify the contents of this manual without any further notification. It is normal that some functions may vary in certain versions of software.
- Please charge this product with the cable that was supplied with it for at least 2 hours before you use it.
- Before you use the product, you need to connect to the APP to synchronize time and set your personal information.
- This product has an IP68 waterproof rating, but it is not suitable for deep sea diving. Hot water, tea and corrosive liquids could destroy the watch, so damage by these liquids will not be covered by the product warranty and free maintenance services.

## 1. HOW TO WEAR YOUR WATCH

Please wear the device on your wrist correctly, about one finger width from the carpal bone and adjust it to comfortable position. Below picture for reference.



Please wear the device a little tighter when you are using the heart rate monitor.



## 2. HOW TO DOWNLOAD & CONNECT TO APP

### a. Methods to download & install the APP.

Scan "ICE" QR code to download and install "ICE ONE" APP.



**OR** Find the QR code on the settings page. Turn on the watch, open "Settings > About > Download QR code", scan QR code to download and install the "ICE ONE" APP.



**OR** Search "ICE ONE" in App Store or Play Store to download and install the "ICE ONE" APP.

**b. Open "ICE ONE" APP and select «Add Device» on the device page, then follow the instructions on the screen.**



### c. How to connect to bluetooth call feature:

For most Android phones, once your watch has been correctly connected to the app, you will see a "PAIR" pop-up reminder. Choose to pair with "ICE 1.0\_CALL", then the connection will be finalized.

For all iOS mobile phones and some Android mobile phones, once your watch has been correctly connected to the app, you should go to the settings page of your mobile phone, search and select "ICE 1.0\_CALL" in the Bluetooth list and then click it to pair. The Bluetooth call feature can be used after your devices have been paired.




#### TIPS


1. Please upgrade the APP to the latest version to ensure the best experience.
2. It is recommended to use the watch with a mobile phone system running Android 5.0 or IOS 9.0 or above.
3. The first time you connect with an iPhone, the "Pair" reminder will pop-up. Click to pair so incoming calls and instant messages can come to your watch.
4. The first time you connect with an Android phone, a "Permissions" reminder will pop-up, please follow the guide and allow the required permissions to ensure all functions can work properly.
5. To successfully connect your watch and your phone, please turn on your mobile phone's Bluetooth, GPS and network connections.
6. If the device cannot be found or connected during use, please reset or turn off your watch and then try again.

### 3. OPERATING INSTRUCTIONS

**Shortcut page:** Slide down from the main page to get to the shortcut page.

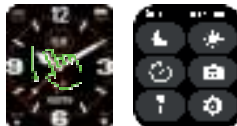

**Main Menu Page:** Slide up from the main page to access Main Menu List.

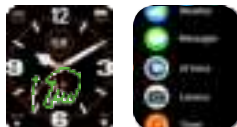

**Split-screen browser:** Slide right from the main page to enter into split-screen mode, press the side button or slide left to return to the main page.



**Add functions page:** Slide left from the main page to enter into Add components page. There are 7 components, click "+" to add components, keep your finger pressed on the screen to delete a component.



**Quick access to change the watch face:** Keep your finger pressed on the watch face for 3 seconds to enter the watch face interface. Then swipe left to switch the watch face, and click the face you want to select.



**Shut down:** Keep your finger pressed on the side button for 3 seconds to turn the watch off.



When you are using normal functions, press the side button to return to the previous function interface; when you are in the watch face interface, press the side button to turn the screen on/off.

#### 4. FUNCTIONS



**Sports:** Records the number of steps, distance covered and calories used in a day. More detailed information analysis and data records can be viewed in the APP.



**Bluetooth call:** Turn on the Bluetooth call function connection (see 2c How to connect to the Bluetooth call feature).  
**Recent calls:** Records your call history.  
**Dial keyboard:** You can enter a phone number via your watch.  
**Contacts:** Contacts can be added synchronously on the APP.



**Sleeping:** Your watch can record and display your total amount of sleep and the amount of deep sleep and light sleep that you had during the previous night. More detailed information analysis and data records can be viewed in the APP.



**Heart rate monitor:** Click the heart rate interface to measure your current heart rate. Turn on all-day heart rate measurement via the APP. According to the selected heart rate monitoring period, your watch can record and display your heart rate for 24 hours a day. More detailed information analysis and data records can be viewed in the APP. **(This information is for your reference only and cannot be used as a basis for medical decisions).**



**Blood pressure monitor:** Test your current blood pressure and record your last 7 blood pressure test results. More detailed information analysis and data records can be viewed in the APP. **(This information is for your reference only and cannot be used as a basis for medical decisions).**



**Blood oxygen monitor:** Test your current blood oxygen levels, record your last 7 blood oxygen test results. More detailed information analysis and data records can be viewed in the APP. **(This information is for your reference only and cannot be used as a basis for medical decisions).**



**Training:** Supports 100+ sports modes like walking, outdoor running, cycling, skipping, badminton, etc. More detailed information analysis and data records can be viewed in the APP.



**Weather:** Displays the current weather conditions and the weather for the next 5 days. Weather information needs to be connected in the APP before this data can be obtained. If the connection has been disconnected for a long time, this weather information will not be updated.



**Notifications:** Synchronize the information notifications from your phone and display your last 5 information notifications (for this you need to turn on «message notification» in the APP).



**AI voice assistant:** Click AI voice function button. Say the wake up word for your phone's AI voice assistant (for example, the wake-up word for iPhone is "Hey Siri"). Please make sure that the Bluetooth function has been successfully connected.



**Camera control:** After connecting to the APP, the watch can be used as a mobile phone camera remote control. First open the camera on the mobile APP, then click on the watch camera control page to trigger the mobile phone camera shutter.



**Timer:** You can select a timer period to count down from the displayed list.



**Breathing training:** You can choose the relaxation/sleep aid mode and carry out the corresponding breathing training.



**Alarm clock:** You can synchronize the alarm clock settings on the APP. You can turn on or off the alarm clock setting, and set up to 3 alarms.



**Music control:** After you have connected your watch to the APP, it can control the music play/pause/previous song /next song and volume adjustment functions on your phone.



**Stopwatch:** You can use this function to measure time.



**Torch:** You can illuminate your watch's screen to light up the area around you.



**Find phone:** You can check whether the connection between your phone and watch is successful.



**Settings:** Ring/Vibrate, Battery Saver, Phone, Call Reset, System (Reboot/Shut Down/Factory Reset) Display, Do not disturb and About.

## 5. OTHER FUNCTIONS

Pedometer, Calories, Sedentary behavior reminder, do not disturb mode, low battery reminder, incoming call reminder, shake to take photo, intelligent split-screen, watch face/customized watch face, 12/24h time system, unit setting, physiological cycle reminder, goal achievement reminder, games, etc.

## 6. LANGUAGES

English, French, Dutch, German, Spanish, Italian, Portuguese, Chinese.

## 7. CHARGING

1. Attach the charging cable to the watch charging port, make sure that the metal pins are completely connected.
2. Please use the correct charging adapters which are 5V, 0.5A.



If the smart watch cannot be turned on after being left unused for a long time, please clean the metal charging pins with dry cloth to make sure that they can connect properly.

## 8. WARRANTY

Each watch comes with a **2 YEAR LOCAL WARRANTY** against defects in materials and workmanship. This warranty covers all parts except the battery, the strap and the charging cable.

The following causes of defects are not covered by the free warranty service:

1. Personal assembly or disassembly.
2. Damage caused by the watch being dropped during use.
3. Any man-made damage or damage through the fault of a third party, improper use (such as: water in the smart watch, shattering due to external forces, scratching during use etc.)

Please provide the warranty card with all details filled in when you request aftersales services.

Please contact dealers directly for warranty services.


This limited warranty is void if the defect is discovered to be caused by abuse or tampering with the watch.



### TIPS

1. In order to ensure the waterproof performance of the product, do not open the back cover of the watch without authorization, and do not soak it in hot water, hot tea or any corrosive liquids.
2. This product contains a lithium battery, please make sure that you take it to a designated battery recycling point for product recycling.

**EXTRA  
BAND**

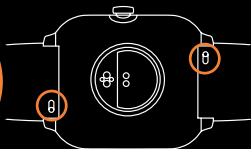

## **REPLACE THE STRAP**

Remove the strap from the watch by sliding the quick release on the strap.

## **REEMPLACER LE BRACELET**

Veuillez retirer le bracelet de la montre en faisant glisser l'attache située sur le bracelet.

## **AUSTAUSCH DES ARMBANDS**

Lösen Sie das Armband von der Uhr, indem Sie es am Schnellverschluss aus der Uhr schieben.

## **HET BANDJE VERVANGEN**

Verwijder het bandje van het horloge door het snelspanmechanisme op het bandje te verschuiven.

## **SUSTITUIR LA CORREA**

Para retirar la correa del reloj, deslice el abridor rápido de la misma.

## **SOSTITUIRE IL CINTURINO**

Rimuovere il cinturino dall'orologio facendo scorrere lo sgancio rapido sul cinturino.

## **SUBSTITUIR A BRACELETE**

Remova a bracelete do relógio deslizando a liberação rápida na bracelete.



\_\_\_\_\_ hereby declares and confirms that the smartwatch - model name KW205 – distributed by Ice-Watch under the ICE WATCH brand name (product name: ICE 1.0 / Model Name: KW205) is in conformity with the EU regulations under the diligence of Shenzhen BCTC Testing Co., Ltd testing laboratory.



**BCTC**



Object of the declaration: smartwatch

Model No: KW205

The object of the declaration described above is in conformity with the following Report Numbers:

- BCTC2209579117R\_RoHS\_CNAS
- BCTC2209515833S\_smart watch\_\_CE-RED\_EN62368\_CNAS
- BCTC2209326713C\_CE-RED
- BCTC2209326713-4E\_CE-RED EN300328 BLE 1M
- BCTC2209326713-3E\_CE-RED EN300328 BT 3M
- BCTC2209326713-2E\_CE-RED EN301489\_DC -17
- BCTC2209326713-1E\_CE-RED EN62479

Yours Sincerely,

Hong Kong, 2023/05/25





# EU DECLARATION OF CONFORMITY

Model Number: KW205

This declaration of conformity is issued under the sole responsibility of the manufacturer.

**Object of the declaration:** KW205 smartwatch (Product name: ICE 1.0 / model name: KW205)



The object of the declaration is in conformity with the relevant Union harmonisation legislation by Shenzhen BCTC Testing Co., Ltd testing laboratory:

- BCTC2209579117R\_RoHS\_CNAS → Approval Issued Date: 2022/09/19
- BCTC2209515833S\_smart watch\_\_CE-RED\_EN62368\_CNAS → Approval Issued Date: 2022/09/20
- BCTC2209326713C\_CE-RED → Approval Issued Date: 2022/09/20
- BCTC2209326713-4E\_CE-RED EN300328 BLE 1M → Approval Issued Date: 2022/09/20
- BCTC2209326713-3E\_CE-RED EN300328 BT 3M → Approval Issued Date: 2022/09/20
- BCTC2209326713-2E\_CE-RED EN301489\_DC -17 → Approval Issued Date: 2022/09/20
- BCTC2209326713-1E\_CE-RED EN62479 → Approval Issued Date: 2022/09/20