



Empowering you to work smarter

NAVAC Inc.
www.NavacGlobal.com

Tel/Fax: +1 877 MY-NAVAC
877 696 2822

MADE IN PRC

NX1


Nexus Digital Manifold Gauge
Quick Set Up Sheet

Step 1: Link NX1 with Temperature Probe



To pair the low-side temperature probe, press and hold **ENTER** + **▲** for 3 seconds.

To pair the high-side temperature probe, press and hold **ENTER** + **▼** for 3 seconds.

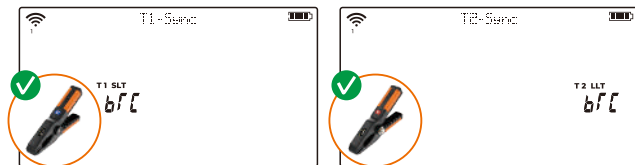

NST1 Successfully Connected

NST2 Successfully Connected

Step 2: Link NX1 with Vacuum Gauge

To pair the vacuum gauge, click "Mode" button to switch NX1 to Evacuation Mode, then press and hold **ENTER** + **▼** for 3 seconds.



NMV1S Successfully Connected


Step 3: Link NX1 with myNAVAC APP

Note: If you are using NX1 with a vacuum gauge and temperature probes, follow step one and two **before** connecting the NX1 to the APP.

- Turn on your mobile device's Bluetooth.
- Scan QR code or search for "myNAVAC" in the APP market and install the APP.
- Register and log in to access full APP features.



On the Device page, tap the plus button in the lower right corner to search available devices.

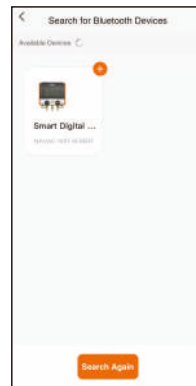

Find the NX1, and click the plus button in the upper right corner to link NX1 with myNAVAC APP.



Click the NX1 icon to enter the tool interface to explore various functionalities including pressure, temperature, and vacuum reading, Record, Device Description, and Test Reports.