

User Manual

for iPad 12.9-inch / 11-inch / 10.9-inch

MAGIC SERIES

CONTENTS

COMPATIBLE INFORMATION

.....1

SPECIFICATION & ACCESSORY INCLUDED

.....2

INSTALLATION

.....3

POWER SOURCES

.....4

LED INDICATOR

.....5

BLUETOOTH CONNECTION

.....6-7

KEYBOARD FUNCTION for iPad 11"/10.9"(P11)

.....8

KEYBOARD FUNCTION for iPad 12.9"(P129)

.....9

TRACKPAD & GESTURE DESCRIPTION

.....10-11

TROUBLE SHOOTING

.....12-14

WARRANTY & TECHNICAL SUPPORT

.....15

COMPATIBLE INFORMATION

VERIFY YOUR IPAD IS FULLY MATCHED BEFORE INSTALLATION

Compatible for iPad Air 10.9-inch

iPad Air 10.9 inch 5th Generation 2022 (A2588、A2589、A2591)

iPad Air 10.9 inch 4th Generation 2020 (A2324、A2325、A2072、A2316)

Compatible for iPad Pro 11-inch

iPad Pro 11 inch 4rd Generation 2022 (A2759、A2435、A2761、A2762)

iPad Pro 11 inch 3rd Generation 2021 (A2377、A2459、A2301、A2460)

iPad Pro 11 inch 2nd Generation 2020 (A2228、A2068、A2230、A2231)

iPad Pro 11 inch 1st Generation 2018 (A1980、A2013、A1934、A1979)

Compatible for iPad Pro 12.9-inch

iPad Pro 12.9 inch 6th Generation 2022 (A2436、A2764、A2437、A2766)

iPad Pro 12.9 inch 5th Generation 2021 (A2378、A2461、A2379、A2462)

iPad Pro 12.9 inch 4th Generation 2020 (A2233、A2229、A2069、A2232)

iPad Pro 12.9 inch 3rd Generation 2018 (A1876、A2014、A1895、A1983)

Note: If compatibility information is updated without prior notice, You may refer to [selling link](#) or contact our [seller](#) on Amazon to confirm the latest compatible information.



1. Find your iPad model number in settings
a, Go to iPad >> Settings > General > About
b, >> Tap on the model number and a model of AXXXX will be appeared.

2. Find your iPad model number on the back of your iPad.

SPECIFICATION & ACCESSORY

- Bluetooth operating distance: 10 meters
- Modulation system:GFSK
- Power supply: DC 5V/9V Type-C Charging Port
- Rechargeable battery:500mAh
- Standby time:90 days
- Charging time:<3hours
- Working time: <5 hours(with backlight)<180hours (with backlight off)
- Works system:iPadOS (above14.6 above)

ACCESSORY INCLUDE



Keyboard Case



Type-C Charging Cable


* Power cable is under the package.



User Manual




INSTALLATION

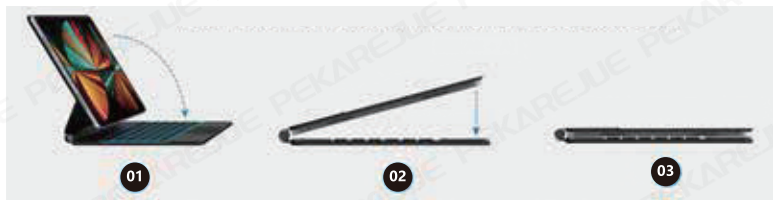

Important: Make sure the back of the iPad is fully attached to the magic cover before folding the cover down or the iPad may fall down.




POWER SOURCES

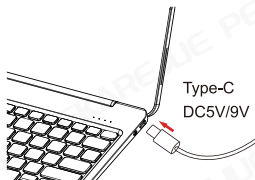

POWER SUPPLY

The keyboard case is charged by TYPE-C

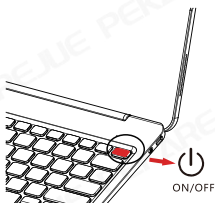

POWER ON/OFF

for iPad Pro 12.9 (P129)

Holding press the power button (⏻) to turn on the iPad keyboard case. And the LED will be flashed by 3 times once turn it on or off (to press any keys to wake it up during standby mode)



POWER ON/OFF

for iPad Pro 11/iPad Air 10.9(P11)

Double -click(touch) to Power On or Off.
(note:single touch time/click is 3 seconds)
(the power button is a touch style)

*How to detect the battery level of the keyboard or ensure that the battery level has been successfully charged?

1. If the LED charging indicator lights up in red for a long time, it means that is charging.
- 2.After the keyboard is successfully connected to the iPad. swipe right on the iPad home screen. The keyboard battery life is subjected to the bluetooth icon, see jpg 1.



JPG 1

LED INDICATOR

◀ INDICATION FOR IPAD PRO 12.9 (P129)

MODEL NO: P129



LED BLUE

- LED Blue Flashing: Bluetooth is waiting for pairing
- LED Blue Lighting: Bluetooth is paired



LED RED

- LED Red Flashing: the battery is low
- LED Red Lighting: the battery is charging



LED GREEN

- The battery is fully charged.




WHITE LIGHT

- The light is on when the upper case is written, and the light is off when the lower case is written

◀ INDICATION FOR IPAD PRO 11 & IPAD AIR 10.9 (P11)

MODEL NO: P11

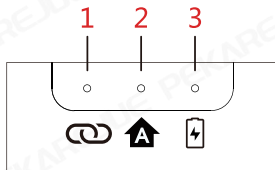

• LED1

Blue Flashing: Bluetooth is waiting for pairing
Blue Keep Lighting: Bluetooth is paired

• LED2

White: Caps mode is On/Off :Caps mode is Off

• LED3

Red Flashing: Low-battery warning
Red Keep Lighting: Under charging mode
Green: Battery is full charged

BLUETOOTH CONNECTION

NOTICE BEFORE CONNECTING :

1. Make sure your iPad ios system up to 14.6 or above
2. iPad Assistive Touch toggle function on. (Setting/Accessibility/Touch/AssistiveTouch.)



STEPS FOR CONNECTION: for iPad Pro 12.9 (P129)

1. Holding press the power button  to turn on the iPad keyboard case. (The RGB backlight will turn on and then turn off automatically a second)
2. Then to press combination keys "Fn" and "C" together, blue wireless indicator will flash which shows the keyboard is waiting for pairing mode.
3. Turn on your iPad >>>Setting >>>Bluetooth, and search the "ipad-keyboard" on list, then tap it for connection. (device is connected when Bluetooth indicator stops flashing)

STEPS FOR CONNECTION: for iPad Pro 11/iPad Air 10.9(P11)

1. Double click/touch the power button  to turn on the iPad keyboard case. (The RGB backlight will turn on and then turn off automatically a second).
2. Then to press combination keys "Fn" and "C" together, blue wireless indicator will flash which shows the keyboard is waiting for pairing mode.
3. Turn on your iPad >>>Setting >>>Bluetooth, and search the "ipad-keyboard" on list, then tap it for connection. (device is connected when Bluetooth indicator stops flashing).

NOTE:

1. When the keyboard is turned on, if there is no signal input for more than 10 minutes, it will automatically enter sleep mode. At this time, you only need to double-click any button to re-active the keyboard again.
(do not need to turn on/off the power and reconnected again)
2. When reconnecting Bluetooth, the touchpad will a slight delay of about 3 seconds, which is normal, because the touchpad needs to retrieve Bluetooth and connect to it.

BLUETOOTH CONNECTION



Power On /Off



STEP 1:

- for iPad Pro 12.9 (P129)

Holding press the power button to turn on or off.

- for iPad Pro 11/iPad Air 10.9(P11)

Double click the power button to turn on or off.

STEP 2:

Turn on the Bluetooth and press "Fn" and "C" for connection



STEP 3:

Find the Pair name on your iPad Setting - Bluetooth list: " iPad Keyboard "



STEP 4:


Confirm the pairing request on your iPad.

KEYBOARD FUNCTION for iPad 11"/10.9"(P11)

A FULL ROW OF HOTKEYS AND MEDIA KEYS


Function key: Press the FN + function key

for iPad Pro 11/iPad Air 10.9(P11)

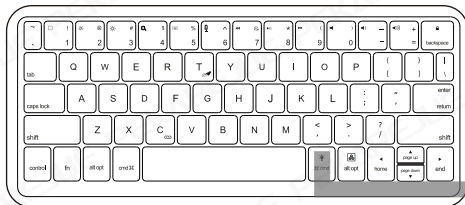

* To type the character in below grey areal, hold shift and press the desired character

* Long Hold-app specific shortcut shows up (e.g. when you are in an App, hold this key and you will see all the shortcuts that can be used in this App)

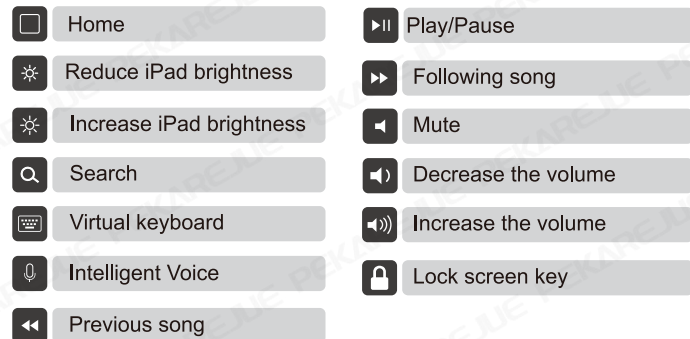

RGB BACKLIGHT:

1. 7 Backlight modes: Press **fn** + **alt opt** to switch 7 different backlight modes or turn off the RGB backlight.

2. 3 Brightness backlight mode : press **fn** + **3rd cmd** to adjust the brightness of the backlight or turn off the backlit.

NOTE:


For power saving, if you don't touch keyboard for 5 seconds, the backlit would go off automatically, it will light up again when you press any key.

KEYBOARD FUNCTION for iPad 12.9”(P129)

A FULL ROW OF HOTKEYS AND MEDIA KEYS

Function key: Press the FN + function key

for iPad Pro 12.9 (P129)

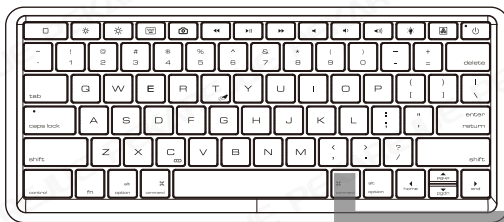

* To type the character in below grey areal, hold shift and press the desired character

* Long Hold-app specific shortcut shows up (e.g. when you are in an App, hold this key and you will see all the shortcuts that can be used in this App)



Home



Following song



Reduce iPad brightness



Mute



Increase iPad brightness



Decrease the volume



Virtual keyboard



Increase the volume



Screen capture key



Brightness adjustable(backlit)



Previous song



Switch the backlit color



Play/Pause



Switch

RGB BACKLIGHT:

1.7 Backlight modes: Press  to switch 7 different backlight modes or turn off the RGB backlight.

2. 3 Brightness backlight mode : press  to adjust the brightness of the backlight or turn off the backlit.

NOTE:

For power saving, if you don't touch keyboard for 5 seconds, the backlit would go off automatically, it will light up again when you press any key.

TRACKPAD GESTURE DESCRIPTION


One Finger




Tap: Press with one finger until it feels a little bit.
Tap and hold: Press and hold with one finger.



Open the Dock: Swipe the pointer across the bottom of the screen with one finger.
Go to the home screen: When the dock appears, swipe the pointer across the bottom of the screen again.



Open "Notification Center": Move the pointer to the status icon in the upper left corner of the screen with one finger, then tap or swipe up again with one finger.
Open "Control Center": Move the pointer to the status icon in the upper right corner of the screen with one finger, then tap or swipe up again with one finger.




Drag: Tap and hold the item, then slide your finger on the touch pad to move it.


Double Fingers



Auxiliary tap: Move the cursor to the APP icon with one finger, then tap or tap with two fingers to open the APP menu.



Scroll up or down: Swipe up or down with two fingers.
Scroll left or right: Swipe left or right with two fingers.



Turn on the Today view: When the home screen or lock screen is visible, swipe right with two fingers.
Open search from the home screen: Swipe down with two fingers.



Zoom: Place two fingers close together, spread to zoom in, or pinch to zoom out.


Three Fingers



Go to the home screen: Swipe up with three fingers



GOpen the APP switcher: Swipe up with three fingers, pause and then lift your finger



Switch between open apps: Swipe right with three fingers, then swipe left or right to switch.

BE SURE THAT TOUCHPAD CAN BE USED ON YOUR IPAD AS BELOW STEPS:

- 1.You need to complete below settings:Settings/Accessibility/Touch/AssistiveTouch/AssistiveTouch On
- 2.Make sure your iPad Software Version is up to 14.6 or above version.
- 3.Choose right "Keyboard" on your iPad
General/Keyboard/Keyboards/English(US)/QWERTY

KEYBOARD FUNCTION

*Touchpad /Gesture

1. Make sure the iPadOS operation system up to 14.6 and above.
2. Press **Fn** + **T** to turn on/off the touch function .
3. After successfully turn on the touchpad, when moving the touchpad with your hand, you will see a cursor appear on the iPad screen.
4. The shortcut gestures are based on default setting. Kindly refer to our gesture instructions manual.
5. Kindly mind your hands on touchpad when typing, otherwise your cursor may move randomly. you can simply to turn it on or off.
6. When every time to connect the Bluetooth, the touchpad will have a slight delay of about 3 seconds, which is normal, because the touchpad needs to retrieve Bluetooth and connect to it.

*You can adjust the cursor tracking speed as one of below settings:

1. Settings/Accessibility/Touch/Assistive: Touch On the bottom of this page, you can adjust tracking sensitivity, cursor will be slower when it's closer to tortoise, and be more sensitive when it's close to the rabbit.
2. Settings/General/Trackpad&Mouse: You can adjust tracking sensitivity, cursor will be slower when it's closer to tortoise and be more sensitive when it's close to the rabbit.

*How to updating your iPadOS to 14.6 ?

To upgrade your iPadOS to the latest version:

1. Open your device's Settings > General > Software Update.
2. Tap Download and Install. (If you see Resume Download, tap that instead)



TROUBLESHOOTING

***How to confirm the keyboard need to be charged?**

1. When the low battery indicator (red sign) blinks, please use the included TYPE-C cable with your iPad charger to recharge it. The red indicator stays on during recharging. After the charging completed, the green indicator would light up.
2. If you do not use the keyboard for a long time. Please recharge your keyboard in time (once of two months).

Note : Keep at normal temperature and charge at normal voltage . If you don't use it for long time, you need to charge your keyboard in time (once of two months).

***How to do if the keyboard can't connect to your iPad?**

1. Make sure a keyboard has already paired via Bluetooth.
2. The Bluetooth keyboard is charged.
3. The Bluetooth keyboard is within 33 feet.
4. Please delete all devices on your iPad Bluetooth list, then restart your iPad Bluetooth and restart the keyboard.
5. Not compatible with multiple device connections, only supports one by one connection.
6. When the battery is low, the Bluetooth connection may be interrupted.

***How to press symbol buttons ?**

After bluetooth connected well , just press combination Keys : "Shift" and " any symbol ". For example, "Shift" and " @ " then you will get "@" on your iPad.

***Why i press A but get a Z**

Go to settings / keyboard/ Keyboards/English(US) /QWERTY.

TROUBLESHOOTING

***How to change between lowercase and uppercase on the keyboard?**

1. The caps lock default function is switch languages. So to type capital letters on the keyboard, please turn off the cap lock default function first.
2. Go to your iPad settings--Keyboards setting-- hardware keyboard--turn off the toggle of switch languages using caps lock", then you can change between lowercase and uppercase by press the caps lock key.

***How to do if the space bar doesn't work?**

1. You can try below settings firstly:
Settings/Accessibility/Keyboards/Full KeyboardAccess/Commands/
2. Then change settings for "Space" from "activate" to "Clear". If it comes back, then you can also turn Off Full KeyboardAccess.
3. Once it is cleared, the space bar would work fine.

***How to do if some keys don't work?**

Some of the keys do not work, please try to reset the keyboard by pressing and hold the combination key "L+S+Z" for 3s, you'll see the indicator flash once. It shows the keyboard has been reset. After resetting the keyboard, please pair the keyboard with your iPad again.

***If there is delay after you press keys, please kindly check one of iPad Settings as below:**

Settings/Accessibility/Keyboards/Slow Keys Off.
Settings/Accessibility/Keyboards/Slow Keys On 0.1 Seconds.

*** If there is repeated characters after you press certain key, please kindly check one of iPad Settings as below:**

Settings/Accessibility/Keyboards/Key Repeat On 0.1
SecondsSettings/Accessibility/Keyboards/Key Repeat Off.T

TROUBLESHOOTING

***Be sure that touchpad can be used on your iPad as below steps:**

1.You need to complete below settings:

Settings/Accessibility/Touch/AssistiveTouch/AssistiveTouch On

2.Make sure your iPad Software Version is up to 14.6 or above version.


3.Choose right "Keyboard" on your iPad General/Keyboard/Keyboards/English(US)/QWERTY

***If you have unwanted auto-correction or punctuation, please follow these steps:**

1.Open Settings app > General> Keyboard > Hardware Keyboard;

2. Toggle OFF Auto-Capitalization, Auto-Correction, and "." shortcut

(Please refer to the picture below).

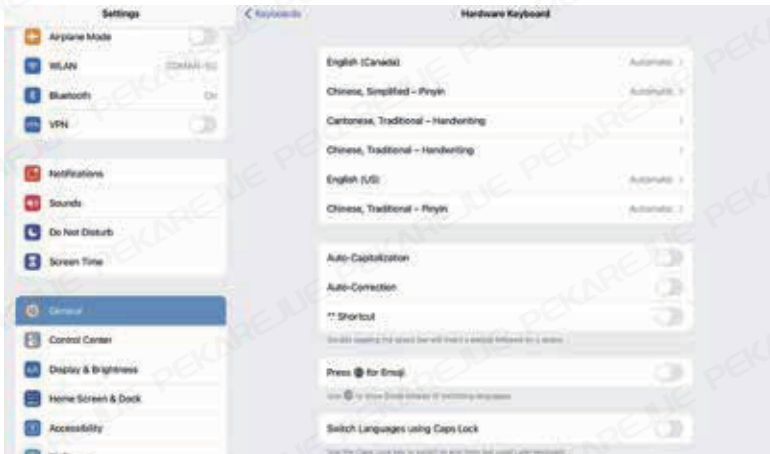

WARRANTY & TECHNICAL SUPPORT

Thanks for purchasing Magic Keyboard Case with trackpad series, each unit was manufactured and under strict quality control. Each products is covered by a one year warranty. If you have any questions about the product, please contact our brand support at info@pekarejue.com And you are most welcom to contact us for latest user manual. Thanks for yoursupport always!

Please contact our brand support at info@pekarejue.com

