


材质：128g双铜纸，双面黑白印刷, 风琴折
尺寸(Size): 264x88mm

front side
正面

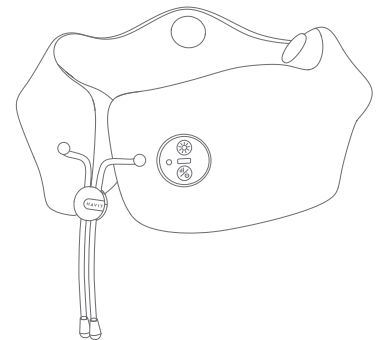


FS-N08 TRAVEL PILLOW
PRODUCT MANUAL

Sincerely thank you for choosing this product. Please read this manual carefully before use , please keep it for future reference.

PACKING LIST

- Travel Pillow*1
- User Manual*1
- Bag*1
- Type-C cable*1

PRODUCTION STRUCTURE

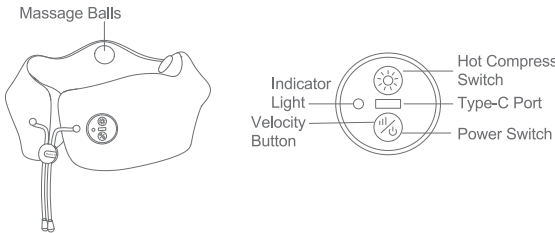

OPERATING INSTRUCTIONS

• Power Switch/Velocity Button

- Press the power button for 2 seconds to turn it on or off.
- The indicator light turns green after powering on.
- Short press the power button to switch the massage mode in the power-on state.
- Switching one mode at a time, with three modes to cycle through.

• Hot Compress Switch

- Short press the hot compress switch to turn it on or off in the power-on state.
 - Switching one mode at a time, with three modes to cycle through.
- Hot Compress Light Indicators:
Solid Green Light: Hot compress function off.
Solid Yellow light: First level of hot compress, temperature range: 42°C.
Solid Red light: Second level of hot compress, temperature range: 50°C.
When the green light is flashing, both vibration and hot compress are turned off, indicating that the machine is in standby mode.



back side
反面


CHARGING

This product adopts the charging port Type - C interface, support USB port.

- This product uses a built-in lithium battery. When battery is low, please charge it promptly.
- Use the included charging cable and insert it into the Type-C interface for charging [adapter needed].
- Charging takes about 3.5 hours. Unplug when fully charged.
- Do not use the product while charging.

Charging indicators:

Red light: Charging in progress.
Green light: Fully charged.

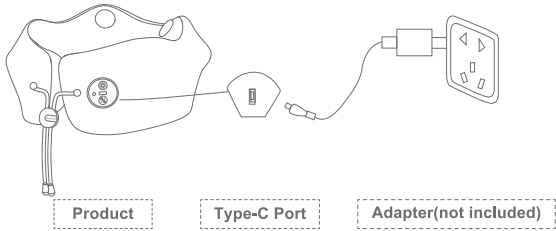

CLEANING

- Clean the surface with a dry cloth.
- Unplug during maintenance. Avoid wet hands to prevent shock.
- Don't use alcohol, gasoline, or perfume for cleaning.
- Don't use corrosive cleaners like benzene or thinner.

STORAGE

- Unplug and store in a dust-proof bag in a dry, ventilated place.
- Keep away from sharp objects and don't wrap the cord around the product.
- Regular charging extends battery life. Recharge after 3 months of storage.

IMPORTANT SAFETY NOTES

- Do not place the product in the bathroom or in a humid place.
- Do not leave the massager exposed to direct sunlight or high temperature for a long time.
- This product has a built-in lithium battery. Please dispose of this product accordance with the relevant environmental protection in the city.

SPECIFICATION

- Battery Capacity: 2000mAh
- Work Time: 2H (one cycle is 15mins)
- Input Voltage: 3.7V
- Temperature: 2 levels, 42°C and 55°C
- Rated Power: 8.14W
- Product Weight: 360g
- Charging Time: 3.5-4.5H
- Product Size: 230*220*136mm

COMMON PROBLEMS AND TREATMENT METHODS

Problem	Possible causes	Treatment methods
Fails to power on	Internal rechargeable battery is low	Charge
Can't charge	Charging port not connected	Check and reconnect
	Charging cable mismatch	Use the correct charging cable
Sudden stops during operation	The power is too low	Charge
	Product overheating protection	Restart after 5mins break

- If the product is faulty or unusable, turn it off and contact the seller for assistance.
- Do not dismantle or repair the product yourself. Otherwise, the warranty will be void, and the company will not be liable for any consequences.
- If the product is damaged due to improper use as per the instructions, the company will not be responsible.