



welcome to
i  mounts®

UNIVERSAL PHONE MOUNT
MOUNTS TO MOST FLAT SURFACES



WATCH THIS VIDEO




SCAN HERE



Learn how to adhere the
iOdisc™ correctly to guarantee
a wonderful experience.

[GETKLOCKED.COM/HOW-TO](https://getklocked.com/how-to)

iOmounts™ COMPONENTS

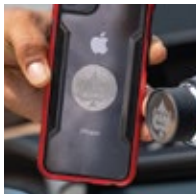

iOdisc™

KEEP EXTRAS ON HAND!

Once an iOdisc™ is adhered to a device, it can readily use the iOmounts system.



iOcore™

CUSTOMIZE YOUR LOOK

The magnetic iOcore™ (the powerhouse in this system) is available in multiple colors.

DEVICE TETHER

The Device Tether can be used with almost any smartphone to give an added sense of security and piece of mind when using or mounting your smart device.



Place tether tab through charging port.



Snap phone back in place in your case.




Attach lanyard to tether tab and GO!

INSTALLATION



When adhering the iOdisc™ allow adhesive to set at least 24 hours before attaching to iOcore.

For best results, let set 72 hours before first use.

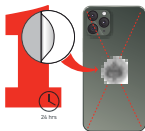

ADHERE

Clean the surface of your device case and allow to dry. Center the iOdisc™ on your case then apply with firm pressure to the case while on a flat surface and adhere.



INSTALL

ADHESIVE INSTALL

1. Choose a flat location to mount the 1 3/4" backing plate
2. Clean the surface with provided alcohol wipe
3. Insert square-head bolt into the backing plate
4. Tighten sphere onto the square-head bolt threads
5. Install VHB adhesive patch to back of plate
6. Remove adhesive backing and install assembled iOmount onto your previously chosen location

BOLT-ON INSTALL

1. Choose any desired mounting surface with a 1 7/8" diameter to fully support base of Semisphere.
2. Mark the center of desired mount point and drill a 1/4" hole to accommodate the supplied fastener.
3. Apply red thread locking agent to bolt threads and torque Semisphere to 120-150 in-lbs.



ATTACH

Once the iOdisc™ has cured for 24 hours, your device is ready to be attached to *any* iOmount®!

A FEW TIPS AND TRICKS...

- ➔ We do not recommend using full-size tablets or other larger devices on model-specific, nomad™, nomadXL™, or nomad+™ mounts.
- ➔ While a very strong 3M VHB adhesive is used, the iOdisc™ will not stick to all surfaces and materials. This includes rubber, silicone, soft-touch and other soft and/or textured surfaces.
- ➔ For best results, Klock Werks recommends the use of a smooth plastic, non-silicone case.
- ➔ Each iOdisc™ utilizes permanent adhesive and is very difficult to remove once applied. Klock Werks and/or iOmounts™ are not responsible for any damages caused by the removal of the iOdisc™.

WARNING: When riding or driving, please follow your state laws regarding device use.

QUESTIONS?

DON'T HESITATE TO REACH OUT

WEBSITE

GetKlocked.com

EMAIL

info@getklocked.com

CALL

(605) 996-3700



CONNECT TO EVEN MORE...

Connect to stands, wall
mounts, car mounts and more.

Find it all at:

GETKLOCKED.COM



SHARING IS CARING! LIKE, TAG OR SHARE.



#GETKLOCKED