



User Guide

Aeromattress

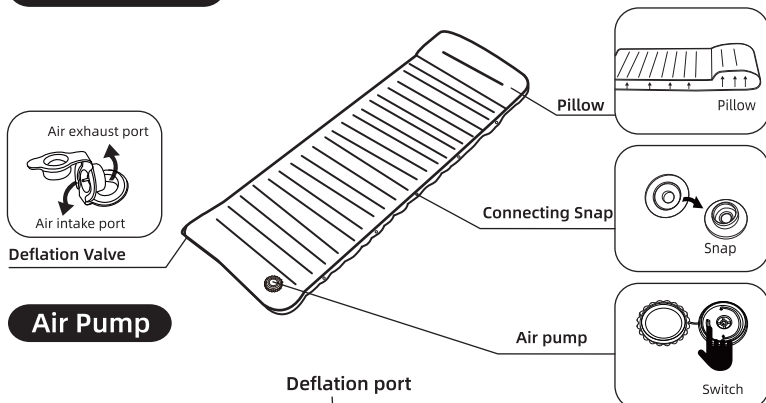

Air Pump

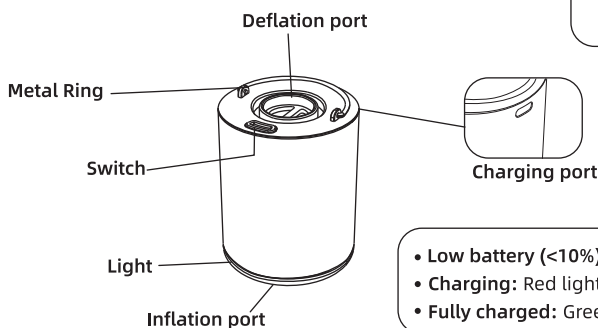


- **Low battery (<10%):** Red light flashing
- **Charging:** Red light stays on
- **Fully charged:** Green light stays on




Continuous use should not exceed ten minutes to prevent the air pump from overheating and damage.

Air Nozzle


(mm)




**Sharp
air nozzle**



**Rubber
air nozzle**



**Middle caliber
air nozzle**



**Large caliber
air nozzle**



**Vacuum
nozzle**

 Swimming Rings

 Air Mattress

 Air Mattress

 Air Mattress

 Inflatable Toys

 Air Pillow

 Air Bed

 Air Bed

 Vacuum Bag

Manual

- 1 Remove the Aeromattress from the storage bag and unfold it.



- 2 Tighten the deflation valve.




- 3 Open the sealing cap of the air pump.



- 4 Double-click the switch to start inflating the Aeromattress.



- 5 The Aeromattress will be fully inflated in 70 seconds.

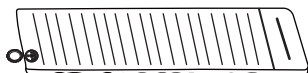


- 6 Press the air pump switch to stop inflating.



- 7 Twist close the sealing cap and the Aeromattress inflation is complete.



- 8 Start using the Aeromattress.

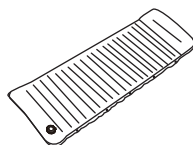


Convert to Double Size by Connecting


- 1 Position the two single mattresses side by side, aligning the pillows.



- 2 Fasten all the snap fasteners along the edges of the mattresses, a total of five.

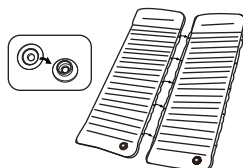


- 3 The conversion to a double mattress is now complete.

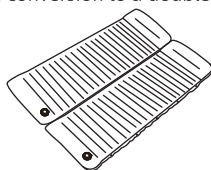

Storage

- ❶ Take out the air pump from the Aeromattress.

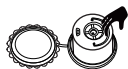

- ❷ Install the large nozzle on the deflation port of the air pump.



- ❸ Open the second layer of the deflation valve on the Aeromattress; it will start to deflate slowly automatically.



- ❹ Double-click the air pump switch to start the pump.



- ❺ Aim the nozzle of the air pump at the deflation valve; the pump will start to deflate the Aeromattress.




- ❻ Once the Aeromattress is completely deflated, unplug the air pump, press the switch to pause the pump.



- ❼ Place the pump to the compartment of the Aeromattress.




- ❽ Fold the Aeromattress inward along its length to create a long strip.

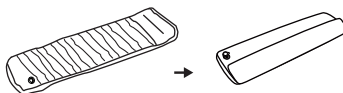


- ❾ Starting from the pillow end, roll the Aeromattress tightly into a cylindrical shape.



- ❿ Place the rolled Aeromattress into its storage bag.

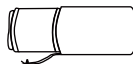

- ⓫ Put the air nozzle into the nozzle's bag and place it into the storage bag as well.



Repair Process



Please lay the product flat before attempting repairs (if you encounter difficulties, please contact customer service or visit the official website for guidance).

1. Clean the area around the hole.



2. Remove the repair patch.



About the Battery

- Please do not attempt to replace the battery yourself. If you suspect battery damage, contact the manufacturer's authorized dealer or a professional for replacement.

Battery Disposal Instructions:

Do not dispose of the battery with regular household waste. Take it to a nearby recycling center or service center for proper disposal.

The following instructions are not for general users, but for those responsible for the final disposal of the battery:

The built-in battery of this device contains chemicals that can pollute the environment. Before disposing of the product, please ensure to remove the battery from the device. The battery should be handed over to a professional battery recycling center for proper disposal.

Be Careful!

1. If the battery leaks or exudes any substance, make sure it does not come into contact with your eyes or skin.
2. If accidentally touched, wash your hands with clean water immediately and rinse your eyes. If discomfort persists, seek medical attention immediately.

Remove the Battery:

The information below is applicable only when discarding this product and is not for daily operational instructions! Only remove the battery when it is completely drained of power. Under no circumstances should the battery come into contact with metal objects.

Steps to Remove the Battery:

1. Run the product until it is completely out of power without connecting the battery.
2. Turn off the power switch.
3. Remove the product screws.
4. Take out the battery.

Attention

- When using outdoors, please clear the ground around the air mattress to prevent sharp stones, branches, glass shards, or other objects that could puncture the fabric. If cleaning is difficult, place a protective mat under the product.

Tips

- The fabric's elasticity means that it's normal for the air mattress to soften after being used for a while. Simply inflate it again using the air pump.
- If the mattress is accidentally punctured, use the supplied repair patch on the hole.
- Ensure the deflation valve and sealing cap of air pump is secured during inflation to prevent air leakage.
- When packing up the air mattress, take care to protect the air pump from impacts that could cause damage.

Warning

- Children under 12 should use the product under adult supervision.
- Please do not place the air pump in water or liquids.
- When inflating, do not insert fingers into the inflation port.
- Keep the inflation/deflation ports clean when the air pump is operating.

Basic Information

Brand: Aerogogo

Model: GM4-01

Brand Owner: Shanghai MicroNovelty Co., Ltd.

Brand Address: Room 102, Building 2, Lane 88, Shengrong Road, Pudong District, Shanghai, China

Website: www.aerogogo.com

Email: service@aerogogo.com

Manufacturer: Huzhou MicroNovelty Co., Ltd.

Manufacturer Address: Room B213, Building 3, No. 666, Qixing Road, Wuxing District, Huzhou City, Zhejiang Province, China

- If you have any after-sales issues, please contact the authorized dealer or the official customer service.

Weight: 1.25kg

Product Size: 196*64*9cm

Air Pillow Height: 18cm

Storage Size: Ø18cm*40cm

R-Value: 5

Material: TPU+Nylon

Air Pump Material: ABS+Silica Gel+TPU

Inflation/Deflation Pressure: 4kpa

Flow Rate: 200L/Min

Air Pump Power: 23.5W

Charging Port: Type C

Charging Time: 2.5 hours

Battery Capacity: 3.7V-1300mAh

Number of Uses after Full Charge: 6 times

Packing List: Aeromattress*1, Air Pump Kit*1, Storage Bag*1, Repair Patches*2

生产批号

DJ-2024.01.15