



Translation of the original operating instructions

Ecotec[®] E3000

Leak Detector

Catalog No.

530-001, 530-002, 530-101, 530-102, 530-103, 530-104

kina22en1-29-(2508)

From software version

V3.36



INFICON GmbH
Bonner Straße 498
50968 Cologne, Germany

Table of contents

1 About this Manual	6
1.1 Other associated documents.....	6
1.2 Explanation of warnings.....	6
1.3 Target group	6
2 Safety	7
2.1 Intended use	7
2.2 Owner requirements	7
2.3 Operator requirements	8
2.4 Dangers.....	8
3 Shipment, Transport, Storage	9
4 Description	10
4.1 Function and setup of the device	10
4.2 Basic unit.....	11
4.3 Sniffer line	14
4.4 Technical data	15
4.4.1 Mechanical data.....	15
4.4.2 Electrical data	15
4.4.3 Physical data	15
4.4.4 Ambient conditions	16
4.4.5 Factory settings	16
5 Installation.....	18
5.1 Setup	18
5.2 Connecting the sniffer line.....	19
5.2.1 Replacing the capillary filter of the sniffer probe.....	19
5.2.1.1 Replacing the plastic capillary filter with the metal capillary filter	20
5.2.1.2 Replacing the metal capillary filter with the plastic capillary filter	20
5.2.1.3 Install and remove water protection tip	20
5.2.2 Fasten holder for sniffer line	21
5.3 Connecting the ECO-Check calibrated leak	22
5.4 Connecting the external display unit to the Ecotec E3000RC	22
5.5 Connecting IC1000/BM1000.....	23
5.6 Connecting to the power supply system	23
5.6.1 Connecting to a PC	23
5.6.2 Connecting with a PLC	23
6 Operation	24
6.1 Switching on	24
6.2 Operating the device	25
6.2.1 Display and keys	25

6.2.1.1	Recurring function symbols.....	25
6.2.2	Measurement display elements	27
6.2.3	Operating elements and display on the sniffer handle	29
6.2.4	Special features of the Ecotec E3000RC	30
6.3	Basic settings.....	30
6.3.1	Miscellaneous.....	30
6.3.2	Audio settings.....	32
6.3.3	Display settings.....	33
6.3.3.1	Gas display handle.....	33
6.3.4	Vacuum & access control.....	34
6.3.5	Interfaces	35
6.4	Settings for the measurements	36
6.4.1	Selecting the gas, changing gas parameters, activating measurement.....	36
6.4.2	Calibrate	40
6.4.2.1	Internal calibration with ECO-Check.....	40
6.4.2.2	External calibration with external calibrated leak	41
6.4.3	Gas equivalent to helium and hydrogen, settings for diluted gas	42
6.4.4	Suppress interfering gases	44
6.4.5	Setting Custom Gas	46
6.4.6	Measure	47
6.4.6.1	Calling up information on the measurement	48
6.4.7	Measuring with I•Guide	49
6.4.7.1	Setting the I•Guide program.....	49
6.4.7.2	Starting the I•Guide program.....	51
6.5	Idle state (sleep).....	53
6.6	SERVICE	53
6.7	Retrieve information about the device.....	54
6.8	Special features of individual gases	58
6.9	Switch off	59
7	Warning and error messages.....	60
8	Maintenance	69
8.1	Calling up and managing maintenance information	69
8.2	Maintenance work	73
8.2.1	Maintenance plan.....	74
8.2.2	Replacing the air filter of the main unit.....	74
8.2.3	Replace operating fluid reservoir.	75
8.2.4	Replace mains fuses.	77
8.2.5	Replacing the filter inserts of the capillary filter and the water conservation tip.....	79
8.2.6	Replacing the sinter filter of the sniffer handle	80
9	Decommissioning	82
9.1	Disposing of the device.....	82

9.2 Returning the device for maintenance, repair or disposal.....	82
10 Appendix	84
10.1 Accessories	84
10.2 Gas library	85
10.3 Menu tree	93
10.4 CE Declaration of Conformity	96
Index	97

1 About this Manual

This document applies to the software version stated on the title page.

1.1 Other associated documents

Name	Document number
ECO-Check Installation Manual	liqa10
Interface description	kins22

1.2 Explanation of warnings



DANGER

Imminent hazard resulting in death or serious injuries



WARNING

Hazardous situation resulting in potential death or serious injuries



CAUTION

Hazardous situation resulting in minor injuries

NOTICE

Hazardous situation resulting in damage to property or the environment

1.3 Target group

These operating instructions are intended for the owner of the leak detection unit E3000 and for technically qualified personnel with experience in leak detection technology and integration of leak detection devices in leak detection systems.

2 Safety

2.1 Intended use

The device is a leak detector for sniffer leak detection. With the device you locate and quantify leaks on test objects. The device sniffs for light gases, refrigerants and natural gases. The test objects must contain the gas under overpressure. The outsides of the test objects are checked for escaping gas with a sniffer line (sniffing method). The sniffer line is available as an accessory, see "Accessories [► 84]".

- You must install, operate and service the device only in compliance with these operating instructions.
- Adhere to the restrictions of use, see "Technical data [► 15]".
- Only use the device away from areas with a risk of explosions.
- Do not suck up liquids with the instrument.
- Never hold the sniffer tip into liquids but sniff only for gases. To sniff test objects that have low surface moisture, such as condensation moisture, use the water protection tip.

Incorrect usage

2.2 Owner requirements

Safety-conscious operation

- Operate the device only when it is in technically perfect working order.
- Only use original parts or parts approved by the manufacturer.
- Keep this instruction manual available on site.
- Do not touch any live parts with the sniffer tip.
- Sniffing unspecified and aggressive gases.
- Only operate the device properly in accordance with this instruction manual, in a safety and risk conscious manner.
- Adhere to the following regulations and observe their compliance:
 - Intended use
 - General applicable safety and accident prevention regulations
 - International, national and local standards and guidelines
 - Additional device-related provisions and regulations

Personnel qualifications

- Allow only qualified service technicians to work with and on the device. The qualified service technicians must have received training on the device.
- Personnel to be trained must only work with and on the device under the supervision of trained, specialist technical personnel.
- Make sure that authorized personnel have read and understood the operating instructions and all other applicable documents, see "Other associated documents [► 6]," especially the information on safety, maintenance and repairs, before starting work.
- Regulate the responsibilities, authorizations and supervision of personnel.

2.3 Operator requirements

- Read, observe and follow the information in these operating instructions and the working instructions created by the owner, especially the safety instructions and warnings.
- Carry out any work only based on the complete operating instructions.
- If you have any questions regarding operating or maintenance that is not explained in this manual, then please contact INFICON customer services.

2.4 Dangers

	<p>The measuring instrument was built according to the state-of-the-art and the recognized safety regulations. Nevertheless, improper use may result in risk to life and limb on the part of the user or third parties, or damage to the instrument or other property may occur.</p>
<p>Danger due to use in EX/ATEX areas</p>	<p>If the workplace is classified as a hazardous area according to Ex/ATEX regulations it is mandatory to apply Ex/ATEX certified equipment.</p> <p>Ecotec E3000 including INFICON sniffer lines are not EX/ATEX certified.</p> <p>In risk-free areas and non-classified environments Ecotec E3000 can be safely used.</p> <p>The major risk associated with the leak detector is always the atmosphere around and inside the instrument enclosure and not the gas aspirated by the sniffer into the interior of the detector.</p>
<p>Dangers from electric power</p>	<p>The device is operated with electrical voltages of up to 236V. Touching parts where electrical voltage is present can result in death.</p> <ul style="list-style-type: none"> ▶ Disconnect the device from the power supply prior to any installation and maintenance work. Ensure that the electrical supply cannot be switched back on unintentionally. <p>Touching live parts with the sniffer tip can result in death.</p> <ul style="list-style-type: none"> ▶ Before starting the leak test, disconnect electrically operated test objects from the power supply. Ensure that the electrical supply cannot be switched back on unintentionally. <p>The device contains electric components that can be damaged from high electric voltage.</p> <ul style="list-style-type: none"> ▶ Before connecting the device to the power supply, make sure that the supply voltage specified on the device is the same as the local power supply.
<p>Hazards due to liquids and chemicals</p>	<p>Liquids and chemical substances can damage the instrument.</p> <ul style="list-style-type: none"> • Adhere to the restrictions of use, see "Technical data [▶ 15]." • Do not suck up liquids with the instrument. • Never try to find toxic, caustic, microbiological, explosive, radioactive or other harmful substances with the device. • You must not smoke near the device. Do not expose the instrument to a naked flame and avoid spark formation.
<p>Dangers from strong exposure to light</p>	<p>Exposure of the eyes to LED light can lead to lasting eye damage.</p> <ul style="list-style-type: none"> • Do not look into the LEDs of the sniffer handle from a short distance or for a longer period of time.

3 Shipment, Transport, Storage

Item	Quantity
Ecotec E3000 (basic unit)	1
Power supply cable, 3 m length	1
Fuses	80
Replacement air filter	1
8 mm Allen wrench	1
19 mm box wrench	1
Operating manual	1
Interface description	1

Table 1: Scope of delivery

- Check the scope of delivery of the product for completeness after receipt.

Must be ordered separately

- Sniffer lines with the desired length must be ordered separately,
- ECO-Check calibrated leak,
- for device version E3000RC: Display and connecting cable.

Accessory list: see "Accessories [► 84]."

Transport

NOTICE

Transport in unsuitable packaging material can damage the device. Parts inside the device can be damaged during transportation without transport restraint.

- Keep the original packaging.
- Transport the device only in the original packaging.
- Screw the transport restraint into the device floor before transportation, see "Setup [► 18]."

Always store the device in compliance with the technical data, see Technical data [► 15].

4 Description

4.1 Function and setup of the device

The Ecotec E3000 is comprised of main unit and sniffer line. The Ecotec E3000 can verify and quantify gases sucked in by the sniffer line with the help of a selective mass spectrometer.

Working in the Ecotec E3000:

- a Quadrupol mass spectrometer as a detection system
- a high-vacuum pump system
- an inlet system for the gas flow
- electrical and electronic sub-assemblies for electrical power supply and signal processing

The mass spectrometer works under high vacuum, i.e. the pressure in the mass spectrometer must always be below 10^{-4} mbar. This vacuum is created by the turbo molecular pump with the help of a diaphragm pump.

4.2 Basic unit

The main unit is only called a "device" in the following as long as the meaning remains clear.



Fig. 1: Ecotec E3000 Front view

1	Display	4	ECO-Check calibrated leak
2	Handles and ventilation openings	5	Lemo plug-in connector for sniffer line
3	Speaker		

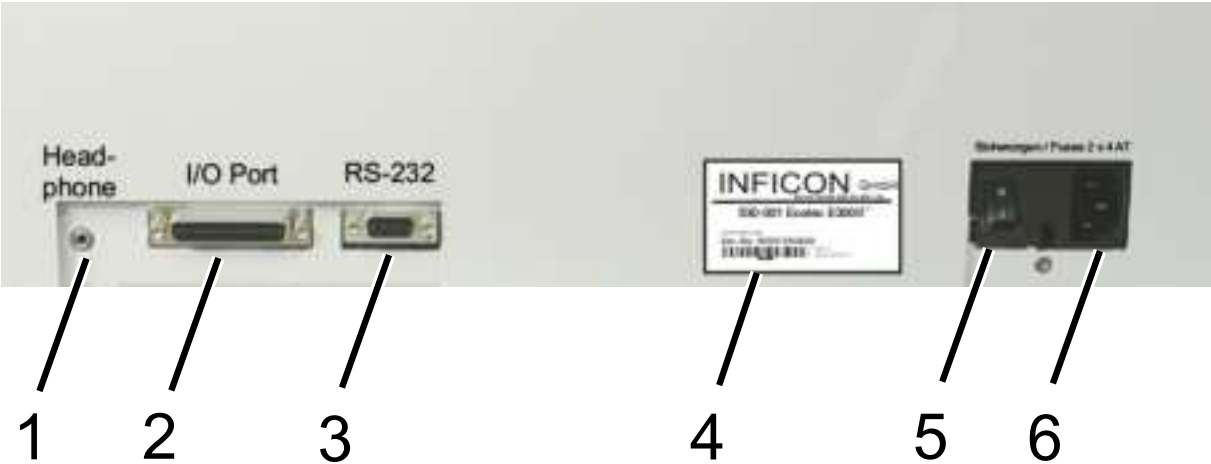


Fig. 2: Ecotec E3000 rear view

1	Headphones connection, 3.5 mm jack	4	Nameplate
2	Inputs/outputs (I/O port)	5	Power switch
3	RS-232 connection	6	Power supply

- 1 Headphones connection, 3.5 mm jack:
In order to better hear signals in a loud environment, you can connect headphones. The length of the cable must not exceed 3 m.
- 2 Inputs/outputs (I/O port):
The I/O port enables communication with a PLC. Some functions of the Ecotec E3000 can be controlled from the outside and measurement results and device states of the Ecotec E3000 can be transmitted to the outside. The length of the cable must not exceed 30 m.
Relay changeover contacts allow monitoring of the trigger values and the operating status of the Ecotec E3000. Please refer to the "Interface description Ecotec E3000" (doc. no. kins22e1) for further information.
- 3 RS-232 connection:
A PC can read out all data and measurement results of the device and control the device via the RS-232 connection. The length of the cable must not exceed 3 m. Please refer to the "Interface description Ecotec E3000" (doc. no. kins22e1) for further information.

4 Rating plate:
The rating plate contains the supply voltage specification and other information with which the device can be clearly identified.



Fig. 3: Nameplate of Ecotec E3000

1	Serial number	3	Production date
2	Supply voltage		

5 Power switch:
The power switch is used to switch the device on and off.

6 Power connection:
For information on the power connection as well as the labeling on the power connection (nameplate), see "Technical data [► 15]."

4.3 Sniffer line

You need a sniffer line to operate the device.

Sniffer lines are available in four lengths: 3 m, 5 m, 10 m and 15 m. The sniffer line consists of a hose (multifunction cable), a handle with controls (sniffer handle) and a sniffer tip.

There is a special sniffer line for robot applications, see "Accessories [► 84]."

Sniffer tip

There are rigid and flexible sniffer tips with different lengths.

Sniffer handle Display and functions

The display on the sniffer handle shows current information on the measuring process. You can operate functions frequently used during measurement with both buttons.

LEDs inserted in the handle illuminate the test area.



Fig. 4: Sniffer handle Display and functions

1	Display	4	I•Guide operation
2	LEDs	5	ZERO alignment
3	Speaker (rear)		

If the measuring value limit is exceeded, the display switches from green to red. You can additionally set one speaker in the handle to output a signal and the LEDs in the handle to flash or shine with maximum brightness, see "Basic settings [► 30]".

4.4 Technical data

4.4.1 Mechanical data

Ecotec E3000	
Dimensions (W x H x D)	610mm x 370mm x 265mm
Weight	34 kg

4.4.2 Electrical data

Ecotec E3000	
Mains voltages and mains frequencies	100 - 120 V \pm 10%, 50 / 60 Hz 207 - 236 V \pm 10%, 50 / 60 Hz
Power consumption	200 VA
Protection class	EN 60529 IP20 UL 50E type 1
Overvoltage category	II
Fuses	2 x 4 A slow-blow
Power supply cable	2.5 m
Noise level	< 54 dBA

4.4.3 Physical data

Ecotec E3000	
Minimum detectable leak rate	
R134a	0.05g/a (0.002 oz/yr)
R600a	0.05g/a (0.002 oz/yr)
Helium	< 1 x 10 ⁻⁶ mbar l/s
Measurement range	6 decades
Detectable masses	2 to 200 amu
Mass spectrometer	Quadrupole mass spectrometer
Ion source	2 cathodes
Time constant of the leak rate signal	< 1 s
Gas flow through the capillary measured at 1 atm (1013 mbar) at sea level. The flow rate changes with the geographical height and barometric pressure.	120 to 200 sccm
Time until ready for operation	< 2 min
Response time	
3 m sniffer line	0.7 seconds
5 m sniffer line	0.9 seconds
10 m sniffer line	1.4 seconds
15 m sniffer line	3.0 seconds

4.4.4 Ambient conditions

Ecotec E3000	
Permissible ambient temperature (during operation)	10 °C to 45 °C
Permissible storage temperature	-20 °C to 60 °C
Max. relative humidity up to 31 °C	80%
Max. relative humidity from 31 °C to 40 °C	Decreasing on linear basis from 80% to 50%
Max. relative humidity above 40 °C	50%
Degree of contamination	II
Max. altitude above sea level	2000 m

4.4.5 Factory settings

Ecotec E3000	
Alarm profile	Trigger alarm
Alarm delay	Deactivated
Number of measuring points (I•Guide)	4
Internal	Activated
Recording output	Activated
Auto	Auto
Baud rate and blank flange	9600 CR+LF
Pressure unit	mbar
Flow rate	
Lower limit	100 sccm
Upper limit	250 sccm
Sensitivity test	Activated
Gas, definition	Gas 1, gas 2, gas 3, gas 4, gas 5, gas 6
Device speaker	Activated
Handle speaker	Trigger value
Cathode Selection	A
I•Guide	Deactivated
Calibration (cal), internal	Activated
Contrast	Not inverted, setting 30
Volume	2
Minimum volume	2
Leak rate, selected, highest	Automatic
Leak rate filter	I-Filter
Menu PIN	Deactivated, 0000
Measurement time (I•Guide)	1 second
Measuring mass	69
Peak value	Deactivated, 5 seconds
ECO-Check	Activated

Ecotec E3000	
Relay outputs	see interface description
RS-232 protocol	ASCII
Sniffer tip, light	Activated, Level 4
Sniffer tip, filter, maintenance	100 hours
Recorder, gas	Auto
Scaling of the recorder	logarithmic
Language	English
PLC outputs and inputs	see interface description
Control location	Local and RS-232
Search level	90 %
Trigger value, sum (I•Guide)	10 g/a
Trigger and unit	4 g/a
Idle time (I•Guide)	3 seconds
Maintenance, sniffer tip filter	100 hours
ZERO time	5 seconds
ZERO button sniffer line	Activated
ZERO button basic unit	Activated

5 Installation

5.1 Setup

DANGER

Danger from moisture and electricity

Moisture entering the device can lead to personal injury due to electric shocks as well as damage to property due to short circuiting.

- ▶ Operate the Ecotec E3000 only in a dry environment.
 - ▶ Operate the Ecotec E3000 away from sources of liquid and moisture.
-

CAUTION

Danger due to dropping heavy loads

The device is heavy and can damage persons and items through tilting or dropping.

- ▶ Place the device only on a sufficiently sturdy surface.
-

NOTICE

Property damage due to vibration

Parts of the measurement technology rotate and must not be shaken. The parts continue to rotate for several minutes after the device is shut down.

- ▶ Place the device only on a sturdy, vibration-free surface.
 - ▶ The device must not be shaken during operation and at least five minutes after being switched off.
-

NOTICE

Property damage due to overheated device

The device heats up during operation and can overheat without sufficient ventilation.

- ▶ Observe the permissible operating or ambient temperature.
 - ▶ Ensure adequate ventilation. There must be 20 cm of free space on the upper side of the device above the ventilation opening.
 - ▶ The ventilation opening on the underside of the device must remain unobstructed.
 - ▶ Keep heat sources away from the device.
 - ▶ Do not expose the device to direct sunlight.
-

NOTICE**Property damage due to transport protection that has not been removed**

The transport restraint blocks the mechanical system in the device.

- Remove the transport restraint before start-up.

The transport protection is on the bottom of the Ecotec E3000 and consists of a black star screw.

- Unscrew the black transport protection before start-up.



5.2 Connecting the sniffer line

NOTICE**Material damage due to a missing sniffer line**

The device must not be operated without a connected sniffer line in order to avoid overpressure in pump and measurement system.

- Connect the sniffer line before you start up the device.
- Do not replace the sniffer line while the device is in operation.

Align the red marking on the sniffer line plug with the red marking on the socket. Push the sniffer line plug into the socket on the device until it locks into place.

Remove the plug by pulling the grooved ring on the plug. The ring opens the lock and you can now pull the plug out.

5.2.1 Replacing the capillary filter of the sniffer probe

The metal capillary filter is the standard filter. With the plastic capillary filter there is less danger of scratching the surfaces to be sniffed. The water conservation tip is used if there is a danger of suctioning in liquids.



Fig. 5: Capillary filter

1	Sniffer probe end	3	Metal capillary filter
---	-------------------	---	------------------------

2	cone seal	4	Plastic capillary filter
---	-----------	---	--------------------------

5.2.1.1 Replacing the plastic capillary filter with the metal capillary filter

- 1 Turn off the Ecotec E3000.
- 2 Unscrew the plastic capillary filter.
- 3 Insert the cone seal, see "Replacing the capillary filter of the sniffer probe [► 19]".
- 4 Screw in the metal capillary filter on the sniffer tip end.
- 5 Calibrate the Ecotec E3000, see "Calibrate [► 40]."

5.2.1.2 Replacing the metal capillary filter with the plastic capillary filter

If you want to switch from a capillary filter made of metal to a capillary filter made of plastic, you have to remove the cone seal. The cone seal sits on the steel capillary in the sniffer tip.

- 1 Turn off the Ecotec E3000.
- 2 Unscrew the filter.
- 3 Unscrew the two cross-head screws in the sniffer tip flange and take out the sniffer tip.
- 4 Push the capillary out of the plastic sheath a bit from the top with a narrow pin or a thin needle (about 0.5 mm). Make sure that the sinter filter in the sniffer tip flange does not get lost in doing so.
- 5 Remove the cone seal from the sniffer tip.
- 6 Put the sinter filter back in and tighten the sniffer tip on the handle.
- 7 Screw the plastic capillary filter on the sniffer tip.
- 8 Calibrate the Ecotec E3000, see "Calibrate [► 40]."



Fig. 6: Pushing out the capillary

5.2.1.3 Install and remove water protection tip

The water protection tip allows you to check test objects for leaks when they have a small amount of surface moisture e.g. condensation moisture.

NOTICE

Risk of short circuit

Sucked in liquid can destroy the device.

- Do not suck up liquids with the instrument.

The water protection tip is screwed onto the sniffer tip end like the metal capillary filter. The small cone seal must also be placed under the tip, see "Replacing the metal capillary filter with the plastic capillary filter [► 20]."



Fig. 7: Screw water protection tip on tight

To reinstall the plastic capillary filter, see "Replacing the metal capillary filter with the plastic capillary filter [► 20]."

5.2.2 Fasten holder for sniffer line



WARNING

Danger to pacemaker wearers from magnets

The function of a pacemaker can be influenced by the magnet on the back of the holder.

- ▶ If you wear a pacemaker, do not perform the installation yourself.
- ▶ If you wear a pacemaker, always maintain a distance of at least 10 cm from the holder when operating the device.

CAUTION

Risk of injury due to sniffer tip

If you trip and fall onto the sniffer tip, you could injure your eyes, for example.

- ▶ To prevent injuries caused by accidental contact with the sniffer tip, align the sniffer tip in the holder so that it points away from the operator when not in use.

A holder is available for the sniffer tip. The holder can be installed on the right or the left of the device.

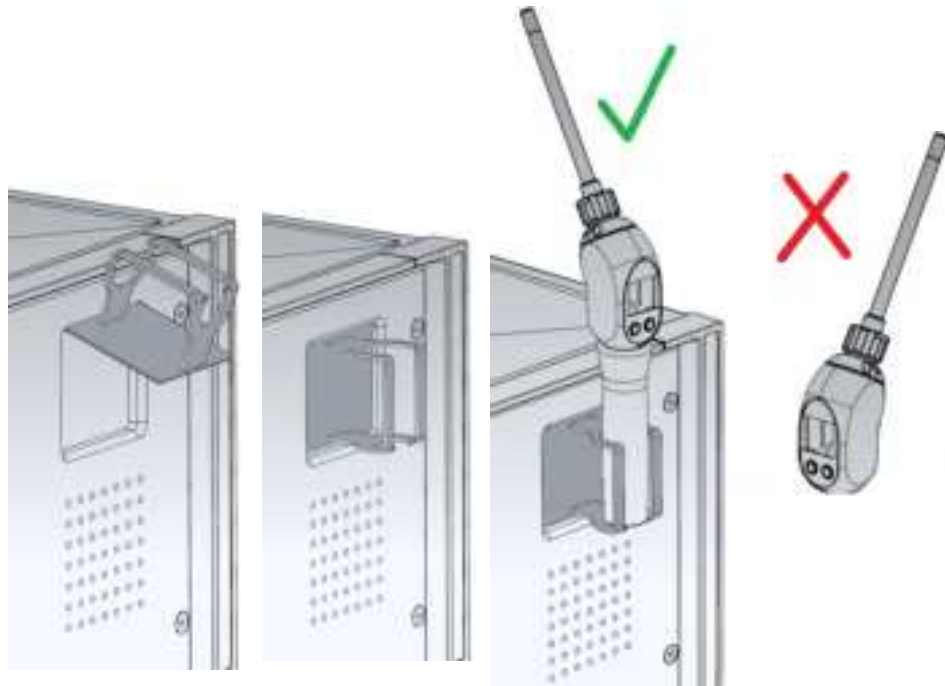


Fig. 8: Installation of sniffer line holder

- 1 Hang the holder with its hooks in the slots on the front of the device.
- 2 Press the holder against the front panel of the device.
⇒ The holder is pulled to the front panel of the device with a magnet on its rear.
- 3 When not in use, fix the sniffer line in the holder so that it points away from the operator.

5.3 Connecting the ECO-Check calibrated leak

A built-in calibrated leak (ECO-Check) and various external calibrated leaks are available as accessories for the Ecotec E3000, see "Accessories [► 84]." Please refer to the ECO-Check installation manual on how to connect the ECO-Check.

5.4 Connecting the external display unit to the Ecotec E3000RC

Connect the external display unit and the Ecotec E3000RC with the appropriate connecting cable. Secure the plug on the socket by tightening the screws.

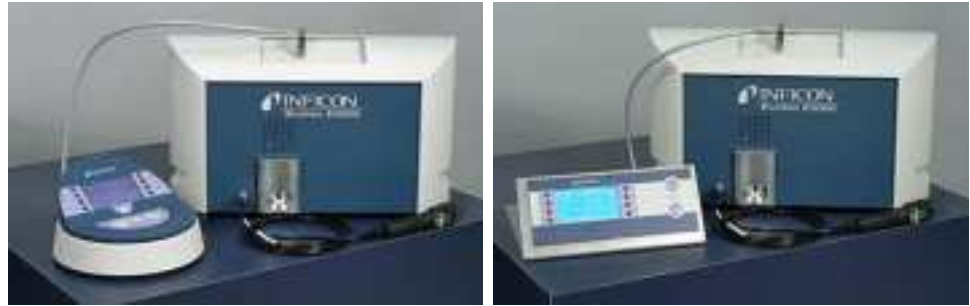


Fig. 9: Ecotec E3000RC with external display unit as a table device (left), for rack mounting (right)

5.5 Connecting IC1000/BM1000

An IC1000 and various bus modules are available as accessories for the Ecotec E3000, see "Accessories [► 84]."

Refer to the interface description for details on the connection.

Required settings:

- Control location: RS232 / local and RS232
- Protocol: LD
- Baud rate: 38400

5.6 Connecting to the power supply system

The supply voltage of the Ecotec E3000 is specified on the labeling of the mains plug (rating plate). The Ecotec E3000 cannot be switched for other supply voltages.



⚠ WARNING

Danger from electric shock

Improperly grounded or fused products may be dangerous to life in case of a fault. The use of the device is not permitted without a connected protective conductor.

- ▶ Only use the 3-wire power cord provided.
- ▶ Make sure that the power supply plug is always accessible.

Connect the device to the electric power supply using the supplied power cable.

5.6.1 Connecting to a PC

The connection is made with a commercially available 9-pin Sub-D plug. Please refer to the "Interface description Ecotec E3000" (doc. no. kins22e1) for further information on data exchange.

5.6.2 Connecting with a PLC

The connection is made with a commercially available 25-pin Sub-D plug. Please refer to the "Interface description Ecotec E3000" (doc. no. kins22e1) for further information on data exchange.

6 Operation

6.1 Switching on

Connect a sniffer line and switch on the device using the mains plug.

The Ecotec E3000 starts a self-test lasting several minutes. The display shows the heading "RUN-UP" and the individual steps of the self-test.

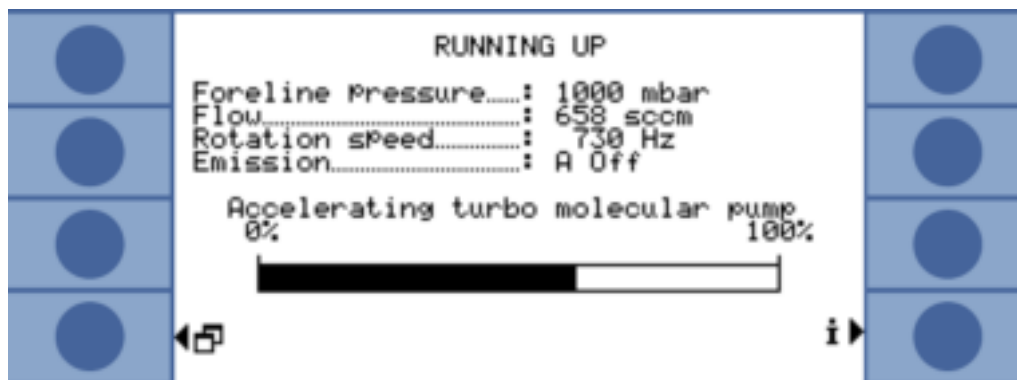


Fig. 10: The device starts up

After running up, the Ecotec E3000 already measures the gas concentration in the environment. There is no separate Start function. However, you still have to calibrate the device and make different settings for your intended measurement.

If the ECO-Check calibrated leak is not in the Ecotec E3000, an acoustic warning signal and the warning 71 are output during the first start-up.

To stop the alarm quickly, press the button on the bottom right (labeled "OK"). If you are working without the ECO-Check, you should deactivate the alarm permanently, see "Connecting the ECO-Check calibrated leak [► 22]".

6.2 Operating the device

6.2.1 Display and keys

All settings are made with the eight keys to the left and the right of the display. The function allocations of the keys change depending on the current operating step. The function allocation is shown directly next to the key which allows fast and purposeful operation after a short learning period.

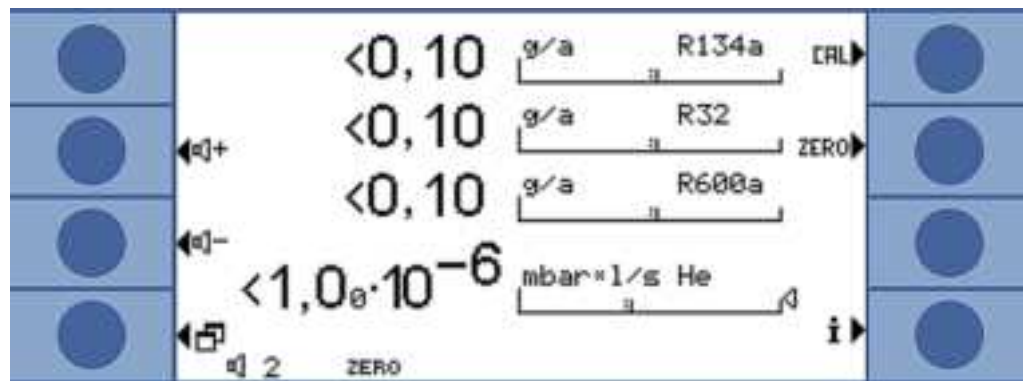


Fig. 11: Start display after the self-test

6.2.1.1 Recurring function symbols

The keys are always assigned with the following functions and labeled with the shown symbols.

	Setting the volume for speakers and head phones.
	Set volume: The set volume is displayed on the bottom edge of the display.
	Value range: 0 (off) to 10 (max.).
	Calls the main menu. Calls a window again that was closed with .
	Calling up calibration.
	The lower edge of the display shows "ZERO" if a ZERO point has been set since the device start-up.
	Calls up information Software version, operating hours, serial number, date and time, alarm profile.
	Back to last menu level.
	Navigates in a selection list.
	Pressing the key assigns the allocation "0" to that key and "1" to an adjacent key. The same setting option exists for the numbers "2/3", "4/5", "6/7", and "8/9".
	Closing the window and calling up the measurement view. Back to the window with .
	Measurement with I•Guide: Bring up list of I•Guide programs.



	Calling up help for the current function.
	Confirm an entry or selection.

Table 2: Function symbols

6.2.2 Measurement display elements

The measured leak rates are shown numerically and with logarithmically divided bar graph displays. The other elements of the measurement view are shown in the following Figure.

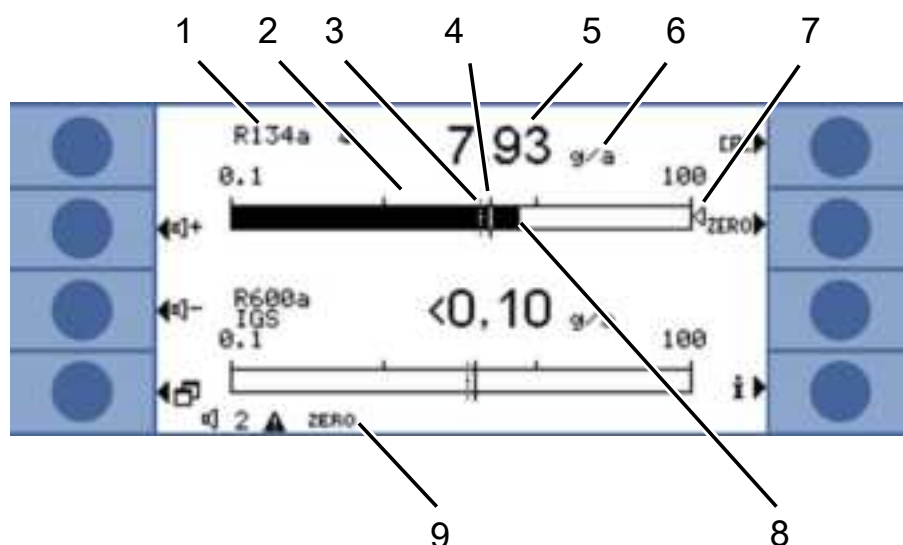



Fig. 12: Measurement display elements

1	Gas	5	Numerical leak rate display
2	Bell: Search threshold is exceeded	6	Leak rate unit
	Bell flashes: trigger value exceeded	7	Marker arrow: Marks the measurement displayed on the sniffer handle
3	Search threshold (broken line)	8	Bar graph, logarithmic
4	Trigger value	9	Status bar: Symbols and text overlay provide information about the device status

The two center buttons on the left side of the display can be used to adjust the volume of the alarm signal at any time. If one of the two buttons is pressed, the device emits a sound with the selected volume through the speaker and shows the setting with a bar graph in the status line. The set value is also the first entry in the status line on the bottom of the display and applies only to the speaker of the basic unit. To configure various alarm profiles, see "Audio settings [► 32]."

Menu button The button  at the lower left of the display has two functions:

- Calls the main menu.
- Back to last window that was closed with .

Calibration button (CAL)

The button on the top right next to the display can be used to start a calibration of the Ecotec E3000 with an external test leak at any time. For further information on performing an external calibration, see "External calibration with external calibrated leak [► 41]."

ZERO button

Pressing the ZERO button briefly stores the currently displayed leak rate as ZERO point for all selected refrigerants. Pressing the ZERO button for more than 2 seconds switches off the ZERO function. The display ZERO disappears from the status line in this case. For more information on the ZERO function, see "Operating elements and display on the sniffer handle [► 29]."

Information button	Pressing the information button i (to the bottom right of the display) shows information on the status of the Ecotec E3000. Details: See "Calling up information on the measurement [► 48]."
Status line	<p>Status information is displayed in the lower line of the measurement window. The set volume for the alarm is displayed in the left of the line.</p> <p>If the small speaker flashes, it indicates that the device speaker is switched off. If the number flashes, this indicates that the alarm delay is switched on, see "Miscellaneous [► 30]."</p> <p>A small black triangle with an exclamation point next to it can indicate an active warning.</p> <p>If the ZERO function is activated, the word "ZERO" follows in the status line.</p> <p>When the first cathode (Filament A) of the mass spectrometer is used up and the Ecotec E3000 automatically switches to the second cathode (Filament B), the display "Fil. B" appears in the status bar.</p> <p>If you working with an activated IGS, "IGS" will be shown in the status line.</p>

6.2.3 Operating elements and display on the sniffer handle

The display of the sniffer handle shows the most important information for the current measurement. Measurements can be controlled with the two buttons.

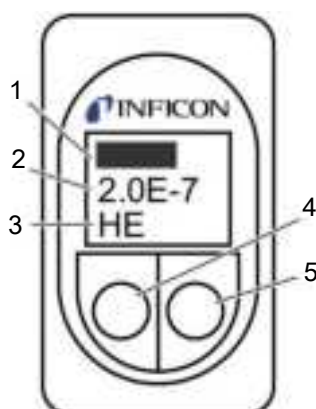


Fig. 13: Sniffer handle

1	Leak rate as bar graph	4	Left button, assigned "ZERO"
2	Leak rate, numerical. Unit, as shown on the basic unit	5	Right button, different assignments
3	Measured gas		

The measured leak rate is shown as an increasing or decreasing bar. The second line shows the leak rate as a numerical figure (with the same measurement unit as in the main display). The third line shows the abbreviation for the measured gas.

Depending on the measurement, the display can also show something else, e.g. "Error" or the number of a warning.

If you search for several gases simultaneously, you can switch between individual measurement results with the right button. The right button can also be used to confirm messages or states during a measurement cycle.

You can trigger the Zero function with the left key, see "Vacuum & access control [► 34]".

The button can be deactivated to prevent unintentional triggering: Press the button until a signal tone sounds. The button is reactivated by pressing it longer.

6.2.4 Special features of the Ecotec E3000RC

The Ecotec E3000RC has a connection panel for the external display unit instead of the built-in display. Two LEDs (to the left of the plug) provide information on the status of the Ecotec E3000RC, even if the external display unit is not connected.

The green LED shows that the Ecotec E3000RC is switched on. It has a steady green light if an external display is connected and flashes if no external display can be detected.

The red LED flashes in case of an error message; a steady red light indicates a warning.



Fig. 14: Connection panel with LEDs

If no display unit is connected, you can confirm error messages and warnings by pressing both buttons on the sniffer line simultaneously.

The external display unit has four buttons:

- The menu button opens the main menu.
- The current measured background value is set as the zero point with the ZERO button, see "Vacuum & access control [► 34]."
- The START/STOP buttons do not have any function (the external display unit can also be used with other leak detectors made by INFICON that require these buttons.)

6.3 Basic settings

Before making your first measurement, set the device using the following menu:

- Miscellaneous
- Display
- Audio
- Vacuum & access control
- Interfaces (for control via interfaces and if you use an ECO-Check)

You can access the menus via the main menu 

6.3.1 Miscellaneous

Language


You can select one of the following languages:

- English (factory setting)

- German
- French
- Italian
- Portuguese
- Spanish
- Japanese (Katakana)
- Chinese (Mandarin, simplified Chinese)

To set the language to English temporarily, press buttons two and six during the run-up of the Ecotec. Call up the language setting after the run-up and set the required language.

Date & time

- First page: Date in the DD.MM.YYYY format
- Second page (press button on the bottom right  time with the format SS:MM.

Sniffer light

- Activate/deactivate light
- Adjust brightness from 1 (min) to 6 (max)

Pressure unit

- atm
- Torr
- Pa
- mbar

Leak rate filter

- Auto
- Fixed
- I-Filter

The I-Filter is an intelligent filter algorithm that delivers the best results regarding interference suppression and stability of the leak rate signal. It was especially developed for the use in the Ecotec E3000.

Only in cases in which the older Ecotec II model was replaced with an Ecotec E3000 and the Ecotec E3000 is used in a fixed test device can it be necessary to select the older filter settings "Auto" or "Fixed."

Alarm delay

With very unstable surface conditions, it can be expedient to emit an acoustic alarm only if the trigger value is exceeded for a specified period of time. If the function is activated, the number indicating the volume of the device speaker flashes in the status bar.

Setting range: 0 to 9.9 seconds in steps of tenths of a second Although the alarm delay is activated, the device may not warn if it finds a leak. Proceed as follows to ensure that every test is successful.

- 1 Please note the measurement display in the device and the handle.
- 2 Deactivate the function when surface conditions are stable again.

Wake up

If the Ecotec E3000 is in an idle state (sleep), a time can be set for it to start automatically. This way you can set the Ecotec up to run through its warm-up phase already before the shift starts.

You can set a separate wake-up time exact to the minute for each day of the week.

To deactivate the wake up again, set the wake-up time to 00:00.

6.3.2 Audio settings

- Audio acknowledgment** You can switch off the signals that indicate the completion of specific functions.
- Device speaker** You can switch off the speaker installed in the basic unit. This does not influence the speaker connection.
- Handle speaker** You can choose whether the speaker in the sniffer handle should signal the exceedance of search threshold or trigger value.
You can also switch off the speaker completely.
- Alarm profile** You can assign one of three alarm profiles to the device speaker:
- Pinpoint
 - Setpoint
 - Trigger/alarm

	Alarm profile Pinpoint	Alarm profile Setpoint	Alarm profile Trigger / Alarm
Search value exceeded	-	Acoustic signal low frequency	Acoustic signal low frequency
Trigger value exceeded	-	Acoustic signal high frequency	Two-tone signal
Acoustic tracing of the measurement result	< 1/10 Trigger value: Low frequency	-	-
	>1/10 value of trigger to 10 x value of trigger: Rising frequency		
	> 10 x value of trigger: High frequency		
Comment	Recommended, for precise leak localization	-	Recommended, for precise leak localization This allows identification with a signal for devices that are used together.

Table 3: Features of the alarm profiles

- Volume** You can adjust the volume that cannot be set lower with the plus and minus buttons next to the display. This way you can prevent the acoustic signals from being switched off accidentally during the measurement.
- The adjustment applies to the speaker in the basic unit and the head phones. You can also set the current volume of speaker and head phones here.
- Setting range: 0 to 15

WARNING

Hearing damage from excessively loud signal tones

The volume of the signal tones can exceed 85 dB(A)

- Keep away from the device when setting high volumes.
- Wear ear protection when necessary.

6.3.3 Display settings

In the menu "Settings > Display", you can set the display details of the device display and the display in the sniffer handle.

Contrast

Increase or reduce the contrast of the display using the arrow keys. If you press and hold the buttons, the values change continuously. The setting is applied immediately to the display.

- To adjust the contrast of the currently displayed menu, select "Automatic".
- To set a dark background with light text, select "Invert display".

If the display is no longer legible because it is too dark or too bright, you can reset the setting as follows:

1. Switch the device off and back on.
2. Press keys 3 and 7 during the run-up until the display can be recognized again.
3. Call up the window for the contrast setting and confirm the new value. The device will otherwise use the old, unrecognizable setting after the next start-up.

Max. value

You can set if and how long the highest measures value is to be displayed additionally below the current leak rate.

Setting range: 0 to 20 seconds.

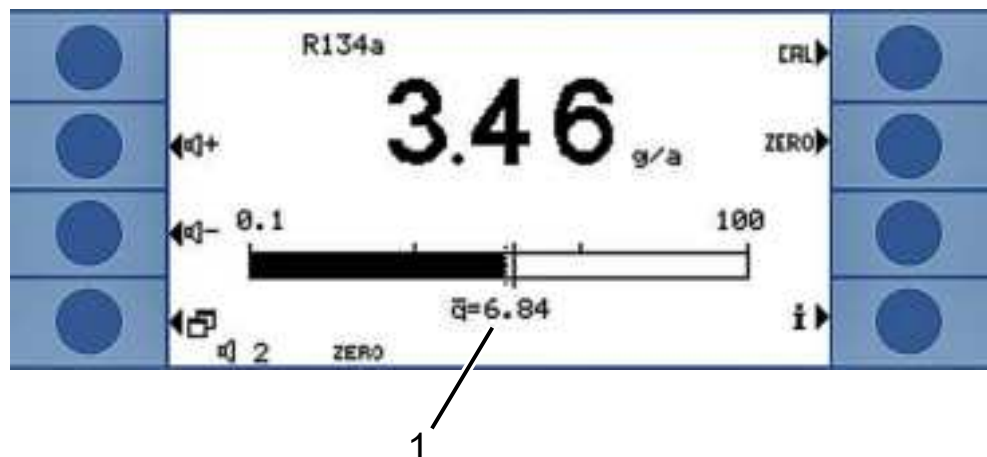


Fig. 15: Measurement view with maximum value display

1	Maximum value
---	---------------

6.3.3.1 Gas display handle

In the menu "Settings > Display > Gas display handle" you can define which gas is shown in the display in the sniffer handle.

Automatic

The display always shows the gas that the most of is measured currently. If a trigger value is exceeded, this gas will be displayed.

Manual

You can switch between gases with the right key on the handle.

Auto with hold

You can switch to another gas with the right key on the handle. After the hold time has elapsed, the display again shows the gas that the most of is measured currently.

Hold time

The hold time can be set to 5, 10, 15, or 20 seconds.

6.3.4 Vacuum & access control

ZERO

The gas concentration contained in the measurement environment can be set as ZERO point for measurement (background suppression). The function has the brief name "ZERO."

If the gas concentration drips after setting the ZERO point, a negative measured value should be displayed. In order to avoid that, the ZERO point is revised downward if the measured value is negative for the duration of the "ZERO time," see below.

The ZERO point is not automatically revised up(wards). It is therefore important to regularly reset the ZERO point.

The ZERO point can be set with the left button on the handle and with the "ZERO" button in the measurement view.

You can activate or deactivate the buttons here in this menu. Deactivation prevents the function from being triggered inadvertently and an incorrect absolute measured value from thus being displayed.

The button on the sniffer line handle can also be activated or deactivated by pressing the button longer.

ZERO time

ZERO time is the time during which the leak rate must be negative so that the ZERO point can be revised downward automatically. The best setting depends on your measurement conditions (sampling speed, gas background, test specimen).

Setting range: 1 to 9.9 s

Flow limits

To detect a leak on the 160-sccm capillary, an upper limit value is set. If the value is exceeded, the system issues the warning "Capillary broken". With longer exceedance, device components are also switched off to protect them.

To detect a clogging of the 160-sccm capillary, a lower limit value is set. If the value is fallen short of, the system issues the "Changed flow!" warning. With a strong lower deviation, the "Flow through capillary too low" error message is issued.

The adjustment range is 160 to 999 sccm or 0 to 160 sccm.

The closer the lower limit value is set to the actual flow rate, the more sensitive the Ecotec E3000 reacts to a beginning clogging of the filter and the sniffer line.

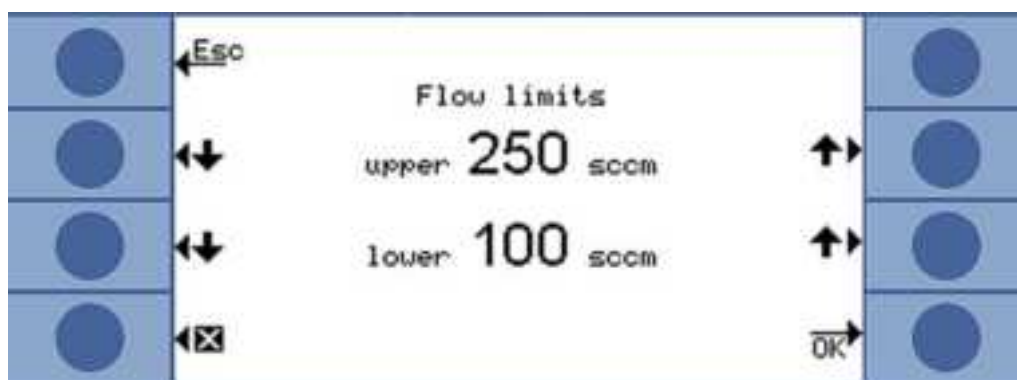


Fig. 16: Setting flow limits

The flow through the sniffer line depends on the atmospheric pressure of the environment. If you operate the device at great height, the flow rate through the sniffer line can drop considerably, approx. 20% per 1000 m height. Reset the flow limits accordingly in this case.

Sensitivity

The sensitivity monitoring in the device ensures that the sensitivity of the Ecotec E3000 is always sufficient. The entire gas flow from sniffer tip to sensor is monitored and the software simultaneously checks whether the Ecotec E3000 can

determine the correct signal strength with it. The monitoring ensures that the Ecotec E3000 does not become insensitive and that leaks are not detected without the user noticing. If the sensitivity is reduced, the "Sensitivity too low" error message is issued. Recalibration can restore sensitivity in this case, see "Calibrate [► 40]". The error message is repeated every 15 seconds until calibration is started.

monitoring



Fig. 17: monitoring

We urgently recommend leaving the monitoring switched on at all times. It should be deactivated only for measurements in an argon-free environment because monitoring requires the argon signal.

Automatic cathode

If the function is activated, the device switches over to the other cathode whenever the E3000 is switched on. This results in equal usage of both cathodes.

Calibration

In the "Calibration" window, you can activate or deactivate external calibration. This prevents a previously executed external calibration from being overwritten accidentally. For more information on calibration, see "Calibrate [► 40]".

Changing the menu PIN

You can protect access to the settings with a PIN.

To prevent entry errors, you have to enter the PIN twice. After confirmation with "OK," the main menu is displayed and the PIN is effective immediately.

To cancel protection again, enter "0000" as the new PIN (factory setting).



Fig. 18: Defining the menu PIN

6.3.5 Interfaces

In "Settings > Interfaces," you enter the settings for the interfaces and for the ECO-Check. Please refer to the interface description (kins22e1) for detailed information on interfaces.

Control location

- Local
- RS-232
- Local and RS-232

	<p>Local:</p> <p>Only measurements values can be read out via the RS-232 interface. They are not available to control the device.</p> <p>RS-232:</p> <p>The Ecotec E3000 is controlled almost exclusively via the interface. The display serves only for a visual check. Some settings can be changed on the device. Please use the protection via an access PIN if all functions on the device are to be inaccessible, see "Vacuum & access control [► 34]".</p> <p>Local and RS-232:</p> <p>The Ecotec E3000 can be controlled via the interface and via inputs on the device.</p>
Recorder output > Recorder scaling	<ul style="list-style-type: none"> • linear • logarithmic <p>The output is on channel 1 (pin 1 of the I/O connection).</p>
Recorder output > Recorder gas	<ul style="list-style-type: none"> • gas 1 to 4 • auto
Set PLC > Define PLC inputs (outputs)	<ul style="list-style-type: none"> • You will assign different commands to the pins of the I/O connection here.
RS-232 settings	<ul style="list-style-type: none"> • Baud rate 1200/2400/4800/9600/19200/38400 • Blank flange LF/CR/CR + LF
RS-232 protocol	<ul style="list-style-type: none"> • LD • ASCII • Diagnosis • Printer Auto • Printer Manual
ECO-Check	<p>If you do not use a ECO-Check calibration leak, you should choose "Deactivate" here. Otherwise, warning 71 "No communication with ECO-Check" will be issued at every start of the Ecotec E3000.</p> <p>If you use an ECO-Check calibrated leak, you can configure a warning here with respect to usage duration: 14/30/60/90 days.</p>

6.4 Settings for the measurements

With delivery, the data are programmed for the following gases and the measurement results are shown below each other in the display:

- R134a
- R32
- R600a
- He

The gas selection can be changed at any time.

6.4.1 Selecting the gas, changing gas parameters, activating measurement

You can access the settings via the main menu

- Select "Measuring parameters".

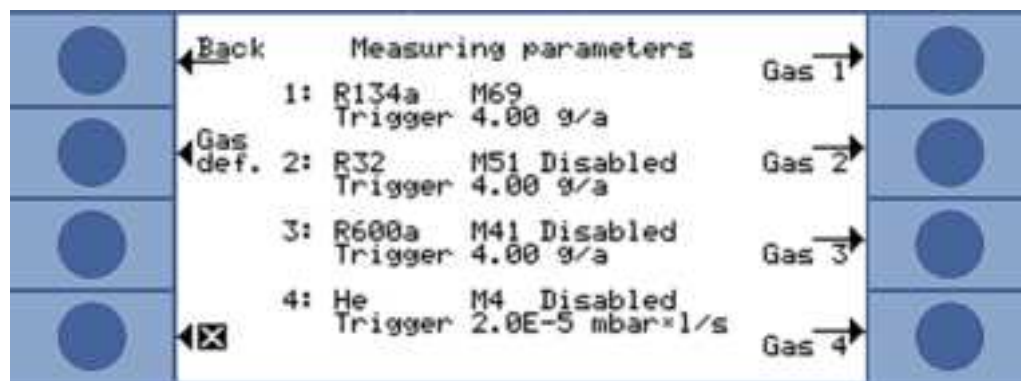


Fig. 19: Gas information for the measurement

The display shows:

- four gases
- the respective mass position
- the respective trigger value
- the "Deactivated" addition if the associated gas is currently not searched for, see below.

You can also define your own gas with the "Gas def." button, see "Setting Custom Gas [► 46]".

Press the button to the right of the gas whose parameters you want to change. The "Settings gas" window will open.

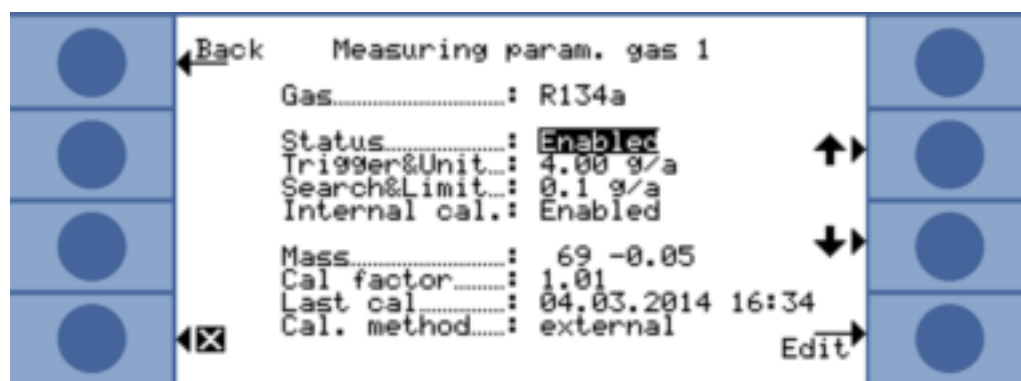


Fig. 20: Changing the settings for gas 1

With the buttons up and down you select a setting. Pressing the "change" button on the bottom right opens the associated settings menu.

Gas

The gas to search for is displayed. You can open the gas library with "change" and choose from approx. 100 gases there.

User-defined gases are displayed at the end of the list.

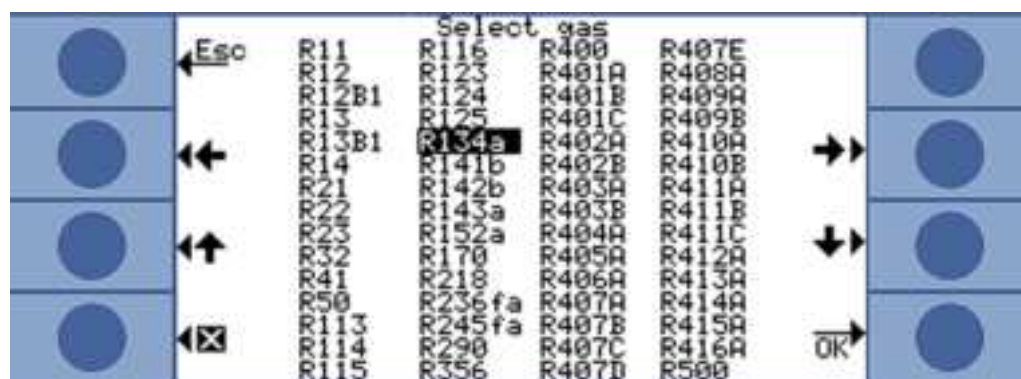


Fig. 21: Gas library

Status

"Status" shows whether the search for this gas is activated or deactivated. You can change the setting at any time. If the search for a gas is deactivated, it will also be displayed in the window "Measuring parameters".

In the measurement window, the display of the measurement result for a deactivated gas is dropped and the display is clearer.

Trigger and unit

In the "Trigger & unit" window, you can set the trigger value with the buttons on the left and select the unit with the buttons on the right.



Fig. 22: Setting trigger value and unit

The following table shows the adjustable units and the associated limits for the trigger value.

Unit	Lower trigger value limit	Upper trigger value limit
g/a	0.1	1000
oz/yr	0.004	100
ppm	1	999999
mbar l/s	2×10^{-7}	9.9×10^{-2}
Pa m ³ /s	2×10^{-8}	9.9×10^{-3}
atm cc/s	2×10^{-7}	9.9×10^{-2}
Torr l/s	2×10^{-7}	9.9×10^{-2}
sft ³ /yr	2×10^{-4}	$9.9 \times 10^{+1}$

Table 4: Trigger value according to unit

Display limit (and search threshold)

In the "Search threshold display limit" window, you can set the search threshold with the buttons on the left and select the factor for the lower display limit with the buttons on the right.

The search threshold is a percentage of the trigger value and serves as an additional warning level. Smaller leaks that are even below the trigger value can thus also be reported when needed, see "Audio settings [► 32]".

The absolute value of the search threshold is calculated by the device and displayed.

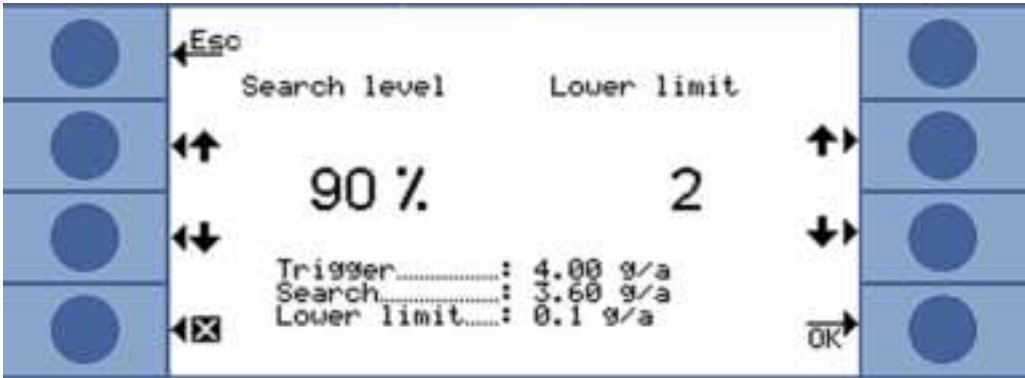


Fig. 23: Setting display limit and search threshold

With the “Display limit” function, you can hide measurement results that are below the expected leak rate. This makes the measurement view clearer especially in view of the measurement bar because smaller measurement results are hidden.

You can define the lower display limit as a multiple of the lowest measurable leak rate (1 x, 2 x, 5 x, 10 x, 20 x, 50 x, 100 x).

Internal calibration

You can deactivate internal calibration. If it is deactivated, only the more precise external calibration can be carried out for the gas, see "Calibrate [► 40]".

Internal calibration is precluded from the start if the mass position of a gas is outside the range from 40 to 105 amu.

Mass

With the selection of a gas from the gas library, a standard mass position is automatically selected for gas to be measured. If the device could respond to other substances in the working environment for the leak detection, we recommend selecting another mass position for the verification of the required gas. You can find a list of all possible gases with their normal and alternative mass positions in the Appendix, see "Gas library [► 85]".

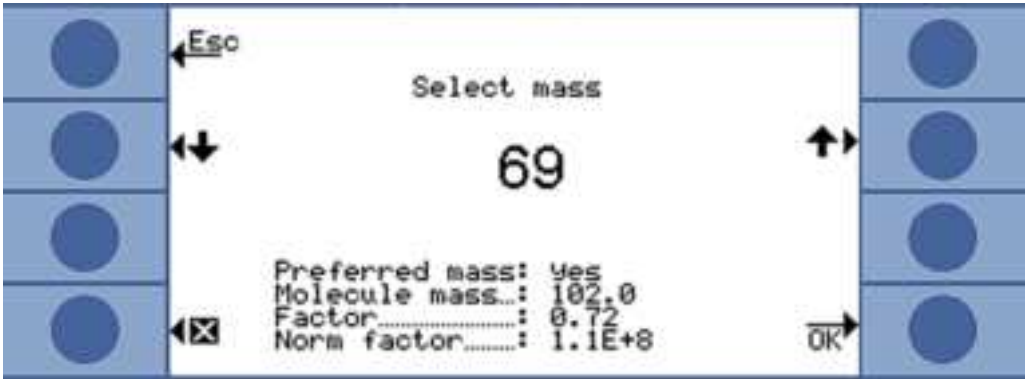


Fig. 24: Selection of another mass position

Below the selected mass is the information whether it is the preferred mass or not. The molecular mass of the gas and the height of the peak relative to the largest peak is also shown for this gas. The standard factor is a measure for the sensitivity of the device to the gas at the set mass position.

Cal factor

The calibration factor is displayed in this line.

Last cal.

Based on this line, you can check when the last calibration took place.

Calibration method

The line shows whether calibration was external or internal.

6.4.2 Calibrate

The Ecotec E3000 can be calibrated most conveniently by adding an ECO-Check calibrated leak. The ECO-Check can be integrated in the front panel of the device or set up at the testing position. It compensates temperature fluctuation and thus enables the accuracy required for calibration.

The ECO-Check calibrated leak includes R134a. It can be used for the calibration of gases with a mass position from 40 to 105 amu because the Ecotec E3000 converts the calibration result for the measurement of these gases.

You get the most accurate calibration with the external calibrated leaks. The calibrated leaks are valid for one gas each and temperature-insensitive.

When to calibrate?

The device should be calibrated daily and after every operator change. Calibration is also required after the following actions:

- Sniffer line replacement
- Sniffer line probe replacement
- Switch between gases (if you calibrate with an external calibrated leak)
- Filter replacement
- Prompt for calibration by the system

6.4.2.1 Internal calibration with ECO-Check

NOTICE

Incorrect calibration because of operating temperature that is too low

Calibrating the device in the cold state can deliver incorrect measurement results.

- ▶ The device must have been switched on for at least 60 minutes before calibration for hydrogen measurement.
- ▶ The device must have been switched on for at least 20 minutes before calibration for the measurement of all gases.

The ECO-Check must be installed; refer to installation manual of the ECO-Check.



Fig. 25: Built-in ECO-Check calibrated leak

If a gas measurement cannot be calibrated with the ECO-Check because the gas mass position is outside of 40 to 105 amu, the message "Int. calibration impossible" is displayed for this gas subsequent to calibration.

If a gas was blocked for internal calibration in the menu "Settings gas", the message "Gas deactivated" is displayed, see "Selecting the gas, changing gas parameters, activating measurement [► 36]".

The Ecotec E3000 notices if you insert the sniffer tip in the opening of the calibrated leak and starts calibration automatically. Messages subsequently guide you through the calibration process.

A warning is displayed if the device has not been switched on for 20 minutes yet. Simply confirm the warning and then continue with calibration if you know that the device has reached operating temperature because it was switched off only briefly before calibration. Otherwise remove the sniffer tip again and start calibration later.

After measuring and a short calculation period, the results of calibration are shown in the display. The old and the new calibration factor as well as the old and the new relative peak position are displayed.

In order to prevent an earlier external and thus more accurate calibration from being accidentally overwritten, you have to press the "Confirm new values" button to complete the calibration.

1. Switch to measurement display.
2. Insert the sniffer tip in the opening of the ECO-Check until you feel some resistance.
3. Press the right button on the sniffer handle as soon as the display shows the line "Calibration: Press right button."
4. Remove the sniffer tip from the reference leak if the display shows the line "Remove sniffer from cal-opening."
5. Confirm the new values with the button on the bottom right.

Check calibration (Test function)

If you insert the sniffer tip in the opening of the ECO-Check during measurement operation, an examination of the calibration is started automatically (test function). The device checks the measured value of the ECO-Check while the sniffer tip is inside the opening of the calibrated leak. The operator is subsequently prompted to remove the sniffer tip from the opening of the calibrated leak.

For gases released for internal calibration, either "Test o.k." or "Recalibration required!" will appear. For gases not activated for internal calibration, "Gas deactivated" will be displayed. For gases that cannot be calibrated with the ECO-Check due to very high or low mass positions, "Gas-spec. test not possible" is displayed.

Press the "OK" button or the right button on the handle to return to measurement operation.

6.4.2.2 External calibration with external calibrated leak

For external calibration of the Ecotec E3000, we recommend calibrated leaks with leak rates > 2 g/a. If there are significantly elevated background concentrations in the test environment, a calibrated leak with a high leak rate is required.

External calibration is a semi-automatic process. Text messages in the display guide you through the calibration process. Calibration can be stopped at any time with the "Cancel" button.

NOTICE**Incorrect calibration because of operating temperature that is too low**

Calibrating the device in the cold state can deliver incorrect measurement results.

- ▶ The device must have been switched on for at least 60 minutes before calibration for hydrogen measurement.
- ▶ The device must have been switched on for at least 20 minutes before calibration for the measurement of all gases.

A warning is displayed if the device has not been switched on for 20 minutes yet. Simply confirm the warning and then continue with calibration if you know that the device has reached operating temperature because it was switched off only briefly before calibration. Otherwise start calibration again later.

The gas measurement to be calibrated is generally activated. If you want to calibrate a deactivated measurement, activate the gas in the menu "Measuring parameters".

After measuring and a short calculation period, the results of calibration are shown in the display. The old and the new calibration factor as well as the old and the new relative peak position are displayed.

1. Switch to measurement display.
2. Press the "Cal" button. The list of gases currently set for measurement is displayed (up to four gases).
3. Select the gas that the measurement is to be calibrated for.
4. Check whether the gas and the displayed leak rate match the data of the calibrated leak. If the leak rate does not match, select "Change leak rate" and correct the value.
5. Select "Start."
6. Hold the sniffer tip into the center of calibrated leak opening and follow the instructions in the display. If you have to wait until the air signal has stabilized then this can take up to 30 seconds with a helium or hydrogen calibration.
7. Confirm the new values with the button on the bottom right.

6.4.3 Gas equivalent to helium and hydrogen, settings for diluted gas

If you are looking for helium or hydrogen, you can also have the determined leak rate for the gas equivalent displayed, e.g. as R134a.

If you have an equivalent set, all displays will show the original gas followed by the equivalent in brackets. For example: He (R134a)

Proceed as follows to set a gas equivalent:

1. Select helium or hydrogen from the gas library.
2. Select the line "Status" in the window "Settings gas ..." and press "Change".
3. Select "Equivalent name" in the window that opens. The gas library will be displayed again.
4. Select the equivalent name and confirm with "OK".

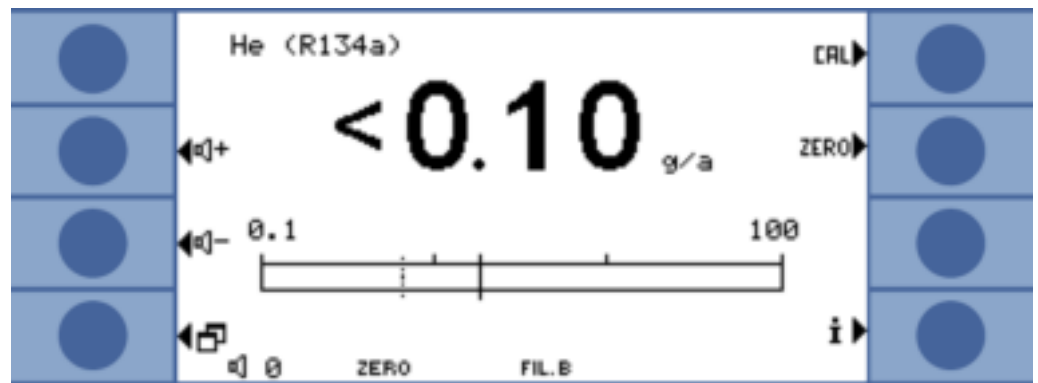


Fig. 26: Example for a measurement view with helium as refrigerant equivalent

You can also take a different pressure and/or different concentration between original gas and gas equivalent into consideration.

An internal conversion of the measurement result thus allows the Ecotec E3000 to approximate the result of a leak pre-check close to the result of a main leak examination.

Enter the settings for concentration and pressure in the "Settings gas...> Status > Change > Equivalent settings" window.



Fig. 27: Setting the parameters for gas equivalent and diluted gas

In this window, you can enter the helium or hydrogen filling pressure. You can enter the pressure for the equivalent gas next to that.

The bottom right shows the correction factor of helium/Hydrogen based on the gas equivalent. If a set of parameters that exceeds the limits of the Ecotec E3000 is entered, the correction factor is displayed with inverted colors. In this case, adjust the parameter until the correction factor display returns to normal.

On the bottom left, you can enter the value for the gas concentration. If you are looking for diluted helium or hydrogen, you can take the dilution into consideration in this setting. The leak rate for the undiluted gas is then displayed as the measured value.

Select "OK" when all parameters are set correctly.

Please note: If you are working with diluted gas, you have to select the original gas as gas equivalent, i.e. gas and gas equivalent are identical.

To switch off the gas equivalent setting, select the last entry from the gas library ("Settings gas ...> Status > Change > Equivalent name").

Switching off the gas equivalent function

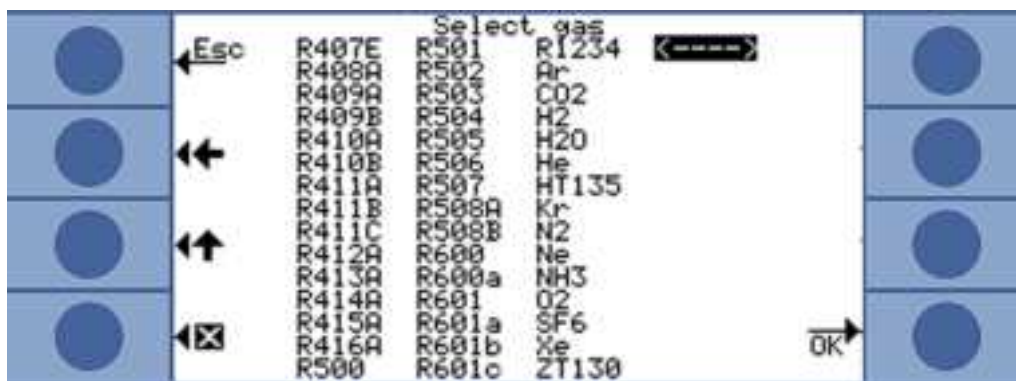


Fig. 28: The last entry switches off the gas equivalent function

6.4.4 Suppress interfering gases

IGS causes the findings of the interfering gases cyclopentane, isopentane as well as any mixture thereof to be suppressed during the search for refrigerant R600a. Up to an interfering gas concentration of 50g/a, the error is only 1% at most.

If IGS is activated, only one additional gas can be entered in the list of sample gases. If more than two gases are activated for R600a when IGS is activated, the additional gases (starting with the highest gas number from 1 to 4) will automatically be deactivated so that there are only two gases left.

If R600a is measured with IGS and R134a is set as second gas, select mass position 83 for R134a because malfunctions between propellant and R134a will occur otherwise.

IGS requires little maintenance. If repeated false alarms occur during the sniffing with IGS, calibration must be set to interfering gases, see below.

Activating IGS

1. Select R600a as the gas to be searched for: "Measuring parameters > Gas ... > Gas > Change > R600a > OK".
2. Switch to mass setting in the "Measuring parameters gas ..." window.
3. Browse the available mass positions until "IGS" is displayed in the line for the preferred mass.
4. Confirm with "OK".

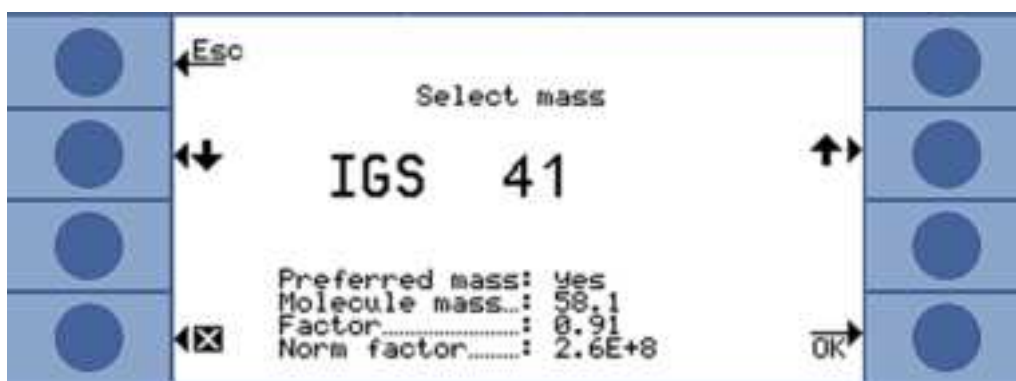


Fig. 29: Selection of the IGS mode for R600a

IGS alignment

The previous, actual calibration is carried out with and external test leak as it is with other gases. For the additional IGS calibration, you need a cyclopentane test leak and an isopentane test leak, available as "Calibration set for IGS mode".

The Ecotec E3000 recognizes errors you make in the gas sequence during the alignment and notifies you with a flashing gas display.

1. Activate IGS, see above.

2. Select "Cal" in the measurement window.
3. Select the gas R600a in the "Select gas" window. The entry should be expanded with IGS.
4. Select "IGS alignment" in the "Start external calibration" window and follow the instructions on the display.
5. Confirm the calibration with "OK."

6.4.5 Setting Custom Gas

You can save the settings for six individual gases.

- In the main menu, select "Measuring parameters > Gas def.", then an entry and "Change".

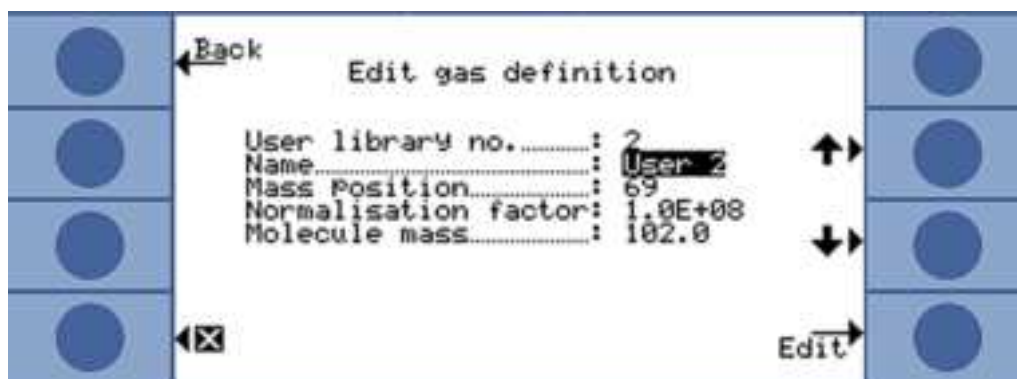


Fig. 30: Settings for a user-defined gas

You can switch between settings with the arrow buttons and open a settings window by pressing the "change" button.

User library no.	Shows the number of the gas definition to be edited currently.
Name	<p>You have to enter a name for the gas to be defined.</p> <p>The buttons are assigned with letters and you can assign names with six characters with them. Once you have entered the sixth character, you can leave the window by selecting "OK."</p>
Measuring mass	<p>The mass determines the position of the peak at which the user-defined gas is measured. The Ecotec E3000 can detect masses from 2 to 200 amu.</p> <p>The buttons are with assigned with numbers and you can enter masses between 2 and 200.</p>
Normalization factor	<p>The standard factor is used to convert the current supplied by the sensor into a leak rate signal. If you are setting a user-defined gas, the Ecotec E3000 should subsequently be calibrated with an external test leak, if possible. If calibration is successful, you will not modify the standard factor. If calibration fails and the error message "Calibration factor too high" is displayed, the standard factor must be reduced by a decade, e.g. from 1.0E+08 to 1.0E+07. If the "Calibration factor too small" error message appears, increase the standard factor by a decade, e.g. from 1.0E+08 to 1.0E+09. Repeat this process until the Ecotec E3000 has been calibrated successfully.</p>
Molecular mass	Enter the molecular mass of the gas to be measured with the arrow buttons (usually included in the data sheet for the gas).

6.4.6 Measure

WARNING

Risk of electric shock

Electrical voltages can be transmitted via the sniffer tip and can cause property damage or personal injury.

- ▶ Do not touch live parts with the sniffer probe.
- ▶ Disconnect electrically operated test objects from the mains before starting the leak test and secure them against a restart without authorization.

WARNING

Risk of eye damage

LEDs generate a bundled light that can damage your eyes.

- ▶ Do not look into the LEDs from a short distance or for longer periods of time.

CAUTION

Risk of electric shock

Sucked up liquids can trigger short circuits and cause property damage or personal injury.

- ▶ Do not suck up liquids into the device.
- ▶ Use the water protection tip in humid environments.

NOTICE

Material damage due to a missing sniffer line

The device must not be operated without a connected sniffer line in order to avoid overpressure in pump and measurement system.

- ▶ Connect the sniffer line before you start up the device.
- ▶ Do not replace the sniffer line while the device is in operation.

Requirements

A measurement requires:

A sniffer line is connected to the basic unit.

The device has started up and is warmed up, see "Switching on [▶ 24]".

The device is calibrated, see "Calibrate [▶ 40]".

You have configured the device settings required for measurement, see "Basic settings [▶ 30]".

You have configured the measurement settings required for your measurement, see "Settings for the measurements [▶ 36]".

Measuring position and speed

Hold the sniffer tip to the potential leak as close as possible. The tip may even touch the test object. If you want to test a weld seam or similar, you must guide the tip along the path at a speed of less than 10 cm/s. Please also note the minimum measurement time for the search for helium, see "Special features of individual gases [▶ 58]".

Measuring Sequence

- 1 Keep the sniffer tip away from possible gas sources and press the left button on the sniffer handle (ZERO).
- 2 Perform sniffing of the test object.

If there is a leak, it will be reported in the displays with flashing LEDs in the sniffer handle and - depending on your settings - also accompanied by an acoustic signal.

Because of the high measuring sensitivity of the device and because interfering gases can falsify the measurement result, you should repeat the measurement if a leak has been reported. Remember to suppress the background again beforehand (press the left button on the sniffer handle).

Measurement in unstable subsurface conditions

In case of very unstable background conditions, it may be best to issue an alarm only if the trigger value is exceeded for a specified period of time, see "Miscellaneous [► 30]".

6.4.6.1 Calling up information on the measurement

Press the **i** button (also see "Recurring function symbols [► 25]") to obtain information on the current measurement:

- Software version
- Operating hours
- Serial number
- Date and time
- Alarm profile
- Selected gases with mass position and trigger value. Gases that are set but that are not currently sought for are marked.

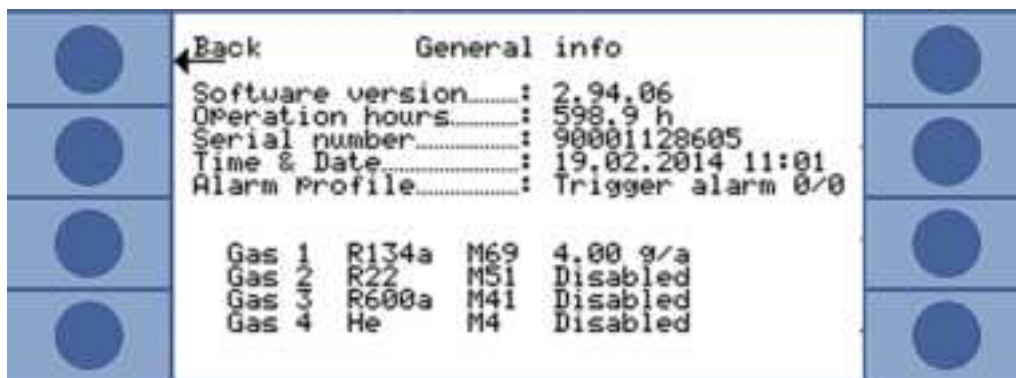


Fig. 31: Information on the measurement

If there is an error message or a warning then this will be displayed instead of the gases.

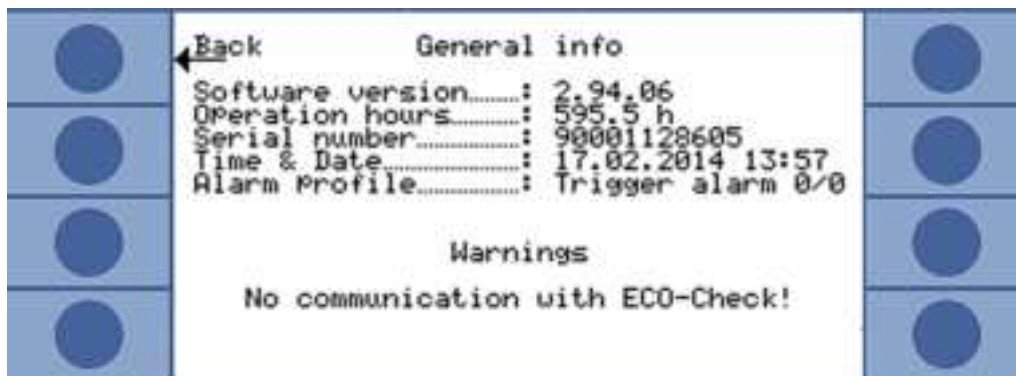


Fig. 32: General information warning

6.4.7 Measuring with I•Guide

I•Guide was developed to support the operator in the application of the correct technique for leak detection.

With an I•Guide program, a time sequence and a repetition rate are predefined for sniffing for one or two gases. The following details can be set:

- one or two gases
- trigger values for the gases
- Number of measuring points
- measurement time per measuring point
- idle time between measurements (transition to next measuring point)
- maximum permissible overall leak rate for the part to be tested

The right key on the sniffer handle must be pressed in order to confirm the measurement at an individual measuring point. Confirmation can alternatively take place via the interface programming.

You can set ten I•Guide programs.

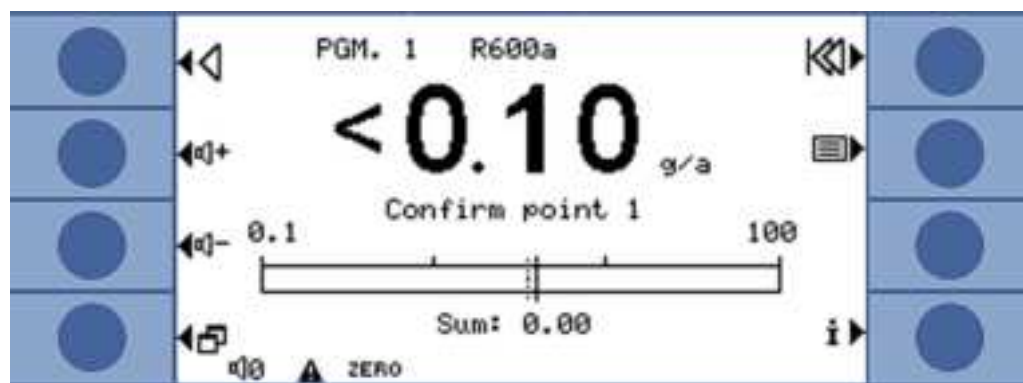


Fig. 33: Measurement view in an I•Guide program

I•Guide as a timer signal

You can also do without the calculation of an overall leak rate. The I•Guide program then serves merely as a default for time-controlled measuring. Set the number of measuring points to ZERO for this.

Capturing the results of a long measurement series with I•Guide

You can combine the leak rates of a maximum of 99 measurements with I•Guide. Set the number of measuring points to 99. If you then press the right-hand button on the sniffer handle for two seconds during the measurement, a results window with the individual measurements and the total leak rate is displayed. After the 98th measuring point, the result is displayed automatically.

6.4.7.1 Setting the I•Guide program

1. Select "Main menu > Settings > I•Guide setting."
2. To activate I•Guide select "Activate".
3. To enable confirmation with the right button on the sniffer handle, select "Button on". Control is otherwise possible only via interface.
4. Select one of the 10 programs with the arrow buttons and then press "Change".
5. Select the setting you want to change with the arrow buttons and press "change."
6. Adjust the settings as described below and confirm with "OK."

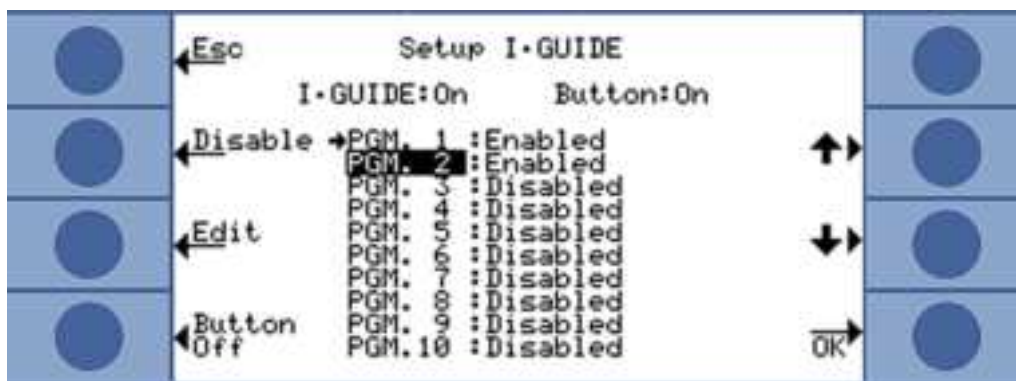


Fig. 34: List of I-Guide programs

Name	Name of the program. A name comprises six characters. After you have entered the last character, you can confirm with "OK."
Gas A	One of the four gases that was selected for the search can be selected, see "Selecting the gas, changing gas parameters, activating measurement [► 36]".
Gas B	See above. If no second gas is to be searched for, set this to "0".
Trigger value A/trigger value B	The maximum permissible leak rate for the addition of all measurements of an I-Guide program can be set here. The trigger value for a single measurement complies with the trigger value originally set for a gas.
Number of measuring points	0 to 99.
Measuring time	1 to 25 seconds. You must not set the measurement time to be shorter than the response time of the device, see "Technical data [► 15]".
Idle time	You can set a time between 0.1 and 25 seconds for the transition to the next measuring point.

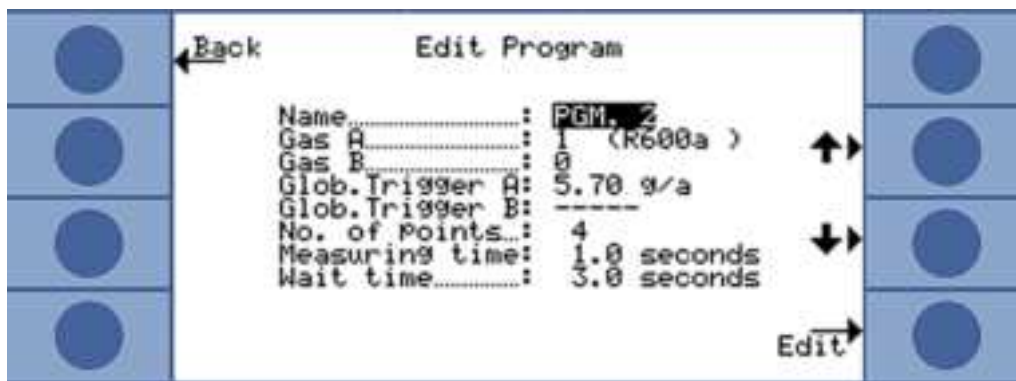


Fig. 35: Settings for an I-Guide program

6.4.7.2 Starting the I•Guide program

Messages in the display of the basic unit, messages in the display of the handle and acoustic signals guide you through the program.

1. If due, calibrate the device externally. During the work with I•Guide, the device can be calibrated internally only.
2. Activate I•Guide in the I•Guide menu, see above. A message shows the gas that is being searched for. It is the gas from the first activated I•Guide program. Confirm with "OK."
3. Switch to the main menu. Measurement will start immediately.
4. Follow the messages.

Process	Message in main device display	Message in handle display	Acoustic basic unit	Acoustic signal handle
Idle time to move to the measuring point	Tip to point	To pos.	-	-
Prompt to confirm the position.	Confirm point	OK? Pos. Confirm with the right button if the sniffer tip is at the measuring point.	-	-
Measure	Measure point	Measure pos.	Ticking	-
Measurement time elapsed	Tip to point	To pos.	Short signal	Short signal
Cycle completed	Cycle number of measurement Measured gas Single leak rates and sum of measured leak rates "OK!" with a total leak rate below the limit value "Leak in the cycle!" with a total leak rate above the limit value or if the trigger value was exceeded in a single measurement.	Measured gas Sum of measured leak rates "OK!" with a total leak rate below the limit value "Error!" with a total leak rate above the limit value or if the trigger value was exceeded in a single measurement.	Long signal	Long signal Constant signal in case of an error
	If you are searching for two gases: You can change between the displays for the two gases with the buttons "A" and "B".	If you are searching for two gases: The display automatically switches between the displays for the two gases.		

Table 5: User prompts I•Guide program

"Please wait" or "Wait" is displayed if you attempt to start the next measurement by pressing the button before the waiting time has elapsed.

During a cycle, you can use the key  to move back one measuring point.

The key  takes you back to the beginning of the cycle.

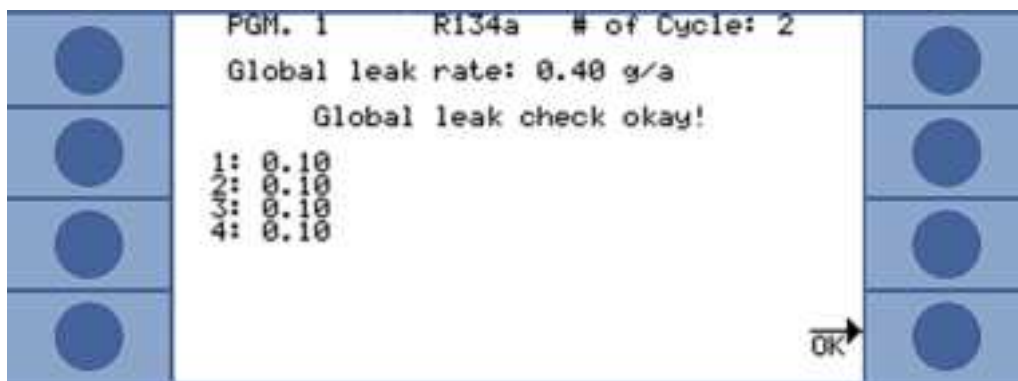


Fig. 36: Display after a successful measurement




Fig. 37: Search with I•Guide-Program 1 for gas R134a: The trigger value and the total leakage rate were exceeded at measuring points 1 and 3.

The next measurement cycle starts if you confirm with "OK" or the press the right button on the sniffer handle.

Changing the I•Guide program

The new I•Guide program must be set and activated in the I•Guide settings, see above.

- Open the list of I•Guide programs in the main menu with  and select one. Measurement will start immediately.

Resetting the I•Guide cycle counter

In the "I•Guide setting" window, you can reset the I•Guide cycle counter manually with the button "Reset counter".

The cycle counter is always set to ZERO when the device is switched off.

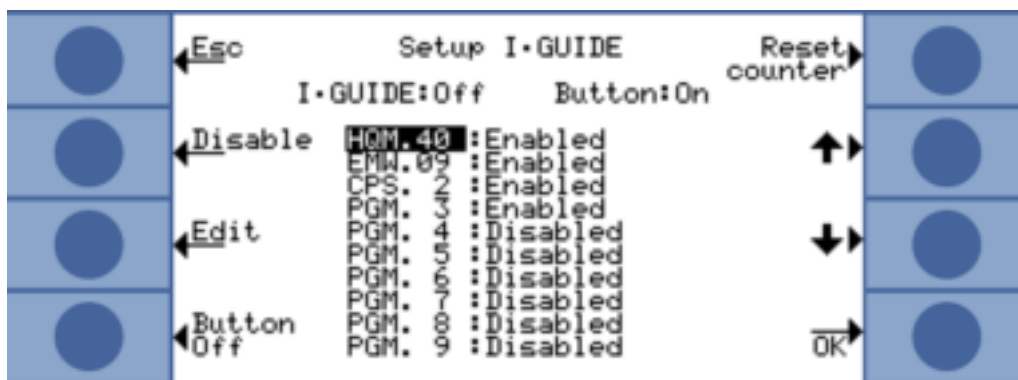


Fig. 38: Cycle counter reset

Calling up information on the I•Guide program

Press the  key to obtain information on the current measurement:

- Software version
- Operating hours
- Serial number
- Date and time

- Alarm profile
- Information on the current I•Guide program

If two gases were selected for the I•Guide program, gas type A/B and leak rate sums A/B are displayed alternately.

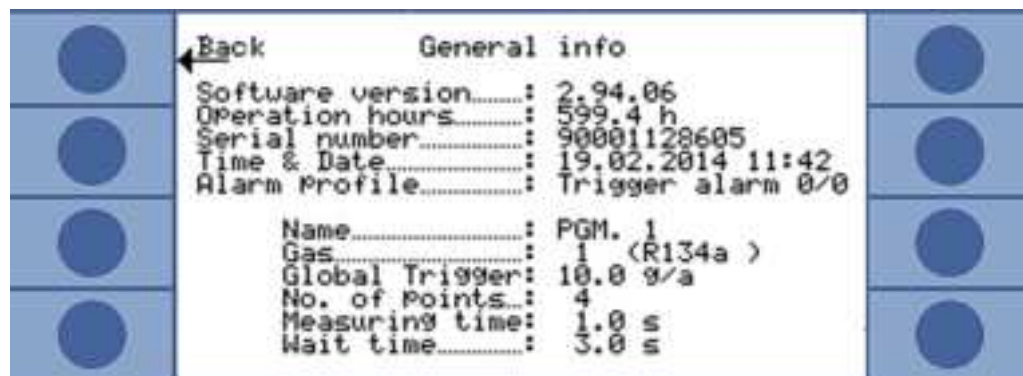


Fig. 39: I•Guide information page

If there is an error message or a warning then this will be displayed instead of the I•Guide program information.

6.5 Idle state (sleep)

The idle state is a meaningful alternative to switching the device off only if you allow the device to run up automatically with the wake-up function, see "Miscellaneous [► 30]".

If you press the SLEEP button in the main menu of the device, the device goes into idle state. The mass spectrometer is switched off and the pumps are stopped.

"Sleep" is replaced with "START" in the main menu and the Ecotec E3000 is run up again with "START" or the wake-up function.

The electrical components cannot maintain operating temperature in idle mode. After a restart, precise measurements are therefore possible only after the warm-up time, see "Calibrate [► 40]".

6.6 SERVICE

The service menu is password-protected. Settings in the service menu can be made only after a special INFICON service training.

6.7 Retrieve information about the device

You can call up all information about the device by selecting "Info" from the main menu. The information is spread out over nine pages. The button on the bottom right switches you to the next page and the button on the bottom left takes you back one page. The page number is displayed in the upper right hand corner.

Menu item	Format	Description
Page 1: General information		
Foreline pressure	mbar	
Flow	sccm	Flow through the sniffer line
Total pressure	mbar	Pressure in the mass spectrometer
Time since power on	Min	
Operating hours	h	
Serial number	9000 XXX XXXX	
Software version	x.xx.xx	
Electronic system temp.	°C / °F	Temperature of CPU board
TSP temperature	°C / °F	Temperature of mass spectrometer
Calibrated leak temperature	°C / °F	Temperature of ECO-Check
Page 2: Data of turbo molecular pump		
Status	On / Off / Run-up	
Current Error code		
Rotation speed	Hz	
Current	A	
Voltage	V	
Driving power	W	
Operating hours of the TMP	h	Operating hours of the turbo molecular pump
Operating hours TC	h	Operating hours of the frequency converter for TMP
Run-up time	s	
Software version	xxxxxx	
Page 3: Data of transpector		
Configuration		
Box version	x.xx	
Control SW version	x.xx	
Measure SW version	x.xx	
Filament	A or B/A or B	Set cathode / active cathode
Power on time	h	
Emission on time A	h	

Menu item	Format	Description
Emission on time B	h	
Serial number box		
Serial number sensor		
Page 4: Data of ECO-Check		
Gas	Rxxx	Gas of internal leak
Leak rate nom. / at T nominal leak rate /	x.x g/a / x.x g/a	Leak rate at current temperature
Version/Checks.	x.x / hexadecimal code	Software version with checksum
Serial no.	9000 XXX XXXX	
Serial no. reservoir	9000 XXX XXXX	
Filling date	DD.MM.YYYY	
Expiry date	DD.MM.YYYY	
Gain / Offset		Parameters for the temperature measurement in the ECO-Check
Test leak temperature	°C / °F	
Status of light barrier		
Page 5: Data of sniffer line		
Type	SL3000/System	
Software version	x.x	
Length	3 m / 5 m / 10 m / 15 m	
Serial no.	9000 XXX XXXX	
Button left		
Button right		
Background light	Green/red	Background light
Bar graph		
Flow (calibration)	sccm	
Movement		
Page 6: I/O port data		
Recorder A	V	
Recorder B	V	
Sleep	Low / High	
ZERO	Low / High	
Gas a/b/select	Low / Low / Low High / High / High	
Input reserved	Low / High	
Leak/Ready/Error	Low / Low / Low High / High / High	
Relay "Leak"	Low / High	
Relay "Ready"	Low / High	
Output reserved	Low / High	
Page 7: Analog data		

Menu item	Format	Description
AIN3 sniffer length	V	
AIN4 +5V II leak	V	
AIN5 +24V III ext.	V	
AIN6 +5V I sniffer	V	
AIN8 -15V MC50	V	
AIN9 +15V MC50	V	
AIN10 +24V MC50	V	
AIN11 +24V I TSP	V	
AIN12 +24V II TMP	V	
Page 8: Analog data		
AIN0	V	
AIN0 offset	V	AIN0 offset
Foreline pressure	mbar	Foreline pressure
AIN1	V	AIN1
Flow	sccm	Flow
Page 9: RS-232 Info		
Ecotec E3000 ® Sniffer	ASCII string	Command sent from main device to sniffer line
Sniffer ® Ecotec E3000	ASCII string	Command sent from sniffer line to main device
The information in the first two lines can be switched with the buttons "Sniffer" and "Leak":		
Ecotec E3000 ® Leak	ASCII string	Command sent from main device to test leak
Leak ® Ecotec E3000	ASCII string	Command sent from test leak to main device
Host ® Ecotec E3000	ASCII string	Command sent from mainframe to Ecotec E3000
Ecotec E3000 ® Host	ASCII string	Command sent from Ecotec E3000 to mainframe
Page 10: Info field bus		
IC1000	24 V supply	
	SW version	
	SW version BL	
	Serial number	
BM1000	Bus type	
	SW version Module	
	Serial number Module	
	Address act. Value	
Page 11: Info field bus BM 1000		
	Baud rate	
	Exception code	

Menu item	Format	Description
	Error counters	
	State	
	Station name	
	IP address	
	IP subnet mask	
	Gateway IP address	
	DHCP enabled	

Table 6: Device information

6.8 Special features of individual gases

R134a: Influencing by cyclopentane and R245fa

If you are sniffing for R134a, the presence of cyclopentane and R245fa can lead to incorrect measurement results. Search for R134a with alternative mass position 83, if cyclopentane and R245fa could be sniffed. Setting a different mass, see "Setting Custom Gas [► 46]."

R600a: Influencing by cyclopentane and isopentane

If you are sniffing for R600a, the presence of cyclopentane and isopentane can lead to incorrect measurement results. Search for R600a with the IGS mass position, if cyclopentane and isopentane could be sniffed. Setting the IGS mass position, see "Suppress interfering gases [► 44]."

Special features with helium

If you are sniffing for helium, the Ecotec E3000 needs longer for an analysis than with refrigerants. Therefore stick to the following times during which you will not move the sniffer tip.

Length of sniffer line	Minimum measurement time
3 m	2.2 s
5 m	2.5 s
10 m	3.3 s
15 m	4.5 s

Table 7: Minimum measurement times for helium

The smallest detectable leak rate of the Ecotec E3000 for helium is 1×10^{-6} mbar l/s (higher than for refrigerant).

You can use a PRO-Check calibrated leak for the internal calibration of helium. Because the PRO-Check calibrated leak does not fit into the opening on the front panel of the Ecotec E3000, you have to connect it with a SUB -D cable, see installation manual of the ECO-Check.

If you are working with diluted helium, you can have the determined leak rate also displayed as the gas-equivalent leak rate. For further details, see "Gas equivalent to helium and hydrogen, settings for diluted gas [► 42]."

Special features with hydrogen / forming gas

If you are sniffing for hydrogen / forming gas, the Ecotec E3000 needs longer for an analysis than with refrigerants. Therefore stick to the following minimum measurement times.

Length of sniffer line	Minimum measurement time
3 m	2.7 s
5 m	3.0 s
10 m	3.8 s
15 m	5.0 s

Table 8: Minimum measurement times for hydrogen

If you work with hydrogen (forming gas), you can have the determined leak rate also displayed as gas-equivalent leak rate, see "Gas equivalent to helium and hydrogen, settings for diluted gas [► 42]."

If you want to verify hydrogen, the warm-up phase of the device must be extended to 1 hour before the first calibration.

The smallest detectable leak rate of the Ecotec E3000 for hydrogen is 1×10^{-6} mbar l/s (higher than for refrigerant).

You can use a PRO-Check calibrated leak for the internal calibration of hydrogen / forming gas. Because the PRO-Check calibrated leak does not fit into the opening on the front panel of the Ecotec E3000, you have to connect it with a SUB -D cable, see installation manual of the ECO-Check.

Methane

Methane cannot be calibrated with the built-in ECO-Check because methane can be detected only on mass 15 (which is outside the range for the permissible internal calibration from 40 to 105).

Therefore use the external calibrated leak "TL4-6 for methane" for calibration.

6.9 Switch off

NOTICE

Property damage from rotating parts

The turbo molecular pump requires 5 minutes to power down.

- Allow the turbo molecular pump to power down before any maintenance work is performed or before moving the device.

You can switch off the Ecotec E3000 at any time with the power switch (position "0"). It takes a few minutes for the turbo molecular pump to come to a standstill. The Ecotec E3000 must not be moved during that time.

The parameter set in the Ecotec E3000 are saved. After the start-up, the Ecotec E3000 returns to the same state that it was in before it was switched off.

7 Warning and error messages

During operation, the display shows information that supports you in the operation of the Ecotec E3000. Measurement values are displayed along with current device modes, operating instructions as well as warnings and error messages.

The Ecotec E3000 is equipped with extensive self-diagnosis functions. If the electronic system detects a faulty state, the device will show this insofar as possible on the display and will interrupt operation, if necessary.

Error messages

Errors are events that the Ecotec E3000 cannot remedy itself and that force an interruption of operation. The error message consists of a number and a descriptive text.

After you have removed the cause of the error, start operation again with the restart button.

Warnings

Warnings warn of device states that can impair the accuracy of measurements. Operation of the instrument is not interrupted

Confirm acknowledgment of the warning with the OK button or the right button on the sniffer handle.

The following table displays all the warnings and error messages. It lists possible causes for the malfunction and instructions on how to eliminate these.

Please note that work marked with an asterisk must be carried out only by service staff that is authorized by INFICON.

No.	Message	Possible error sources	Fault rectification
E1	Input voltage 24V on the MC50 is too low	Fuse F1 on the wiring board is blown.	Replace the fuse.*
		CPU board MC50 is defective.	Contact INFICON customer service.
E2	24 V input voltage at transpector is too low	Fuse F2 on the wiring board is blown.	Replace the fuse.*
		The Transpector is defective.	Contact INFICON customer service.
E3	Input voltage 24V on the frequency converter is too low	Fuse F3 on the wiring board is blown.	Replace the fuse.*
		The turbo molecular pump is defective.	Contact INFICON customer service.
W4	Voltage 24V on OPTION output is too low	Fuse F4 on the wiring board is blown.	Replace the fuse.*
		Power input through external wiring is too high.	Check the wiring.
W5	Voltage 5V on sniffer line is too low	Fuse F5 on the wiring board is blown.	Replace the fuse.*
		The sniffer line is defective.	Replace the sniffer line.
W6	Voltage 5V on the ECO-Check is too low	The electronic system of the ECO-Check calibrated leak is defective.	Replace the ECO-Check calibrated leak, see installation manual of the ECO-Check calibrated leak.
		CPU board MC50 is defective.	Contact INFICON customer service.
E7	Input voltage -15V on the MC50 is too low	CPU board MC50 is defective.	Contact INFICON customer service.

No.	Message	Possible error sources	Fault rectification
E8	Input voltage of 15 V on the MC50 is too low	CPU board MC50 is defective.	Contact INFICON customer service.
W12	Turbo pump frequency during run-up not reached or TMP current too high!	The humidity is too high.	If W12 is displayed with very high humidity or after very long idle periods, allow the device to warm up longer. If the problem still exists, restart the device.
		The turbo molecular pump is defective.	Contact INFICON customer service.
W14	Maintenance interval for filter in sniffer probe elapsed	The change interval for the sniffer probe air filter is reached.	Replace the filter, see also "Replacing the filter inserts of the capillary filter and the water conservation tip [▶ 79]". Confirm the work, see also "Calling up and managing maintenance information [▶ 69]".
W16	Maintenance interval for turbo molecular pump elapsed	The change interval for the operating fluid reservoir of the turbo molecular pump is reached.	Replace the oil reservoir, see also "Replace operating fluid reservoir. [▶ 75]". Confirm the work, see also "Calling up and managing maintenance information [▶ 69]".
W17	Maintenance interval for diaphragm pump elapsed	Diaphragm pump maintenance is due.	Replace the membranes of the diaphragm pump!* Confirm the work, see also "Calling up and managing maintenance information [▶ 69]".
W18	Maintenance interval for main air filter elapsed	The change interval for the main air filter is reached.	Clean or replace the filter, see also "Replacing the air filter of the main unit [▶ 74]". Confirm the work, see also "Calling up and managing maintenance information [▶ 69]".
E19	Temperature on CPU board MC50 too low (<-21°)	The ambient temperature is too low / temperature sensor defective.	Observe the ambient conditions, see also "Ambient conditions [▶ 16]". / Contact INFICON customer service.
E20	Temperature on CPU board MC50 too high (>60°)	The ambient temperature is too high	Observe the ambient conditions, see also "Ambient conditions [▶ 16]".
		One fan failed.	Check the air stream through the ventilation openings on both sides of the housing (left inlet, right outlet).
		The main air filter is soiled	Clean or replace the filter, see also "Replacing the air filter of the main unit [▶ 74]".
E22	TMP frequency is too low!	The sniffer line is incorrectly connected.	Check the connection.
E23	Turbo pump frequency too high!	The turbo molecular pump is defective.	Contact INFICON customer service.
		The turbo molecular pump is defective.	Contact INFICON customer service.

No.	Message	Possible error sources	Fault rectification
W24	Voltage 24V of the external display unit is too low	Only for Ecotec E3000RC: The fuse on driver board "External device operation" is blown.	Replace the fuse.*
		The RC control panel is drawing too much power.	Contact INFICON customer service.
E25	Remove the sniffer tip from the opening of the calibrated leak!	The sniffer tip is in the calibration opening of the ECO-Check.	Remove the sniffer tip.
		The light barrier of the ECO-Check is soiled.	Blow out the calibration opening with fresh air or clean it with a cotton cloth.
W28	Real-time clock was reset! Please enter date and time.	CPU-board MC50 was replaced.	Enter the date and time, see also "Miscellaneous [► 30]".
		The battery on CPU-board MC50 is defective.	Contact INFICON customer service.
W29	Voltage 24V on the audio output is too low!	Fuse F6 on the wiring board is blown.	Replace the fuse.*
		The speaker is defective.	Replace the speaker.*
E30	Sensitivity too low	The sensor in the Transpector is defective.	Contact INFICON customer service.
W31	Factor K1 outside of range (0.9 to 1.1)!	Other interfering gases, not cyclopentane or isopentane, were detected, e.g. alcohols.	For new calibration of IGS, see also "Suppress interfering gases [► 44]".
W34	(The flow rate has been reduced by more than 30% since the last calibration. The warning goes out if the flow change is less than 20% again.)	The sniffer line is incorrectly connected.	Check the connection.
		The sniffer line filters are clogged.	Change the filter of the sniffer line, see also "Replacing the filter inserts of the capillary filter and the water conservation tip [► 79]". Confirm the work, see also "Calling up and managing maintenance information [► 69]". Perform new calibration of device, see also "Calibrate [► 40]".

No.	Message	Possible error sources	Fault rectification
W35	Flow through capillary too low (The lower limit value is undershot for longer than 2 s.)	The lower limit value is set too high.	Lower the lower flow limit value, see also "Vacuum & access control [▶ 34]".
		The capillary filter in the sniffer line is clogged.	Replace the capillary filter, see also "Replacing the filter inserts of the capillary filter and the water conservation tip [▶ 79]". Confirm the work, see also "Calling up and managing maintenance information [▶ 69]". Perform new calibration of device, see also "Calibrate [▶ 40]".
		The sinter filter in the sniffer handle is clogged.	Replace the sintered filter, see also "Replacing the sinter filter of the sniffer handle [▶ 80]". Confirm the work, see also "Calling up and managing maintenance information [▶ 69]". Perform new calibration of device, see also "Calibrate [▶ 40]".
		The capillary is clogged.	Replace the sniffer line. Perform new calibration of device, see also "Calibrate [▶ 40]". Replace the multi-function cable of the sniffer line. * Perform new calibration of device, see also "Calibrate [▶ 40]".
		The internal filters in the basic unit are clogged.	Replace the internal filters (three units).* Confirm the work in the service menu. Recalibrate the device, see also "Calibrate [▶ 40]".
E36	Flow through capillary too high. (The upper flow limit value is exceeded for longer than 2 s.)	The sniffer line is incorrectly connected.	Check the connection.
		The upper limit value is set too low.	Set the upper limit value for the flow higher, see also "Vacuum & access control [▶ 34]".
		The capillary is broken or leaking.	Replace the sniffer line. Perform new calibration of device, see also "Calibrate [▶ 40]". Replace the multifunction cable of the sniffer line.* Perform new calibration of device, see also "Calibrate [▶ 40]".

No.	Message	Possible error sources	Fault rectification
E37	Capillary broken! (>10 s) (The upper limit value is exceeded for longer than 10 s. The emission is switched off to protect the cathodes.)	The upper limit value is set too low.	Set the upper limit value for the flow higher, see also "Vacuum & access control [► 34]".
		The capillary is broken or leaking.	Replace the sniffer line. Perform new calibration of device, see also "Calibrate [► 40]". Replace the multifunction cable of the sniffer line.* Perform new calibration of device, see also "Calibrate [► 40]".
E38	Capillary broken! (> 60 s) exceeded. The pumps are switched off to protect the cathodes.)	The upper limit value is set too low.	Set the upper limit value for the flow higher, see also "Vacuum & access control [► 34]".
		The capillary is broken or leaking.	Replace the sniffer line. Perform new calibration of device, see also "Calibrate [► 40]". Replace the multifunction cable of the sniffer line.* Perform new calibration of device, see also "Calibrate [► 40]".
E39	Emission failure (The emission cannot be switched on at both cathodes.)	If the device was switched off for an extended period of time, this error can occur during the first 10 minutes after start-up. Both cathodes are defective. The Transpector is defective.	Confirm the error message and restart the device. If the problem still exists: Contact INFICON customer service.
E40	Emission failed (The emission failed during operation.)	If the device was switched off for a longer period of time, this error can occur during the first 10 minutes after start-up. The pre-pressure is too high. The Transpector is defective.	Confirm the error message and restart the device. If the problem still exists: Contact INFICON customer service.
E41	No communication with Transpector!	The software cannot establish the connection with the Transpector.	Check the connection between Transpector and wiring board.*
		The Transpector is defective.	Contact INFICON customer service.
E42	Transpector temperature > 70 °C or < 0 °C!	The main air filter is soiled.	Clean or replace the filter, see also "Replacing the filter inserts of the capillary filter and the water conservation tip [► 79]".
		Confirm the work, see also "Calling up and managing maintenance information [► 69]".	Observe the ambient conditions, see also "Ambient conditions [► 16]".
E43	Transpector limit value exceeded!	Internal Transpector data error	Contact INFICON customer service.
E44	Transpector limit value exceeded!	Internal Transpector data error	Contact INFICON customer service.
E45	Transpector limit value exceeded!	Internal Transpector data error	Contact INFICON customer service.

No.	Message	Possible error sources	Fault rectification
E46	Transpector limit value exceeded!	Internal Transpector data error	Contact INFICON customer service.
E47	Transpector overpressure!	If the device was switched off for a longer period of time, this error can occur during the first 10 minutes after start-up.	Confirm the error message and restart the device. If the problem still exists: Contact INFICON customer service.
		The sniffer line is not connected.	Connect the sniffer line and confirm the error message. Restart the instrument.
E48	Emission failure (The emission failed during operation.)	The pre-pressure is too high. The Transpector is defective.	Confirm the error message and restart the device. If the problem still exists: Contact INFICON customer service.
W49	No emission with first cathode	Start-up of the Emission failed. The device has switched to the second cathode.	You can continue to measure but need to have the cathodes checked.
E50	Control of turbo pump or electronic system!	There is an error in the control of the turbo molecular pump.	Contact INFICON customer service.
E51	No communication with the turbo controller!	Wiring board defective CPU board MC50 defective	Contact INFICON customer service.
W57	Too many EEPROM write cycles!	Continuous change of gas configuration or I•Guide program via interface.	Use the alternative commands. (e.g. BEF749 instead of BEF750)
W58	Measuring parameters inconsistent! Please check!	The gas library was changed by a software update.	Perform new selection of the gases to be measured. (The affected gas number is displayed.)
W59	Overflow of EEPROM parameter queue!	EEPROM defective.	Contact INFICON customer service.
W60	All EEPROM parameters lost! Check your settings!	A new wiring board was installed.	All settings are reset to factory settings. Make your settings again.
		If the message occurs constantly during running up, the EEPROM on the wiring board is defective.	Contact INFICON customer service.
W61	0 EEPROM parameters initialized!	A software update introduced new parameters. The new parameters are listed in the warning.	Confirm the warning.
		If the message occurs constantly during running up, the EEPROM on the wiring board is defective.	Contact INFICON customer service.
W62	0 EEPROM parameters lost!	Changed parameters were detected during the running up.	Check the settings of the listed parameters.
		The affected parameters are listed in the warning.	
		If the message occurs constantly during running up, the EEPROM on the wiring board is defective.	Contact INFICON customer service.

No.	Message	Possible error sources	Fault rectification
W63	TSP parameters inconsistent! Please check!	The Transpector was replaced.	Check the Transpector parameters. Contact INFICON customer service.
		The wiring board was replaced.	
		The EEPROM on the wiring board is defective.	
W64	There are warnings pending!	Confirmed but not yet valid warnings are repeated every two hours or at every new start-up.	Remedy the cause of the warning. Deactivate the warning repetition, see also "Calling up and managing maintenance information [► 69]".
W65	TSP serial number inconsistent! Please check!	The Transpector was replaced.	Contact INFICON customer service.
		The wiring board was replaced.	
		The EEPROM on the wiring board is defective.	
W66	ECO-Check brand-new!	A new ECO-Check calibrated leak was connected.	Enter the serial number and the code of the calibrated leak, refer to the installation manual of the calibrated leak.
W67	ECO-Check expires on DD.MM.YYYY!	The validity of the ECO-Check gas store expires in three months.	Order an ECO-Check gas store.
W68	ECO-Check expired!	The validity of the ECO-Check gas store is expired (2 years operation or older than 3 years).	Replace the ECO-Check gas store, see installation manual of the ECO-Check.
W70	All EEPROM parameters of the ECO-Check lost!	The EEPROM in the ECO-Check calibrated leak is empty or defective.	Replace the ECO-Check calibrated leak, see installation manual of the ECO-Check.
W71	No communication with ECO-Check!	The ECO-Check calibrated leak cannot be addressed by the basic unit.	Check the connection to the ECO-Check calibrated leak.
		No ECO-Check calibrated leak connected.	If the problem still exists: Contact INFICON customer service.
W72	No communication with sniffer line!	The sniffer line cannot be addressed by the basic unit.	Check the connection of the sniffer line with the basic unit (disconnect and reconnect; if possible try a different sniffer line). If the problem still exists, contact INFICON customer service!
E73	Unsuitable sniffer line!	The SL3000XL of Protec P3000 was connected accidentally.	Connect the correct sniffer line.
W74	IC1000 SW version is obsolete!	A SW update of the IC1000 is required for full functionality.	Please contact INFICON Service.
W75	No communication with IC1000!	Communication was established, but has failed.	Check the connection to the IC1000.
W77	Changed calibration factor! (Possible message while the calibration is being tested.)	The calibration has changed by more than 15% since the last calibration changed.	Perform new calibration of device, see also "Calibrate [► 40]".

No.	Message	Possible error sources	Fault rectification
W78	Signal difference between test leak and air too small. (1.25 for R134a)	The calibrated leak is too small.	Check the leak rate of the calibrated leak or use a calibrated leak with a higher leak rate.
		The calibrated leak is defective.	Check the background signal by switching off the ZERO function (press the ZERO button longer than 2 s).
		The background signal during calibration is too high.	Perform new calibration of device, see also "Calibrate [► 40]".
W79	Factor outside the range!	An invalid factor was detected during IGS calibration.	Repeat the IGS calibration, see also "Suppress interfering gases [► 44]".
W80	Cathode switched over!	The device was switched over to another cathode without calibration.	Perform new calibration of device, see also "Calibrate [► 40]".
W81	Calibration factor too small!	During the internal calibration, the calibration factor was determined to be < 0.1 , or < 0.01 during the external calibration.	Check the entry for the leak rate, see also "Calibrate [► 40]".
		It was incorrectly calibrated.	Perform new calibration of device, see also "Calibrate [► 40]".
		The leak rate of the calibrated leak is incorrect (especially during external calibration).	Replace the external calibrated leak.
W82	Calibration factor too large!	During the internal calibration, the calibration factor was determined to be > 10 or > 99.9 during the external calibration.	Check the entry for the leak rate, see also "Calibrate [► 40]".
		It was incorrectly calibrated.	Perform new calibration of device, see also "Calibrate [► 40]".
		The leak rate of the calibrated leak is incorrect (especially during external calibration).	Replace the external calibrated leak.
		The Transpector sensor is not sensitive.	Contact INFICON customer service.
W83	Baseline offset out of range!	The device has not been in use for a long time.	Leave the device running for longer.
E84	Test leak signal too low (absolute current from test leak too low, approx. 1 g/a for R134a)	The calibrated leak is too small.	Use a calibrated leak with a higher leak rate.
		The calibrated leak is defective.	Check the leak rate of the calibrated leak.
W85	Problem during peak finding!	The Transpector sensitivity is too low.	Contact INFICON customer service.
		The gas flow to the sensor is blocked, the flow divider is clogged.	
		The Transpector cannot find the peak. Calibration not possible.	Replace the calibrated leak. If the error persists, contact INFICON customer service.

No.	Message	Possible error sources	Fault rectification
W86	Internal calibration impossible	You are trying to calibrate while the device is not ready to measure.	Wait for calibration until the device has run up. Call up the measurement view with the menu.
W87	Unsupported gas in the ECO-Check!	-EEPROM in ECO-Check not programmed. The ECO-Check is defective.	Use another ECO-Check.
E90	Overspeed (of TMP, E001)	The rotation speed of the turbo molecular pump is too high.	Contact INFICON customer service.
E91	Overvoltage (on TMP, E002)	Error in the electric power supply of the turbo molecular pump	Contact INFICON customer service.
E92	Run-up time error (E006)	The turbo molecular pump does not run up correctly.	Contact INFICON customer service.
E93	Connection electronic drive unit - pump defective (E008)	The connection between the control and the turbo molecular pump is faulty.	Contact INFICON customer service.
E94	Error in the TC control unit (E015)	Defective turbo molecular pump control.	Switch the instrument off. Wait until the pump has stopped (> 5 min). Switch the device back on. Contact INFICON customer service.
E95	Electronic drive unit does not recognize pump. (E021)	Error in the communication between turbo molecular pump and control.	Contact INFICON customer service.
E96	Error in temperature monitoring of the TC (E025)	The main air filter is soiled.	Clean or replace the filter, see also "Replacing the air filter of the main unit [► 74]". Confirm the work, see also "Calling up and managing maintenance information [► 69]".
		The ambient temperature is too high.	Observe the ambient conditions, see also "Ambient conditions [► 16]".
E97	Error of the temperature sensor in the TC (E026)	The temperature sensor is defective.	Contact INFICON customer service.
E98	Error in the motor stage or the control (E037)	There is an error in the motor stages or the control.	Contact INFICON customer service.
E99	Error on the power supply (F007)	The supply voltage has failed.	Contact INFICON customer service.

Table 9: Warning and error messages

* The work may be carried out only by service personnel who have been authorized by INFICON.

8 Maintenance

8.1 Calling up and managing maintenance information

In the main menu you can call up information regarding the last operational states of the device and its maintenance by selecting "History & maintenance." Here you will find especially the list of the last error messages. You will also determine which maintenance work has to be confirmed and confirm maintenance.

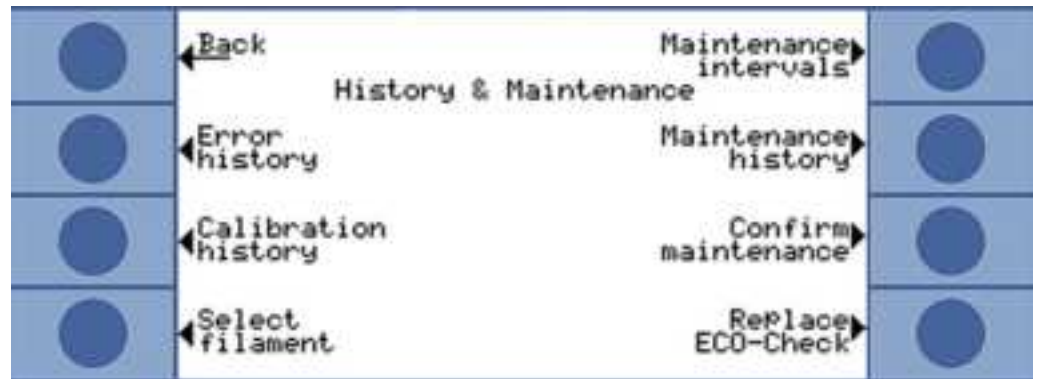


Fig. 40: Selection options in "History & maintenance"

Error list display

The error list includes the errors and warnings that occurred during the operation of the Ecotec E3000. Date and time are shown followed by an identification for the error or the warning (E... with errors and W... with warnings), with a brief description of the error or the warning.



Fig. 41: List with errors and warnings

To have the full warning or error message displayed, select the appropriate line and press the button with the magnifying glass. Detailed information for possible causes is also specified for many messages.

Calibration list

This list shows all calibrations that were carried out during the operation of the Ecotec E3000. Information provided includes

- Date and time
- Type of calibration (internal or external)
- Number of gases (only with external calibration)
- Calibration factor



Date	Time	Type	Gas	Factor
21.01.14	07:40	external	1	0.794
13.01.14	10:33	external	1	0.652

Fig. 42: Calibration list

To have the complete calibration information displayed, select the appropriate line and press the button with the magnifying glass. The calibration information includes:

- Calibration mode (internal or external), for internal: Gas in calibrated leak
- Gas
 - Internal calibration: one or more gas numbers
 - External calibration: Gas number, mass position, gas
- Date and time of calibration
- Number of operating hours at the time of calibration
- Calibration factor
- Peak position (if different from mass position)
- Flow through sniffer line at the time of calibration
- Cathode that was in use at the time of calibration (A/B)
- Size of the calibrated leak that is used (external calibrated leak for external calibration and ECO-Check for internal calibration)
- Argon flow and mass deviation at the time of calibration
- Flow of the gas that was calibrated and background signal


Maintenance intervals To call up the elapsed operating hours of the device since the start-up, select "Maintenance intervals". The information does not apply to the sniffer line because different lines could have been used.

The remaining operating hours up until the next maintenance work are displayed below.

The times below "Next maintenance for ..." are based on confirmations that you enter after maintenance work.

See "Confirm maintenance" below.

Maintenance list The maintenance list shows all maintenance work Maintenance plan [► 74] that was confirmed within the scope of the work. Shown are date and time of completed works, the number of operating hours of the device at the time of the maintenance work and the type of work performed. To have the complete entry displayed, select the appropriate line and press the button with the magnifying glass.

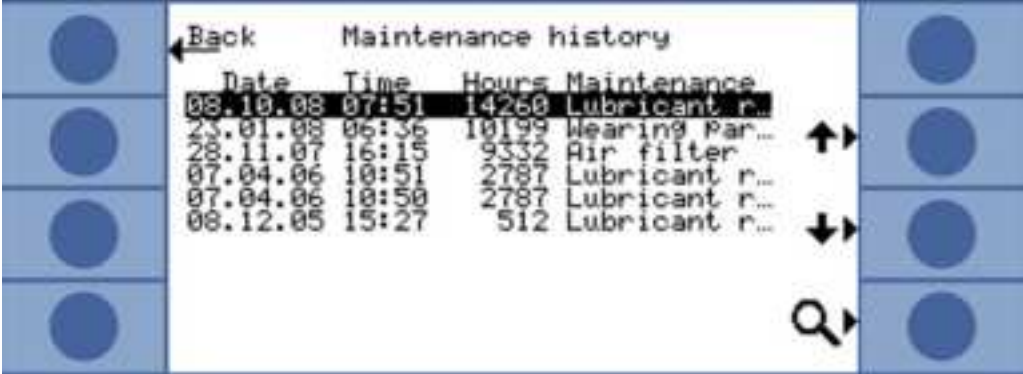

Date	Time	Hours	Maintenance
08.10.08	07:51	14260	Lubricant r...
23.01.08	06:36	10199	Warning Par...
28.11.07	16:15	9332	Air filter
07.04.06	10:51	2787	Lubricant r...
07.04.06	10:50	2787	Lubricant r...
08.12.05	15:27	512	Lubricant r...

Fig. 43: Entries in a maintenance list

The detailed view also shows maintenance work that you as operator cannot confirm. In order to explain and confirm this work, you have to have special technical knowledge and access to the "Service" menu.

Confirm maintenance

In the "Confirm maintenance" menu, confirm the replacement of the oil wick cartridge and the air filter replacement.

Select "Oil wick cartridge" or "Air filter" and then press "OK." You are then prompted to state whether you want to confirm the maintenance, i.e. make an entry in the maintenance list.

The maintenance intervals for the oil wick cartridge and the air filter of the basic unit are specified and the system will remind you when the interval has elapsed.

Sniffer filter

Because the device can be operated with different sniffer lines, any replacement of the filter in the sniffer tip is not subject to the maintenance schedule. Instead, you can enter a period in "Sniffer filter" after which the device will ask you to replace the filter.

Setting range: 10 to 1000 hours and infinite (∞).

Set ∞ if you do want to suppress the request for replacement.

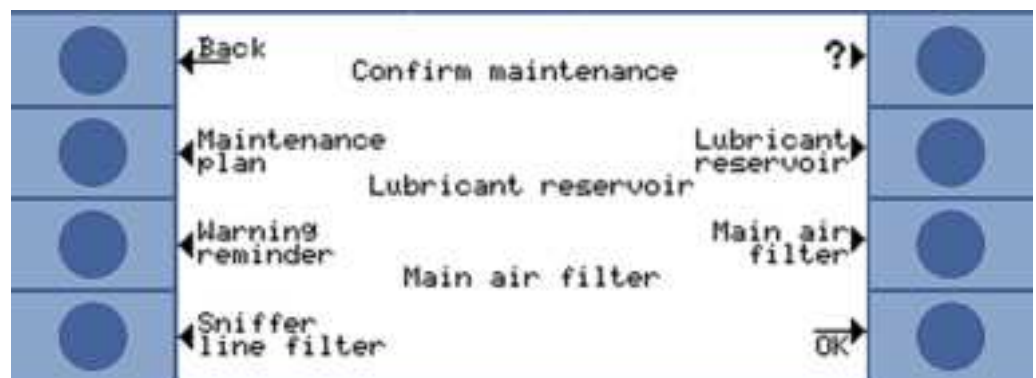


Fig. 44: Confirming maintenance work

Maintenance plan

If you select "Maintenance schedule," you have the option of deactivating the plan and thus the reminder messages. Under the maintenance schedule menu item, the warning W80 "Cathode switched over!" can be deactivated irrespective of the other reminders.



Fig. 45: Maintenance plan

Repetition of warnings

If the maintenance schedule is activated but no maintenance work is confirmed, the "Reminder of pending maintenance work" warning will be displayed every two hours. You can deactivate the repeated display of this warning in "Warning repetition."

Cathode Selection

In this window, you can switch from cathode B back to cathode A if the device has independently selected cathode B. The setting can only be made in the idle state and with a stopped turbo molecular pump.

Select the cathode and confirm with "OK."

Replacing the ECO-Check

If an ECO-Check calibrated leak is connected or the gas store of the ECO-Check is replaced, you have to enter the serial number as well as the identification with the calibration data. The installation of the ECO-Check in the Ecotec E3000 as well as the gas store replacement are described in the ECO-Check manual.

The ECO-Check must be connected to the device. You must write down the serial number and the identification on the gas store or you can refer to the supplied certificate for that information.

The appropriate entry window opens with "Replacing the ECO-Check."

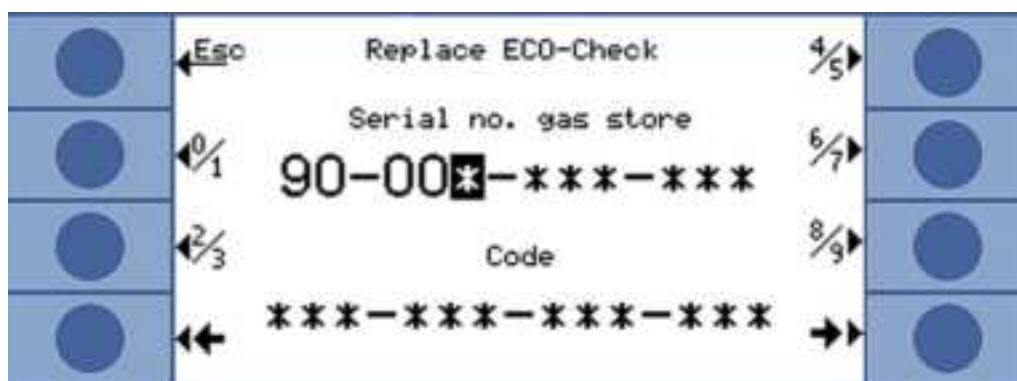


Fig. 46: Enter serial number and identification of the gas store.

The Ecotec E3000 checks the entered number. It will report "Invalid entry" if the ECO-Check cannot be identified with the number.

8.2 Maintenance work

Failure to perform the maintenance work specified in the maintenance schedule will void the warranty.



DANGER

Risk of death from electric shock

There are high voltages inside the device. Touching parts where electrical voltage is present can result in death.

- ▶ Disconnect the device from the power supply prior to any installation and maintenance work.
- ▶ Ensure that the electrical supply cannot be switched back on unintentionally.

NOTICE

Property damage from rotating parts

The turbo molecular pump requires 5 minutes to power down.

- ▶ Allow the turbo molecular pump to power down before any maintenance work is performed or before moving the device.

You will need the following tools for maintenance work:

- 2 screwdrivers, size 2
- Box wrench, 19mm (included in the delivery scope)
- Allen wrench, 8 mm (included in the scope of delivery)
- Allen wrench, 3 mm (not included in the scope of delivery)
- Tweezers

8.2.1 Maintenance plan

Maintenance	Material description	Part number	Operating hours			Period	Maintenance level
			500	2000	10000		
Check the sinter filter of the sniffer tip and replace, if necessary	Sinter filter for sniffer tip	200 03 500	X ¹⁾				I
Replace the filter inserts of the capillary filters and the water protection tip.	Felt for capillary filter	200 001 116		X			I
Clean or replace the main air filter in the floor of the housing	ECOTEC E3000 air filter (104 x 154 mm; 5 pcs.)	200 001 552			X		I
Check internal filters and replace if necessary (three pieces)	Internal filter	200 03 679			X		II
Replace the oil wick cartridge of the turbo molecular pump	Operating fluid reservoir (The date on the packaging is the last possible installation date).	200 003 801				2 years ²⁾	II
Revision: Change bearings and replace oil wick cartridge	turbo molecular pump	200 003 800 200 003 800R				4 years	III
Replacing the diaphragms of the diaphragm pump	Wear parts set for diaphragm pump	200 03 504			X		III
Replace gas store no later than after 2 years of operation. Maximum shelf life: storage plus operation: 3 years	Replacement gas store	531-010				2 years	

Maintenance plan legend

¹⁾: If the measuring environment is heavily contaminated, an earlier change may also be necessary.

²⁾: Dependent on environmental influences, operating conditions, contamination and application process (optional)

Maintenance level I: Customer without any technical training

Maintenance level II: Customer with technical and INFICON training

Maintenance level III: INFICON Service

8.2.2 Replacing the air filter of the main unit

The air filter is inside a duct that is accessible from the bottom of the device. The slot is closed with a cover plate. The cover plate is held in place with a 3mm Allen screw.

**⚠ DANGER****Risk of death from electric shock**

There are high voltages inside the device. Touching parts where electrical voltage is present can result in death.

- ▶ Disconnect the device from the power supply prior to any installation and maintenance work.
- ▶ Ensure that the electrical supply cannot be switched back on unintentionally.

NOTICE**Property damage from rotating parts**

The turbo molecular pump requires 5 minutes to power down.

- ▶ Allow the turbo molecular pump to power down before any maintenance work is performed or before moving the device.



Fig. 47: Loosening the air filter cover

1. Remove the sniffer line and the ECO-Check from the basic unit.
2. Place the basic unit with the front panel on a soft surface.
3. Loosen the screw of the cover plate until you can rotate the cover plate to the side.
4. Pull out the air filter and replace it with a new one.
5. Retighten the cover plate in front of the duct.
6. Put the device back on its feet and connect sniffer line and ECO-Check, if needed.
7. Confirm the work, see "Calling up and managing maintenance information [▶ 69]."

8.2.3 Replace operating fluid reservoir.

The oil wick cartridge supplies the turbo molecular pump with lubricant. It consists of a plastic container with a soaked liner and 8 soaked sticks (Porex rods). Plastic container and Porex rods are below the turbo molecular pump and accessible from the bottom of the Ecotec E3000.

The bore for the oil wick cartridge is closed with an aluminum plug and a plastic screw.

The oil wick cartridge has a limited service life and storage period, see "Maintenance plan [► 74]."



DANGER

Risk of death from electric shock

There are high voltages inside the device. Touching parts where electrical voltage is present can result in death.

- ▶ Disconnect the device from the power supply prior to any installation and maintenance work.
- ▶ Ensure that the electrical supply cannot be switched back on unintentionally.

CAUTION

Danger of poisoning

The operating fluid reservoir can contain toxic substances from the pumped medium.

- ▶ A data safety sheet for the lubricants is available upon request.
- ▶ Wear appropriate protective clothing, when needed.
- ▶ Dispose of the operating fluid reservoir as stipulated by local regulations.

- 1 Remove the sniffer line and the ECO-Check from the basic unit.
- 2 Place the basic unit with the front panel on a soft surface.
- 3 Unscrew the plastic screw with a 19 mm box wrench.

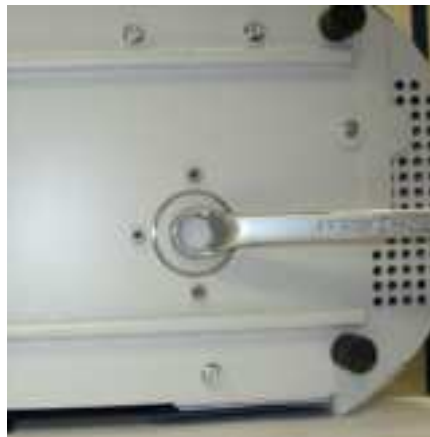


Fig. 48: Fastener of the operating fluid reservoir

- 4 Lever out the aluminum plug with one or two narrow screw drivers.
- 5 Hook something into the center bore of the plastic container and pull out the plastic container.



Fig. 49: Operating fluid reservoir open

- 6 Pull the eight Porex rods out of the front side of the bore with tweezers.



Fig. 50: Porex rods

- 7 Insert the new Porex rods with tweezers.
- 8 Place the plastic container in the bore with the soaked liner first and close it with the aluminum plug.
- 9 Tighten the plastic screw again. Ensure that the o-ring is placed correctly in the groove of the plastic screw and that the bore is lined up properly.
- 10 Confirm the work, see "Calling up and managing maintenance information [► 69]."

8.2.4 Replace mains fuses.

The fuses are located behind a flap near the mains switch. They are in two slots. The power supply fuses are available under order no. 200 000 914. Two identical fuses must be used at all times.



⚠ DANGER

Risk of death from electric shock

There are high voltages inside the device. Touching parts where electrical voltage is present can result in death.

- ▶ Disconnect the device from the power supply prior to any installation and maintenance work.
- ▶ Ensure that the electrical supply cannot be switched back on unintentionally.

- Check which version of the power switch is present on your leak detector and follow the corresponding procedure.



1 Power switch version A

2 Power switch version B

Power switch version A

- 1 Lever out the cover of the mains plug to the right with a screwdriver.



- 2 Pull out the two slots and replace both fuses.



- 3 Reinsert the slots with the new fuses. Ensure that the arrows point up.
- 4 Close the flap.

Power switch version B

- 1 Lever out the cover of the mains plug to the right with a screwdriver.



2 Use a screwdriver to pry the slots out to the right.



3 Pull out the two slots and replace both fuses.



- 4 Reinsert the slots with the new fuses.
- 5 Close the flap.

8.2.5 Replacing the filter inserts of the capillary filter and the water conservation tip

The plastic capillary filter, the metal capillary filter and the water conservation tip are equipped with filter inserts.

There is a cone seal below the metal capillary filter and the water conservation tip. This seal is already integrated into the plastic capillary filter.

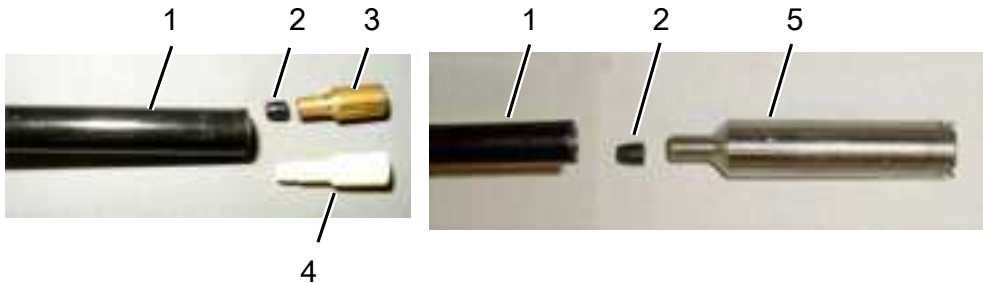


Fig. 51: Capillary filter

1	Sniffer line end	4	Plastic capillary filter
2	Cone seal	5	Water conservation tip
3	Metal capillary filter		



Fig. 52: Pressing the filter inserts out of the capillary filter

Capillary filter and water conservation tip are screwed onto the sniffer line end.

The filter inserts are inserted and lie in front of a small metal grill that is also inserted.

To replace the filter inserts, proceed as follows:

1. Turn off the Ecotec E3000.
2. Unscrew the capillary filter or the water conservation tip. Make sure that the cone seal does not fall out.
3. Push out the old filter pads and the metal grill from the rear.
4. Dispose of the old inserts and clean the metal grill.
5. Push the metal grill and then the two new inserts into the filter from the front. Make sure that grill and inserts do not cant.
6. Turn on the Ecotec E3000.
7. Close the sniffer tip with your finger. With the water protection tip, you have to also cover the opening on the side. You should then be able to feel a negative pressure. If not then there is a leak somewhere and you have to check the screw connection. The cone seal may also have fallen out.
8. Confirm the work, see "Calling up and managing maintenance information [► 69]."
9. Calibrate the Ecotec E3000, see "Calibrate [► 40]."

8.2.6 Replacing the sinter filter of the sniffer handle



Fig. 53: Sinter filter in the sniffer handle

The sinter filter is in the sniffer handle. To replace the filter inserts, proceed as follows:

1. Turn off the Ecotec E3000.
2. Unscrew the two cross-head screws that hold the sniffer tip in place.
3. Remove sinter filter including o-ring.
4. Check the filter for visible soiling.
5. Insert a new sinter filter with o-ring in the base of the filter tip.
6. Tighten the sniffer tip again.
7. Turn on the Ecotec E3000.
8. Close the sniffer tip with your finger. You should be able to feel the underpressure. If not then there is a leak somewhere and you have to check sniffer tip and handle.
9. Confirm the work, see "Calling up and managing maintenance information [▶ 69]."
10. Calibrate the Ecotec E3000, see "Calibrate [▶ 40]."

9 Decommissioning

9.1 Disposing of the device

The owner can dispose of the device or it can be sent to INFICON.

The device consists of materials that can be recycled. This option should be exercised to prevent waste and also to protect the environment.

- During disposal, observe the environmental and safety regulations of your country.

9.2 Returning the device for maintenance, repair or disposal



⚠ WARNING

Danger due to harmful substances

Contaminated devices could endanger health. The contamination declaration serves to protect all persons who come into contact with the device. Devices sent in without a return number and completed contamination declaration will be returned to the sender by the manufacturer.

- Fill in the declaration of contamination completely.

- 1 Contact the manufacturer and send in a completed declaration of contamination before return shipment.
⇒ You will then receive a return number and the shipping address.
- 2 Use the original packaging when returning.
- 3 Before shipping the instrument, attach a copy of the completed contamination declaration to the outside of the package.

Declaration of Contamination

The service, repair, and/or disposal of vacuum equipment and components will only be carried out if a correctly completed declaration has been submitted. Non-completion will result in delay.

This declaration may only be completed (in block letters) and signed by authorized and qualified staff.

1 Description of product Type _____ Article Number _____ Serial Number _____	2 Reason for return _____ _____																				
<div style="border: 1px solid black; width: 50px; height: 20px; margin: 0 auto;"></div>																					
3 Operating fluid(s) used (Must be drained before shipping.) _____ _____																					
4 Process related contamination of product: <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 40%;">toxic</td> <td style="width: 20%;">no <input type="checkbox"/> 1)</td> <td style="width: 20%;">yes <input type="checkbox"/></td> <td rowspan="6" style="width: 20%; text-align: center; vertical-align: middle;"> 2) Products thus contaminated will not be accepted without written evidence of decontamination! </td> </tr> <tr> <td>caustic</td> <td>no <input type="checkbox"/> 1)</td> <td>yes <input type="checkbox"/></td> </tr> <tr> <td>biological hazard</td> <td>no <input type="checkbox"/></td> <td>yes <input type="checkbox"/> 2)</td> </tr> <tr> <td>explosive</td> <td>no <input type="checkbox"/></td> <td>yes <input type="checkbox"/> 2)</td> </tr> <tr> <td>radioactive</td> <td>no <input type="checkbox"/></td> <td>yes <input type="checkbox"/> 2)</td> </tr> <tr> <td>other harmful substances</td> <td>no <input type="checkbox"/> 1)</td> <td>yes <input type="checkbox"/></td> </tr> </table>		toxic	no <input type="checkbox"/> 1)	yes <input type="checkbox"/>	 2) Products thus contaminated will not be accepted without written evidence of decontamination!	caustic	no <input type="checkbox"/> 1)	yes <input type="checkbox"/>	biological hazard	no <input type="checkbox"/>	yes <input type="checkbox"/> 2)	explosive	no <input type="checkbox"/>	yes <input type="checkbox"/> 2)	radioactive	no <input type="checkbox"/>	yes <input type="checkbox"/> 2)	other harmful substances	no <input type="checkbox"/> 1)	yes <input type="checkbox"/>	
toxic	no <input type="checkbox"/> 1)	yes <input type="checkbox"/>	 2) Products thus contaminated will not be accepted without written evidence of decontamination!																		
caustic	no <input type="checkbox"/> 1)	yes <input type="checkbox"/>																			
biological hazard	no <input type="checkbox"/>	yes <input type="checkbox"/> 2)																			
explosive	no <input type="checkbox"/>	yes <input type="checkbox"/> 2)																			
radioactive	no <input type="checkbox"/>	yes <input type="checkbox"/> 2)																			
other harmful substances	no <input type="checkbox"/> 1)	yes <input type="checkbox"/>																			
<div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> The product is free of any substances which are damaging to health yes <input type="checkbox"/> </div>																					
<div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> 1) or not containing any amount of hazardous residues that exceed the permissible exposure limits </div>																					
5 Harmful substances, gases and/or by-products Please list all substances, gases, and by-products which the product may have come into contact with: <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <thead> <tr> <th style="width: 30%;">Trade/product name</th> <th style="width: 20%;">Chemical name (or symbol)</th> <th style="width: 30%;">Precautions associated with substance</th> <th style="width: 20%;">Action if human contact</th> </tr> </thead> <tbody> <tr><td> </td><td> </td><td> </td><td> </td></tr> <tr><td> </td><td> </td><td> </td><td> </td></tr> <tr><td> </td><td> </td><td> </td><td> </td></tr> <tr><td> </td><td> </td><td> </td><td> </td></tr> </tbody> </table>		Trade/product name	Chemical name (or symbol)	Precautions associated with substance	Action if human contact																
Trade/product name	Chemical name (or symbol)	Precautions associated with substance	Action if human contact																		
6 Legally binding declaration: I/we hereby declare that the information on this form is complete and accurate and that I/we will assume any further costs that may arise. The contaminated product will be dispatched in accordance with the applicable regulations.																					
Organization/company _____ Address _____ Post code, place _____ Phone _____ Fax _____ Email _____ Name _____ Date and legally binding signature _____ Company stamp _____																					

Copies:
 Original for addressee - 1 copy for accompanying documents - 1 copy for file of sender

10 Appendix

10.1 Accessories

Accessory part	Order no.
Sniffer line	
SL3000-3, 3 m length	525-001
SL3000-5, 5 m length	525-002
SL3000-10, 10 m length	525-003
SL3000-15, 15 m length	525-004
Adapter for P3000/E3000 sniffer line	525-005
Sniffer probes	
ST 312, 120 mm length, rigid	122 13
FT 312, 120 mm length, flexible	122 14
FT 200, 200 mm length, rigid	122 18
FT 250, 250 mm length, flexible	122 66
ST 385, 385 mm length, rigid	122 15
FT 385, 385 mm length, flexible	122 16
FT 600, 600 mm length, flexible	122 09
ST 500, 500 mm length, rigid, 45° angled	122 72
Water conservation tip	122 46
Holder for SL3000 sniffer line	525-006
ECO-Check calibrated leak for R134a	531-001
ECO-Check gas store for R134a	531-010
PRO-Check calibrated leak	521-001
Calibration set for IGS mode	531-003
Calibrated leaks for individual refrigerants, leak rate 2-5 g/a, leak rate 16 g/a also available	
R134a	122 20
R600a	122 21
R404A	122 22
R152a	122 27
R407C	122 28
R410A	122 29
R401A	122 30
Halon 1301 (R13B1)	122 34
HFO-1234yf	122 35
SF6	123 00
R245fa	123 04
R452A	123 05
R441A	123 06
Xe	123 14

Accessory part	Order no.
R1234zf	123 15
Calibrated leak 100 % hydrogen	123 22
Leak rate 1.00E-4 mbarl/s for calibration setting with 100 % hydrogen; leak rate 2.01E-3 mbar l/s for calibration setting with 95/5 forming gas	
Calibrated leak for R290, leak rate 7-8 g/a	122 31
Calibrated leak for helium	
S-TL 4, leak rate range 10 ⁻⁴ mbar l/s	122 37
S-TL 5, leak rate range 10 ⁻⁵ mbar l/s	122 38
S-TL 6, leak rate range 10 ⁻⁶ mbar l/s	122 39
Calibrated leak for methane, TL4-6	122 49
Calibrated leaks for other refrigerants on request	
External display unit for Ecotec E3000RC	
for use as table device	551-100
for rack mounting	551-101
Connecting cable for external display unit	
for Ecotec E3000RC, 5 m	551-102
for Ecotec E3000RC, 1 m	551-103
Module	
IC1000	525-200
Data cable, 0.5 m IC1000 <-> BM1000	560-334
Bus module	
BM1000 PROFIBUS	560-315
BM1000 PROFINET IO	560-316
BM1000 DeviceNet	560-317
BM1000 EtherNet/IP	560-318

10.2 Gas library

The software of the Ecotec E3000 includes a list with approx. 100 gases that can be relevant for the refrigeration industry. These gases are saved to ROM (read only memory) and can be selected from the list in the appropriate menus for gases and trigger values. Mass number (measuring position), molecular mass, normalization factor and viscosity are stored for each one. The data in this ROM cannot be changed. The program additionally provides six empty memory spaces (user library RAM memory). The user can save personally defined gases to them, see "Setting Custom Gas [► 46]".

The pre-set mass number (measuring position) has a gray background for each gas.

Gas	Formula	Other designation	Measuring position (xxx amu)	Molecular mass (xxx.x amu)	Fragmentation factor	Normalization factor (x.xExx)	Helium viscosity factor
R12B1	CF ₂ ClBr	Halon 1211	85	165.4	1.00	1.40E+08	0.523
			87		0.32		
			50		0.12		
			129		0.15		
			131		0.15		
R13B1	CF ₃ Br	Halon 1301	69	149	1.00	3.50E+07	0.852
			129		0.12		
			131		0.12		
			148		0.10		
			150		0.10		
R32	CH ₂ F ₂		51	52	1.00	1.90E+08	0.632
			52		0.10		
R41	CH ₃ F		34	34	1.00	7.00E+07	0.551
			33		1.00		
R50	CH ₄	Methane	15	16	1.00	7.00E+07	0.556
R116	C ₂ F ₆		69	138	1.00	7.00E+07	0.709
			119		1.00		
R123	C ₂ HF ₃ Cl ₂		83	152.9	1.00	7.00E+07	0.540
			85		1.00		
R124	C ₂ HF ₄ Cl		67	136.5	1.00	7.00E+07	0.581
			51		1.00		
R125	C ₂ HF ₅		51	120	1.00	6.70E+07	0.653
			69		0.27		
			101		0.35		
R134a	C ₂ H ₂ F ₄		69	102	0.72	1.10E+08	0.591
			83		0.46		
			51		0.12		
R143a	C ₂ H ₃ F ₃		69	84	1.00	7.00E+07	0.561
			65		0.35		
R152a	C ₂ H ₄ F ₂		51	66.1	1.00	8.70E+07	0.515
			65		0.47		
R170	C ₂ H ₆	Ethane	26	30.1	1.00	7.00E+07	0.479
R218	C ₃ F ₈		69	188	1.00	2.90E+07	0.627
			169		0.25		
R227ea	C ₃ HF ₇		69	170	1.00	8.80E+07	0.627
			51		0.18		
			82		0.15		

Gas	Formula	Other designation	Measuring position (xxx amu)	Molecular mass (xxx.x amu)	Fragmentation factor	Normalization factor (x.xExx)	Helium viscosity factor
R236fa	$C_3H_2F_6$		69	152	1.00	3.90E+07	0.550
			64		0.34		
			133		0.30		
			113		0.06		
R245fa	$C_3H_3F_5$		64	134	0.58	6.50E+07	0.520
			51		1.00		
			69		0.32		
			95		0.03		
			115		0.13		
R290	C_3H_8	Propane	41	44.1	0.91	9.10E+08	0.433
			39		1.00		
			42		0.32		
R356	$C_4H_5F_5$		77	166.1	1.00	7.00E+07	0.561
			69		1.00		
R404A	44 % R125		69	97.6	1.00	9.30E+07	0.607
	52 % R143a		51		0.52		
	4 % R134a		101		0.23		
R406A	55 % R22		51	89.9	1.00	7.00E+07	0.566
	4 % R600a		65		1.00		
	41 % R142b						
R407A	20 % R32		51	90.1	1.00	7.00E+07	0.637
	40 % R125		69		1.00		
	40 % R134a						
R407B	10 % R32		51	102.9	1.00	7.00E+07	0.647
	70 % R125		101		1.00		
	20 % R134a						
R407C	10 % R32		51	86.2	1.00	1.80E+08	0.627
	70 % R125		69		0.75		
	20 % R134a		83		0.38		

Gas	Formula	Other designation	Measuring position (xxx amu)	Molecular mass (xxx.x amu)	Fragmentation factor	Normalization factor (x.xExx)	Helium viscosity factor
R407D	23 % R32		69	91	1.00	7.00E+07	0.612
	25 % R125		83		1.00		
	52 % R134a						
R407E	25 % R32		51	83.8	1.00	7.00E+07	0.622
	15 % R125		69		1.00		
	60 % R134a						
R407F	40 % R134a		51	82.1	1.00	1.90E+08	0.670
	30 % R125		69		0.35		
	30 % R32						
R410A	50 % R32		51	72.6	1.00	1.20E+08	0.673
	50 % R125		101		0.26		
			69		0.14		
R410B	45 % R32		51	75.6	1.00	7.00E+07	0.673
	55 % R125		101		0.35		
R413A	9 % R218		69	104	1.00	7.00E+07	0.581
	88 % R134a		83		1.00		
	3 % R600						
R417A	50 % R134a		51	106.7	1.00	1.80E+08	0.610
			69		0.70		
	46 % R125		83		0.22		
R422D	4 % R600a						
	65.1 % R125		51	112.2	1.00	8.78E+07	0.622
	31.5 % R134a		69		0.36		
	3.4 % R600a						

Gas	Formula	Other designation	Measuring position (xxx amu)	Molecular mass (xxx.x amu)	Fragmentation factor	Normalization factor (x.xExx)	Helium viscosity factor
R438A	45 % R125		51	104.9	1.00	1.04E+08	0.617
	44.2 % R134a		69		0.42		
	8.5 % R32						
	1.7 % R600						
	0.6 % R601a						
R441A	54.8 % R290		43	49.6	1.00	7.80E+08	0.398
	36.1 % R600		41		0.59		
	6 % R600a						
	3.1 % R170						
R442A	31 % R32		51	81.8	1.00	2.40E+08	0.629
	31 % R125		69		0.33		
	30 % R134a						
	5 % R227ea						
	3 % R152a						
R448A	26 % R32		51	99.3	1.00	1.10E+08	0.625
	26 % R125		69		0.38		
	21 % R134a		64		0.13		
	20 % R1234yf						
	7 % R1234ze						

Gas	Formula	Other designation	Measuring position (xxx amu)	Molecular mass (xxx.x amu)	Fragmentation factor	Normalization factor (x.xExx)	Helium viscosity factor
R449A	25.7 % R134		51	87.2	1.00	2.10E+08	0.622
			69		0.48		
	25.3 % R1234yf		64		0.15		
R449C	20 % R32		51	90.3	1.00	2.53E+08	0.622
			69		48.0		
	20 % R125		64		15.0		
R450A	31 % R1234yf						
	29 % R134a						
R452A	58 % R1234ze		69	109	1.00	1.91E+08	0.592
			83		0.37		
	42 % R134a		64		0.33		
			51		0.22		
			95		0.17		
R452B	59 % R125		51	103.5	1.00	1.30E+08	0.612
			69		0.32		
	30 % R1234yf		64		0.12		
R454B	67 % R32		51	72.9	1.00	2.34E+08	0.639
			69		0.39		
	26 % R1234yf		64		0.31		
R454C	7 % R125						
R507	50 % R125		51	62.6	1.00	2.30E+08	0.638
			64		0.18		
	50 % R143a		69		0.19		
			95		0.07		
R507	50 % R125		69	90.8	1	3.72E+08	0.62
			64		1		
	50 % R143a		51		1		
			95		0.26		
R507	50 % R125		69	98.9	1.00	8.10E+07	0.612
			51		0.58		
	50 % R143a		65		0.17		

Gas	Formula	Other designation	Measuring position (xxx amu)	Molecular mass (xxx.x amu)	Fragmentation factor	Normalization factor (x.xExx)	Helium viscosity factor
R508A	39 % R23		69	100.1	1.00	7.00E+07	0.729
	61 % R116		51		0.35		
R508B	46 % R23		69	95.4	1.00	8.60E+07	0.729
	54 % R116		51		0.20		
			119		0.23		
R513A	44 % R134a		69	108.7	1.00	1.70E+08	0.582
			64		0.60		
	56 % R1234yf		83		0.34		
R600	C ₄ H ₁₀	Butane	41	58.1	1.00	7.00E+07	0.377
			42		1.00		
R600a	C ₄ H ₁₀	Isobutane	41	58.1	1.00	2.60E+08	0.377
			42		0.75		
			43		1.00		
			58		0.08		
			IGS		0.91		
R601	C ₅ H ₁₂	Pentane	41	72.2	1.00	7.00E+07	0.341
			42		1.00		
			43		1.00		
R601a	C ₅ H ₁₂	Isopentane	41	72.2	0.60	8.00E+07	0.336
			42		0.84		
			43		1.00		
			57		0.36		
			56		0.12		
R601b	C ₅ H ₁₂	Neo-pentane	57	72.2	1.00	7.00E+07	0.337
R601c	C ₅ H ₁₂	Cyclopentane	41	70.1	0.30	7.00E+07	0.337
			42		1.00		
			70		0.29		
			55		0.28		
			39		0.21		
R1150	C ₂ H ₄	Ethylene	26	28	1	3.20E+08	0.479
R1233zd	C ₃ H ₂ ClF ₃		95	130.5	1.00	5.10E+08	0.558
			69		0.62		
			80		0.14		
			130		0.30		
R1234yf	C ₃ H ₂ F ₄		69	114	1.00	1.60E+08	0.624
			64		0.99		
			95		0.36		
			114		0.50		

Gas	Formula	Other designation	Measuring position (xxx amu)	Molecular mass (xxx.x amu)	Fragmentation factor	Normalization factor (x.xExx)	Helium viscosity factor
R1234ze	C ₃ H ₂ F ₄		69	114	1.00	3.40E+08	0.619
			64		0.82		
			95		0.48		
R1243zf	C ₃ H ₃ F ₃		95	96	1.00	2.90E+08	0.600
			77		0.52		
			51		0.48		
			69		0.41		
			96		0.85		
R1270	C ₃ H ₆	Propene	41	44.1	1.00	3.50E+08	0.433
			39		0.7		
			42		0.62		
Ar		Argon	40	40	1.00	7.00E+07	1.127
CO ₂		R744	44	44	1.00	1.00E+08	0.744
H ₂		Hydrogen	2	2	1.00	5.00E+06	0.448
H ₂ O		R718	18	18	1.00	7.00E+07	0.459
He		Helium	4	4	1.00	3.00E+07	1.000
CO ₂		R744	44	44	1.00	1.00E+08	0.744
HT135		Galden HT135	100	610	0.08	1.20E+07	1.000
			69		1.00		
			119		0.45		
			169		0.42		
			131		0.03		
Kr		Krypton	84	84	1.00	7.00E+07	1.275
N ₂		Nitrogen	28	28	1.00	7.00E+07	0.892
Ne		Neon	20	20.2	1.00	7.00E+07	1.586
NH ₃		R717	17	17	1.00	7.00E+07	0.505
O ₂		Oxygen	32	32	1.00	7.00E+07	1.030
SF ₆			127	146.1	0.80	9.10E+07	0.765
Xe		Xenon	129	131.3	1.00	1.20E+08	1.153
			132		1.00		
ZT130		Galden ZT130	100	497	0.25	7.00E+07	1.000
			117		0.32		
			119		1.00		
			69		0.50		
			135		0.12		

Table 10: Gas library

10.3 Menu tree

Start / sleep			
SERVICE	Service PIN		
Measuring parameters	Gas 1	Gas	Change
	Gas 2	Status	
	Gas 3	Trigger&Unit	
	Gas 4	Display limit	
		Internal calibration	
		Mass and position	
		Calibration factor	
		Last calibration	
		Calibration method	
	Gas def.	Gas definition	Change
		Name	
		Measuring mass	
		Normalization factor	
		Molecular mass	
Settings	Vacuum & access control	ZERO	
		ZERO time	
		Flow limits	upper flow limit
			lower flow limit
		monitoring	Sensitivity
			Automatic cathode
		Calibration	
		Changing the menu PIN	
	Audio	Audio acknowledgment	
		Device speaker	
		Handle speaker	
		Alarm profile	
		Volume	

Settings (continued)	I-Guide setting	I-Guide ON/OFF	
		PGM. 1...10	Change
			Name
			Gas type A
			Gas type B
			Trigger value A
			Trigger value B
			Number of measuring points
			Measuring time
			Idle time
	Miscellaneous	Key ON/OFF	
		Language	
		Date & time	
		Sniffer line light	
		Pressure unit	
		Leak rate filter	
		Alarm delay	
		Wake up	
	Display	Contrast	
		Max. value	
	Interfaces	Gas display handle	
		Control location	
		Recorder output	Scaling recorder
			Gas recorder
		PLC setting	Define PLC inputs
			Define PLC output
		RS232 protocol	
		RS232 settings	
		ECO-Check	

History&maintenance	Error list display		
	Calibration list display		
	Cathode selection		
	Maintenance intervals		
	Maintenance list display		
	Confirm maintenance	Maintenance plan	
		Warning repetition	
		Sniffer line filter	
Info		Oil reservoir	
		Air filter	
	Replacing the ECO-Check		
	1/11 General information		
	2/11 Turbo pump		
	3/11 Transpector		
	4/11 ECO-Check		
	5/11 Sniffer line		
	6/11 I/O port		
	7/11 Analog		
	8/11 Analog (2)		
	9/11 RS232		
	10/11 Info field bus	CAL -->	External calibration
	11/11 Info field bus BM1000		Adjust IGS

Table 11: Menu tree of Ecotec E3000

10.4 CE Declaration of Conformity



We – INFICON GmbH – herewith declare that the products defined below meet the basic requirements regarding safety and health and relevant provisions of the relevant EU Directives by design, type and the versions which are brought into circulation by us. This declaration of conformity is issued under the sole responsibility of INFICON GmbH.

In case of any products changes made without our approval, this declaration will be void.

The products meet the requirements of the following Directives:

- *Directive 2014/35/EU (Low Voltage)*
- *Directive 2014/30/EU (Electromagnetic Compatibility)*
- *Directive 2006/42/EC (Machinery)*
- *Directive 2011/65/EC (RoHS)*

Designation of the product:

Multigas leak detector

Applied harmonized standards:

- *DIN EN 61010-1:2011*
- *DIN EN 61326-1:2013*
Class B according to EN 55011
- *DIN EN ISO 12100:2010*
- *DIN EN 50581:2013*

Models:

ECOTEC E3000
ECOTEC E3000A
ECOTEC E3000RC

Catalogue numbers:

530-001, 530-002
530-101, 530-102
530-103, 530-104

Authorised person to compile the relevant technical files:

René Bausch, INFICON GmbH, Bonner Strasse 498, D-50958 Cologne

Cologne, July 20th, 2017

Dr. Döbler, President LDT

Cologne, July 20th, 2017

Bausch, Research and Development

INFICON GmbH
Bonner Strasse 498
D-50958 Cologne
Tel.: +49 (0)221 56788-0
Fax: +49 (0)221 56788-90
www.inficon.com
E-mail: leakdetection@inficon.com

Index

A

Accessories	85
Alarm delay	31
Alarm profile	32
Ambient conditions	16
Ambient temperature	16
Audio settings	32

B

Basic settings	30
----------------	----

C

Calibrate	40
Calibration factor	67
Calling up and managing maintenance information	69
Capillary filter	19
Connect to PLC	23
Connect with PC	23

D

Declaration of Contamination	82, 83
Dimensions	15
Display and keys	25
Display settings	33

E

ECO-	22
Ecotec E3000RC	30
Electrical data	15
Error list	69
External display unit	22

F

Factory Settings	17
Flow	63
Function allocation	25
Function symbols	26
Fuses	15

G

Gas equivalents for helium and hydrogen	42
Gas library	85

H

Headphones connection	12
-----------------------	----

I

I/O port	12
Idle state	53
IGS	44
Interfaces	35

L

Language selection	30
Leak rate filter	31

M

Maintenance work	73
Measure	47
Measured value limit	14
Measurement display elements	27
Measuring with IGuide	49
Mechanical data	15
Menu tree	95

N

Nameplate	13
Normalization factor	46

P

Physical data	15
Power consumption	15
Pressure unit	31
Protection class	15

R

Relative humidity	16
Retrieve information about the device	54
Return shipment	82
RS-232 connection	12

S

Scope of delivery	9
Select gas	36
Self-test	24
SERVICE	53
Setting Custom Gas	46
Setting date and time	31
Setup	18
Sniffer handle	14, 29

Sniffer light	31
Special features of individual gases	58
Storage temperature	16
Supply voltage	15
Suppress interfering gases	44
Switch off	59

T

Transport protection	19
----------------------	----

V

Vacuum and access control	34
---------------------------	----

W

Wake up	31
Warning and error messages	60

Z

ZERO	34
------	----

