


The User Manual GIGA Pump 5.0



GIGA Pump 5.0

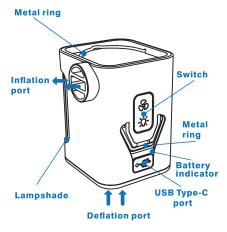


Battery indicator: A red light means the battery is 20% or less charged. The light stays red when the battery is charging. The light stays green when the battery is fully charged.




GIGA Pump 5.0

www.aerogogo.com

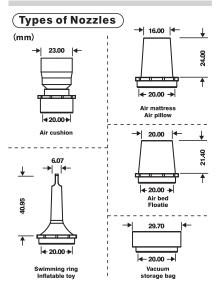

Air Pump Mode



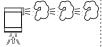

Double-click to startup the highest airflow







Click once to adjust the airflow







Click once again to adjust the airflow

Inflate



Attach the proper air nozzle to the inflation port.



Connect the air nozzle to the valve on the inflatable. Double-click to start inflating.

Vacuum Storage




Attach the proper air nozzle to the deflation port.



Connect the air nozzle to the valve on the vacuum storage bag. Double-click to start deflating.

Lantern Mode

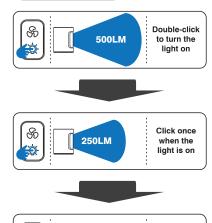





Click twice when the light is on

Camping Lantern



Place on a flat surface



For hanging use























Net weight	165g
Gross weight	235g
Volume	72x55x49mm
Inflation pressure	5.0kPa/3.5kPa/2.8kPa
Flow	260/210/180L/ min
Deflation Pressure	5.0kPa/3.5kPa/2.8kPa
Compression ratio	60%
Power rating	23.5W
Battery capacity	3.7V - 3600mAh
Working time	32min
Brightness	500LM/250LM/50LM
Brightness endurance	7h/12h/20h
Package contents	GIGA Pump 5.0 Type-C cable User manual Storage bag Air nozzles
Standards	CE/FCC/KC/ROHS/PSE REACH

Reminder

- If the pump is not working, please charge it and then check whether it works properly.
- If there is any water or liquid on the pump surface, wipe it before using it.
- If the airflow is weak or the rotation of turbine is abnormal, please check if the fan is jammed or blocked.
- If there is any problem when using the product, please contact the local authorized dealers or retailers. For more information, you can also send email to :service@aeroogo.com

Limited Warranty

- One-year limited warranty starts from the date of purchase.
- If the product is defective or has a problem, please contact the seller / retailer where you purchased for exchange.
- If you cannot return to the seller/retailer, please return the faulty product to us according to the return address provided.
- If service is needed due to failure of parts that are not original to the product or due to damage caused by abuse, misuse or any external cause, certain fee will be applied for maintenance.

Disclaimer

- Defects (cosmetic or incidental damages)or malfunction caused by misuse, abuse, improper storage or maintenance
- Failure to follow operating instructions, or use with equipment with which it is not intended to be used.
- Damage caused by unauthorized disassembly, alteration, modification or repair of the product.

Warning

- Do not use the pump in water
- Keep the inflation port or the deflation port clean.
- Do not put your finger into the inflation port or the deflation port.
- When the pump is working, keep your eyes away from the inflation or deflation port and avoid looking at the ports closely.
- All children under 12 must be supervised by an adult when using the pump.
- Do not look directly at the light. Do not shine the torch directly in the face. The bright lumens can damage your eyes.



All products bearing this symbol are waste electrical and electronic equipment(WEEE as in directive 2012/19/EU)which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

ϵ

EU Declaration of Conformity
We, Shanghai MicroNovelty Co.,Ltd hereby,
decl are that this equipment is in compliance with the
applicable Directives and European Norms,
and amendments.





Guarantee Card

◆ Product Information
Model
Purchase Date
Color
Purchase Area
Client Information
Name
Tel
E-mail
Address
— Mark ————