

SL-57


48-LAMP DIMMABLE ON-CAMERA LED LIGHT

USER MANUAL

SAFETY WARNINGS

- Keep this unit away from water and any flammable gases or liquids.
- Do not attempt to disassemble or repair the equipment.
- Do not stare directly at the lights when they are powered on.
- Clean the unit with only a soft, dry cloth.
- Use only parts provided by the manufacturer.
- Make sure the item is intact and that there are no missing parts.
- All images are for illustrative purposes only.

OVERVIEW

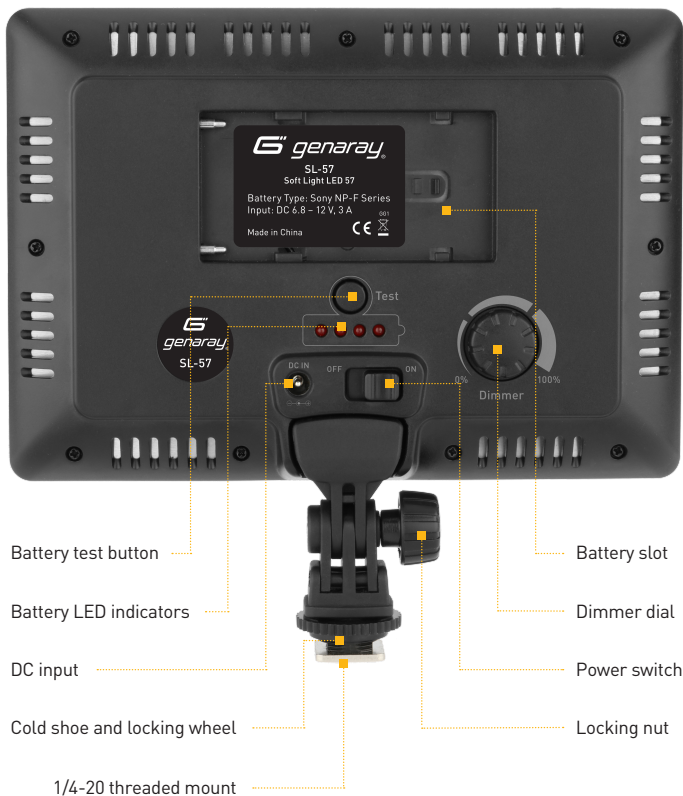

INSTALLING THE BATTERY

Align the terminals of the battery and battery slot. Place the battery into the battery slot, and slide it to the left until it snaps into place.

SPECIFICATIONS

Lamp Type: LED

Mount Type: Cold shoe with 1/4-20 threaded socket

Color Temperature: 5600K

CRI: 95

Power Source: NP-F series battery (×1)

Max Output: 16 W

Dimensions: 7.1 × 6.7 × 0.75 in. (18 × 17 × 1.9 cm)

Weight: 8.8 oz. (250 g)

ONE-YEAR LIMITED WARRANTY

This Genaray product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. Genaray's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at Genaray's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by Genaray. If the product has been discontinued, Genaray reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, GENARAY MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Genaray Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Genaray along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information, or to arrange service, visit www.genaray.com or contact us at info@genaray.com.

© 2018 Genaray LLC. All Rights Reserved

GG1