
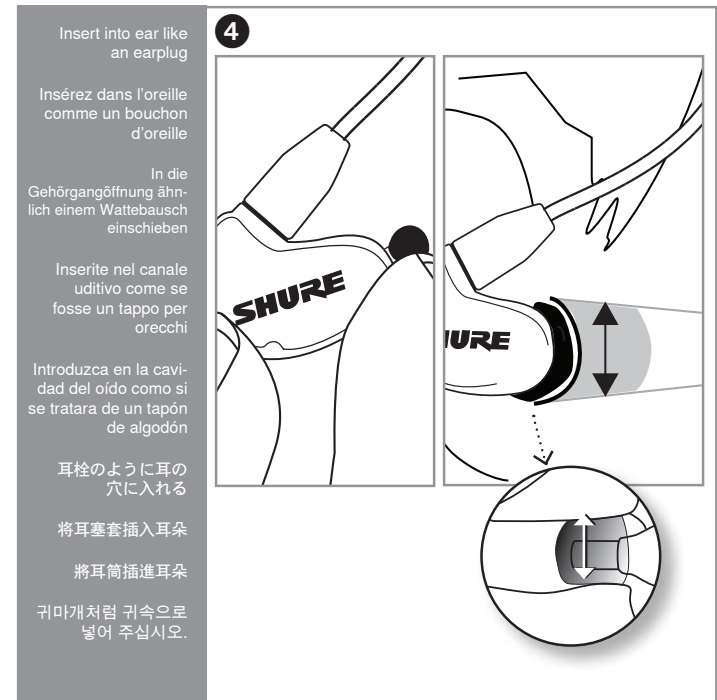
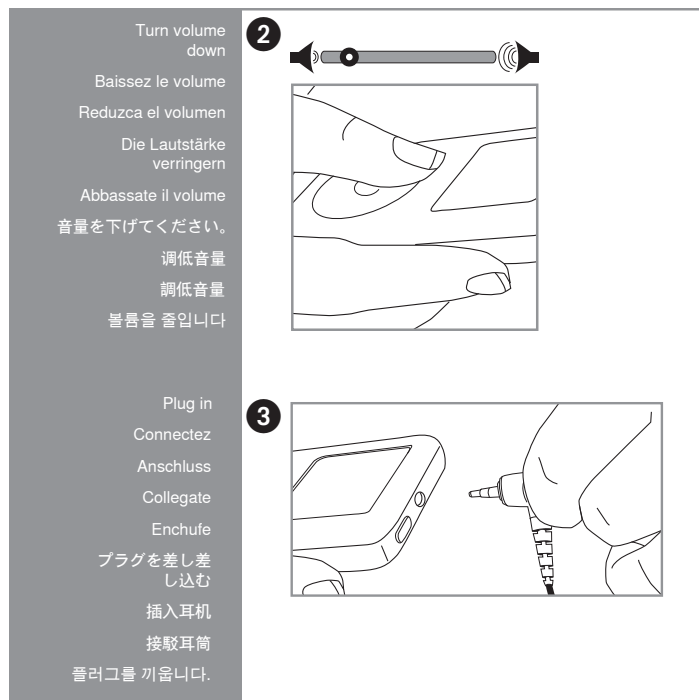
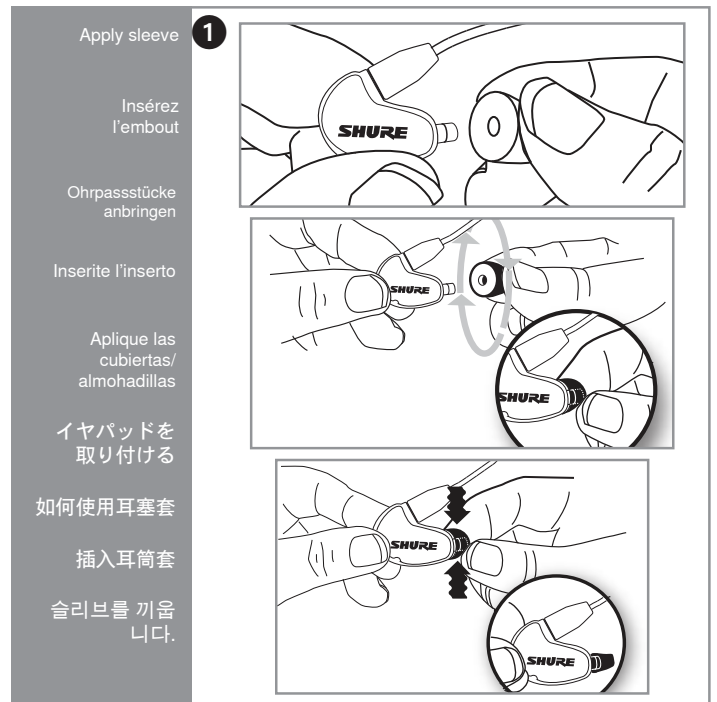


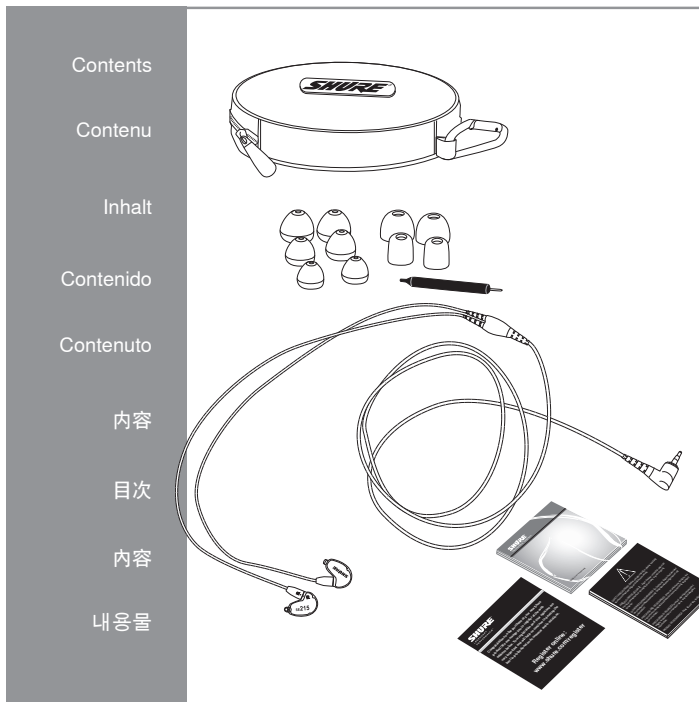

Wearing your
earphones

Le port de vos
écouteurs

Tragen der
Ohrhörer

Uso dei vostri tras-
duttori auricolari

Uso de sus
auriculares

イヤホンを装着する


佩帶耳塞套的方法

佩帶耳筒的方法

이어폰을 착용
하십시오



Detachable Cable

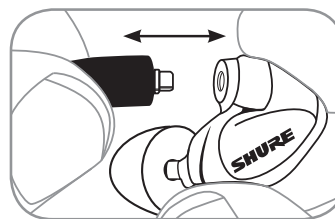

Audible click
when properly
seated

You may need to detach the cable from the earphones to attach optional components or to replace the cable if it becomes damaged. To prevent accidental separation, the connector has a snug fit. Take special care to prevent damage to the earphone and connector.

- Do not use pliers or other tools.
- Grasp the connector and the earphone as close as possible to where they join.
- Pull straight apart—do not twist. Cable is a snap fit, not threaded.
- Do not pull on the cable or put any pressure on the earphone nozzle.
- Listen for a click when connecting.
- When reattaching the cable, match the "L" and "R" markings. For clear cables and earphones, match the color dots (Red = Right, Blue = Left).

Note: If you pull at an angle, the connector will not detach.

For more information on how to use your ear- phones go to:



Pour de plus amples informations concernant l'utilisation de vos écouteurs allez au:

Mehr Informationen zur Benutzung der Ohrhörer finden Sie unter:

Per maggiori informazioni su come utilizzare i vostri auricolari andate a:

Para más información sobre cómo utilizar sus auriculares vaya:

クイック・スタート・ガイド
イヤホンの使用方法に関するより詳しい情報は
下記のURLにアクセスしてください。

需要了解更多关于耳机使用的信息，请至：

如需要更多關於使用耳機的資料，請參考：

이어폰 사용방법에 관한 자세한 사항은 아
래 홈페이지를 참조해 주십시오.

[http://www.shure.com/PersonalAudio/Products/
Earphones/HowToUseEarphones](http://www.shure.com/PersonalAudio/Products/Earphones/HowToUseEarphones)

MAINTENANCE AND CLEANING

Careful maintenance ensures a tight seal between the sleeve and nozzle, improving sound quality and product safety.

- Keep the earphones and sleeves as clean and dry as possible.
- To clean sleeves, remove them from earphones, gently rinse in warm water and air dry. Foam sleeves require a longer drying time. Inspect for damage and replace if necessary. Ear sleeves must be completely dry before reusing.
- Wipe the earphones and sleeves with mild antiseptic to avoid infections. Do not use alcohol-based disinfectants.
- Do not expose earphones to extreme temperatures.
- Replace the sleeves if they do not fit properly.
- Do not attempt to modify this product. Doing so will void the warranty and could result in personal injury and/or product failure.


Note: The cable connectors to the earphones may collect debris or other deposits that can affect audio quality. If this happens, disconnect the cables and clean them using a dry cotton swab.

WARNING: This product contains a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

Cleaning Earphones

If you notice a change in sound quality, remove the sleeve and check the nozzle of your earphone. If nozzle is blocked, clear obstruction by using wire loop end of cleaning tool.

Warning: The cleaning tool is only to be used to clean the earphones. Any other use, such as using the tool to clean ears, could result in injury.

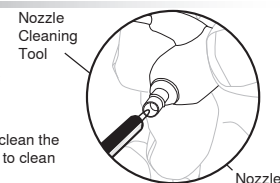

Warning: Please read all Safety Instructions & Warnings included in the literature packet prior to use of this product. Failure to do so may result in injury or product malfunction.

TECHNICAL SPECIFICATIONS

Caractéristiques Techniques
Technische DatenDati Tecnici
Especificaciones Técnicas

Transducer type Type de transducteur Übertragertyp Tipo di trasduttore Tipo de transductor	Single High-Definition MicroDriver MicroDriver unique haute définition Einzelner High-Definition MicroDriver MicroDriver ad alta definizione singolo Un solo MicroDriver de alta definición
Sensitivity (at 1kHz) Sensibilité (à 1 kHz) Empfindlichkeit (bei 1 kHz) Sensibilità (ad 1 kHz) Sensibilidad (a 1 kHz)	107 dB SPL/mW
Impedance (at 1kHz) Impédance (à 1 kHz) Impedanz (bei 1 kHz) Impedenza (ad 1 kHz) Impedancia (a 1 kHz)	20 Ω
Frequency Range Gamme de fréquences Frequenzbereich Gamma di frequenze Gama de frecuencias	22 Hz - 17.5 kHz
Net weight Poids net Nettogewicht Peso netto Peso neto	30 g (1 oz.)

CERTIFICATION

Eligible to bear CE Marking. Conforms to EMC Directive 2004/108/EC. Meets applicable tests and performance criteria in European Standard EN55103 (1996) parts 1 and 2, for residential (E1) and light industrial (E2) environments. The Declaration of Conformity can be obtained from the address below.

HOMOLOGATION

Autorisé à porter la marque CE. Conforme à la directive CEM 2004/108/CE. Conforme aux critères applicables de test et de performances de la norme européenne EN55103 (1996) parties 1 et 2 pour les environnements résidentiels (E1) et d'industrie légère (E2). La déclaration de conformité peut être obtenue de l'adresse ci-dessous.

CERTIFICACIONES

Califica para llevar la marca CE. Cumple con la directiva de EMC 2004/108/EC. Se ajusta a los criterios correspondientes de verificación y funcionamiento establecidos en la norma europea EN55103 (1996), partes 1 y 2, para zonas residenciales (E1) y zonas de industria ligera (E2). La declaración de conformidad se puede obtener de la siguiente dirección:

ZERTIFIZIERUNG

Zur CE-Kennzeichnung berechtigt. Entspricht der Richtlinie zur elektromagnetischen Verträglichkeit 2004/108/EG. Erfüllt die Prüfungs- und Leistungskriterien der europäischen Norm EN 55103 (1996) Teil 1 und 2 für Wohngebiete (E1) und Leichtindustriegebiete (E2). Die Konformitätserklärung ist über die unten stehende Adresse erhältlich.

OMOLOGAZIONI

Contrassegnabile con il marchio CE. Conforme alla direttiva sulla compatibilità elettromagnetica 2004/108/CE. Soddisfa i criteri di prestazione e le verifiche pertinenti specificati nella norma europea EN55103 (1996) parti 1 e 2 relativa ad ambienti domestici (E1) e industriali leggeri (E2). La dichiarazione di conformità può essere ottenuta dall'indirizzo riportato di seguito.



Shure Europe GmbH

Authorized European representative:
Shure Europe GmbH
Headquarters Europe, Middle East & Africa
Department: EMEA Approval
Wannenacker Str. 28
D-74078 Heilbronn, Germany
Phone: +49 7131 72 14 0
Fax: +49 7131 72 14 14
Email: EMEAsupport@shure.de

ACCESSORIES

ACCESSORIES

For information about earphone accessories and other Shure products visit:
www.shure.com
Furnished accessories subject to change.

ACCESSOIRES

Pour de plus amples renseignements sur les accessoires pour écouteurs et autres produits Shure, visiter : **www.shure.com**
Les accessoires fournis sont sujets à modification

ZUBEHÖR

Informationen über Ohrhörerzubehör und andere Shure Produkte sind im Internet zu finden: **www.shure.com**
Änderungen am im Lieferumfang enthaltenen Zubehör sind vorbehalten.

ACCESSORI

Per ulteriori informazioni relative agli accessori per auricolari ed altri prodotti Shure, visitate il sito **www.shure.com**
Gli accessori in dotazione sono soggetti a modifiche

ACCESORIOS

Para más información en cuanto a accesorios para auriculares y otros productos Shure, visite: **www.shure.com**
Los accesorios que se suministran están sujetos a cambios.

SHURE®

SHURE Incorporated <http://www.shure.com>
United States, Canada, Latin America, Caribbean:
5800 W. Touhy Avenue, Niles, IL 60714-4608, U.S.A.
Phone: 847-600-2000 **U.S. Fax:** 847-600-1212 **Int'l Fax:** 847-600-6446
Europe, Middle East, Africa:
Shure Europe GmbH, Phone: 49-7131-72140 **Fax:** 49-7131-721414
Asia, Pacific:
Shure Asia Limited, Phone: 852-2893-4290 **Fax:** 852-2893-4055