

The image is a title page for a Concord Wireless Battery NVR Quick Start Guide. It features a dark blue background with red abstract shapes on the left and right sides. The Concord logo is prominently displayed in white, with the tagline 'CONNECTING TOGETHER' below it. The title 'Wireless Battery NVR QUICK START GUIDE' is centered in white text.

# CONCORD

CONNECTING TOGETHER

## **Wireless Battery NVR QUICK START GUIDE**

# What's in the box?

Congratulations on your new Concord Professional Surveillance System. Inside the box, you will find everything you need to connect your NVR and cameras to your TV or monitor.



1 x 8 Channel UHD  
Wireless NVR



2 x 2K Cameras



2 x 8700mAh Batteries



Mounting Accessories



1 x Mains Power Supply



1 x USB Mouse




1 x HDMI Cable



1 x Network Cable

# Getting to know your NVR

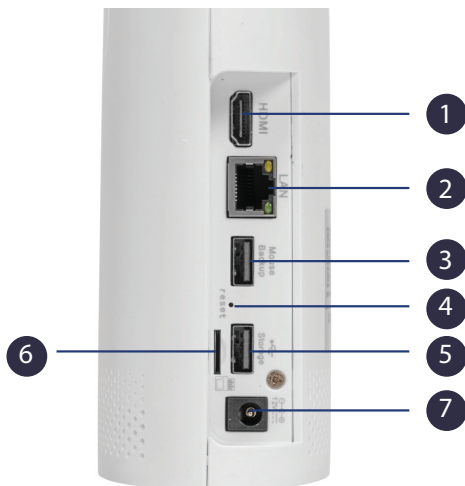


1	HDMI Monitor Port	To connect monitors that use an HDMI Connection.
2	WAN Port	Connect to your network router using supplied RJ45 Ethernet cable.
3	Mouse USB Port	USB port for mouse.
4	Reset Button	Manual reset button for unit.
5	USB Port	USB port for thumb drive to share videos.
6	microSD Card Slot	Used as extension memory to the HDD.
7	Power Input	Follow instructions in step 1 to connect power

# Getting to know your Camera



1	LED Spotlight
2	Microphone
3	Camera
4	PIR Sensor
5	Antenna
6	Speaker
7	Battery
8	Screw to secure battery
9	Mounting Base
10	Battery Charging Port
11	Water Resistant Cover for Charging Port

# How to connect your NVR

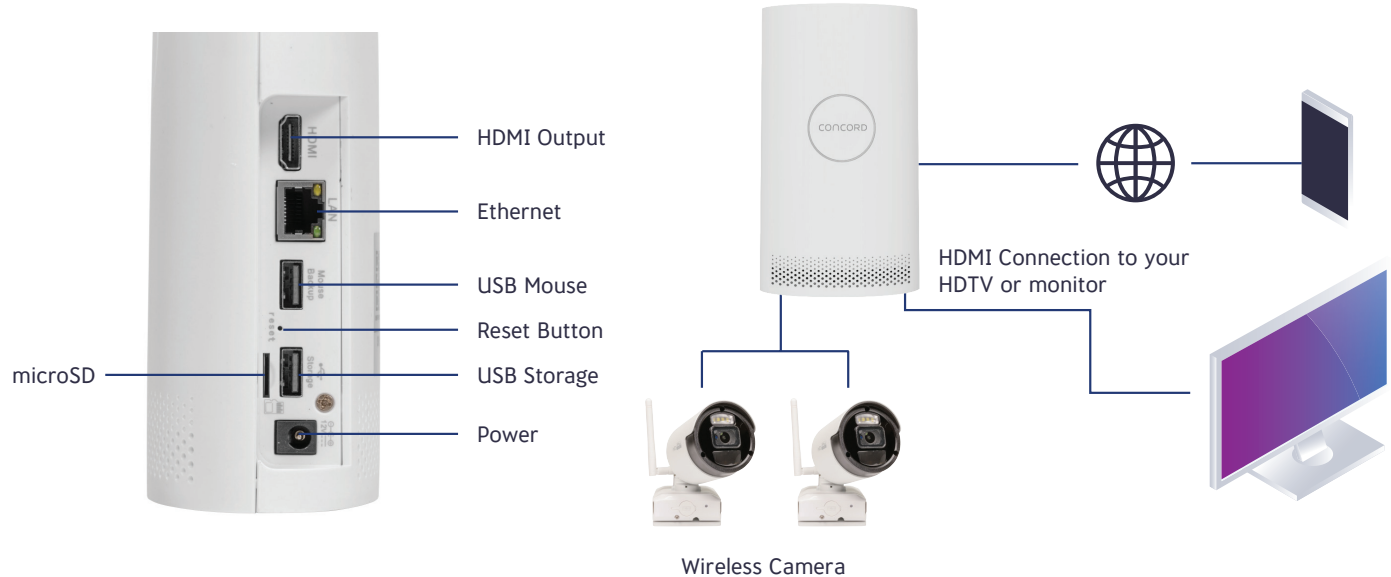

# Easy 5 Step guide

**IMPORTANT  
INFORMATION**

We strongly recommend you connect all cameras and cables and check they are communicating and can be seen on your monitor before a permanent installation.

## STEP 1: Battery replacement and charging

Connect the USB charging cable to the camera battery and charge for up to 3 hours before use.

## STEP 2: Connect a display


Connect a monitor or HDTV to **1** using the supplied HDMI cable.

## STEP 3: Connect USB mouse:

Connect the supplied USB mouse to USB port **3**

## STEP 4: Powering up your device

Connect the NVR power supply unit to the power input **7** Your cameras will automatically connect to the NVR once it is powered up.

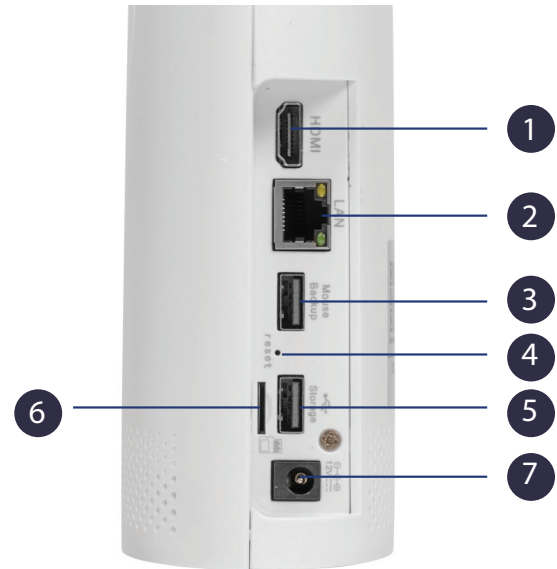


# Easy 5 Step guide

## STEP 5: Create a Password

When you first power up your NVR the password window below will appear. The password needs to be a minimum of five characters and containing a mixture of numbers and letters. Ensure to use a password that you are familiar with but is not easily known to others.

**ATTENTION!** Be sure to record your login credentials and keep in a secure location. If you forget your password you will need to reset the NVR password using your email. Please ensure to set up your email from the NVR Remote viewing and email manual or download the Full Product Manual on the Concord website [concordconnect.com.au](http://concordconnect.com.au).

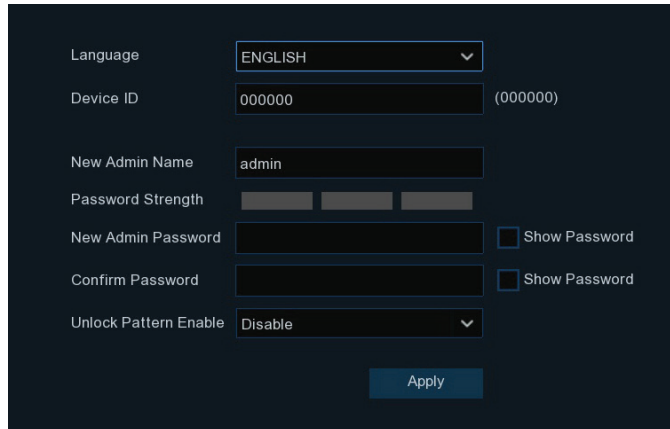A screenshot of a web-based configuration interface for an NVR. The interface is dark-themed with white text. It contains several form fields: 'Language' with a dropdown menu set to 'ENGLISH'; 'Device ID' with a text box containing '000000' and '(000000)' to its right; 'New Admin Name' with a text box containing 'admin'; 'Password Strength' with three empty progress bars; 'New Admin Password' and 'Confirm Password' with text boxes and 'Show Password' checkboxes to their right; and 'Unlock Pattern Enable' with a dropdown menu set to 'Disable'. An 'Apply' button is located at the bottom right of the form area.


Language	ENGLISH	
Device ID	000000	(000000)
New Admin Name	admin	
Password Strength		
New Admin Password		<input type="checkbox"/> Show Password
Confirm Password		<input type="checkbox"/> Show Password
Unlock Pattern Enable	Disable	
Apply		


**Write your password down here and store it in a safe place.**

# Setup Wizard

## Configuring your device using the Wizard



The Start-up Wizard automatically runs the first time you power up the NVR, however it is not necessary to run the wizard to get started. The wizard will guide you through customising the network, date and time setup, as well as IP camera, storage and screen resolution configuration. You will also find the QR code to setup the mobile app. All these settings can be changed in the Setup menu later.


If you are happy to stick with the default settings you can cancel the Setup Wizard by clicking  at the top right of the pop up.

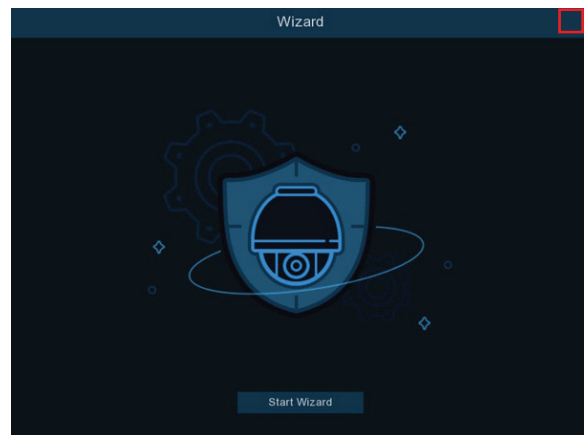


## Configuring Date and Time Manually

If you cancel the wizard, you will need to set up the date and time manually by opening the menu (bottom left corner), click Setup System General Date & Time, change to suit your time zone.

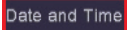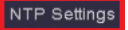In this menu you can setup the date and time manually using settings under  or ticking "Enable NTP" under  to use the Network Time Protocol which automatically sets the time through your router.

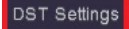You can also use  to set Daylight Savings Time for your region.

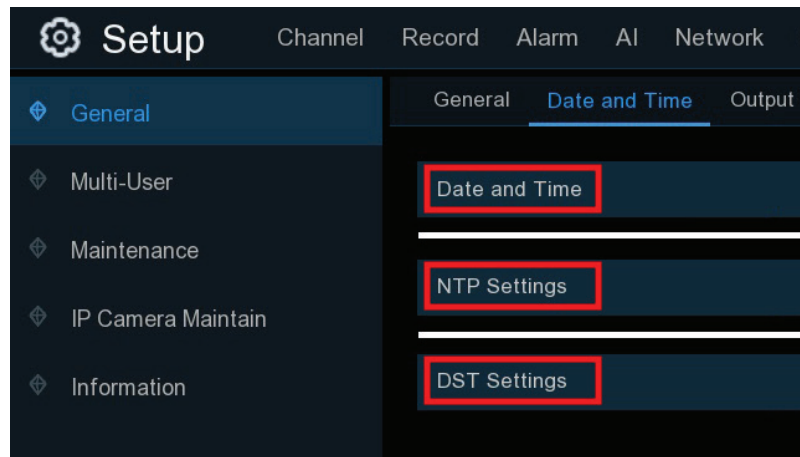




# Setup Complete

## ALL BASIC CONFIGURATIONS ARE NOW COMPLETE

Your HDTV or monitor should have vision from all connected cameras.

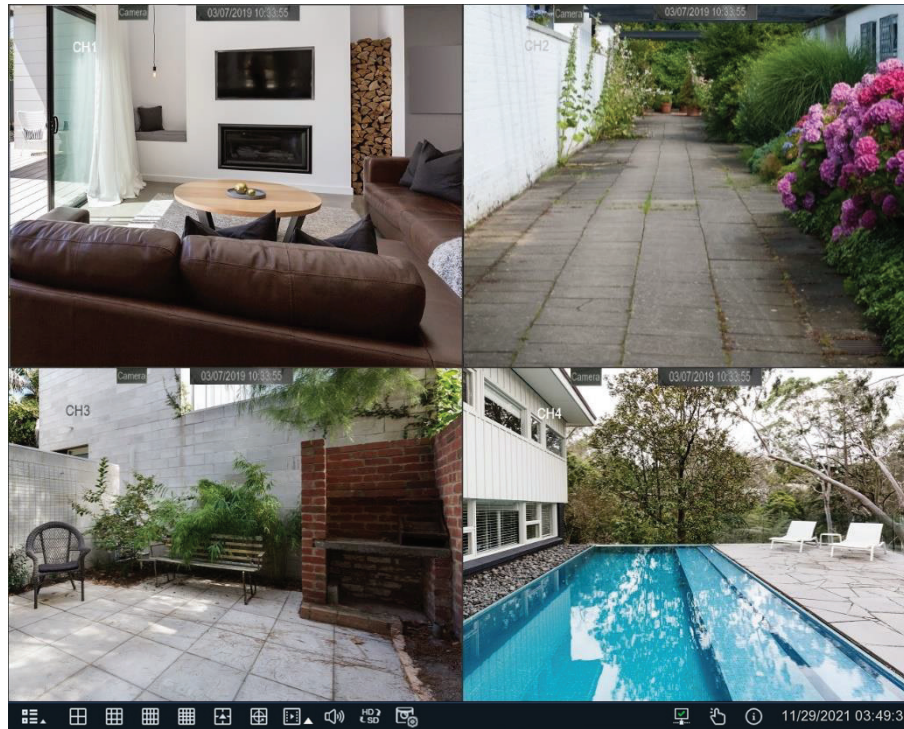

# Advanced Setup

Please visit our website [www.concord.support](http://www.concord.support) and download the full product manual, it can be found on the download tab of the product page for your model. The manual will show you how to do the following:

- Connect your NVR to the internet
- Camera channel configuration
- Recording configuration
- System configuration
- Access your NVR via the Concord Security App
- And many other features to help you get the most out of your CCTV system

Please refer to the Mobile/App Quick start guide for setting up email alerts access to your NVR via the CONCORD App.

iOS®:



Android:



Additional cameras, cables and accessories are available from your Concord reseller.

For Concord Surveillance Support and Product Registration visit:

[www.concordconnect.com.au/support](http://www.concordconnect.com.au/support)

[www.concordconnect.com.au/register](http://www.concordconnect.com.au/register)



## WARNING

**KEEP BUTTON BATTERIES OUT OF REACH OF CHILDREN**

- If swallowed a lithium button battery may lead to serious or fatal injury in as little as 2 hours, due to chemical burns and potential perforation of the oesophagus.
- Non-lithium button batteries can cause serious injuries if it is swallowed or placed inside any part of the body.
- All button batteries must be kept away from children regardless if they are new or used.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 (Australia) or 0800 764 766 (New Zealand) for fast, expert advice.
- If your child is having difficulty breathing contact 000 (Australia) or 111 (New Zealand).
- Dispose of used button batteries immediately and safely out of the reach of children. A battery can still be dangerous even when it can no longer operate the device.
- As soon as you have finished using a button battery, put sticky tape around both sides of it. This will make it harder for children to swallow the button battery and avoid the risk of the battery catching fire.
- Immediately dispose of button batteries immediately out of reach of children, or recycle using a child resistant container and take used cells to your local battery collection centre.

The logo features the word "CONCORD" in a white, sans-serif font centered on a dark blue background. On either side of the text are vertical red bars with abstract, overlapping circular and wavy patterns in shades of red and magenta.

# CONCORD

[www.concordconnect.com.au](http://www.concordconnect.com.au)