



HT-125

REPLACING THE REMOTE

To ensure that Human Touch products are repaired in a manner that is fully consistent with the practices used during the manufacturing process, Human Touch requires that all product repairs are performed using only factory-new parts and in accordance with these product repair instructions.

SERVICE LEVEL: 1

Tools Required: Phillips-head screwdriver

NOTE: SAVE ALL REMOVED PARTS FOR USE DURING REASSEMBLY

REMOVING THE REMOTE CONTROL

1. Power off the chair and unplug it.





- 2. Push down on the backrest release lever, then fold the backrest forward onto the chair seat (Fig.1).
- 3. Locate the remote bracket on the back of the backrest (Fig.2).
- 4. Using a Phillips-head screwdriver, remove the four screws that secure the remote bracket to the backrest cover.
- 5. Pull the remote cables through the backrest cover, then disconnect the connectors.

NOTE: Be sure the backrest remote connector does not fall back into the backrest. If it does, remove the backrest by removing the four backrest screws, using a 4 mm (5/32") Allen key.

INSTALLING THE NEW REMOTE CONTROL

- 1. Connect the new remote control connector to the backrest remote control connector, then push the cables into the backrest.
- 2. Using a Phillips-head screwdriver, replace the four remote bracket screws.
- 3. Power on the chair and verify that the new remote works.

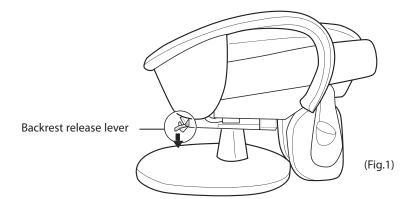

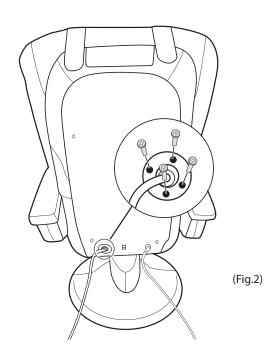



Please send any questions or comments regarding these instructions to: documentation@humantouch.com © 2008 HumanTouch⁻, LLC.