

K3 - Instruction Manual

AODI Baby Stroller



K3 - Instruction Manual

Some common problems:

- 1.What is the age limit for this stroller ?
Our stroller is suitable for babies from 6 to 36 months old.
- 2.What is the maximum child weight it can hold?
The maximum weight of our stroller is 50 lbs.
- 3.Does the seat recline?
The Stroller seat does recline and adjustable.
- 4.What is the fabric material the stroller?
The fabric of the stroller is polyester and the frame material is aluminum.
- 5.How to open the stroller?
There is an open button on the handle.More detailed operation can be seen in this manual.

If you have any other questions, please contact us, we will solve it for you within 24 hours.

You can contact us by email: aodius@126.com

1

K3 - Instruction Manual


⚠ WARNING

Please read the instruction before using the product as it will tell you correct operation method and installation procedure to avoid damaging the product or hurting your baby due to incorrect operation.

- *The instruction should be kept in a convenient place.
- Never leave child unattended.
- Please make sure all locking devices are locked before use.
- Please ensure that the child is kept away when the product was unfolding and folding to avoid injury.
- Do not let the child play with this product.
- Always use the brake system.
- This product is not suitable for running or skating.
- Please do not fall or slide to avoid serious injury.
- Remember to use seat belts.
- Please use velcro and buttons to fix your baby's feet to prevent their feet from being pinched.
- Only the guardian of the baby can adjust the sitting position of the stroller.
- Only use replacement parts provided or replaced by the manufacturer/distributor.
- Accessories which are not approved by the manufacturer shall not be used.
- Any load on the handle or back of the backrest or the side of the vehicle will affect the stability of the stroller.
- Do not place cotton pads that are thicker than 10mm on the recliner.
- This stroller is designed for one child and only be used to transport one child.
- The maximum load for the basket is 3kg and overload is prohibited.
- The baby stroller is suitable for baby under 22kg or 3 years old.
- Recommend that stroller is brake when placing and removing children.
- Make sure the baby stroller is braked when placing and removing the children.

2

K3 - Instruction Manual

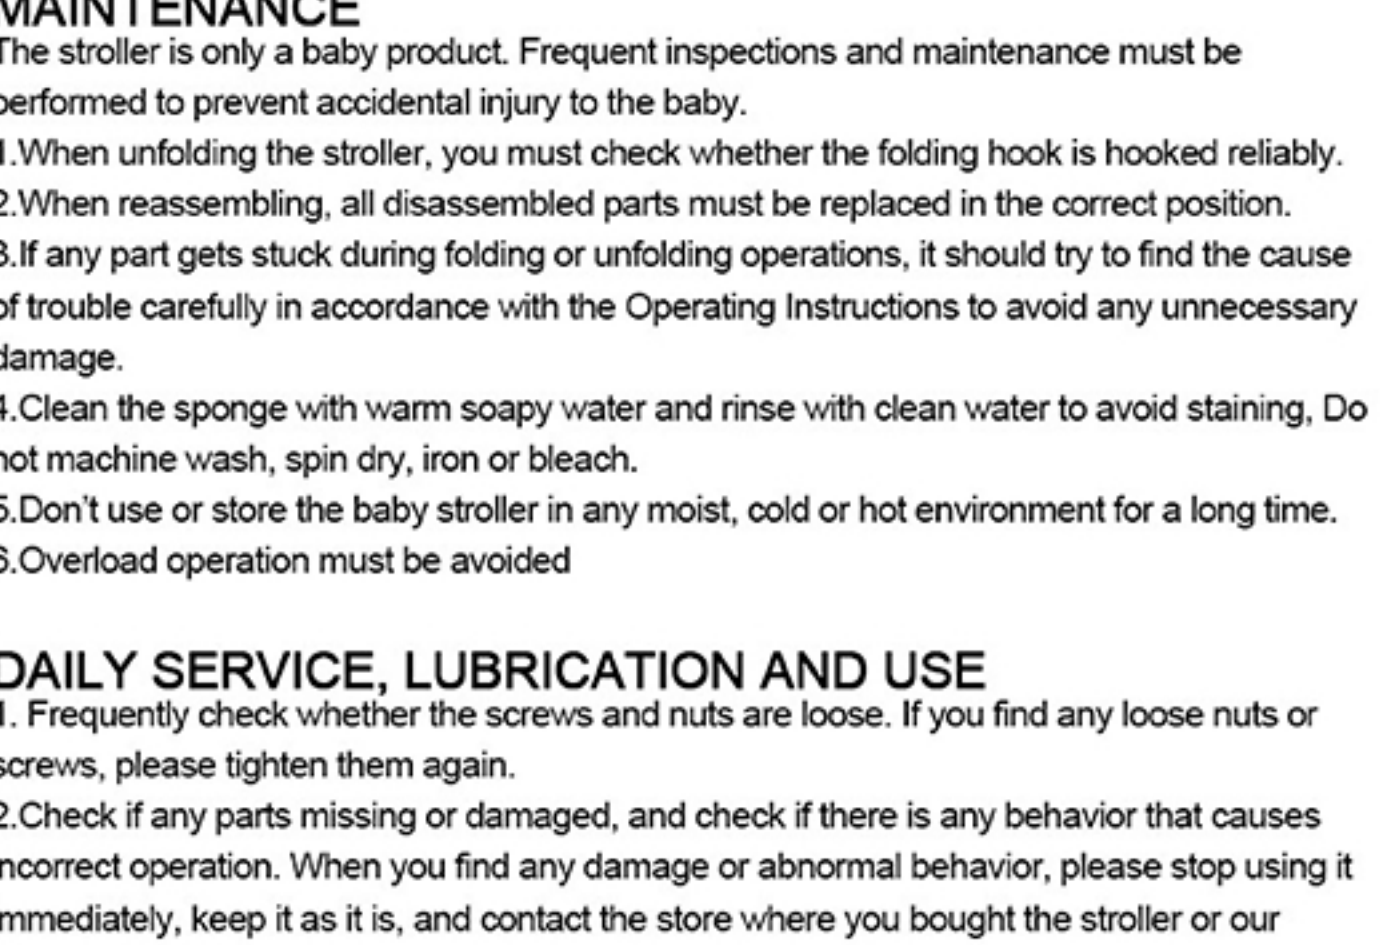

Product features:

- Wheels: Frint wheel, Rear wheel
- Product material: High carbon steel
- Loading weight: 50 lb (22kg)
- Age range: 6~36 Months

3

K3 - Instruction Manual

CAUTIONS

- *Please check whether each part installed in correction position and whether firmly connected before use.
- *Please note that babies should be avoided standing on the stroller or climbing down from the protective rail.
- *Do not place the stroller on uneven ground or near dangerous places such as stoves.
- *Do not use or store the stroller in a humid, cold or high temperature environment for a long time.

MAINTENANCE

- The stroller is only a baby product. Frequent inspections and maintenance must be performed to prevent accidental injury to the baby.
- 1.When unfolding the stroller, you must check whether the folding hook is hooked reliably.
- 2.When reassembling, all disassembled parts must be replaced in the correct position.
- 3.If any part gets stuck during folding or unfolding operations, it should try to find the cause of trouble carefully in accordance with the Operating Instructions to avoid any unnecessary damage.
- 4.Clean the sponge with warm soapy water and rinse with clean water to avoid staining, Do not machine wash, spin dry, iron or bleach.
- 5.Don't use or store the baby stroller in any moist, cold or hot environment for a long time.
- 6.Overload operation must be avoided

DAILY SERVICE, LUBRICATION AND USE



- 1. Frequently check whether the screws and nuts are loose. If you find any loose nuts or screws, please tighten them again.
- 2.Check if any parts missing or damaged, and check if there is any behavior that causes incorrect operation. When you find any damage or abnormal behavior, please stop using it immediately, keep it as it is, and contact the store where you bought the stroller or our company for help.
- 3. If you find the locking, adjustment or push operation of the baby stroller is not smooth enough, you may add some proper lubricant. However, the excess lubricant might result dusting and abnormal operation. Be careful not to apply the lubricant at the place where the baby might touch by hand or mouth

4

K3 - Instruction Manual

Assembly Process

1. Take out all accessories and the stroller frame.
Stroller * 1, Wheel * 4, Amrest *1, Installable shade cloth * 1
2. Unlock the folding hook on the side of the cart .hold the top of the push handle in hand, lift the push handle upwards, and slightly unfold outward.
Make sure that the cart is fully open and ready for use

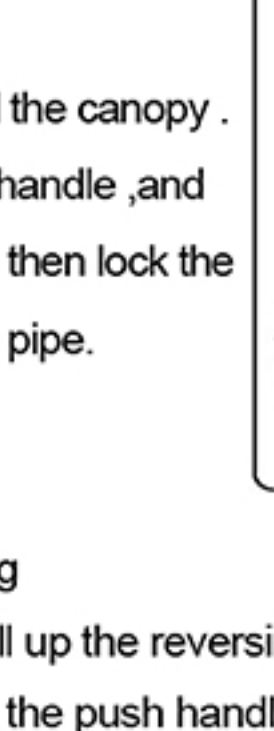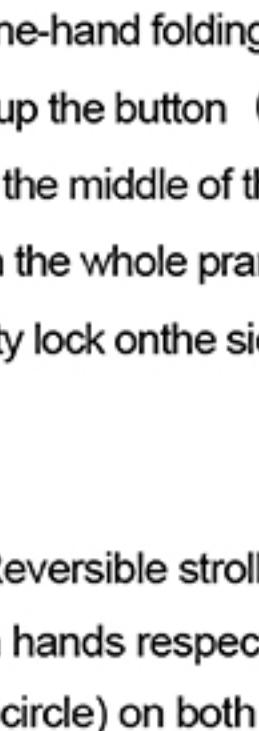

3. Install the wheels
The front wheel is smaller and the rear wheel is larger.
Insert the iron shaft of the wheel into the corresponding shaft hole, and rotate the wheel to check whether it is flexible and cannot be pulled out, then the installation is completed.
When need to take out the wheel, press or pul the button of "quick release-shrapnel" and the wheel can be removed.

5

K3 - Instruction Manual

4. Install the armrest

Pass the armrest through the fixing strap and insert it into the slot on both sides of the seat, when it is stuck and cannot be pulled out, the installation is complete.

5. Press the center button to open the safety buckle. fasten the left and right side buckles to lock seat belt.

6. Adjust the angle of the footrest.

7. Hold the adjustment switch and adjust it according to the desired angle of backrest.

6

K3 - Instruction Manual

8. One button brake

When stopping the push, please step on the brake to keep the stroller does not slide and ensure safety

9. One-hand folding

Pull up the button (A) fold the canopy . hold the middle of the push handle ,and push the whole pram down, then lock the safety lock onthe side of the pipe.

10.Reversible stroller setting

Both hands respectively pull up the reversing parts (red circle) on both sides of the push handle, make the push handle reversible. When the base part of the push handle is fully fixed with the over seat (at the red arrow), the setting is successful.

7