

USER MANUAL



Wireless Thermostat

WTC100 WTC200

www.digit-en.com

service@digit-en.com


FEATURES

- · Easy to set with memory function
- · Plug and play, work with 100-240V AC
- Display current temperature
- Display set temperature (run temperature and stop temperature)
- Automatic cooling or heating
- Manually turn on / off function
- °C / °F can be switched
- High/low temperature alarm
- Memorize all the setting value
- Low battery warning
- · Cooling delay protection
- Portable design, held in the hand / wall mounted


More than two sets of equipment will not interfere each other!

Get to know this device


Receiver

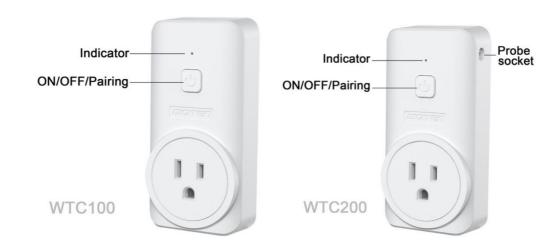

Remote controller

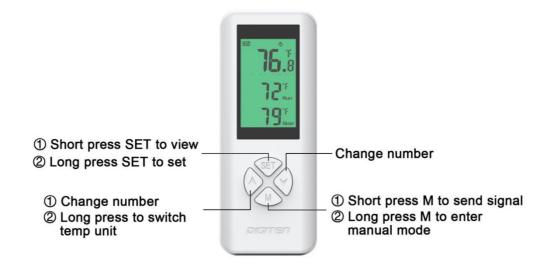

LCD display

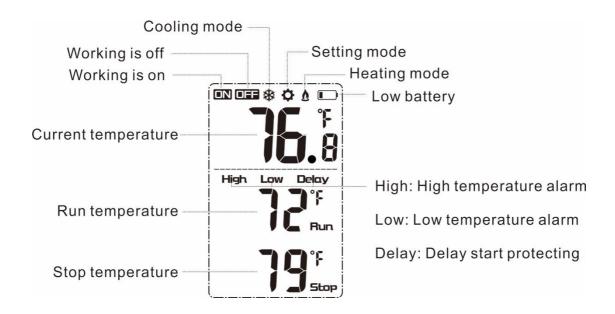

Specifications

	WTC100	WTC200	
Receiver voltage	100-240V AC		
requirement			
Load capacity	100-240VAC 13A,		
	1500W@110VAC, 2500W@220VAC		
Remote batteries	2PCS 1.5V AAA, standby for 6 months		
requirement			
Transmission distance	e 100m (open space)		
Measuring temperature	-10.0 ° C ~ 80 ° C, 14 ° F ~ 176.0 °		
range	F		
Control temperature	0°C~70°C, 32°F~158.0°F		
range			

Measure temp Resolution	±0.1°C /°F		
Control Precision	±1°C /°F		
High and low	0-80°C		
temperature alarm			
Remote control refresh	20 Seconds		
frequency			
Temperature probe	Built in remote	Receiver with	
		2m/6ft NTC probe	

Put in or replace the Battery

1.2 AAA size batteries are needed for the remote. Make sure they are put in right direction

2. When the low battery warning appears, please change batteries.

Pair/remove with the remote

In generally, we have already paired the remote it come with. If the remote can't connect controller, please repair according to the method below:

1, Press and hold b button until the LED flashes, release the button, then press M button on the remote control to pair the

receiver.

2, Press and hold **b** button, the LED flashes 5 times, then flash 2 times quickly before release the button. All remotes will be unpaired. If you repair the remote, please repeat the step 1.

Note: A remote can control multiple receivers.

Change the temperature unit

Press the V button for 3 seconds to switch the temperature unit.

Cooling mode *

Set the temperature value RUN>STOP, the controller is in cooling mode, and the LCD displays the COOLING symbol **

- 1.1 When the CURRENT temperature value is higher than the RUN value, the cooling operation starts, the relay outputs, the LCD displays n and the green light on the receiver is on. When the CURRENT value drop to the STOP value, the cooling operation stops, and the LCD displays . The green light on the receiver is off.
- 1.2 When the CURRENT temperature value is less than the RUN value, the cooling operation stops, the relay has no output, the LCD displays , the green light on the receiver is off. When the CURRENT value rises to the RUN value, the cooling operation starts, the LCD displays , the green light on the receiver is on.

Heating mode 1

Set the temperature value RUN<STOP, the controller is in heating mode, and the LCD displays the HEATING symbol 1

2.1 When the CURRENT temperature is less than or equal to the RUN value, the heating operation starts, the relay outputs, the LCD displays , the green light on the receiver is on, when the CURRENT rises to the STOP value, the heating operation stops, the LCD displays , the green light on the receiver is off.

2.2 When the CURRENT temperature value is greater than the STOP value, the heating operation stops, the LCD displays light on the receiver is off, when the CURRENT temperature drop to the RUN value, the heating work starts, the LCD displays not the green light on the receiver is on.

High and low temperature alarm

When the CURRENT temperature is greater than the HIGH value or less than the LOW value, the remote controller will alarm and the symbol on the **High Low** LCD will flash. Press any key to stop the sound, and the **High Low** symbol continues to flash until the setting value is changed or CURRENT temperature value returns to the alarm range.

If the transmitter is not powered, the receiver will continue to work

according to the previous setting value until 5 minutes.

Delay function

Damage can occur if the compressor restarted too soon after shutdown. This feature forces the compressor to wait for a few minutes before restarting.

During the waiting time, the display will flash **Delay**, When the safe waiting time has elapsed, the display stop flashing and the compressor turns on

How to set

1. Press and hold the SET button until the corresponding value flashes. At the same time, the is displayed on the LCD. Press the or button to change the number. Short press SET button to set next valve, or long press the SET button to exit and save. use this method to set the RUN /STOP /Delay/ HIGH /LOW value respectively. Or after setting all the parameters, press and hold the SET button to exit and save. When no operation time is greater than 30 seconds in the setting state, the exit setting mode is not saved.

NOTE, in the setting state, long press the UP or DOWN button to continuously to change the setting value

2. Example

In cooling mode, you want to keep room temperature at 77F, High alarm at 88F, Low alarm at 70F

- 1) Long press SET button until the display appears on $^{ \bullet }$, and the setting value flash.
- 2) Press A or Y set the RUN at 77F, STOP is 75F.
- 3) Short press SET button to set High and Low value.
- 4) Long press SET to save and exit.

Restore factory settings

In the case of POWER OFF, press and hold the SET button to power on at the same time. After a long beep, all values are restored to the factory settings.

Default settings

Setting	Function	Setting range	Default
			value
Temp unit	Temperature unit	C/F	F
Run	Run temperature value	0-70C	20C
		32-158	68F
Stop	Stop temperature value	0-70C	28 <i>C</i>
		32-158F	82F

High	High alarm value	0-70C	70C
		32-158F	158F
Low	Low alarm value	0-70C	ОС
		32-158F	32F
Delay	Delay protecting time	0-10 minutes	0

Manual turn on/off function

Press and hold the M button for 3 seconds, the controller switches to the manual mode, Always on or Always off will appear on the display. Short press the M key to turn on/off the device. Long press the M key to exit the manual control function.

Troubleshoot

1, Current temperature is incorrect.

The remote update measuring value with 20 second a time. And if you use it for the first time, please wait for about 5 minutes before the measurement is stable.

2, Current temperature reach to the RUN value, but the controller

don't work.

The remote send data to the receiver per 20 seconds, so please wait for more than 20 seconds

3, Heating/cooling device is started too frequent

Please increase the difference between RUN and STOP

4, others

4.1, probe open circuit prompt: LCD current value shows Err

4.2, the measured temperature exceeds the measurement range, the current value shows HH (high temperature), LL (low temperature)

WARRANTY

The DIGITEN products are guaranteed to the original owner for one year against defects in workmanship and materials. Please contact us: service@digit-en.com

www.digit-en.com/support

COPYRIGHT 2019 DIGITEN CO.,LTD ALL RIGHTS RECERVED