


INSTRUCTION MANUAL

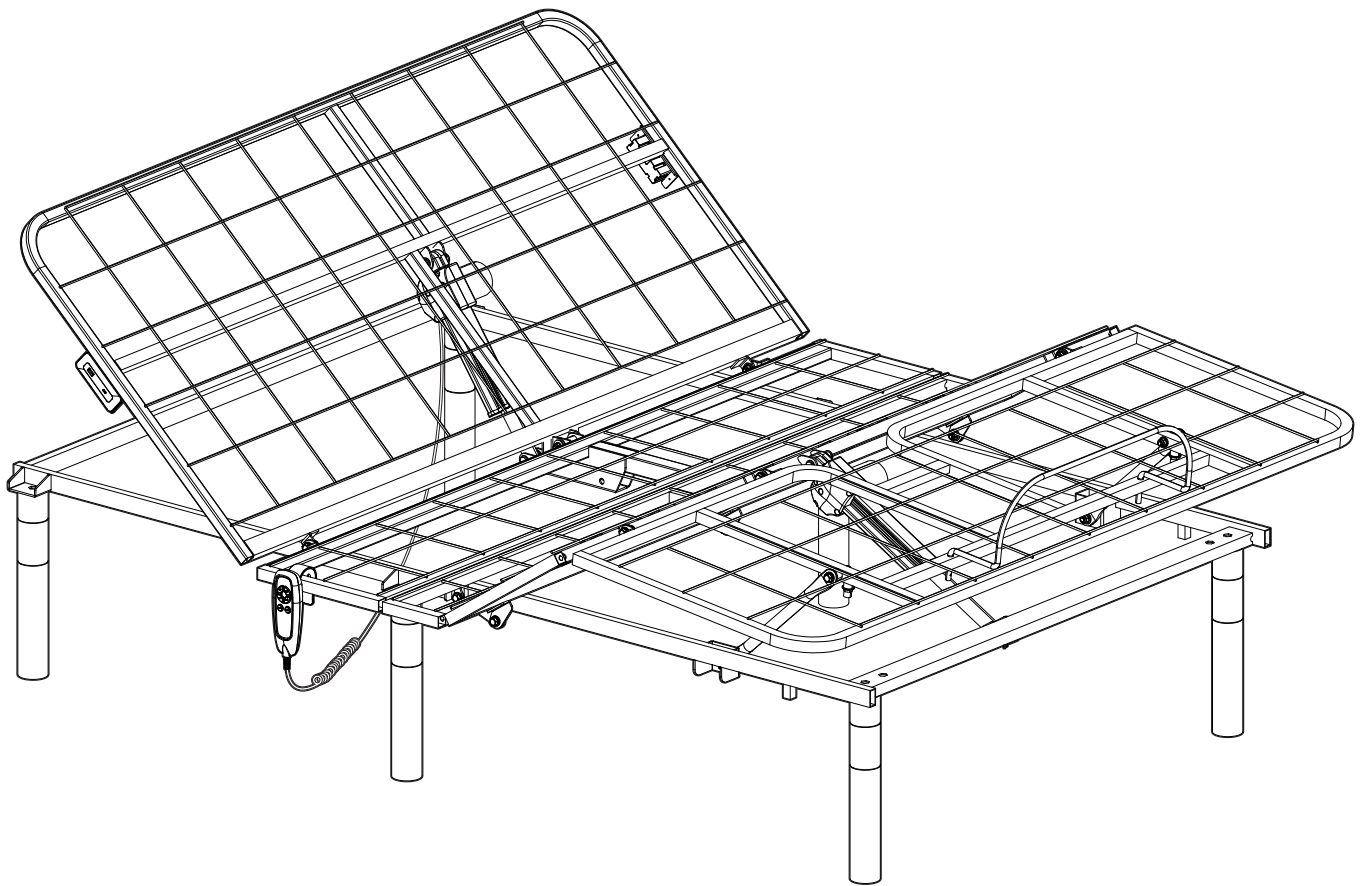

Adjustable Bed Base

IMPORTANT SAFETY INFORMATION

For your safety, please carefully read all instructions before using this adjustable bed base.

Save these instructions for future reference.

WARNING

TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR OTHER PERSONAL INJURY:



The product is intended for indoor use only. The product must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to the product may occur if products are used outside of their intended purposes and/or if products have been changed/modified from their original design. The seller does not assume any responsibility or liability with respect to any injury/damage caused by incorrect assembly or improper use.



Do not operate this bed if the cord, plug, or any part has been damaged, if it has been submerged in water, or if it is not working properly. In these cases, please contact customer support for information about possible repair or replacement.



- Disconnect from power before installation, parts replacement, cleaning, or servicing.
- Remember to turn all controls to the OFF position before unplugging.



- Close supervision is necessary when the bed is used by or near children or disabled persons.
- DO NOT allow any person or pet under the bed at any time.



Keep the cord away from heated surfaces.



DO NOT use the bed outdoors or near combustible materials.



DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.



Exercise extra caution when handling liquids in or around the bed. In case of spillage, immediately stand in a dry, clean area of the floor and unplug the bed. Clean up the spill and allow the area around the bed to dry thoroughly before using the electric controls again. DO NOT eat or drink hot liquids while operating the bed.



Never operate the bed with the air openings blocked. Keep the air openings free of lint, hair, and other obstructions.

SAVE THESE INSTRUCTIONS

WEIGHT LIMITS

- **Weight Restrictions:** The recommended weight limit for this bed frame is 750 pounds. The bed will structurally support this weight, provided it is evenly distributed across the foundation. The power foundation is not designed to support or lift this amount in the head or foot sections alone. Exceeding this weight restriction could damage the bed and/or cause injury and will void the warranty.

WARRANTY WARNINGS

- Any opening or tampering with the control box, motors, or hand controls (with the exception of the battery compartment if equipped) will void the warranty.

PRODUCT RATING

- The motors are not designed to operate continuously for more than [2] minutes in a [20] minute time period or approximately 10% duty cycle. Attempting to circumvent or exceed this rating will shorten the life expectancy of the foundation and may void the warranty.

OPERATING INFORMATION

- After foundation assembly is complete, operate remote control to ensure the bed is functioning properly.
- Keep moving parts free of obstruction during bed operation. This includes sheets, clothing, tubing, wiring, and electrical power cords.
- Distribute body weight evenly over bed surface. Do not place entire weight on head or foot sections of the bed, even while repositioning, entering, or exiting the bed.

HOSPITAL DISCLAIMER

- This bed frame is NOT designed for hospital use and does NOT meet hospital standards.

Specifications



Power Input
DC 29.0V \approx 1.8A



Motor Thrust
6000N



Operating Noise
<43dB




2 Person
Assembly




Max. Load
750 lbs / 340kg

Standard Parts List

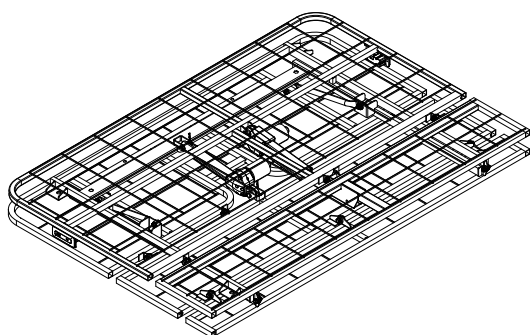


Bed Frame

01 x 1

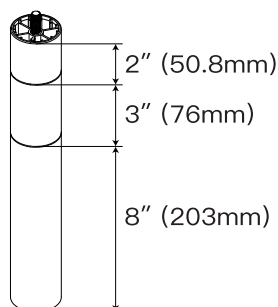


Bed Leg

02 x 6

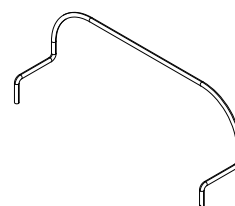


Mattress Retainer Bar

03 x 1

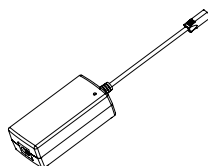


Power Supply
(29V 1.8A)

04 x 1

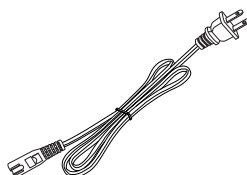

AC Power Cord

05 x 1

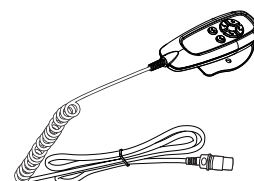


Remote Control

06 x 1

Optional Accessories

! NOTE!

You will only need this sync cord if you have two Twin XL bases.

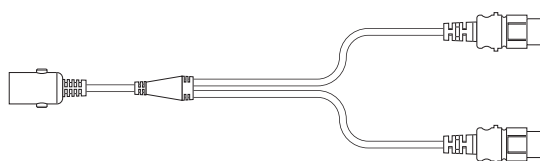


Sync Cord

07 x 1


1

Take the bed frame [01] out of the box. Make sure the floor is clean. Unfold the bed frame.

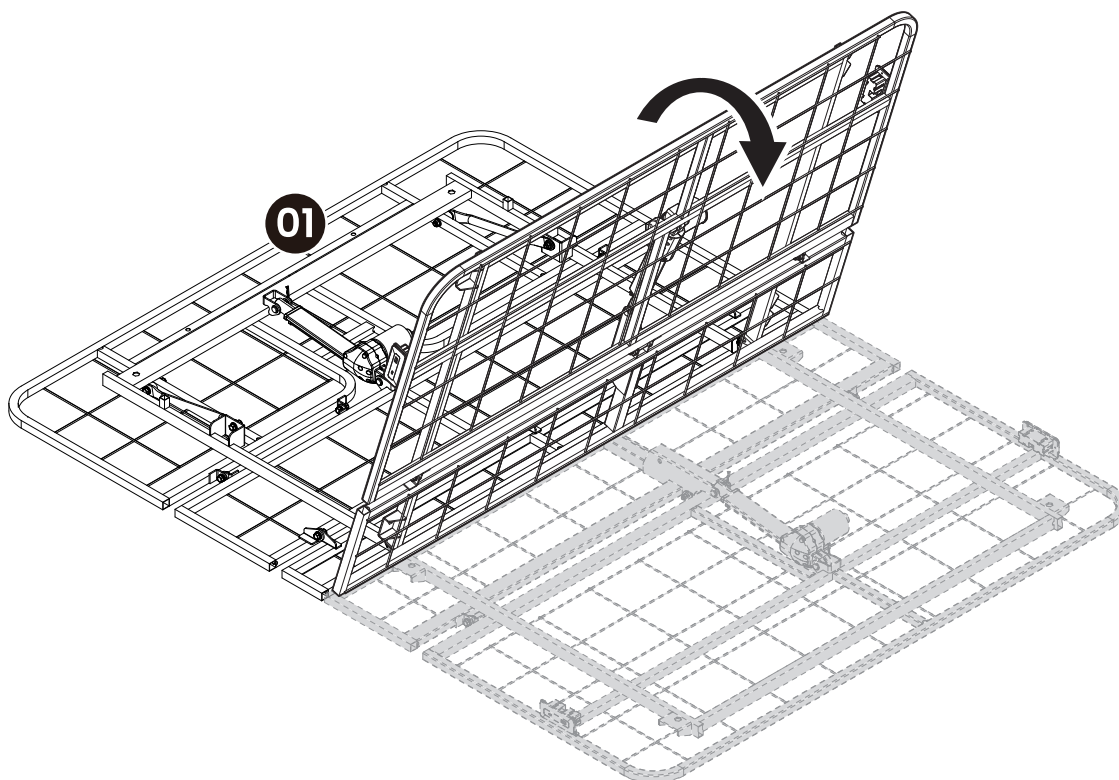**2**


Remove all packaging and parts from the underside of the bed. Screw six bed legs [02] into the leg bases.

NOTE: Each leg is comprised of (3) sections to provide multiple height configurations. Assemble the legs according to your desired height before attaching to the base.

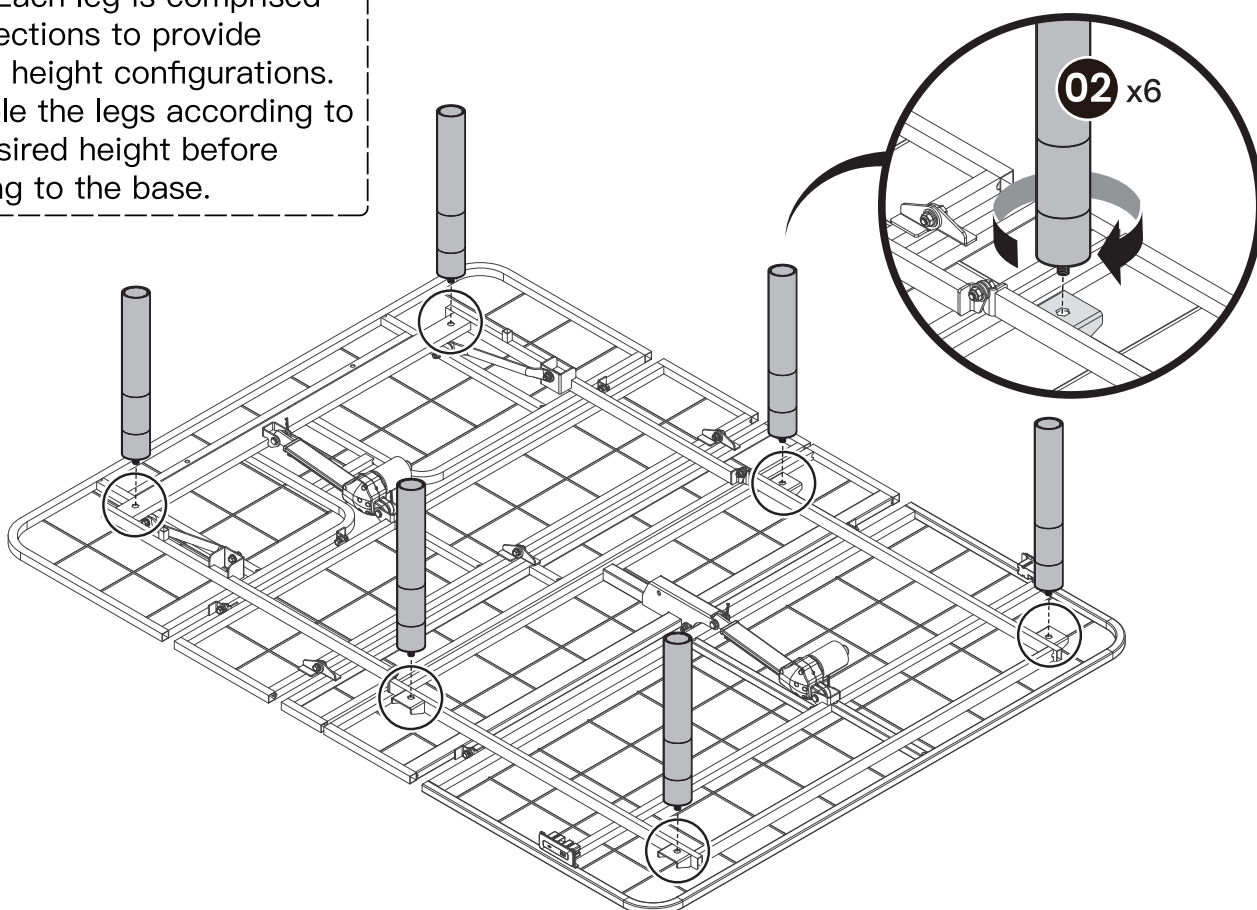


3

Plug the AC power cord [05] into the power supply [04], then connect it to the wire harness located underneath the bed.

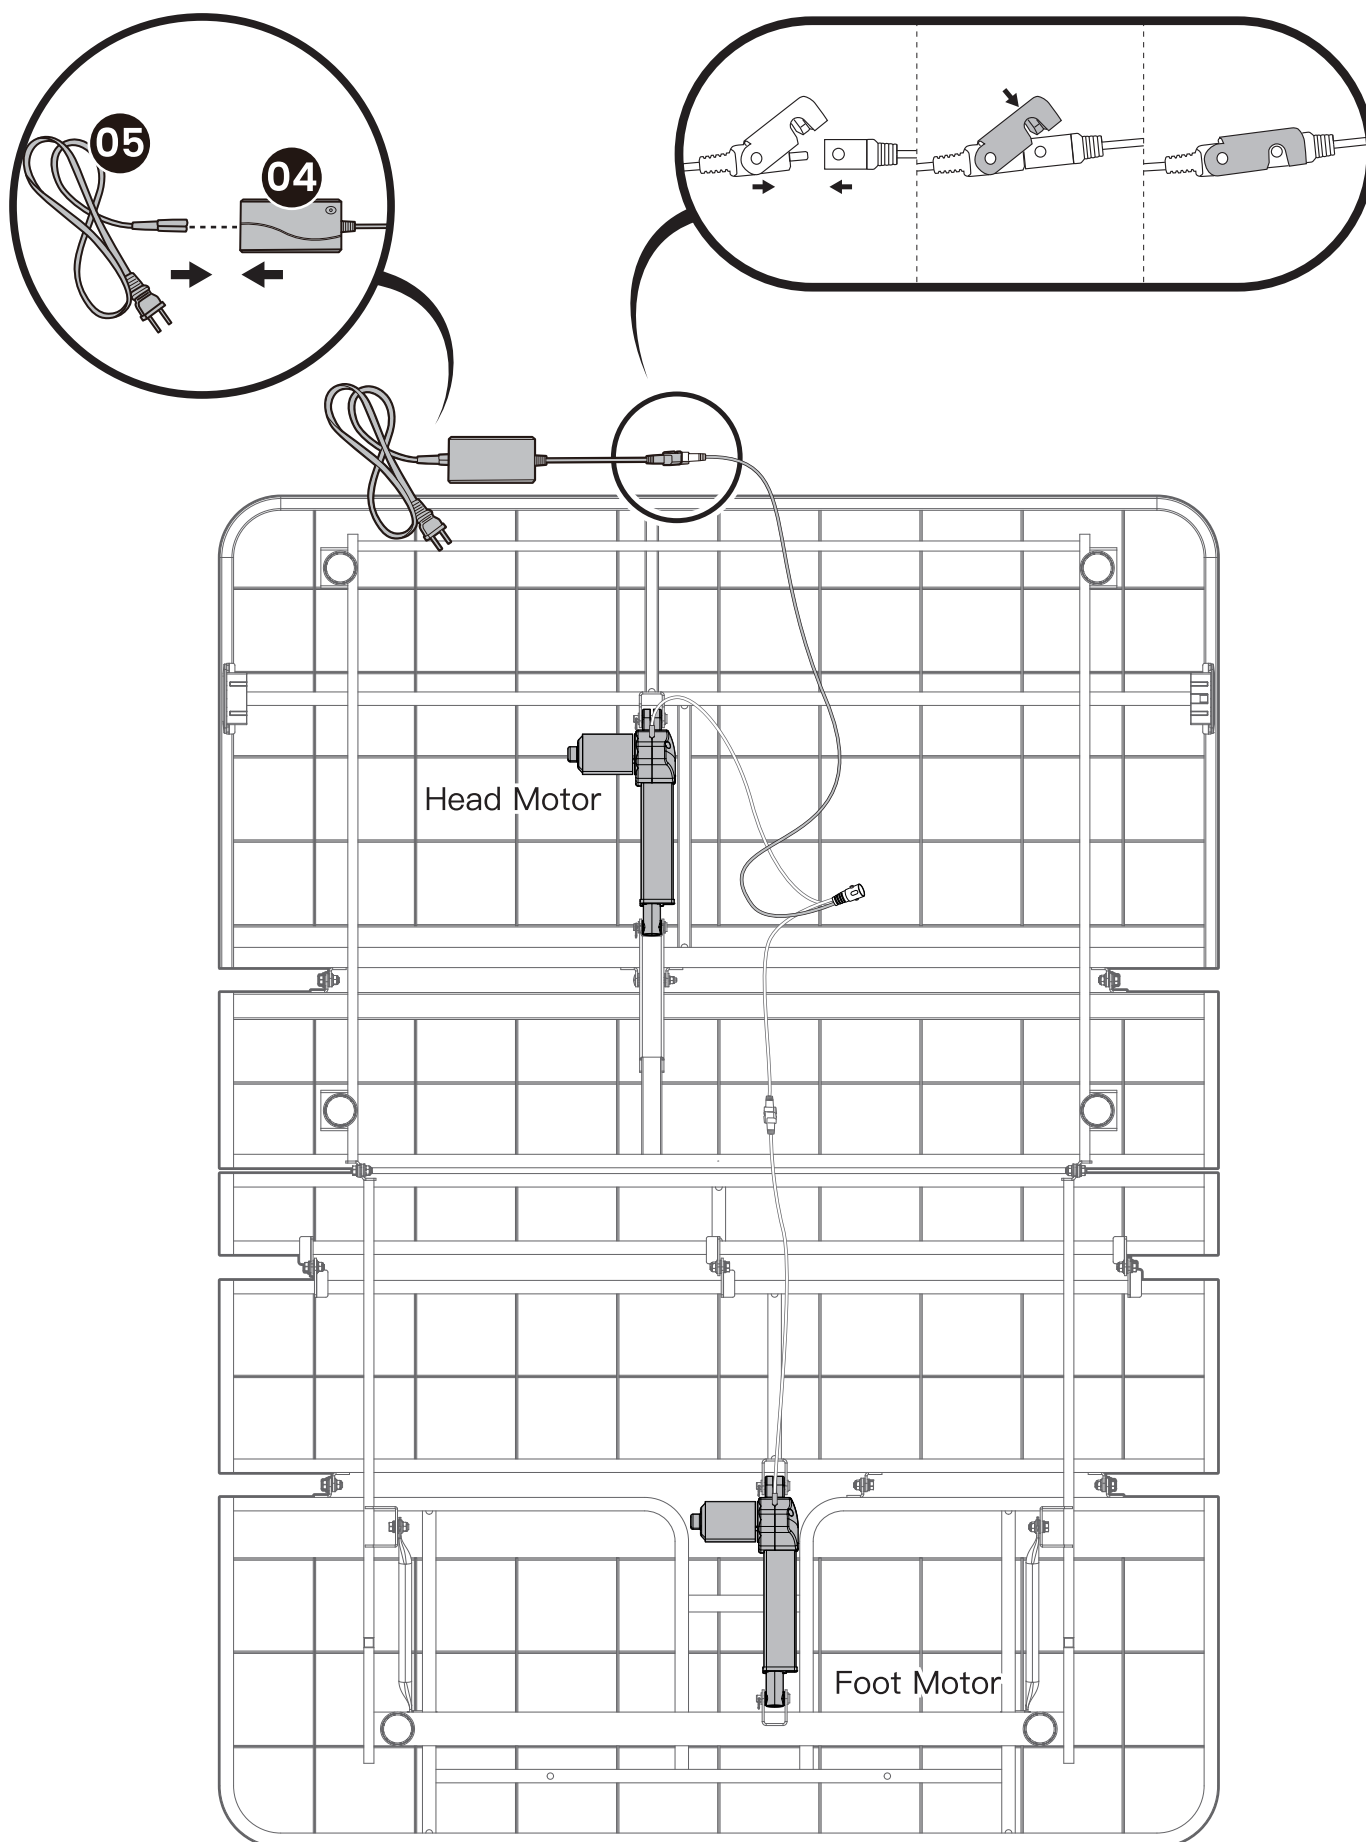


4

Connect the remote control [06] to the motor interface.

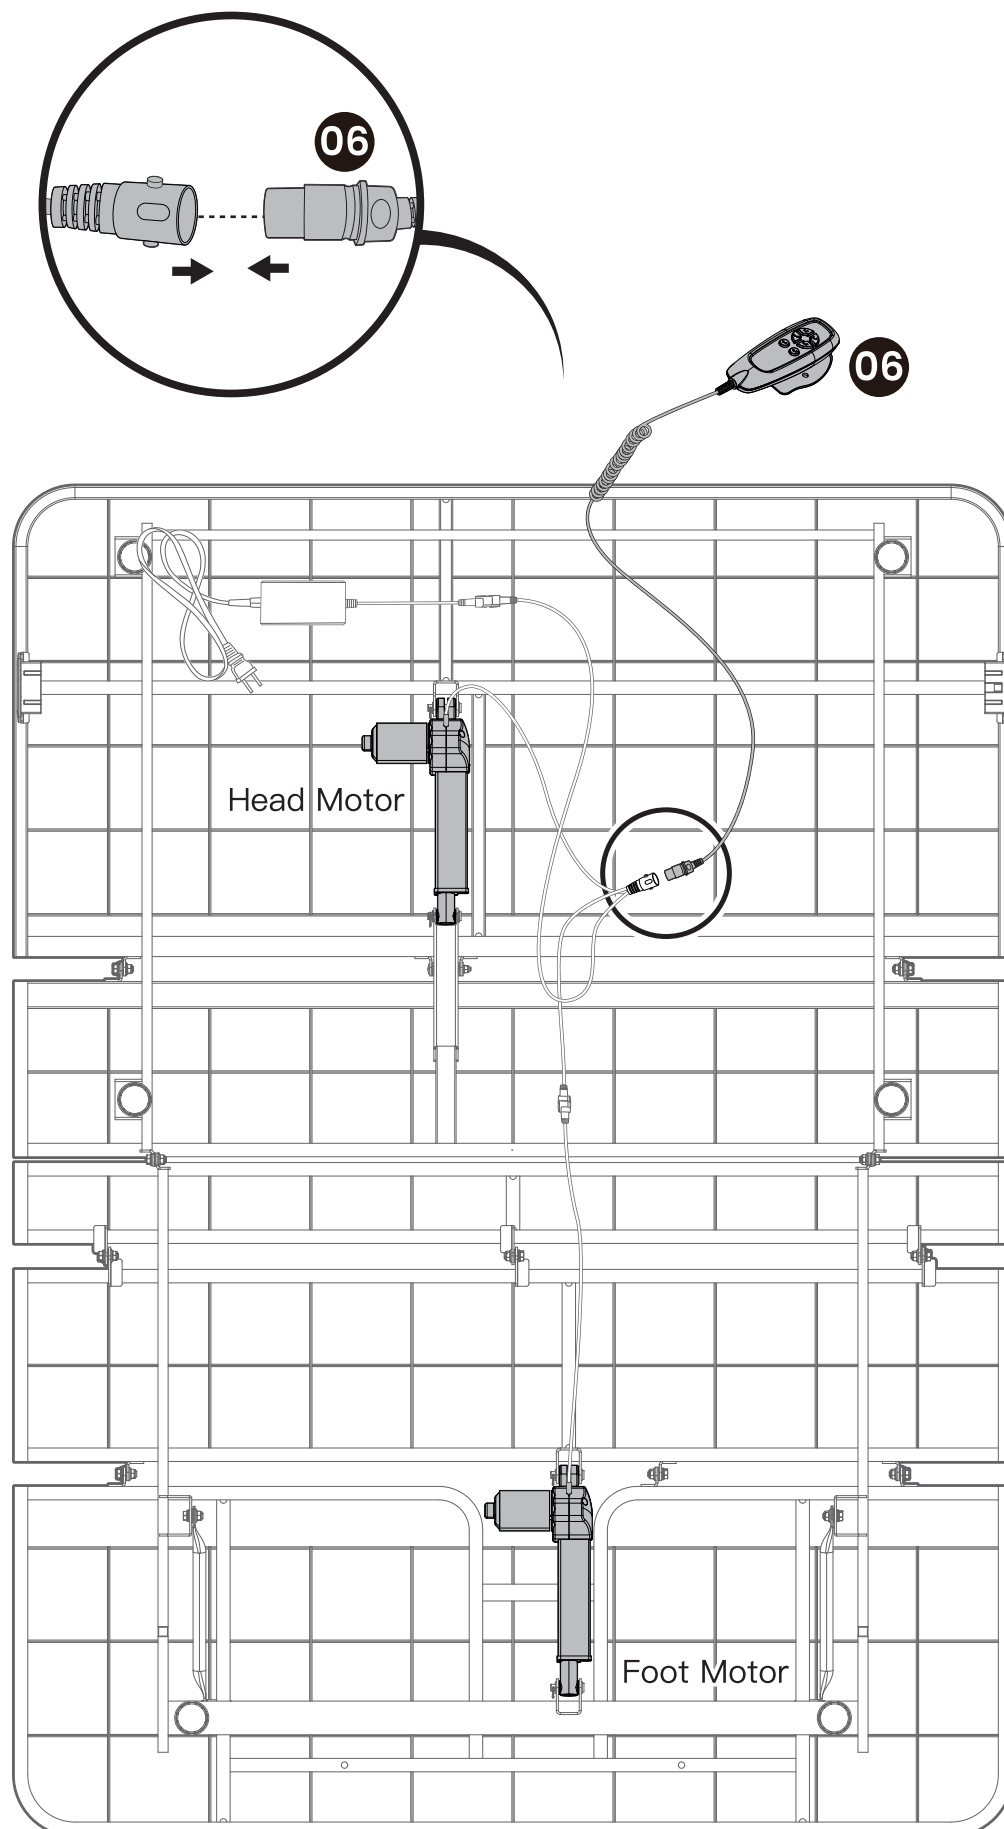


5


Flip the bed frame over. Insert the mattress retainer bar [03] into the holes at the footboard, then plug in the power cord.

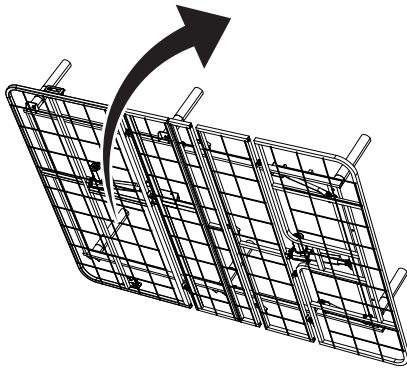

HEAVY! You may need assistance with this step.

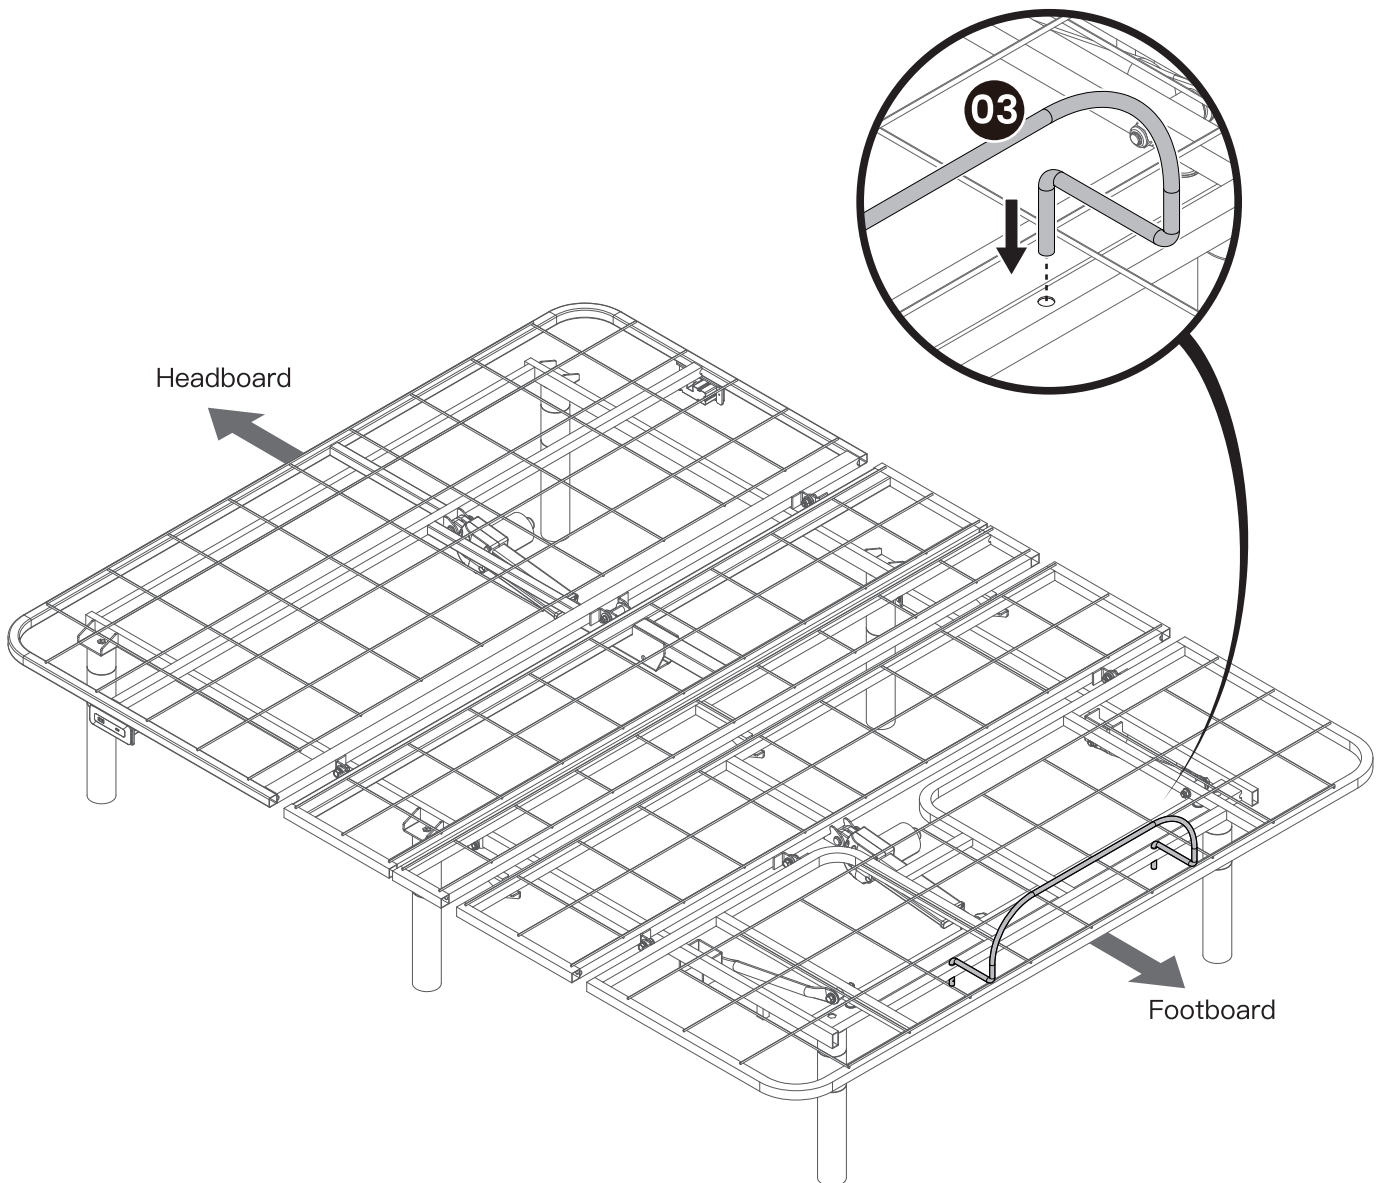

Using the Remote Control

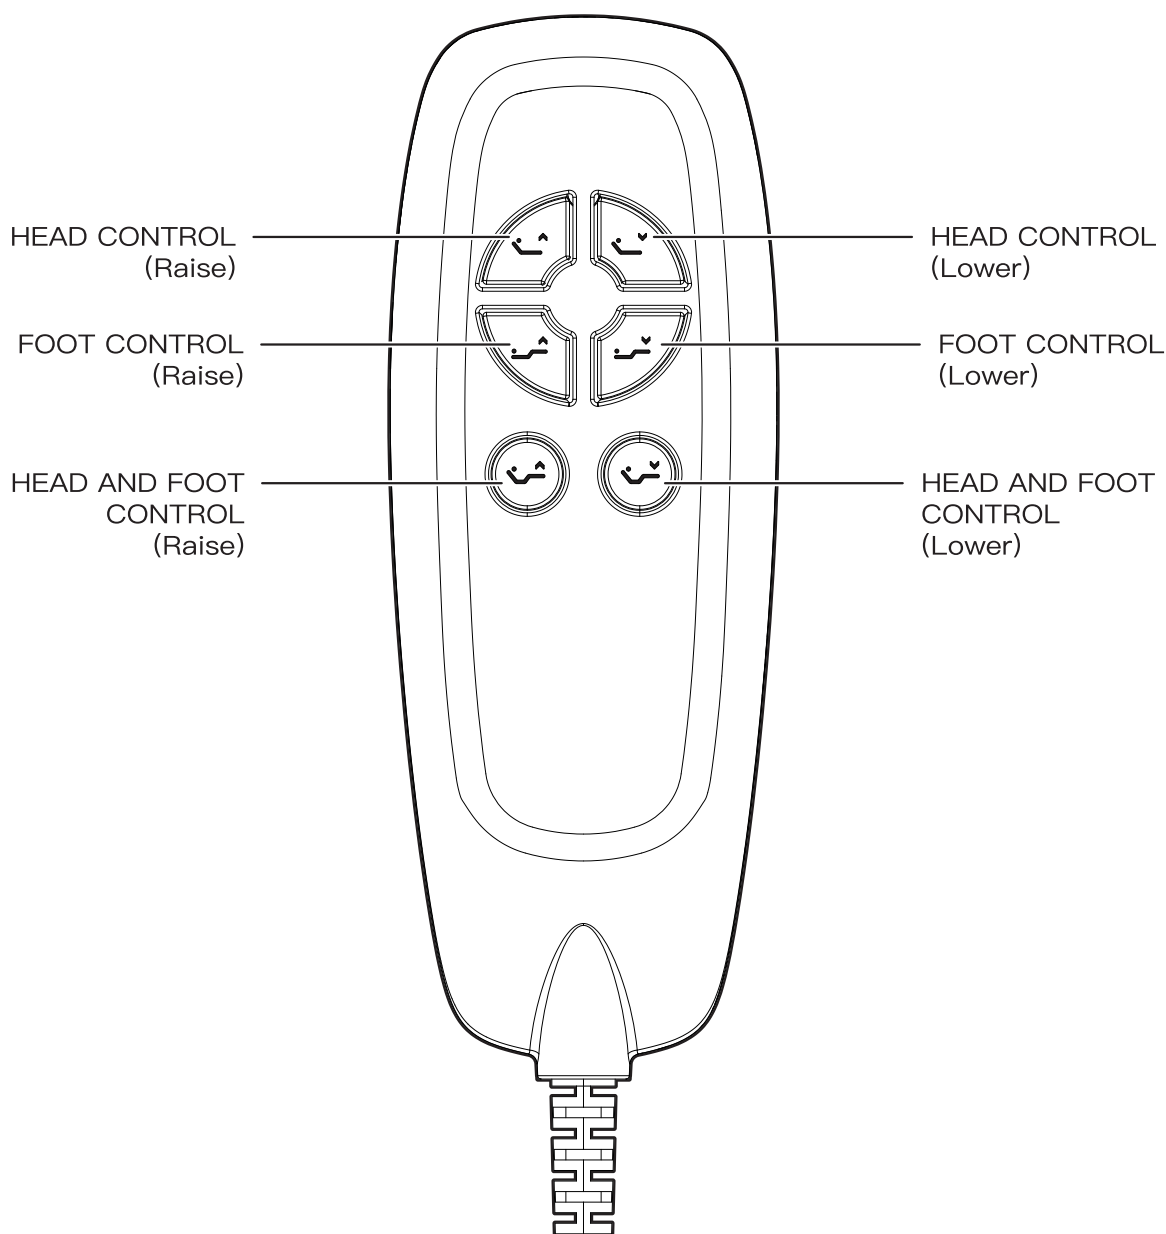

Adjustments



HEAD UP/DOWN BUTTONS

Press and hold to raise or lower the HEAD section.



FOOT UP/DOWN BUTTONS

Press and hold to raise or lower the FOOT section.



HEAD AND FOOT UP/DOWN BUTTONS


Press and hold to raise or lower both the HEAD and FOOT sections at the same time.

NOTE: The head section has a range of 60 degrees for adjustment, while the foot section has a range of 40 degrees.

Synchronizing Two Foundations

Two Twin XL bases may be placed next to each other to form a King. Each side can be operated independently using its own remote control. If desired, a single remote control can be used to operate both bases. However, using a single remote control for both bases will cause them to move together in synchronization.

⚠ WARNING FOR TWO TWIN XL BASES ONLY

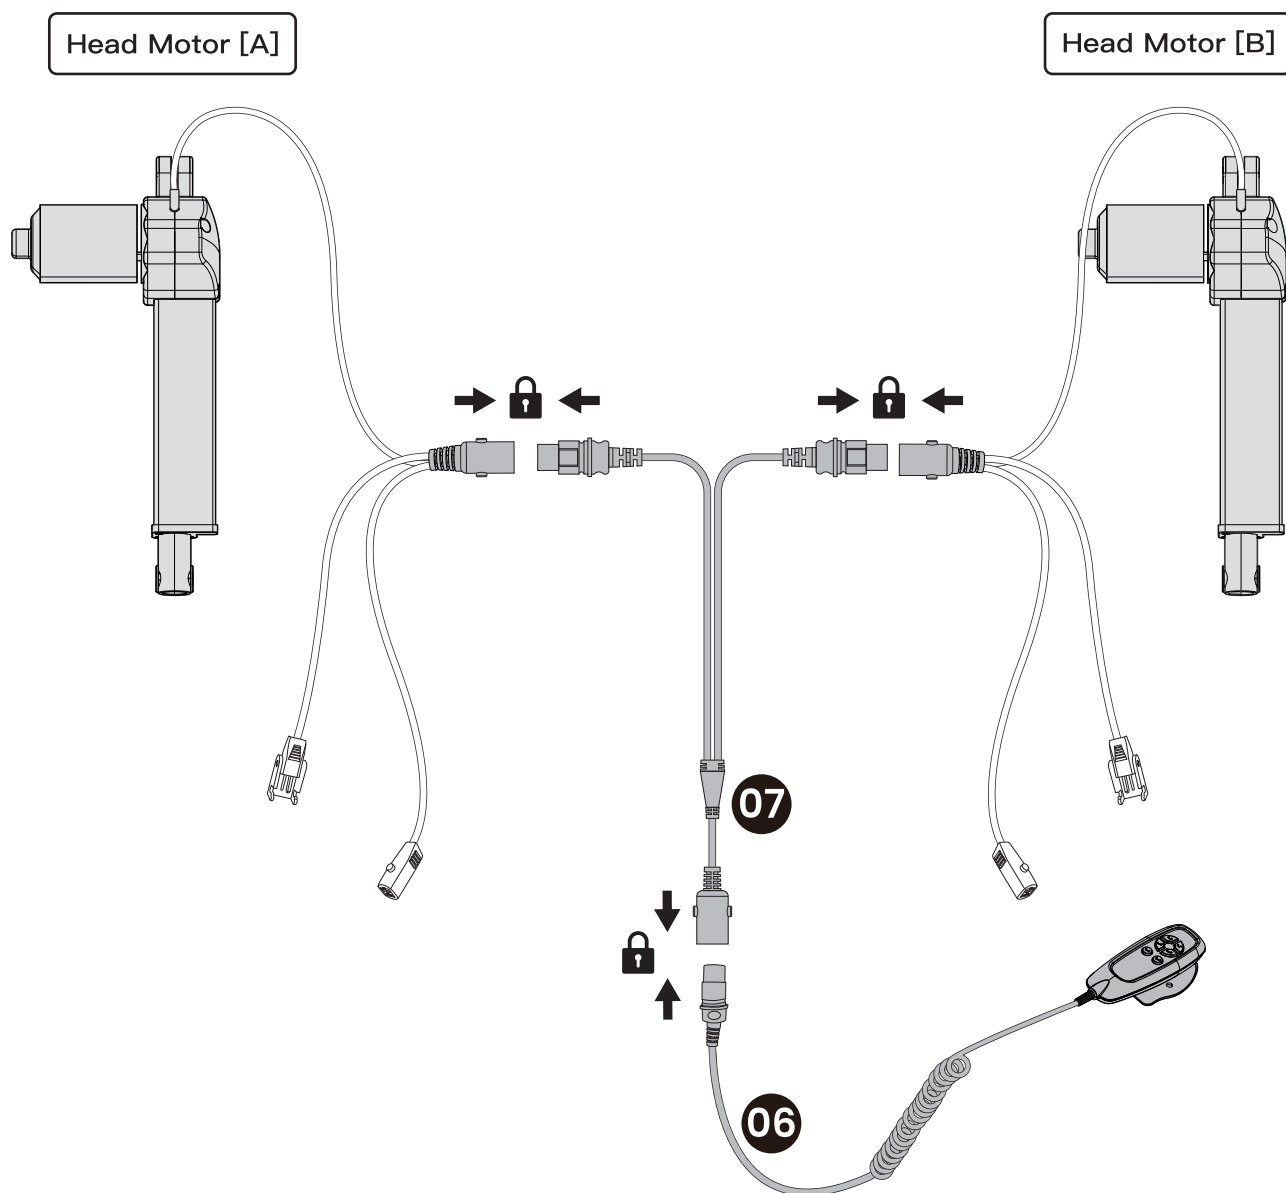

STEP 1:

Make sure that both bases (A & B) are connected to a power source and are in the flat position.

STEP 2:

Using the provided sync cord [07] (for two Twin XL bases only), connect both cables to each base (A & B). Next, attach the other end of the cord to the remote control [06]. This will allow you to control both bases using just one remote control.