




# COMBO iPad Keyboard Case



**Note:** Please read the manual carefully before using

# Keyboard Case Size

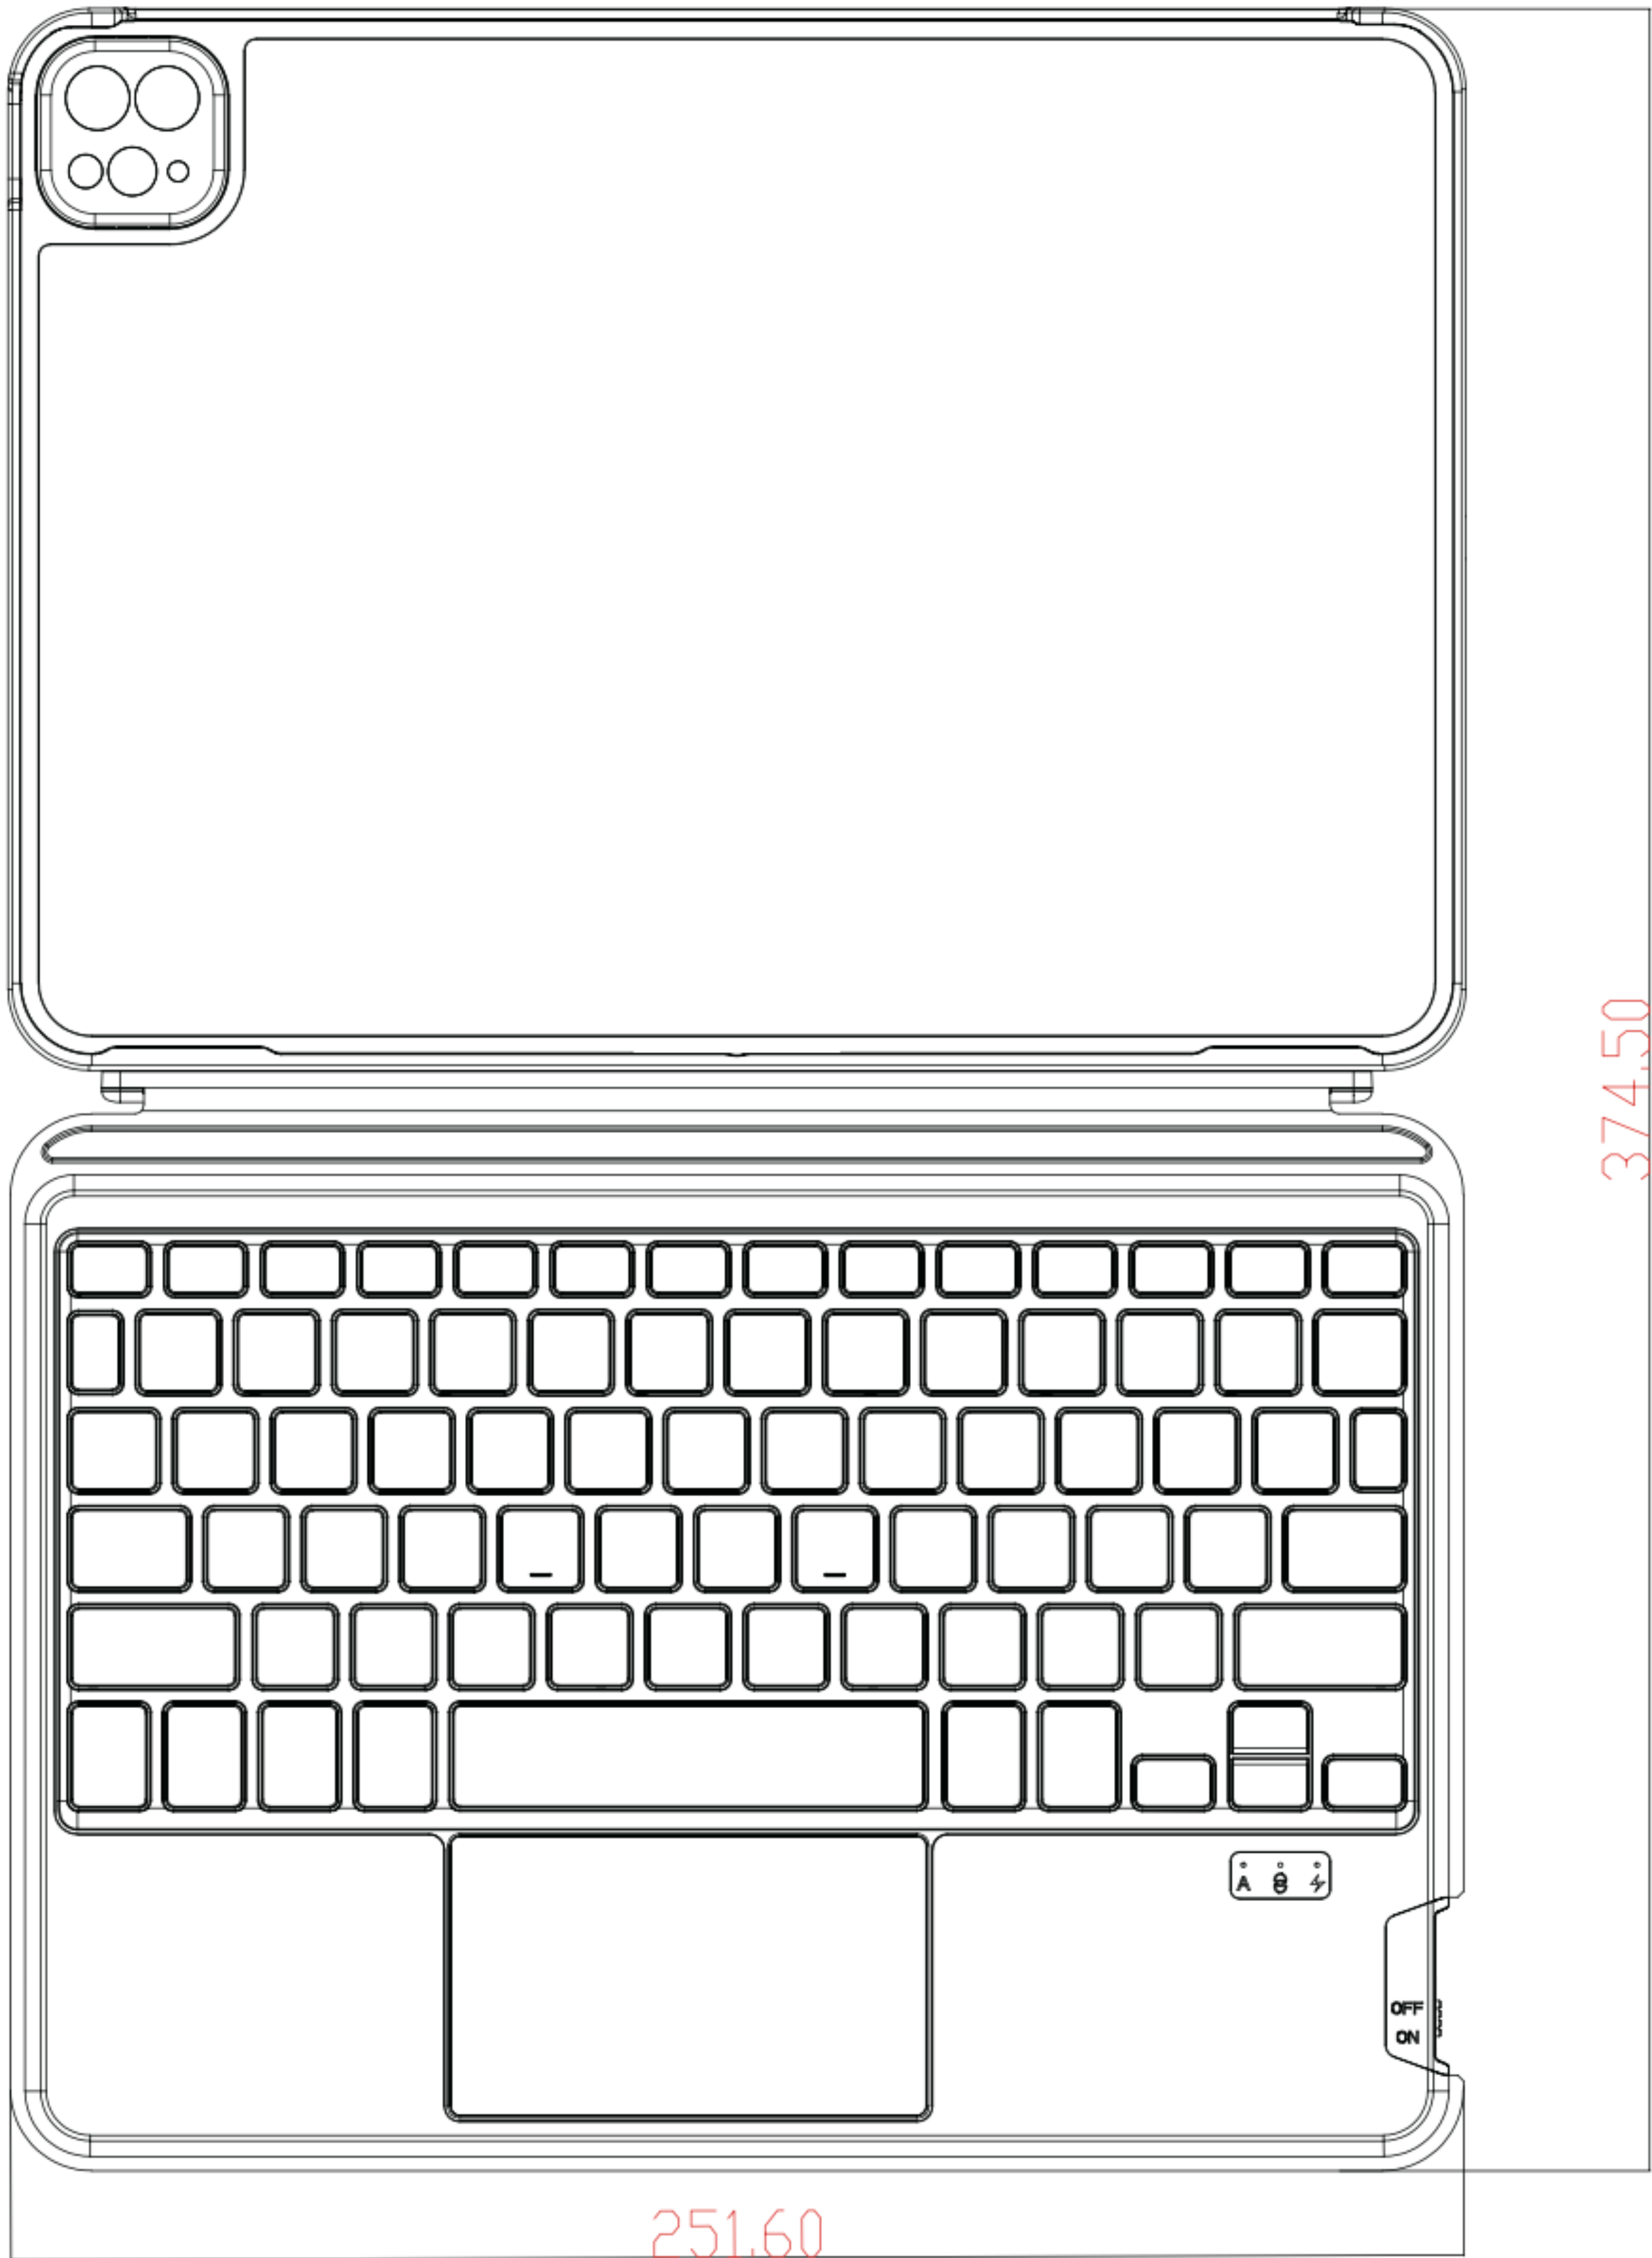



## How to connect the iPad


1. Open the cover, install the iPad into the cover, then fold the leather case inwards into a triangle to support the iPad.
2. Slide the key to "ON" to turn on the keyboard power. (the power indicator will flash slowly)
3. Press "Fn+ del " button into Bluetooth matching condition, the Bluetooth indicator light will flash with Blue.
4. Open Bluetooth on your iPad. Search keyboard name ( **WiWU 5.2G Keyboard** ) for matching device to keyboard.
5. The connection is successful, the Bluetooth indicator stop flashing.

### Note:


The keyboard will automatically go into power savings mode after 10 minutes of inactivity. Press any key and wait 2-3 seconds to wake the keyboard.

**The keyboard is not waterproof, so if liquid (such as water) leaks, the keyboard will be damaged and will not work properly.**

## Shortcut Keys

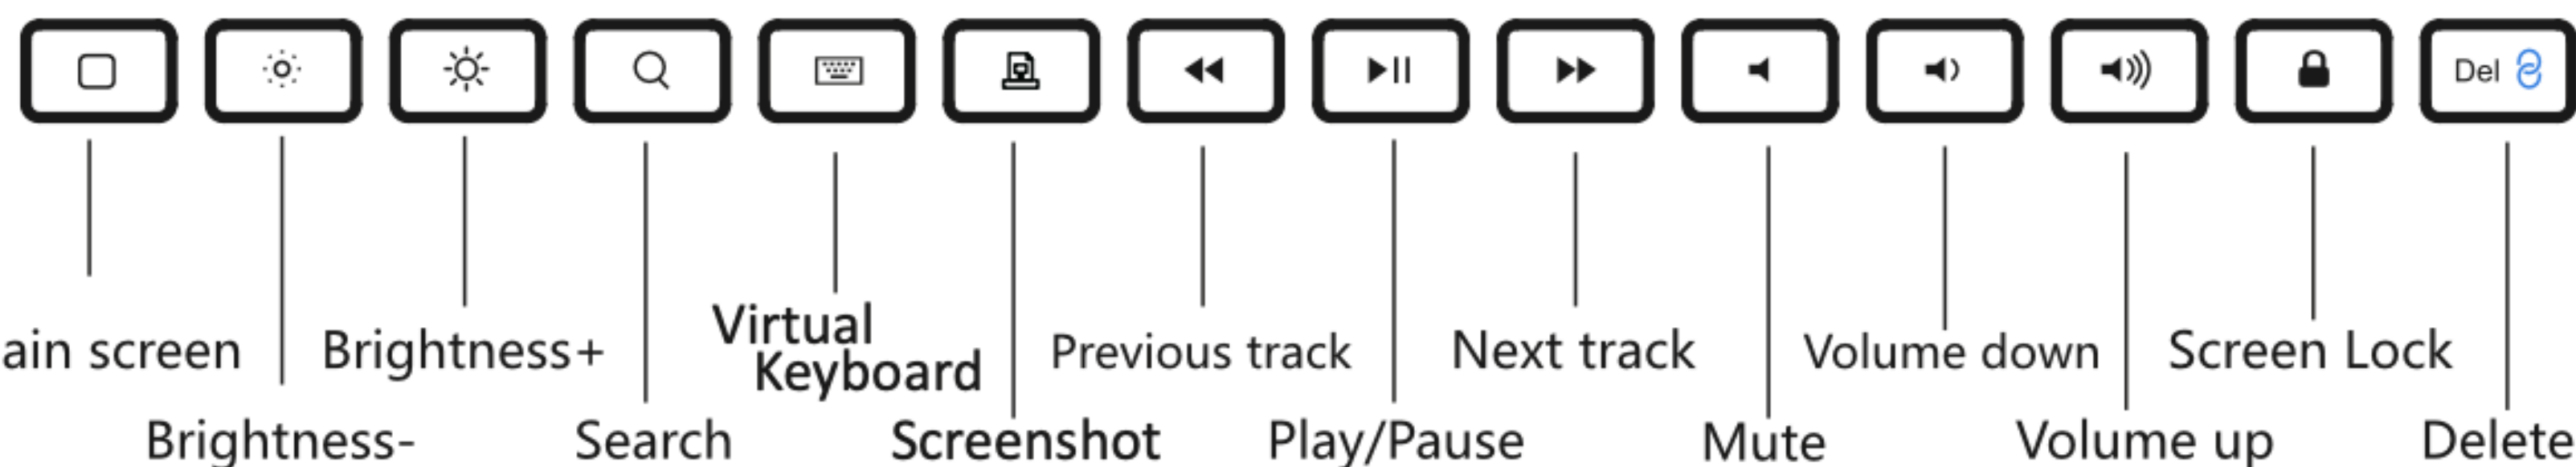

# No Backlight Keyboard

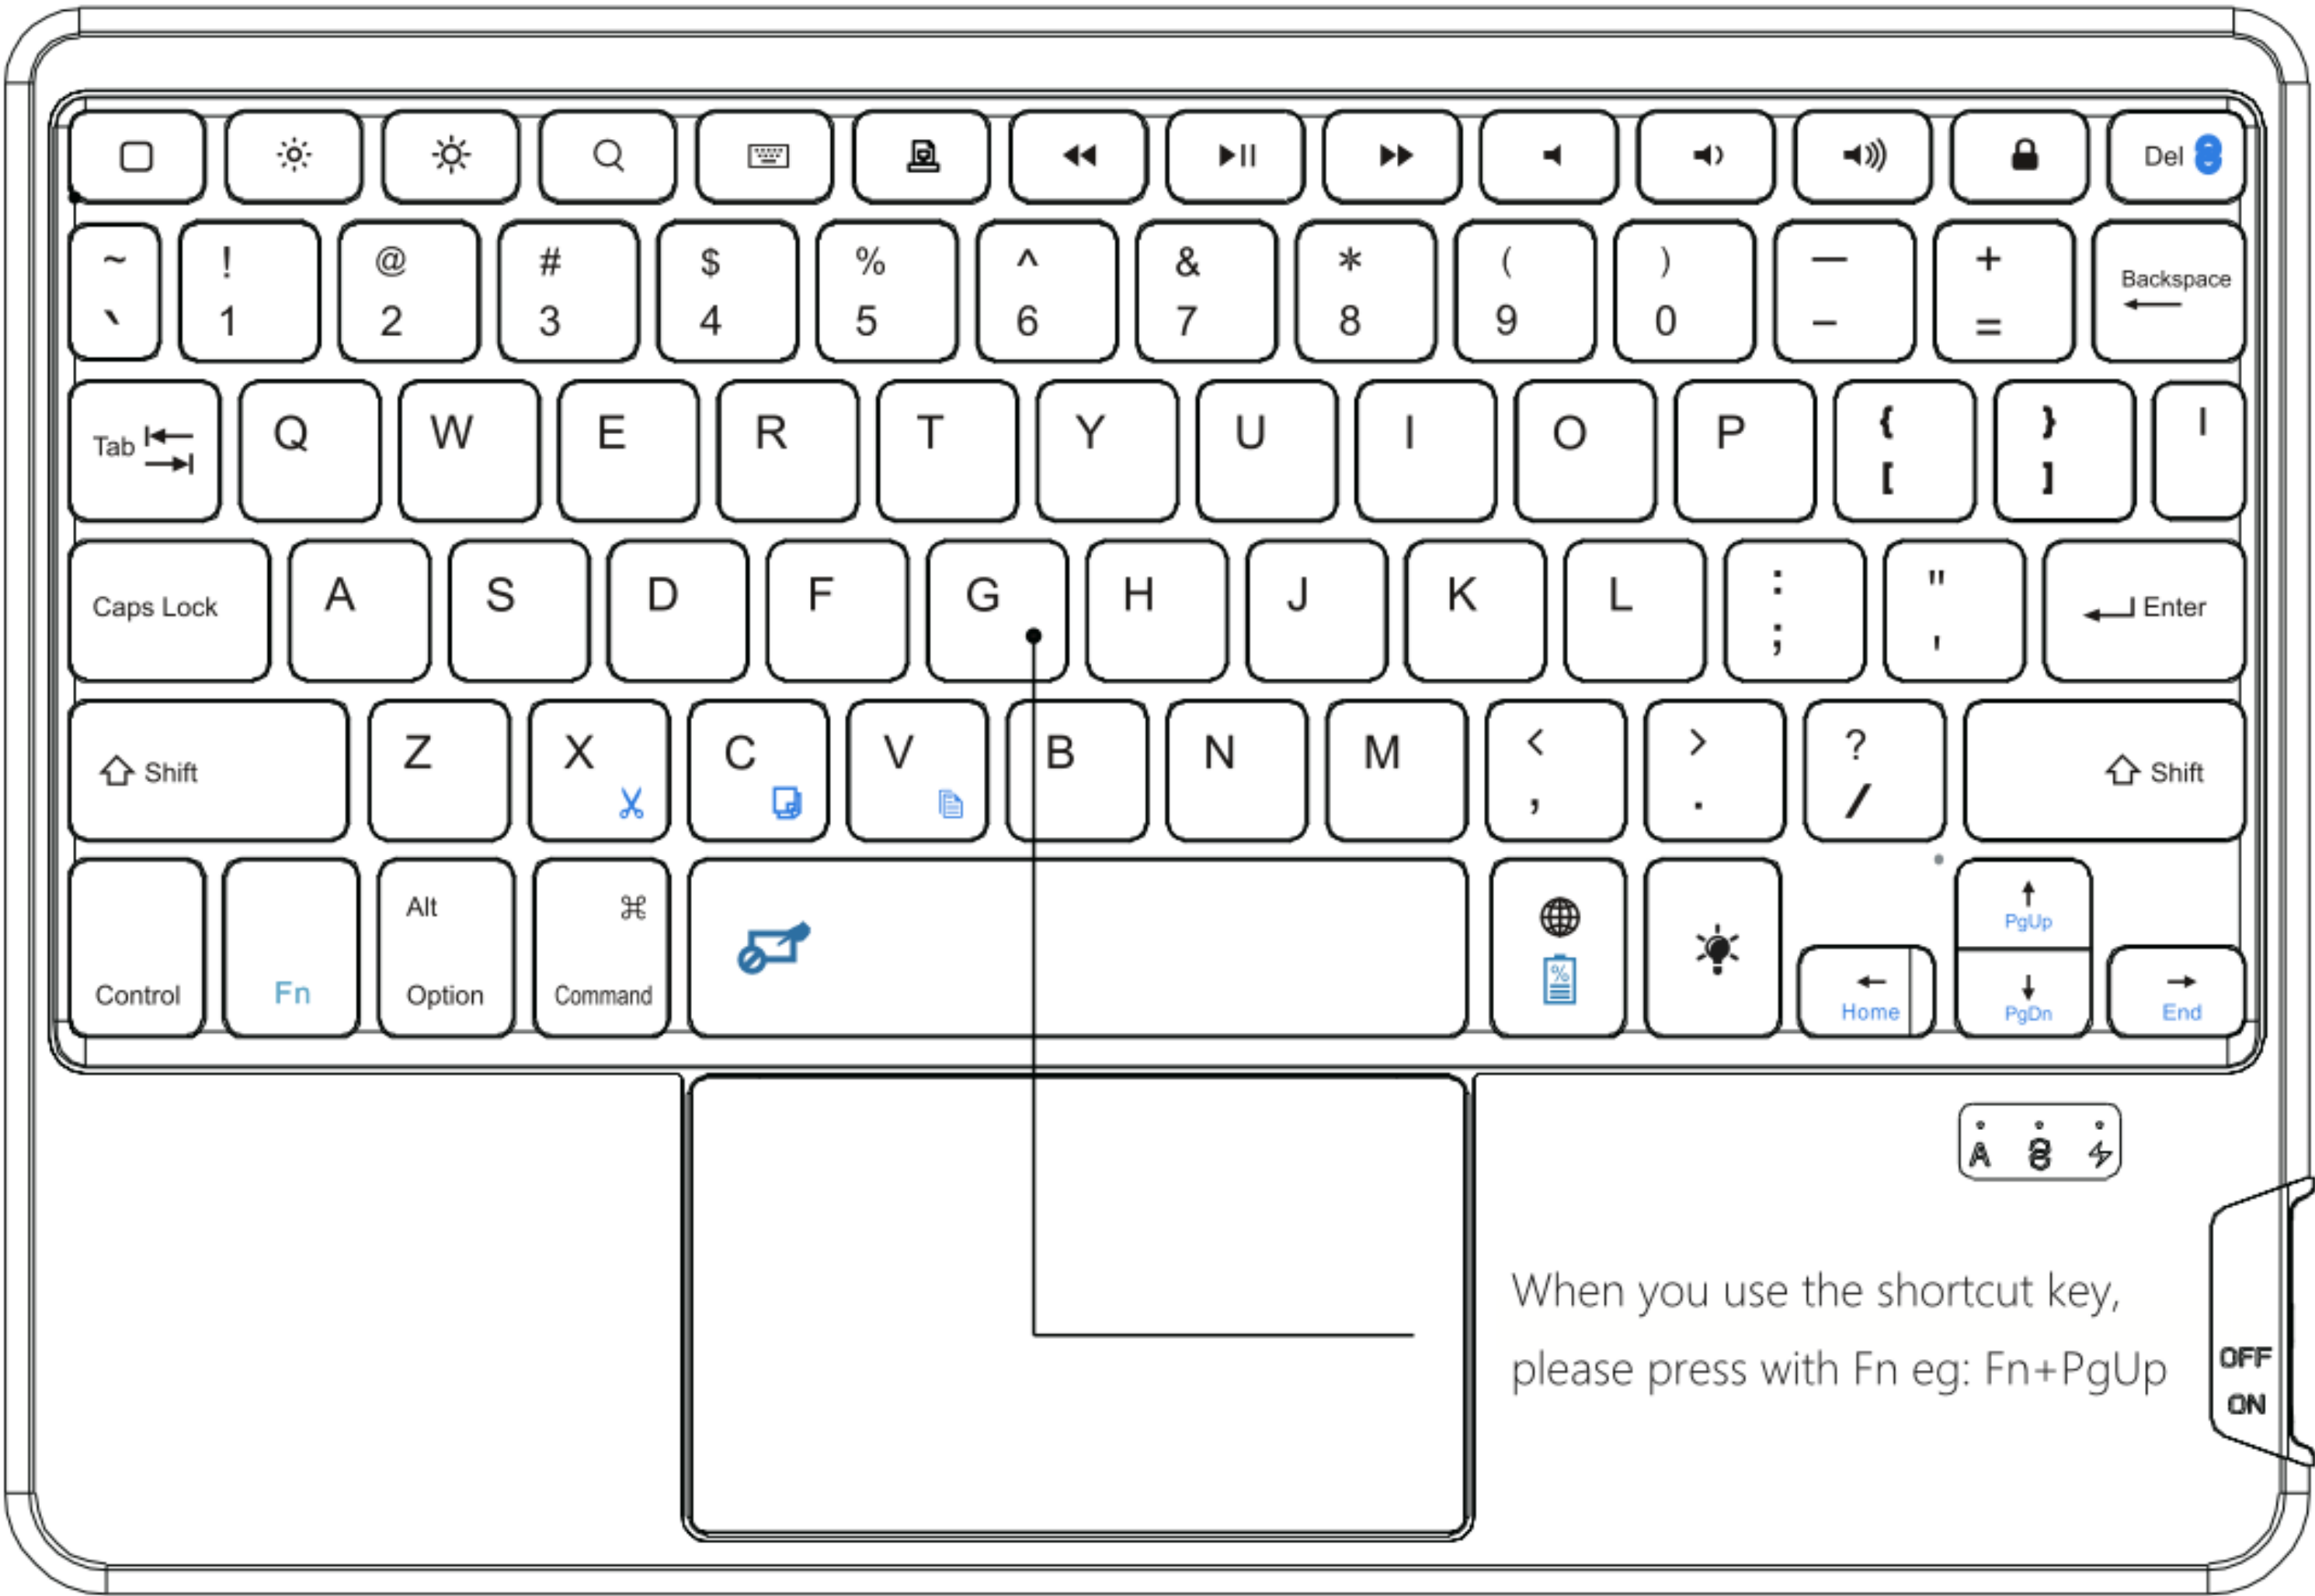


# Specifications

Working Current	85–120mA	Working Voltage	3.0 V ~ 4.2 V
Battery Standby Time	≥150 Days	Working Time	≥ 5 Hours
Charging Port	TYPE-C USB	Sleeping Current	< 40mA
Charging Time	2-3 Hours	Battery Capacity	500 mAh
Awaken Time	≤2 Seconds	Connect Distance	≤33 feet
Working Temperature	-10 °C~	Charging Current	≤250mA



# Backlight Keyboard

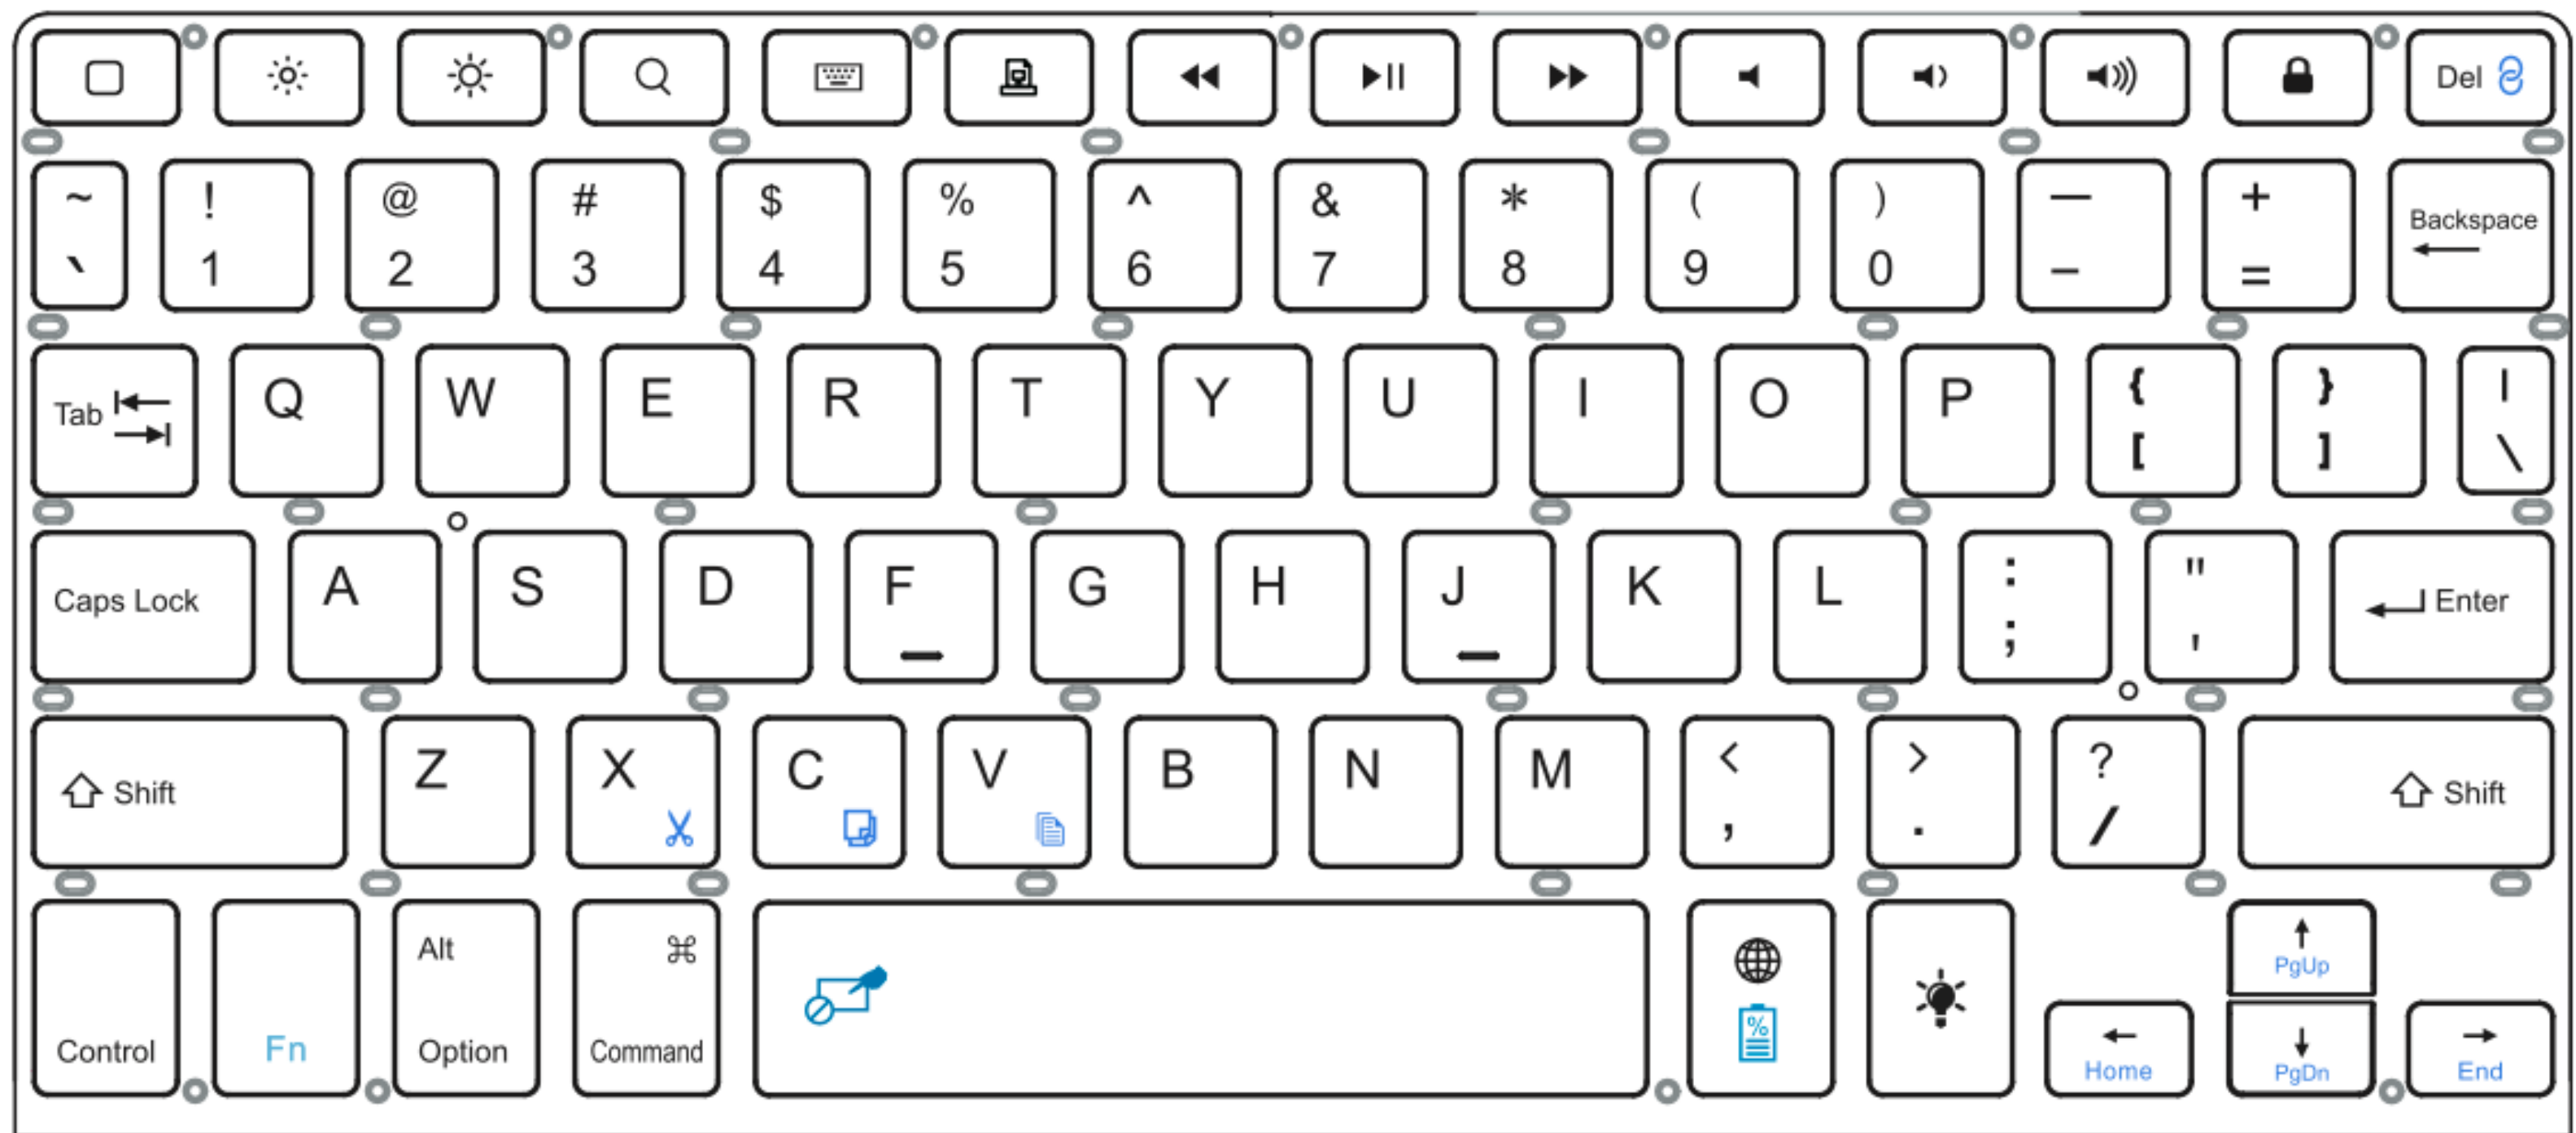


## How to change the backlight color



Adjust the brightness three-level adjustable.




+

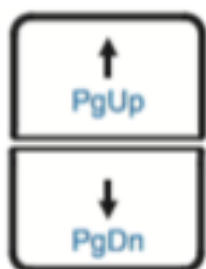

Switch color



# Trackpad / Indicator Overview

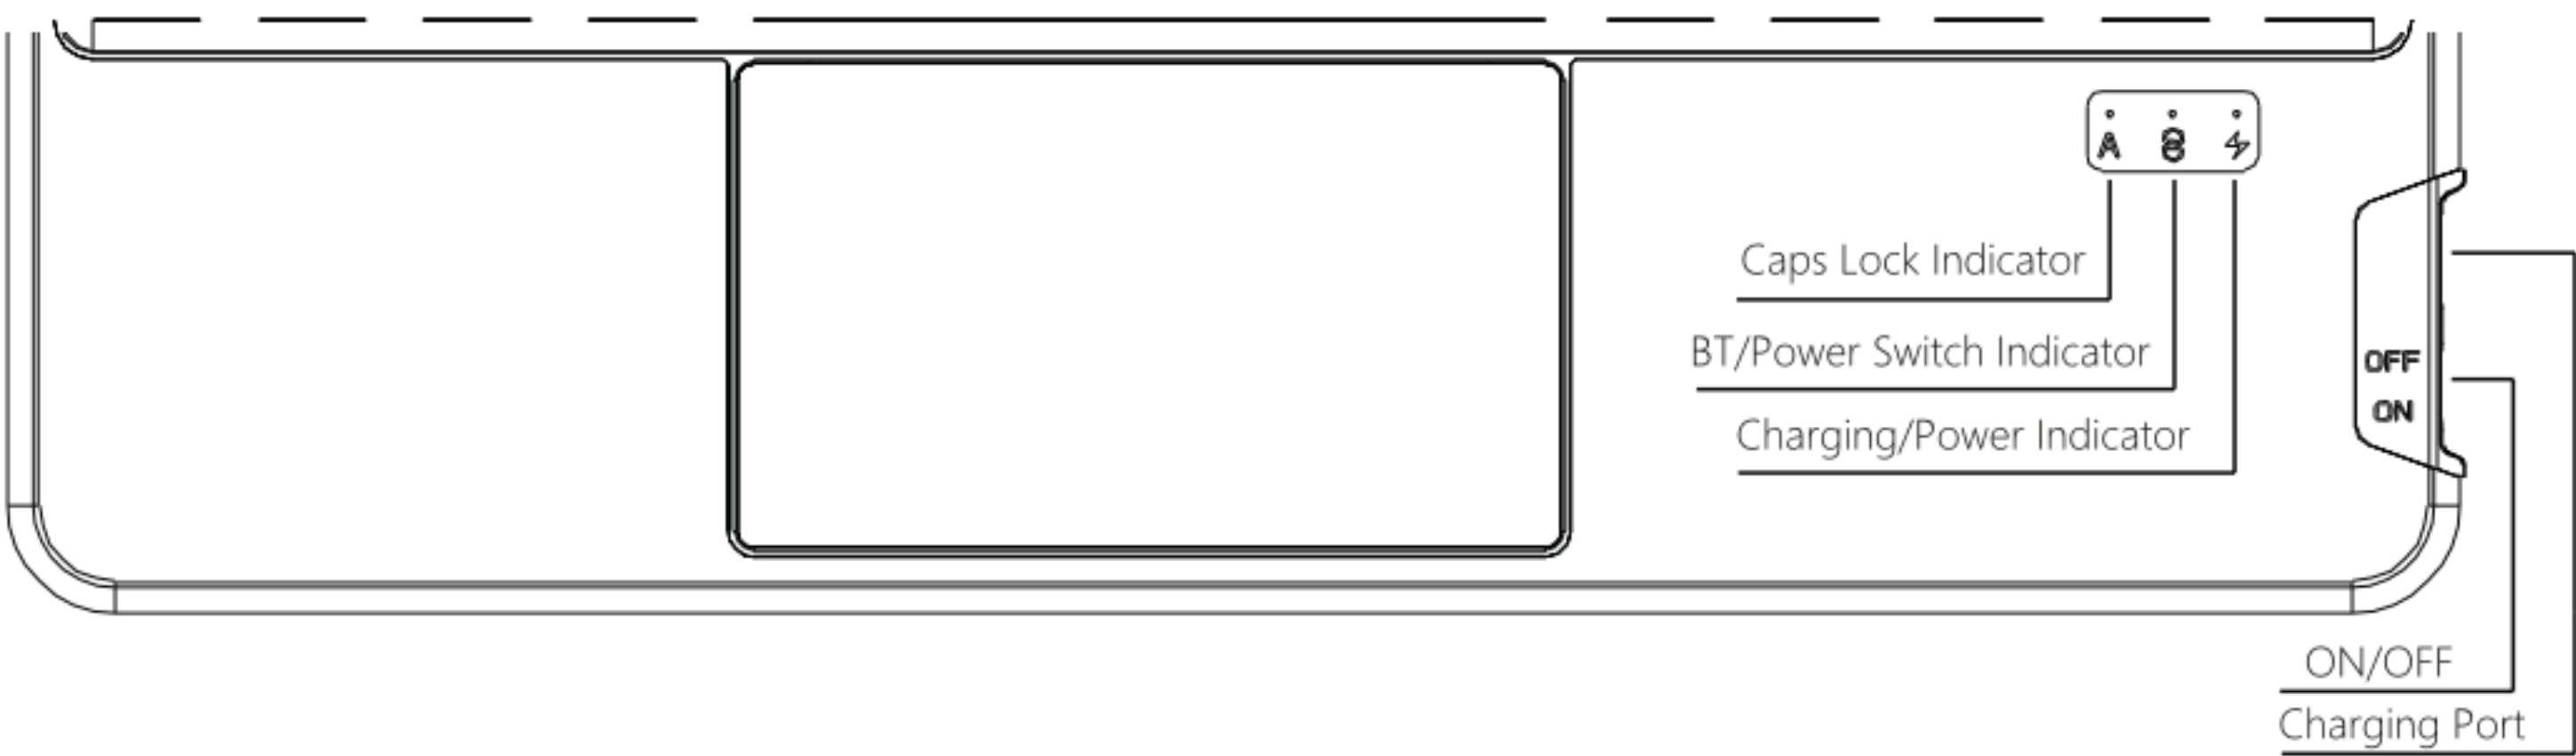

## Turn on/off touchpad function









Use the key combination to turn off/on the touchpad to avoid extra operations due to the touchpad.

# Indicator Light




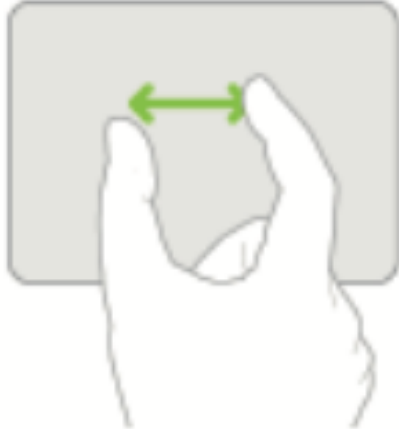
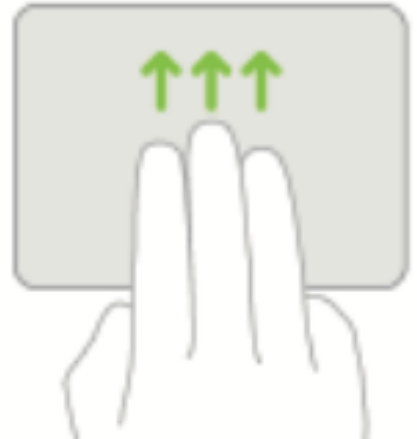

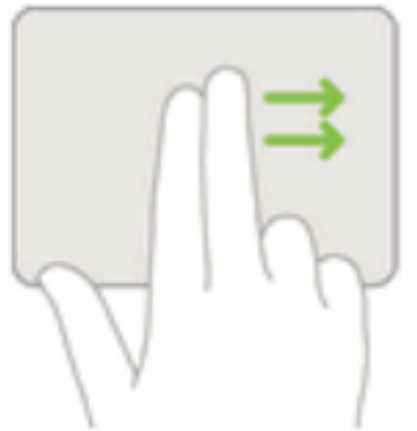
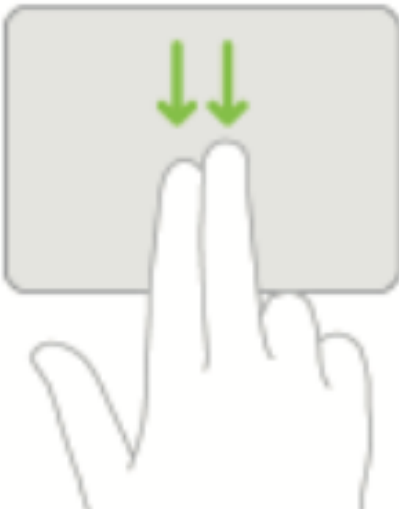

Capital Indicator Light	Press the keyboard Caps Lock, the indicator light is on.
Wireless Connect Indicator	Press the "Fn+del" button, the indicator light will flash slowly and enter BT pairing mode. When the pairing completion light goes out.
Charging Indicator Light	Slow flashing red light means the battery is low, the charging status is red for a long time, and it is green after charging is completed.
Electric Indicator Light	The power is turned on, and the light is off after 2-3 seconds.

# IOS: Trackpad Gestures

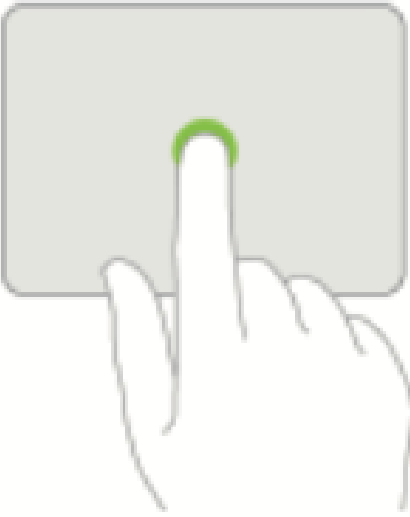Note: Please upgrade iPad to the latest IOS system  
(13.4.1 and above is the best)

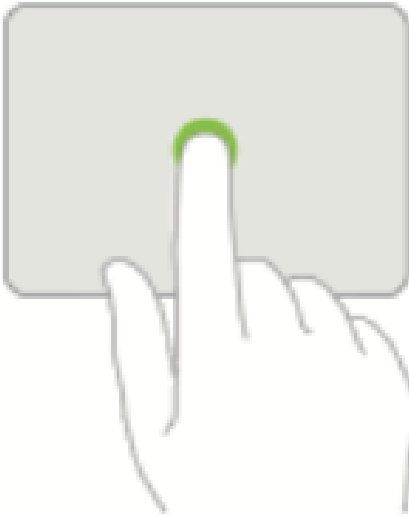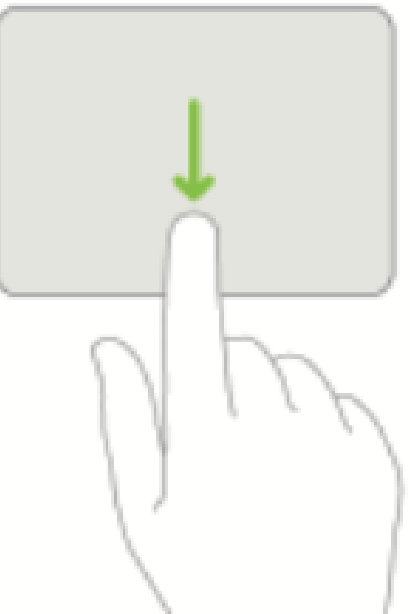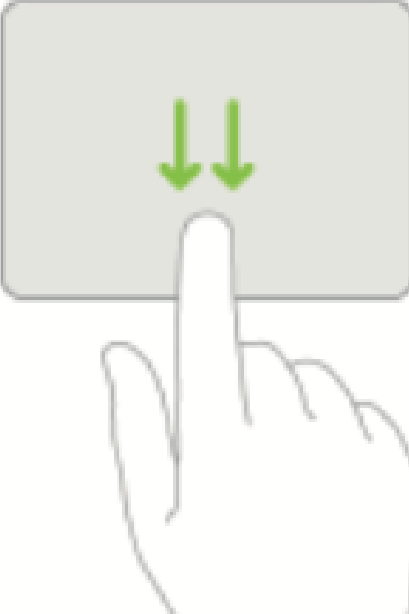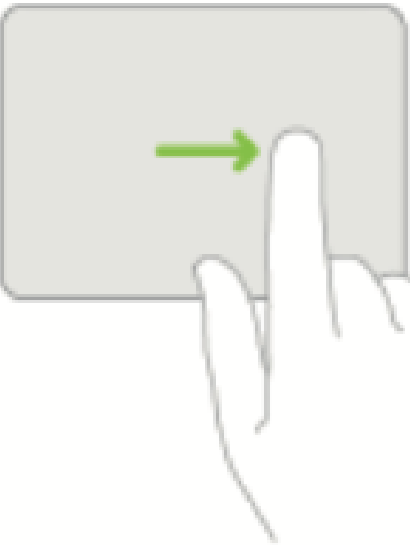Trackpad Gestures	iOS System	Trackpad Gestures	iOS System
	<b>Click.</b> Press with one finger until you feel a click.		<b>Drag.</b> One finger presses and the other finger slides on the touchpad to drag it.
	<b>Click and hold.</b> Press and hold with one finger.		<b>Wake iPad.</b> Click the trackpad. Or, if you're using an external keyboard, press any key.
	<b>Open the Dock.</b> Use one finger to swipe the pointer past the bottom of the screen.		<b>Go Home.</b> Use one finger to swipe the pointer past the bottom of the screen. After the Dock appears, swipe the pointer past the bottom of the screen again. Alternatively, click the bar at the bottom of the screen (on an iPad with Face ID).
	<b>View Slide Over.</b> Use one finger to swipe the pointer past the right edge of the screen. To hide Slide Over, swipe right again.		<b>Open Control Center.</b> Use one finger to move the pointer to select the status icons at the top right, then click. Or, select the status icons at the top right, then swipe up with one finger.

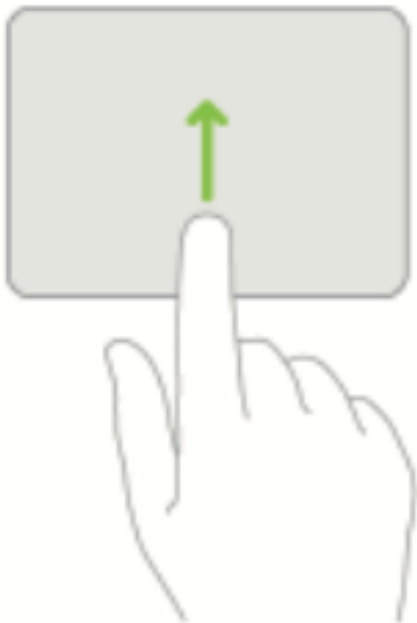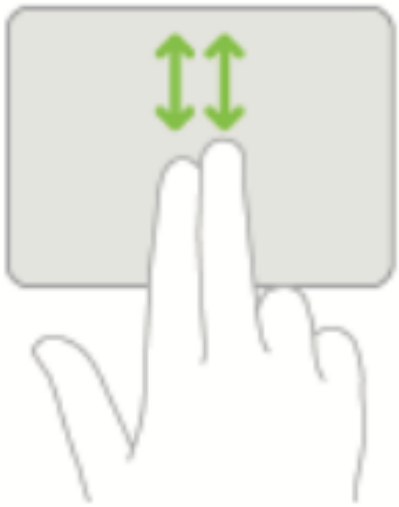

Trackpad Gestures	iOS System	Trackpad Gestures	iOS System
	<b>Open Notification Center.</b> Use one finger to move the pointer past the top of the screen near the middle. Or, select the status icons at the top left, then click.		<b>Scroll up or down.</b> Swipe two fingers up or down.
	<b>Scroll left or right.</b> Swipe two fingers left or right.		<b>Zoom.</b> Place two fingers near each other. Pinch open to zoom in, or pinch closed to zoom out.
	<b>Go Home.</b> Swipe up with three fingers.		<b>Switch between open apps.</b> Swipe left or right with three fingers.
	<b>Open Today View.</b> When the Home screen or the Lock screen is visible, use two fingers to swipe right.		<b>Open search from the Home screen.</b> Swipe down with two fingers.
	<b>Secondary click.</b> Click with two fingers to show the quick actions menu for items like icons on the Home screen, messages in a mailbox, and the Camera button in Control Center. Or, if you're using an external keyboard, you can press the Control key while you click the trackpad.		



## Attention

When not use for long time, suggest to close keyboard, in order to prolong battery lift. In order to get longer battery lift, charging before keyboard power power light flashes, charging time must be better more than 2 hours.

## Charging

When battery is low, the power indicator blinking, means need to charge the keyboard. Please use the iPad charging cable to charge the keyboard.

When charging, charge indicator lights will blinking, after full lights automatically turn off.

## Installation and Removal

- 1) Removing back protective piece: hold iPad on both sides and use thumbs to gently push off the back cover (see photo.) Cover is held in place by two tabs.
- 2) Proceed to "peel" cover away from iPad.
- 3) Take iPad out.
- 4) Take iPad out upwards.



(1)



(2)



(3)



(4)

