



Leica

ScanStation P20

System Field Manual

Version 2.0
English

- when it has to be **right**

Leica
Geosystems

Introduction



To use the product in a permitted manner, please refer to the detailed safety directions in the User Manual.

Purchase

Congratulations on the purchase of a Leica ScanStation P20 instrument.

Product identification

The type and the serial number of your product are indicated on the type plate. Enter the model and serial number in your manual and always refer to this information when you need to contact your agency or Leica Geosystems authorised service workshop.

Type: _____

Serial No.: _____

Symbols

The symbols used in this manual have the following meanings:

Type	Description
	Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.

Trademarks

- Windows is a registered trademark of Microsoft Corporation
- All other trademarks are the property of their respective owners.

Validity of this manual

This manual applies to the Leica ScanStation P20 instruments.

Available documentation

Name	Description/Format		
Leica ScanStation P20 User Manual	All instructions required in order to operate the product to a basic level are contained in the User Manual. Provides an overview of the product together with technical data and safety directions.	✓	✓

Name	Description/Format		
Leica ScanStation P20 System Field Manual	Describes the general operation of the product in standard use. Intended as a quick reference field guide.	✓	✓
Leica Geosystems HDS Training Manual	Training manual provided in the Leica HDS training course by the local Leica HDS training and support team.		

Refer to the following resources for all Leica ScanStation P20 documentation and software

- Leica ScanStation P20 System USB Stick
- <http://www.leica-geosystems.com/downloads>
- http://www.leica-geosystems.com/en/HDS-Laser-Scanners-SW_5570.htm
- <https://myworld.leica-geosystems.com>

Table of Contents

In this manual	Chapter	Page
	1 Description of the System	10
	1.1 Packing / Unpacking	10
	2 Setting Up the Instrument	12
	2.1 General Information	12
	2.2 Scanner Setup on Tripod	13
	2.3 Setup Over a Benchmark with the Internal Laser Plummet	15
	2.4 Instrument Height	18
	3 Description of the User Interface	20
	3.1 Front Side	20
	3.2 Display	21
	3.3 Status Bar	23
	3.4 Operating Principles	30
	4 Switching the System On/Off	34
	5 Remote Control	36
	6 Main Menu	40

7	Scanning	44
7.1	Scanning\Scan Begin	44
7.2	Scanning\Setup	47
7.2.1	Scanning\Setup\Standard Setup	47
7.2.2	Scanning\Setup\Quick Orientation	49
7.2.3	Scanning\Setup\Set Azimuth	51
7.2.4	Scanning\Setup\Known Backsight	59
7.2.5	Scanning\Setup\Resection	68
7.2.6	Scanning\Setup\Setup Configuration	79
7.3	Scanning\Scan Parameters	88
7.3.1	Scanning\Scan Parameters\Field of View	90
7.3.2	Scanning\Scan Parameters\Resolution	102
7.3.3	Scanning\Scan Parameters\Image Control	105
7.3.4	Scanning\Scan Parameters\Filters	109
7.3.5	Scanning\Scan Parameters...\Target Definition	115
7.4	Favorite Scan	132
8	Manage	134
8.1	Manage\Projects	136
8.1.1	Manage\Projects\New Project	138
8.1.2	Manage\Projects>Edit Project	140
8.1.3	Manage\Projects>Delete Project	142
8.1.4	Manage\Projects\Data	144
8.1.5	Manage\Projects\Transfer Project	150

8.2	Manage\Targets	151
8.2.1	Manage\Targets\New Target	153
8.2.2	Manage\Targets>Edit Target	155
8.2.3	Manage\Targets>Delete Target	157
8.3	Manage\Control Points	159
8.3.1	Manage\Control Points\New Project	161
8.3.2	Manage\Control Points>Edit Project	161
8.3.3	Manage\Control Points>Delete Project	161
8.3.4	Manage\Control Points\Import Control Points	162
8.3.5	Manage\Control Points\Data	167
8.3.6	Manage\Control Points\Data\New Control Point	169
8.3.7	Manage\Control Points\Data>Edit Control Point	171
8.3.8	Manage\Control Points\Data>Delete Control Point	173
8.3.9	Manage\Control Points\Data\Import Control Points	174
8.3.10	Manage\Control Points\Data>Delete All Control Points	174
9	Status	176

9.1	Status\Battery & Memory	178
9.2	Status\System Information	182
9.3	Status\Level & Laser Plummet	187
9.4	Status\WiFi	193


10 Configuration	196
10.1 Configuration\Units & Formats	199
10.2 Configuration\Date & Time	201
10.3 Configuration\Language	203
10.4 Configuration\Define Favorite	205
11 Tools	212
11.1 Tools\Format	215
11.2 Tools\Transfer	217
11.3 Tools\License	224
11.4 Tools\Screen Calibration	227
11.5 Tools\Check & Adjust	229
Index	236

1 Description of the System

1.1 Packing / Unpacking

Unpacking

When in its transport container, the ScanStation P20 can sit in either a face-up or face-down position.

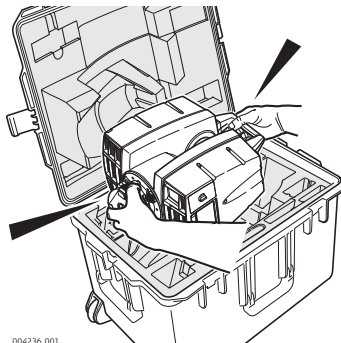

To take the instrument out of its container, grasp the handle and the base of the instrument, and lift. Use caution due to the weight of the instrument (12 kg).



Pack the instrument the same way it is delivered.

2 Setting Up the Instrument

2.1 General Information

Use the tripod

The instrument should always be set up on its tripod. Using the tripod specified for the scanning system guarantees maximum stability during scanning operations.



Always set up the instrument on its tripod. Do not set up the instrument directly on the ground for scanning operations.




It is always recommended to shield the instrument from direct sunlight and avoid uneven temperatures around the instrument.

2.2

Scanner Setup on Tripod

ScanStation P20 setup step-by-step

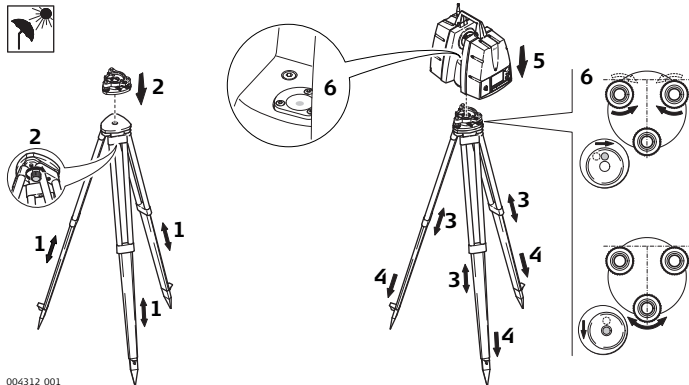

004312.001



Shield the instrument from direct sunlight and avoid uneven temperatures around the instrument.

1. Extend the tripod legs to allow for a comfortable working posture. Tighten the screws at the bottom of the legs.
 2. Place the tribrach on the tripod and secure it with the central fixing screw.
 3. Set up the tripod so that the tripod plate is as horizontal as possible.
 4. Push the tripod legs firmly into the ground.
 5. Place the instrument on the tribrach and secure it with the locking knob of the tribrach.
 6. Level up the instrument using the instrument's circular level. Turn two of the foot screws together in opposite directions. The index finger of your right hand indicates the direction in which the bubble should move. Now use the third foot screw to centre the bubble.
-

2.3 Setup Over a Benchmark with the Internal Laser Plummet

Description

This topic describes an instrument setup over a marked ground point using the laser plummet. Geo-referencing of the Leica ScanStation P20 is established by setting up over a known or assumed control point, with optional reference target measurement to set the azimuth direction, and establishing a local or global coordinate system. The Leica ScanStation P20 allows you to traverse, resect or free-station. Known azimuth or known backsight measurements can be observed.



It is always possible to set up the instrument without the need for a marked ground point.




With the dual-axis compensator enabled, the data scanned with ScanStation P20 is corrected automatically.




About the plummet:

- The laser plummet described in this topic is built into the vertical axis of the instrument. It projects a red spot onto the ground, making it much easier to centre the instrument.
- The laser plummet cannot be used in conjunction with a tribrach equipped with an optical plummet.

Setup with Laser Plummet step-by- step

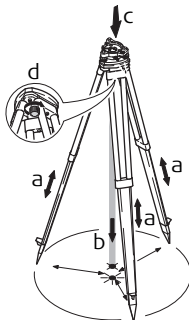

004313_001

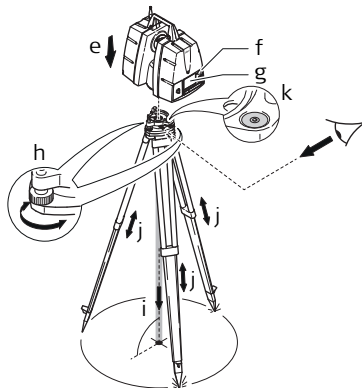

Shield the instrument from direct sunlight and avoid uneven temperatures around the instrument.

1. Extend the tripod legs to allow for a comfortable working posture (**a**). Position the tripod approximately over the marked ground point, centring it as well as possible (**b**).
2. Place the tribrach on the tripod (**c**) and secure it with the central fixing screw (**d**).


3. Place the instrument on the tribrach (**e**) and secure it with the tribrach's locking knob.
 4. Turn on the instrument by pressing the ON/OFF button (**f**). Go to **Status, Level & Laser Plummet, Plummet** and activate the laser plummet (**g**).
 5. Move the tripod legs (**a**) and use the tribrach footscrews (**h**) to centre the plummet (**i**) over the ground point.
 6. Adjust the tripod legs (**j**) to level the circular level (**k**).
 7. By using the electronic level (**Status, Level & Laser Plummet, Level**) turn the tribrach footscrews (**h**) to precisely level the instrument.
 8. Centre the instrument precisely over the ground point (**i**) by shifting the tribrach on the tripod plate.
 9. Repeat steps 7. and 8. until the required accuracy is achieved.
-

2.4

Instrument Height

ScanStation P20 height setup step- by-step

To get an accurate height measurement use the GHM008 instrument height meter in conjunction with the GHT196 distance holder. Both are included with the scanner.

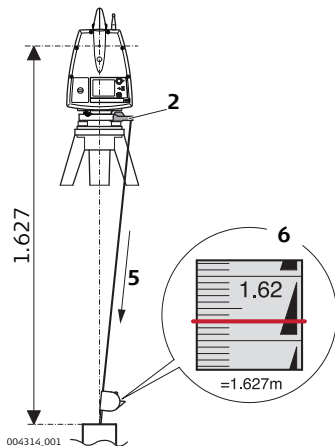

1. Place tripod centrally over the ground point, level instrument.
2. Click GHT196 distance holder to tribrach. It must "snap" onto the cover over an adjusting screw.
3. Unfold measuring tongue, pull out tape measure a little.
4. Insert GHM008 instrument height meter in the distance holder and attach.
5. Swivel measure in the direction of the ground point, pull out until the tip of the measuring tongue touches the point on the ground, keep under tension and do not allow to sag, clamp if necessary.
6. Read height of the instrument (ground - tilt axis) in the reading window at the red marking (in the example 1.627 m).




- For detailed information about the GHM008 instrument height meter and GHT196 distance holder refer to the GHM008/GHT196 user manual which is delivered with these items.
 - The tilt axis height of the ScanStation P20 is 250 mm. Take care to use the GHM008 which has a special scale to measure the height of instruments with a tilt axis height of 250 mm. Do not use a tape with any other scale.
 - Alternatively the instrument height can be measured with a common, 1:1 scaled measuring tape from the point on the ground to the little notch under the red Leica logo at both side covers of the scanner. This distance will then be from the ground point to the tilt axis.
-

3 Description of the User Interface

3.1 Front Side

Overview

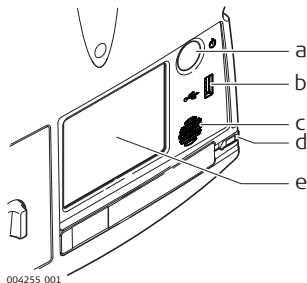


- a) ON/OFF button
- b) USB socket
- c) Loudspeaker
- d) Stylus
- e) Touch screen user interface

3.2

Display

Overview

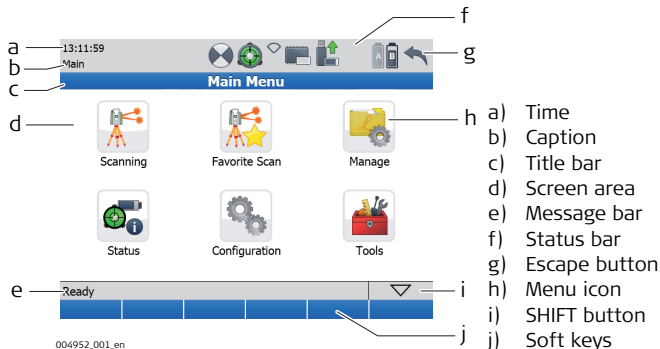

Element	Description
Time	The current local time is shown.
Caption	Shows location in menu system.
Title bar	Shows name of current screen.


Element	Description
Screen area	Working area of the screen.
Message bar	Shows messages.
Status bar	Shows current status information for the instrument.
Escape button	Returns to the previous screen.
Menu icon	Selecting menu icons opens submenus.
SHIFT button	Displays the second level of soft keys.
Soft keys	Commands can be executed with the soft keys.

3.3

Status Bar

Overview

The icons in the status bar display the current status information of the instrument. Clicking a status icon gives direct access to a detailed status description.

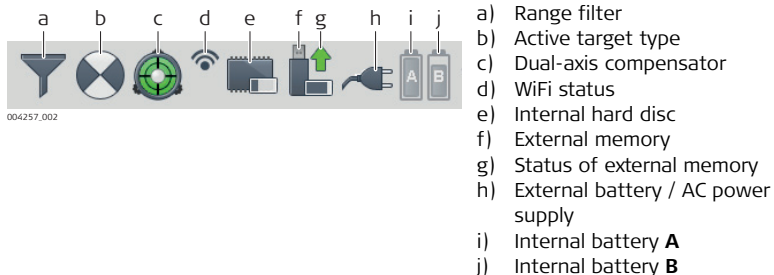

- **Internal battery A** indicates the status of the battery in compartment **A** which is located at the same side cover as the touch screen.
- **Internal battery B** indicates the status of the battery in compartment **B** at the opposite side cover without a screen.

Icon		Description
Range filter		Range filter enabled
Active target type		HDS black/white target 6"
		HDS black/white target 3"
		HDS sphere target
		HDS black/white twin target top
		HDS black/white twin target bottom
		HDS black/white twin target top with extension
		HDS black/white twin target bottom with extension
		User defined target of type HDS black/white 6"

Icon		Description
		User defined target of type HDS black/white 3"
		User defined target of type HDS sphere
Dual-axis compensator		On and levelled
		Off
		On but out of range
WiFi		Onboard WiFi adapter on and connected
		Onboard WiFi adapter off
		Onboard WiFi adapter on

Icon		Description
Internal hard disc		Empty
		13% memory used
		25% memory used
		38% memory used
		50% memory used
		63% memory used
		75% memory used
		88% memory used
		Full
Status of external memory		Ready to be removed
		Do not remove

Icon		Description
External memory		Empty
		17% memory used
		33% memory used
		50% memory used
		67% memory used
		83% memory used
		Full
External battery / AC power supply		External battery connected
		AC power supply connected

Icon	Description	
Internal battery A/B	Symbols for the currently used battery:	
		Empty
		20% capacity
		40% capacity
		60% capacity
		80% capacity
		Full

Icon		Description
	Symbols for the currently unused battery:	
		Empty
		20% capacity
		40% capacity
		60% capacity
		80% capacity
		Full

3.4

Operating Principles


Keyboards on touchscreen

The system offers two different virtual keyboard layouts for user input:

- When an **alphanumeric input field** is selected with the stylus, the keyboard will appear in alphanumeric layout. This layout offers letters, numbers and special characters.
 - When an **numeric input field** is selected with the stylus, the keyboard will appear in numeric layout. This layout offers numbers and some special characters.
-


Keyboard layouts

Alphanumeric layout:

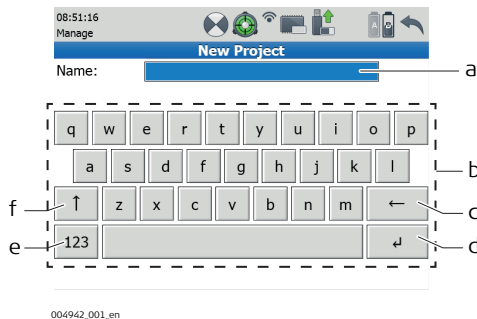

- a) Input field
- b) Alphanumeric keypad
- c) Backspace
- d) Enter
- e) Toggle between letters and numbers/special characters
- f) Shift - Toggle between lower case and upper case characters

Numeric layout:

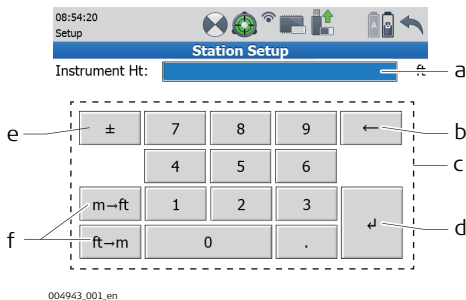

- a) Input field
- b) Backspace
- c) Numeric keypad
- d) Enter
- e) Toggle between positive and negative number
- f) Unit calculator (optional when distance units **ft** or **fi** are selected)

4

Switching the System On/Off

Switch on procedure

1. Set up the instrument as desired. Refer to chapter "2 Setting Up the Instrument" for more information.
 2. Press and hold the ON/OFF button for 2 seconds until a beep is audible.
 3. The instrument starts with several subsequent beeps and a short melody.
 4. The **Leica Geosystems** welcome screen starts.
 5. Wait until the **Main Menu** appears on the display.
-

Switch off procedures

Shutdown via Main Menu:

1. From the current menu return to the **Main Menu**.
2. In the **Main Menu** press the  button.
3. In the popup window confirm the question **Do you want to shutdown?** with **Yes**.
4. Wait for the scanner to shut down.

Shutdown via On/Off button:

1. Press and hold the **On/Off button** for 2 seconds until a **single beep** is audible.
2. Wait for the scanner to shut down.

In case of a system crash (forced shutdown):

1. Press and hold the **On/Off button** for 6 seconds until a **double beep** is audible.
 2. Wait for the scanner to shut down.
-

5 Remote Control

Overview

The ScanStation P20 can be controlled remotely by a Viva Controller via WiFi communication.

The following hardware is needed:

- Viva Controller (CS10 or CS15) equipped with a WiFi adapter. Check the sticker **This device contains...** in the battery compartment of the Viva Controller: In case a WLAN module is listed, the controller is equipped with a WiFi adapter.
-

Installation of the ScanStation P20 Remote Control Application on the Leica Viva Controller

1. Copy the installation file **P20_RemoteControl.CAB** onto a USB memory device.
 2. Switch on the Viva Controller and connect the USB memory device to the controller.
 3. In case SmartWorx Viva application is running, close this application by pressing **Fn -> Exit**.
 4. Double-click **My Device** and navigate to the USB memory device.
 5. Double-click the file **P20_RemoteControl.CAB**.
 6. Confirm the suggested installation folder **Program Files** by pressing **OK** within the **Install Leica Geosystems AG P20 ...** dialog.
 7. The application will be installed. A start-up menu folder as well as a desktop icon will be created.
 8. Disconnect the USB memory device.
-

Enable the WiFi adapter of your Viva Controller

1. Go to **Start -> Settings -> Control Panel**.
 2. Double-click on **Network and Dial-up Connections**.
 3. Select the icon of the WiFi device (e. g. **NXPWLAN1**) and press **File**. If the menu lists **Disable**, the WiFi device is already enabled. In this case leave the control panel without any changes. If the menu lists **Enable**, press **Enable** and leave the control panel.
 4. Close the control panel.
-

ScanStation P20 Remote Control

1. Switch on the ScanStation P20 and wait for the boot process to finish.
2. Select **Status** to get to the **Status Menu**.
3. In the **Status Menu** select **Connections** to open the **WiFi Configuration** menu.
4. In the **WiFi Configuration** menu set:
 - WiFi Operation = Enabled
 - WiFi Connection = Ad-hoc mode
5. Start the ScanStation P20 Remote Control application on your Viva Controller by double-clicking the desktop icon.
6. Within the ScanStation P20 Remote Control dialog press **Find scanner** and wait for your ScanStation P20 to be listed within the list of available scanners.
7. As soon as your ScanStation P20 is listed, select it and press **Connect**.
8. Wait until the ScanStation P20 onboard control is displayed on your Viva Controller.

-
9. Close the ScanStation P20 Remote Control window as well as the ScanStation P20 Remote Control dialog by pressing the  button in the respective dialog.
-



The USB port of the Viva Controller will not replace the USB port of the ScanStation P20 while you are connected to the scanner. In order to download scanning projects, upload control point files or system files you always have to use the USB port of the ScanStation P20.



Since the Viva Controller CS10 has a screen in upright format the ScanStation P20 Remote Control application offers the option to rotate the onboard control by 90° on the controller's screen. In order to activate the 90°-rotation, select **Rotate screen**. This option is not available on the Viva Controller CS15.



For details about the CS10/CS15 controllers refer to the CS10/CS15 user manual.


6

Main Menu

Description

The **Main Menu** will be displayed after the system boot process. **Ready** in the message bar indicates that the instrument is ready for scanning.

Main Menu screen

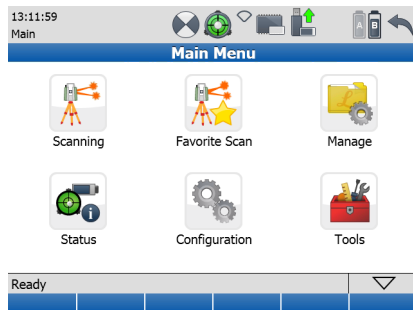

Icon	Function
Scanning 	Offers access to all commands for scanner setup and operation control.
Favorite Scan 	Starts scan immediately with pre-defined scan settings.
Manage 	Offers access to all commands for project, target and control point management.
Status 	Offers access to all commands for the scanner's status information.
Configuration 	Offers access to all commands for the configuration of the system.
Tools 	Offers access to all commands for disc formatting, data transfer, license management, display and instrument calibration.

Menu independent commands:

Command	Function
Escape 	Return to previous menu in menu hierarchy.
Shift -> Quit  	Return to main menu.
Page 	Switch between pages in a menu.

7 Scanning

Access

Select **Main Menu, Scanning** .

Description

In the **Scanning** menu all commands for the scanner setup and operation control are available.

7.1 Scanning\Scan Begin

Access

Select **Main Menu, Scanning** .

Description

Scan data is stored on the ScanStation P20 by projects which contain stations for each scanner position. In the **Scan Begin** screen a new project can be created or an existing project can be selected. For a chosen project a new station can be defined by various setup methods (Standard, Quick Orientation, Set Azimuth, Known Back-sight or Resection) or an existing one can be used to continue.

Scan Begin screen



Project:

ProjectName ▼ ⚙



Field	Description
Project	Shows the current project. Click the name field to open a list of available projects. Click the icon ⚙ to open the Manage, Projects screen for selecting another project, adding a new project, editing or deleting an existing project, and displaying project details.

Available commands:

Command	Function
Cont	Continue with the current project. Opens the Current Station Information window.
Setup	Opens the Station Setup screen for station setup via Quick Orientation, Set Azimuth, Known Backsight or Resection .
StdStp	Create a new station with standard setup parameters (Northing, Easting, Height, Instrument height = 0). Opens the Scan Parameters screen.
ChkBS	Open Check Backsight screen to define a known backsight target for current setup control.
Shift ->Conf	Open the Setup Configuration screen to define limits and attributes of the various setup methods.

7.2

Scanning\Setup

Access

Select **Main Menu, Scanning**



Description

In the **Scanning, Scan Begin** screen various methods for station setup can be chosen by the commands **StdStp** and **Setup**:

1. Standard Setup
 2. Quick Orientation
 3. Set Azimuth
 4. Known Backsight
 5. Resection (by 4 or 6 parameter transformation)
-

7.2.1

Scanning\Setup\Standard Setup

Access

Select **Main Menu, Scanning**



, **StdStp**.

Description

The command **StdStp** in the **Scan Begin** screen creates a new station with standard setup parameters and proceeds to the **Scan Parameters** screen.

Station Parameter	Value for Standard Setup
Northing	0
Easting	0
Height	0
Instrument Height	0
Bearing	Current bearing of glass circle.



When **Stn ID & Ht** in **Setup Configuration**, **StdStp** has been set to **Custom**, the command **StdStp** in **Scan Begin** opens the **Standard Station Setup** screen where user-defined station ID and instrument height can be entered before proceeding to the **Scan Parameter** screen.

7.2.2

Scanning\Setup\Quick Orientation

Access

Select **Main Menu, Scanning**  , **Setup**.

Description

The **Quick Orientation** setup option offers scanner setup over a known control point and azimuth definition without aiming at a target.

Station Setup: Quick Orientation screen

10:04:27
Setup



Station Setup

Setup Method:

Quick Orientation ▼

Ctrl Pnt Project:

Quick Orientation ▼

Station ID:

100 ▼

Instrument Ht:

1.8000

m

Azimuth:

100.000

deg

Ready

▽

Set

Az=0

New

ChkExp

PickAz

Field	Description
Setup Method	Select the station setup method.
Ctrl Pnt Project	Select the project which contains the current station control point.
Station ID	Select the station ID of the current station.
Instrument Ht	Enter the instrument height (control point to tilt axis).
Azimuth	Enter the azimuth to define the orientation of the project coordinate system.

Command	Function
Set	Accept station setup and proceed to Scan Parameters screen.
Az=0	Set the Azimuth = 0.
New	Opens the New Control Point screen to create a new control point in the selected project.
ChkExp	Opens video camera window to check and adjust exposure time to set exposure time manually.
PickAz	Select azimuth direction from the video image.

7.2.3

Scanning\Setup\Set Azimuth

Access

Select **Main Menu, Scanning**  , **Setup**.

Description

The **Set Azimuth** setup option offers scanner setup over a known control point and azimuth definition by aiming at a backsight target.

Station Setup: Set Azimuth screen

10:12:04
Setup



Station Setup

Setup Method:

Set Azimuth ▼

Ctrl Pnt Project:

Office ▼

Station ID:

10 ▼

Instrument Ht:

1.8000

m

Ready

Cont

Conf

New

▽

Field	Description
Setup Method	Select the station setup method.
Ctrl Pnt Project	Select the project which contains the current station control point.
Station ID	Select the station ID of the current station.
Instrument Ht	Enter the instrument height (control point to tilt axis).

Command	Function
Cont	Confirm station input and continue with DefineBacksight: Set Azimuth .
Conf	Opens the General tab in Setup Configuration where a reminder for the station information can be enabled/disabled and target scanning by one face or two faces can be defined.
New	Opens the New Control Point screen to create a new control point in the selected project.

Define Backsight: Set Azimuth screen, Target Def

10:27:22
Setup

Define Backsight: Set Azimuth

Target Def Target List

Backsight ID: 11

Target Type: B/W Target 6"

Target Height: 1.4710 m

Azimuth: 100.000 deg

Ready

Cont Az=0 ChkExp PickT Page

Field	Description
Backsight ID	Enter the target ID of a new backsight target.
Target Type	Enter the target type of the selected backsight target.
Target Height	Enter the target height of the selected backsight target.
Azimuth	Enter the azimuth to define the orientation of the project coordinate system.

Command	Function
Cont	Execute backsight target scan and setup calculation. Show results in Set Azimuth Results screen.
Az=0	Set the Azimuth = 0.
ChkExp	Open video camera window to check and adjust exposure time for manual exposure time setting.
PickT	Select target from the video image. After selection, the target is listed on the Target List page.
Page	Switch to the Target List page.

Define Backsight: Set Azimuth screen, Target List

10:28:45
Setup










Define Backsight: Set Azimuth

Target Def

Target List

Target ID	Type	Height
11	B/W Target 6"	1.4710 m

Ready

Cont

Edit

Del

Page

Field	Description
Target ID	Shows the target ID of a new backsight target after PickT was executed.
Type	Shows the target type of the selected backsight target after PickT was executed.
Height	Shows the target height of the selected backsight target after PickT was executed.

Command	Function
Cont	Start backsight target scan to selected target and setup calculation. Show results in Set Azimuth Results screen.
Edit	Open the Edit Target menu to edit the selected target.
Del	Delete selected target from the target list.
Page	Switch to the Target Def page.

Set Azimuth Results screen, Stn & Tgt

10:35:00
Setup









Set Azimuth Results

Stn & Tgt

Tgt Coords

Station ID:

10

Instrument Ht:

1.8000 m

Backsight ID:

11

Target Height:

1.4710 m

Target Type:

B/W Target 6"

Horiz Dist:

2.0778 m

Ready

Set

Info

View

Page

Field	Description
Station ID	Station ID of current station.
Instrument Ht	Instrument height as entered by the user.
Backsight ID	Target ID of the selected backsight target.
Target Height	Target height as entered by the user.
Target Type	Target type of the selected backsight target.
Horiz Dist	Horizontal distance between station and backsight target.

Command	Function
Set	Accept the setup results for this station and proceed to Scan Parameters screen.
Info	Show the target information of the selected target.
View	View point cloud of selected backsight target scan.
Page	Switch to the Tgt Coords page.
Shift -> Redo	Repeat backsight target scan of selected target and setup calculation.

Set Azimuth Results screen, Tgt Coords

10:39:17
Setup


Set Azimuth Results

Stn & Tgt

Tgt Coords

Backsight ID: 11
Northing: 0.8725 m
Easting: 2.7141 m
Height: -1.0763 m

Ready

Set

Info

View

Page

Field	Description
Backsight ID	Target ID of the selected backsight target.
Northing	Northing of the selected backsight target calculated from scanned target data and user defined azimuth.
Easting	Easting of the selected backsight target calculated from scanned target data and user defined azimuth.
Height	Height of the selected backsight target calculated from scanned target data.

Command	Function
Set	Accept the setup results for this station and proceed to Scan Parameters screen.
Info	Show the target information of the selected target.
View	View point cloud of selected backsight target scan.
Page	Switch to the Stn & Tgt page.

7.2.4

Scanning\Setup\Known Backsight


Access

Select **Main Menu**, **Scanning** , **Setup**.

Description

The **Known Backsight** setup option offers scanner setup over a known control point and scanner orientation by aiming at a known backsight target.

Station Setup: Known Backsight screen

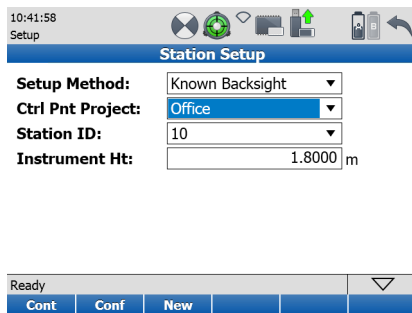

10:41:58
Setup

Station Setup

Setup Method: Known Backsight ▼

Ctrl Pnt Project: Office ▼

Station ID: 10 ▼

Instrument Ht: 1.8000 m

Ready

Cont Conf New ▼

Field	Description
Setup Method	Select the station setup method.
Ctrl Pnt Project	Select the project which contains the current station control point.
Station ID	Select the station ID of the current station.
Instrument Ht	Enter the instrument height (control point to tilt axis).

Command	Function
Cont	Confirm station input and continue with Define Backsight: Known Backsight .
Conf	Opens the Setup Configuration for the known backsight method.
New	Opens the New Control Point screen to create a new control point.

Station Setup: Known Backsight screen, Target Def

10:39:21
Setup

Define Backsight: Known Backsight

Target Def Target List

Ctrl Pnt Project: Office ▼

Backsight ID: 11 ▼

Target Type: B/W Target 6" ▼

Target Height: 1.4710 m

Ready

Cont New ChkExp PickT Page

Field	Description
Ctrl Pt Project	Select the control point project which contains the backsight point.
Backsight ID	Enter the ID of the backsight point.
Target Type	Select the type of the backsight target.
Target Height	Enter the height of the backsight target.

Command	Function
Cont	Execute backsight target scan and setup calculation. Show results in Known Backsight Results screen.
New	Opens the New Control Point screen.
ChkExp	Open video camera window to check and adjust exposure time for manual exposure time setting.
PickT	Select target from the video image. After selection, the target is listed on the Target List page.
Page	Switch to the Target List page.

Station Setup: Known Backsight, Target List

10:47:11
Setup

Define Backsight: Known Backsight

Target Def Target List

Target ID	Type	Height
11	B/W Target 6"	1.4710 m

Ready

Cont		Edit	Del		Page
------	--	------	-----	--	------

Field	Description
Target ID	Shows the point ID of the backsight point after PickT was executed.
Type	Shows the target type on the backsight point after PickT was executed.
Height	Shows the target height of the selected backsight target after PickT was executed.

Command	Function
Cont	Execute backsight target scan and setup calculation. Show results in Known Backsight Results screen.
Edit	Open the Edit Target menu to edit the selected target.
Del	Delete selected target from the target list.
Page	Switch to the Target Def page.

**Station Setup:
Known Backsight
Results screen,
Stn & Tgt**

10:52:44
Setup








Known Backsight Results

Stn & Tgt

Delta

Station ID:

10

Instrument Ht:

1.8000 m

Backsight ID:

11

Target Height:

1.4710 m

Target Type:

B/W Target 6"

Horiz Dist:

2.0778 m

Ready

Set

Info

View

Page

Field	Description
Station ID	Station ID of current station.
Instrument Ht	Instrument height as entered by the user.
Backsight ID	Point ID of the backsight point.
Target Height	Target height as entered by the user.
Target Type	Target type on the backsight point.
Horiz Dist	Horizontal distance between station and backsight point.

Command	Function
Set	Accept the setup results for this station and proceed to Scan Parameters screen.
Info	Show the target information of the selected target.
View	View point cloud of backsight target scan.
Page	Switch to the Delta page.
Shift -> Redo	Rerun backsight target scan and setup calculation.

Station Setup:
Known Backsight
Results screen,
Delta

10:55:49
Setup

Known Backsight Results

Stn & Tgt

Delta

Backsight ID:

11

Δ Northing:

0.0000 m

Δ Easting:

0.0001 m

Δ Height:

-0.0001 m

Δ Horiz Dist:

0.0001 m

Ready

Set

Info

View

Page

Field	Description
Backsight ID	Point ID of the backsight point.
ΔNorthing	Difference in Northing between calculated and measured coordinate.
ΔEasting	Difference in Easting between calculated and measured coordinate.
ΔHeight	Difference in Height between calculated and measured coordinate.
ΔHoriz Dist	Difference in Horizontal Distance between calculated and measured distance.

Command	Function
Set	Accept results from Known Backsight station setup and proceed to Scan Parameters screen.
Info	Show the target information of the selected target.
View	View point cloud of backsight target scan.
Page	Switch to the Stn & Tgt page.

7.2.5

Scanning\Setup\Resection

Access

Select **Main Menu, Scanning**  , **Setup**.

Description

The **Resection** setup option offers scanner setup over an unknown station and station coordinate calculation by aiming at known target positions.

Station Setup: Resection screen

11:37:56
Setup



Station Setup

Setup Method:

Resection (6 param.) ▼

Station ID:

100

Instrument Ht:

1.7990 m

Ready

Cont

Conf

New

▽

Field	Description
Setup Method	Choose resection type by 4 or 6 parameter transformation. 4 Parameters: 3 translations and 1 rotation around z axis. Minimum two targets required. 6 Parameters: 3 translations and 3 rotations. Minimum three targets required.
Station ID	Enter the station ID of the current station.
Instrument Ht	Enter the instrument height (control point to tilt axis).

Command	Function
Cont	Confirm station input and continue with Define Resection Targets .
Conf	Opens the Setup Configuration for the resection method.
New	Open the New Control Point menu to enter a new control point.

Define Resection Targets screen, Target Def

11:45:41
Setup

Define Resection Targets

Target Def Target List

Ctrl Pnt Project: Office ▼

Target ID: 4 ▼

Target Type: B/W Target 6" ▼

Target Height: 0.0000 m

No of Targets: 4

Ready

Cont New ChkExp PickT Page

Field	Description
Ctrl Pnt Project	Select the control point project which contains the target coordinates.
Target ID	Enter the target ID of a known control point target.
Target Type	Enter the target type of the selected control point target.
Target Height	Enter the target height of the selected control point target.
No of Targets	Number of picked targets to be scanned.

Command	Function
Cont	Start target scan to selected targets and setup calculation. Show results in Resection Results screen.
New	Open the New Control Point menu to enter a new control point.
ChkExp	Open video camera window to check and adjust exposure time for manual exposure time setting.
PickT / Add	Select target centre from the video camera image. After selection, the target is listed on the Target List page as a candidate for target acquisition.  When an orientation has already been computed then the additional target can be added from a list by Add and aimed automatically without any target picking.
Page	Switch to the Target List page.

Define Resection Targets screen, Target List

11:50:35
Setup

Define Resection Targets

Target Def Target List

Target ID	Type	Height
1	B/W Target 6"	0.0000 m
2	B/W Target 6"	0.0000 m
3	B/W Target 6"	0.0000 m
4	B/W Target 6"	0.0000 m
5	B/W Target 6"	0.0000 m
6	B/W Target 6"	0.0000 m

Ready

Cont Edit Del Page

Field	Description
Target ID	Shows the target ID of a new target after PickT was executed.
Type	Shows the target type of the selected target after PickT was executed.
Height	Shows the target height of the selected target after PickT was executed.

Command	Function
Cont	Start target scan to selected targets and setup calculation. Show results in Resection Results screen.
Edit	Open the Edit Target menu to edit the selected target.
Del	Delete selected target from the target list.
Page	Switch to the Target Def page.

Resection Results screen, Stn Coords

11:59:26
Setup


Resection Results

Stn Coords Sigma Target List Plot

Station ID: 100
Instrument Ht: 1.7990 m
No of Targets: 6
Northing: 0.3984 m
Easting: 0.3304 m
Height: -1.0708 m

Ready

Set
Page

Field	Description
Station ID	Station ID of current station.
Instrument Ht	Instrument height as entered by the user.
No of Targets	Number of targets used for resection calculation.
Northing	Northing of current station calculated by resection setup.
Easting	Easting of current station calculated by resection setup.
Height	Height of current station calculated by resection setup.

Command	Function
Set	Accept the setup results for this station and proceed to Scan Parameters screen.
Page	Switch to the Sigma page.

Resection Results screen, Sigma

12:01:22
Setup


Resection Results

Stn Coords Sigma Target List Plot

Station ID: 100
 σ Northing: 0.0003 m
 σ Easting: 0.0003 m
 σ Height: 0.0002 m
 σ Hz Orient: 15"

Ready

Set Orient Page

Field	Description
Station ID	Station ID of current station.
σNorthing	Standard deviation of station northing.
σEasting	Standard deviation of station easting.
σHeight	Standard deviation of station height.
σHz Orient	Standard deviation of horizontal orientation.

Command	Function
Set	Accept the setup results for this station and proceed to Scan Parameters screen.
Orient / E,N,H	For a 6 parameter resection toggle between display of standard deviations for the station coordinates and the 3 rotation angles.
Page	Switch to the Target List page.

Resection Results screen, Target List

12:02:47
Setup



Resection Results

Stn CoordsSigmaTarget ListPlot

Target ID	dN	Use
1	0.0006	Yes
2	-0.0011	No
3	-0.0003	Yes
4	0.0015	No
5	0.0004	Yes
6	0.0007	Yes

Ready

Set

Add

View

Use

More


Page

Field	Description
Target ID	Target ID of scanned target.
dN	Target residuals dN , dE , dH . Display can be changed by More soft key.
Use	Target status for resection calculation (Yes = used, No = not used).

Command	Function
Set	Accept the setup results for this station and proceed to Scan Parameters screen.
Add	Switch to Define Resection Targets and define additional targets for resection.  When an orientation has already been computed then the additional target can be aimed automatically and no target picking is required.
View	View point cloud of selected target scan.
Use	Change the target status in the Use field from Yes to No .
More	Switch the target residuals display from dN to dE and dH .
Page	Switch to the Plot page.

Command	Function
Shift->Redo	Repeat target scan to selected target and setup calculation.

Resection Results screen, Plot

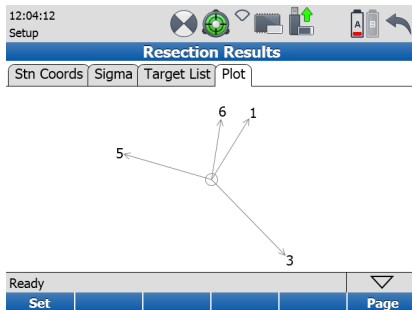

Field	Description
Set	Accept the setup results for this station and proceed to Scan Parameters screen.
Page	Switch to the Stn Coords page.

7.2.6

Scanning\Setup\Setup Configuration

Access


Select **Main Menu, Scanning** , **Setup, Conf.**

or **Main Menu, Scanning, Shift ->Conf.**

Description

In the **Setup Configuration** menu the user can configure limits and specifications for the various setup methods.

General page

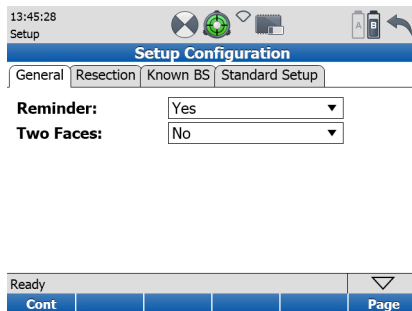


The screenshot shows the 'Setup Configuration' menu with the 'General' tab selected. The top status bar displays the time '13:45:28' and the word 'Setup'. The menu title 'Setup Configuration' is in a blue bar. Below it are four tabs: 'General', 'Resection', 'Known BS', and 'Standard Setup'. The 'General' tab contains two settings: 'Reminder:' with a dropdown menu set to 'Yes', and 'Two Faces:' with a dropdown menu set to 'No'. At the bottom, there is a 'Ready' status bar and a navigation bar with 'Cont' and 'Page' buttons.

13:45:28 Setup							
Setup Configuration							
General		Resection		Known BS		Standard Setup	
Reminder:		Yes ▼					
Two Faces:		No ▼					
Ready					▼		
Cont						Page	

Field	Options	Description
Reminder	Yes	Enable a reminder for the station information: Current Setup Information will be displayed every time the Cont button is pressed within the Scan Begin screen.
	No	Disable the reminder for the station information.
Two Faces	Yes	Enable target scanning in two faces.
	No	Scan targets in Face I only.

Command	Function
Cont	Confirm settings for setup configuration and continue with the Scan Begin screen.
Page	Switch to the Resection page.

Current Station Information

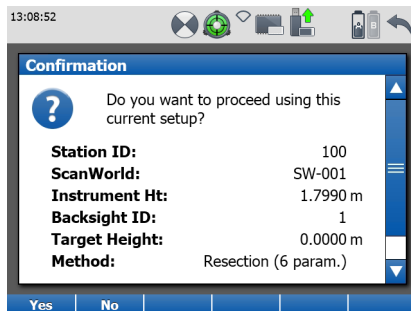

Resection page

13:48:25
Setup

Setup Configuration

General Resection Known BS Standard Setup

Accuracy Hz Ori: deg

Accuracy Pos Tgt: m

Accuracy Ht Tgt: m

Ready

Cont

Page

Field	Description
Accuracy Hz Ori	Threshold for standard deviation of horizontal orientation.
Accuracy Pos Tgt	Threshold for the Easting and Northing residuals (ΔE and ΔN) of the targets used in resection.
Accuracy Ht Tgt	Threshold of height residuals (ΔH) of the targets used in resection.

Command	Function
Cont	Confirm settings for resection setup and continue with the Scan Begin screen.
Page	Switch to the Known BS page.

Known BS page

13:49:54
Setup


Setup Configuration

General | Resection | **Known BS** | Standard Setup

Pos Check: Yes ▼

Pos Limit: 0.0050 m

Ht Check: Yes ▼

Ht Limit: 0.0040 m

Ready

Cont | | | | | Page

Field	Options	Description
Pos Check	Yes	Enable checking of horizontal coordinate difference (hz range) between existing and measured known backsight point. If defined Pos Limit is exceeded, the setup can be repeated, skipped or stored.
	No	Disable checking of horizontal coordinate difference between existing and measured known backsight point.
Pos Limit		Threshold of horizontal coordinate difference accepted in Pos Check .
Ht Check	Yes	Enable checking of vertical difference between existing and measured known backsight point. If defined Ht Limit is exceeded, the setup can be repeated, skipped or stored.
	No	Disable checking of vertical difference between existing and measured known backsight point.
Ht Limit		Threshold of vertical difference accepted in Ht Check .

Command	Function
Cont	Confirm settings for known backsight setup and continue with the Scan Begin screen.
Page	Switch to the General page.

Standard Setup Page

10:49:55
Setup





Setup Configuration

General

Resection

Known BS

Standard Setup

Reminder:

Yes ▼

Stn ID & Ht:

Custom ▼

Ready ▼

Cont

Page

Field	Options	Description
Reminder	No	No reminder asks for a new station when scans, targets or images are added to an existing station with data in it.
	Yes	When scans, targets or images are created in an existing station with data in it, a reminder opens and asks if a new station should be created when - the current station has been created by Stdstp - the current ScanWorld is not empty
Stn ID & Ht	Automatic	Standard setup StdStp does not ask for station ID and instrument height but creates new station with standard setup parameters and proceeds to the Scan Parameter screen.
	Custom	Standard setup StdStp opens the Standard Station Setup screen and asks for user-defined station ID and instrument height before proceeding to the Scan Parameter screen.

Command	Function
Cont	Confirm settings for standard setup and continue with the Scan Begin screen.
Page	Switch to the General page.

Standard Station Setup

10:53:52
Setup










Standard Station Setup

Station ID:

Station-002 ▼

Instrument Ht:

0.0000 m

Ready

Set

Conf

▼

7.3 Scanning\Scan Parameters


Access

Select **Main Menu, Scanning**  , **Scan Parameters**.

Description

Once a project and station are chosen, the **Scan Parameters** menu offers four pages for all kinds of scan and image controls: **Field of View**, **Resolution**, **Image Ctrl** and **Filters**.

Scan Parameters screen

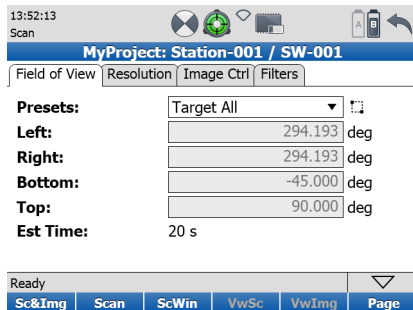

13:52:13
Scan

MyProject: Station-001 / SW-001

Field of View Resolution Image Ctrl Filters

Presets: Target All ▼

Left: 294.193 deg

Right: 294.193 deg

Bottom: -45.000 deg

Top: 90.000 deg

Est Time: 20 s

Ready

Sc&Img Scan ScWin VwSc VwImg Page



In the title bar of the **Scan Parameters** screen the current project, station and ScanWorld are constantly listed. The same information can be displayed by clicking in the message bar.

7.3.1 Scanning\Scan Parameters\Field of View

Access

Select **Main Menu, Scanning**  , **Scan Parameters, Field of View**.

Description

In the **Field of View** page of the **Scan Parameters** screen the area to be scanned can be defined by several different methods. For detailed information about the different options and commands that can be executed from this page refer to the descriptions on the following pages.

Field of View page

13:52:13
Scan



MyProject: Station-001 / SW-001

Field of View Resolution Image Ctrl Filters

Presets:

Target All ▼ 

Left:

294.193

deg

Right:

294.193

deg

Bottom:

-45.000

deg

Top:

90.000

deg

Est Time:

20 s

Ready

▼

Sc&Img

Scan

ScWin

VwSc

VwImg

Page

Field	Description
Presets	Selection of fixed or user defined area to scan or take pictures.
Left	Left limit of the area to scan or take pictures.
Right	Right limit of the area to scan or take pictures.
Bottom	Bottom limit of the area to scan or take pictures.
Top	Top limit of the area to scan or take pictures.
Est. Time	Estimated duration of the defined scan derived from the current settings in Field of View and Resolution .

Presets

In the **Presets** field the following different predefined settings for the field of view (FoV) are listed.

Preset	Horizontal FoV [°]	Vertical FoV [°]
Custom View	User defined	User defined
Quick Scan	Defined by Quick Scan aiming	User defined (default: -45 to +90)
Rectangle 60x60	60	60

Preset	Horizontal FoV [°]	Vertical FoV [°]
Rectangle 90x90	90	90
Rectangle 360x60	360	60
Rectangle 360x90	360	90
Target All	360	270



All presets except **Custom View** and **Quick Scan** have fixed values for left/right and bottom/top that cannot be edited.

Available commands:

Command	Function
Sc&Img	Start scan and image acquisition with selected FoV and resolution.
Scan	Start scan only with selected FoV and resolution, no images.
ScWin	Open scan window for area selection from video stream image.
VwSc	View point cloud of last scan with zoom, pan and show previous/next functionality.
VwImg	View last image with next/previous functionality.
Page	Switch to the Resolution page.

Command	Function
Shift -> Target	Open the Target Definition screen to select target ID, target height and target type.
Shift -> Image	Start image acquisition with selected FoV, exposure time and image resolution.
Shift -> ChkBS	Open Check Backsight screen to define a known backsight target for current setup control.

Quick Scan

13:54:37
Scan



MyProject: Station-001 / SW-001

Field of View | Resolution | Image Ctrl | Filters

Presets:

Quick Scan

Left:

294.193

deg



Right:

39.939

deg



Bottom:

-45.000

deg

Top:

90.000

deg

Est Time:

14 s

Ready

Sc&Img

Scan

ScWin

VwSc

VwImg

Page

In the **Quick Scan** preset the **Left/Right** fields show the current scanner direction. For a quick definition of the scan or image FoV aim the scanner in the designated horizontal direction and press the **Unlocked** button  to lock the current scanner direction for the **Left** field. The button changes to the **Locked** button  and the locked value is greyed out. Repeat the procedure for the **Right** field or unlock again. Then edit the default **Bottom** and **Top** fields manually if needed.

Scan Window screen




Available commands:

Command		Function
Continue	✓	Continue and return to the Field of View page of the Scan Parameters screen. The boundaries of a defined scan/image area will be copied into the corresponding fields.
Scan	▶	Return to Field of View page and start a scan only of the specified area.

Command		Function
Scan & Image		Return to Field of View page and start a scan and image acquisition of the specified area.
Image		Start image acquisition of the specified area.
Zoom In		Zoom in to the centre of the video camera image.
Zoom Out		Zoom out from the centre of the video camera image.
Rotate		Press one of the four arrow buttons to rotate the scanner up, down, left or right. Once a button is pressed the scanner starts to move in the selected direction constantly. Press the video screen again at any position to stop the rotation. In activated mode the icon turns green.
Seek		Select a point in the video camera window to define it as the new window centre. The scanner rotates accordingly in horizontal and vertical direction to reposition the crosshair. In activated mode the icon turns green.
Fence		Select the scan/image area by fencing the area in the current video camera image. In activated mode the icon turns green.

Scanning screen

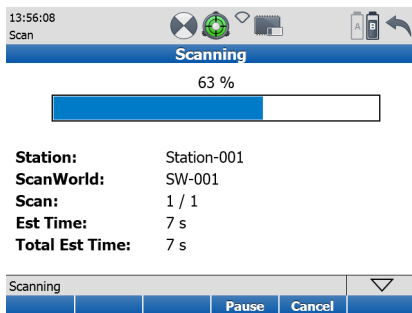


Field	Description
Progress bar	Scan progress in percent.
Station	Name of the current station.
ScanWorld	Name of the current ScanWorld.
Scan	Number of scan.
Est Time	Estimated time to finish scan.

Field	Description
Total Est Time	Total estimated time for scan and image acquisition using the current settings.

Available commands:

Command	Function
Pause	Pause current scan. Once paused the button changes to Resume . Press again to resume paused scan.
Cancel	Cancel current scan and return to the Field of View menu.

View scan screen

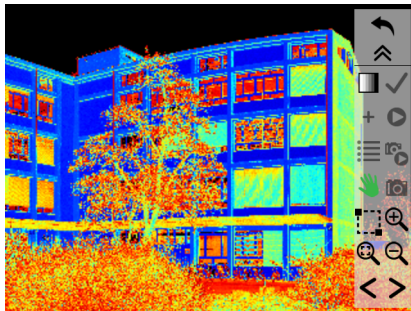

Available commands:

Command	Function
Colourise  	Switch between coloured  and black & white  intensity display.
Add Scan 	Add fenced scan area to Scan List .
View Scan List 	View Scan List of selected scan areas.

Command		Function
Pan		Pan mode to move current scan on screen. In activated mode the icon turns green.
Fence		Select the scan area by fencing the area. In activated mode the icon turns green.
Continue		Continue and return to Field of View menu.
Scan		Return to Field of View menu and start a scan only of all scan areas as listed in the Scan List .
Scan & Image		Return to Field of View menu and start scan and image acquisition of all scan areas as listed in the Scan List .
Image		Start image acquisition of all scan areas as listed in the Scan List .
Zoom In		Zoom in to the centre of the scan image.
Zoom Out		Zoom out from the centre of the scan image.
Zoom 1:1		Zoom back to fit complete scan to screen.
Next		Show next scan of current station.



Command	Function
Previous 	Show previous scan of current station.

Multiple scan areas can be added to the scan list. They are all scanned with the current resolution setting as defined in **Resolution** tab of the **Scan Parameters** screen.

7.3.2

Scanning\Scan Parameters\Resolution


Access

Select **Main Menu, Scanning**  , **Scan Parameters, Resolution**.

Description

In the **Resolution** page of the **Scan Parameters** screen the point spacing and quality can be defined. For detailed information about the different options and commands that can be executed from this page refer to the descriptions on the following pages.

Resolution page

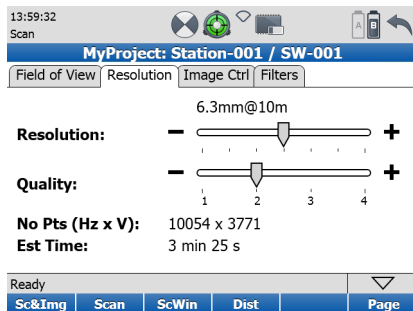

The screenshot shows the 'Resolution' page of the ScanStation P20 software. At the top, there is a status bar with the time '13:59:32' and the word 'Scan'. Below this is a blue header bar with the text 'MyProject: Station-001 / SW-001'. Under the header, there are four tabs: 'Field of View', 'Resolution' (which is selected), 'Image Ctrl', and 'Filters'. The main area contains two sliders: 'Resolution' and 'Quality'. The 'Resolution' slider is set to '6.3mm@10m' and has a range from 1 to 4. The 'Quality' slider is set to '2' and has a range from 1 to 4. Below the sliders, the text 'No Pts (Hz x V): 10054 x 3771' and 'Est Time: 3 min 25 s' are displayed. At the bottom, there is a 'Ready' status bar with a dropdown arrow, and a blue bar with the text 'Sc&Img', 'Scan', 'ScWin', 'Dist', and 'Page'.

13:59:32
Scan

MyProject: Station-001 / SW-001

Field of View Resolution Image Ctrl Filters

6.3mm@10m

Resolution: — — — — — +

Quality: — — — — — +

1 2 3 4

No Pts (Hz x V): 10054 x 3771
Est Time: 3 min 25 s

Ready

Sc&Img Scan ScWin Dist Page

Field	Description
Resolution	Selection of fixed resolution settings.
Quality	Selection of point cloud quality.
No Pts (Hz x V)	Number of points in horizontal and vertical direction for specified resolution.
Est Time	Estimated time for a scan using the current settings.

Scan resolution (7 pre-set resolution settings):

Resolution [mm@10 m]	Estimated scan duration [HH:MM:SS] for a full dome scan, @ Quality level			
	1	2	3	4
50	00:20	00:20	00:28	----
25	00:33	00:33	00:53	01:43
12.5	00:58	01:44	03:24	06:46
6.3	01:49	03:25	06:46	13:30
3.1	03:30	06:47	13:30	26:59
1.6	13:33	27:04	54:07	----

Resolution [mm@10 m]	Estimated scan duration [HH:MM:SS] for a full dome scan, @ Quality level			
	1	2	3	4
0.8	54:07	1:48:13	----	----

Available commands:

Command	Function
Sc&Img	Start scan and image acquisition with selected FoV and resolution.
Scan	Start scan only with selected FoV and resolution, no images.
ScWin	Open scan window for area selection from video stream image.
Dist	Open video camera window to measure the distance to the object to be scanned.
Page	Switch to the Image Ctrl page.
Shift -> Target	Open the Target Definition menu to select target ID, target height and target type.
Shift -> Image	Start image acquisition with selected FoV, exposure time and image resolution.
Shift -> ChkBS	Open Check Backsight screen to define a known backsight target for current setup control.

7.3.3

Scanning\Scan Parameters\Image Control


Access

Select **Main Menu, Scanning** , **Scan Parameters, Image Ctrl.**

Description

In the **Image Ctrl** page of the **Scan Parameters** screen the parameters of the internal camera can be defined. Please refer to the descriptions on the following pages for detailed information about the different options and commands that can be executed from this page.

Image Ctrl page

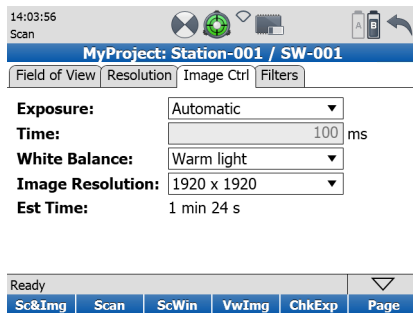

14:03:56
Scan

MyProject: Station-001 / SW-001

Field of View Resolution **Image Ctrl** Filters

Exposure: Automatic ▼

Time: 100 ms

White Balance: Warm light ▼

Image Resolution: 1920 x 1920 ▼

Est Time: 1 min 24 s

Ready

Sc&Img Scan ScWin VwImg ChkExp Page

Field	Option	Description
Exposure	Automatic	Image exposure time for each single image is calculated automatically.
	Manual	Image exposure time is set manually. See Time field.
Time		Exposure time in ms (milliseconds) for manual exposure.
White Balance	Sunny	Automatic colour adjustment for sunny outdoor environment.
	Cloudy	Automatic colour adjustment for cloudy outdoor environment.
	Cold light	Automatic colour adjustment for indoor environment with light source of cold colour temperature (e.g. neon tube).
	Warm light	Automatic colour adjustment for indoor environment with light source of warm colour temperature (e.g. halogen lamp).
	Custom	Manual colour adjustment by user.
Image Resolution	1920x1920	Set single image resolution to 1920 x 1920 pixels.
	960x960	Set single image resolution to 960 x 960 pixels.
	640x640	Set single image resolution to 640 x 640 pixels.

Field	Option	Description
Est Time		Estimated time for image acquisition using the current settings.

Available commands:

Command	Function
Sc&Img	Start scan and image acquisition with selected FoV and resolution.
Scan	Start scan only with selected FoV and resolution, no images.
ScWin	Open scan window for area selection from video stream image.
VwImg	View last image with next/previous functionality.
ChExp	Open video camera window to check and adjust exposure time for manual exposure time setting.
Page	Switch to the Field of View page.
Shift -> Target	Open the Target Definition screen to select target ID, target height and target type.
Shift -> Image	Start image acquisition with selected FoV, exposure time and image resolution.

Command	Function
Shift -> ChkBS	Open Check Backsight screen to define a known backsight target for current setup control.
Shift -> WhitBal	Open video camera window for manual colour adjustment on a white reference plane.

7.3.4

Scanning\Scan Parameters\Filters

Access

Select **Main Menu, Scanning, Scan Parameters, Filters**.

Description

In the **Filters** page of the **Scan Parameters** screen filters for the minimum and maximum range of scanned points can be set.

Filters page

13:20:19
Scan

MyProject: Station-003 / SW-003

Field of View Resolution Image Ctrl Filters

Range Filter: Yes

Min Range: 0.0000 m

Max Range: 100.0000 m

Ready

Sc&Img Scan ScWin MinDist MaxDist Page

Field	Description
Range Filter	Enable or disable the range filters.

Field	Description
Min Range	Minimum range for point filtering. All points with a range lower than this limit will not be stored.
Max Range	Maxim range for filtering. All points with a range higher than this limit will not be stored.



Once range filtering is enabled the icon  in the status bar is visible. At system start the range filtering is disabled by default.

Command	Function
Sc&Img	Start scan and image acquisition with selected FoV and resolution.
Scan	Start scan only with selected FoV and resolution, no images.
ScWin	Open scan window for area selection from video stream image.
MinDist	Open video camera window to select a point from video stream image for a probe distance measurement which is entered in the Min Range field.
MaxDist	Open video camera window to select a point from video stream image for a probe distance measurement which is entered in the Max Range field.
Page	Switch to the Image Ctrl page.

Command	Function
Shift -> Target	Open the Scan, Target Definition menu to select target ID, target height and target type.
Shift -> Image	Start image acquisition with selected FoV, exposure time and image resolution.
Shift -> ChkBS	Open Check Backsight screen to define a known backsight target for current setup control.


Check Exposure
screen



Available commands:

Command		Function
Slider		Move slider to adjust exposure time in the video camera window from 0 ms to 800 ms and transfer setting to the Time field of the Image Ctrl page in the Scan Parameters screen.
Continue		Continue and return to the Image Ctrl page of the Scan Parameters screen.
Rotate		Press one of the four arrow buttons to rotate the scanner up, down, left or right. Once a button is pressed the scanner starts to move in the selected direction constantly. Press the video screen again at any position to stop the rotation. In activated mode the icon turns green.
Seek		Select a point in the video camera window to define it as the new window centre. The scanner rotates accordingly in horizontal and vertical direction to reposition the crosshair. In activated mode the icon turns green.

Capture Images screen

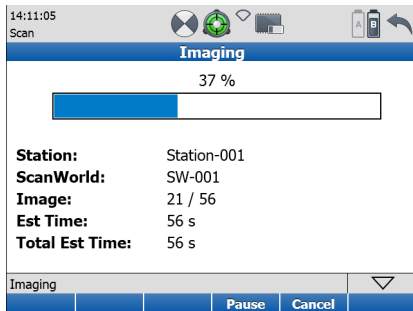

Field	Description
Progress bar	Image acquisition progress in percent.
Station	Name of the current station.
ScanWorld	Name of the current ScanWorld.
Image	Number of images already acquired / number of total images to be acquired.
Est Time	Estimated time for image acquisition using the current settings.

Field	Description
Total Est Time	Total estimated time for scan and image acquisition using the current settings.

Available commands:

Command	Function
Pause	Pause current image acquisition process. Once paused the button changes to Resume . Press again to resume paused image acquisition process.
Cancel	Cancel the current image acquisition process and return to the Image Ctrl page in the Scan Parameters screen.

7.3.5

Scanning\Scan Parameters\...\Target Definition

Access

Select **Main Menu, Scanning**  , **Scan Parameters,**

Field of View/ Resolution/ ImageCtrl, Shift -> Target or

press the active target icon  in the status bar to access the **Target Definition** screen directly.

Description

In the **Target Definition** screen all options for target acquisition are available.

Target Def page

14:06:49
Scan



Target Definition

Target Def

Target List

Target ID:

123

Target Type:

B/W Target 6"

Target Height:

1.4580 m

Pick from:

Video Image

Ready

ChkExp

PickT

Page

Field	Description
Target ID	Target ID. May include letters such as A-Z, a-z, numbers from 0-9 and any special characters of the virtual keyboard except "[" and "]". Press the field to define a new target or the arrow icon to select existing targets from a list.
Target Type	List of target types which are supported by the scanner.
Target Height	Target height in meters from target base point to target centre.
Pick from	Select the source for target picking. With Video Image selected the PickT command opens the video camera image for target selection. With Scan selected the PickT command opens the scan viewer for target selection.

Target Type:

Type	Description
B/W Target 6"	HDS 6" Black&White circular planar target.
B/W Target 3"	HDS 3" x 3" Black&White square planar target.
HDS Sphere	HDS 6" spherical target.
B/W Twin Target Top	Top target of Twin Target Pole without extension. Target height automatically changes to 1.900 m .

Type	Description
B/W Twin Target Bottom	Bottom target of Twin Target Pole without extension. Target height automatically changes to 0.200 m .
B/W Twin Target Top with Ext	Top target of Twin Target Pole with extension. Target height automatically changes to 2.150 m .
B/W Twin Target Bottom with Ext	Bottom target of Twin Target Pole with extension. Target height automatically changes to 0.450 m .

Available commands:

Command	Function
Meas	Continue and start target acquisition process for all targets listed in the Target List page.
ChkExp	Open video camera window to check and adjust exposure time for manual exposure time setting.
PickT	Select target centre from the video camera image (Video Image) or from an existing scan (Scan). After selection, the target is listed on the Target List page as a candidate for target acquisition.
Page	Switch to the Target List page.

Command	Function
Shift -> 2FMeas	Continue and start target acquisition process in face 1 and 2 for all targets listed in Target List .

Target List page

14:12:30 Scan		
		
Target Definition		
Target Def	Target List	
Target ID	Type	Height
123	B/W Target 6"	1.4580 m
S1	HDS Sphere	0.0000 m
t45	B/W Target 3"	0.0000 m

Ready					▽
Meas		Edit	Del		Page


Field	Description
Target ID	List of all defined target IDs to be acquired.
Type	Target type of the selected target ID.

Field	Description
Height	Shows the target height of the selected target after PickT was executed.

Available commands:

Command	Function
Meas	Continue and start target acquisition process for all targets listed in Target List .
Edit	Open the Edit Target menu to edit the selected target.
Del	Delete the selected target from the Target List .
Page	Switch to the Target Def page.
Shift -> 2FMeas	Continue and start target acquisition process in face 1 and 2 for all targets listed in Target List .


Pick Target from
video image

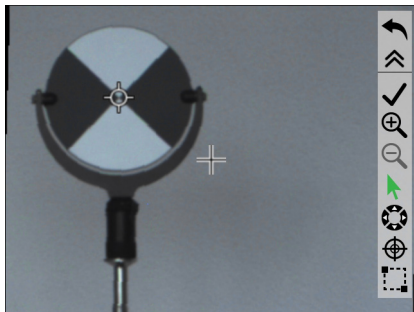

Command		Function
Continue	✓	Continue and return to Target Def menu.
Zoom In	⊕	Zoom in to the centre of the video image.
Zoom Out	⊖	Zoom out from the centre of the video image.
Pick	⬇️ ⬆️	Pick the target centre. In activated mode the icon turns green.


Command	Function
Navigate 	Press one of the four arrow buttons to rotate the scanner up, down, left or right. Once a button is pressed the scanner starts to move in the selected direction constantly. Press the video screen again at any position to stop the rotation. In activated mode the icon turns green.
Seek 	Select a point in the video camera window to define it as the new window centre. The scanner rotates accordingly in horizontal and vertical direction to reposition the crosshair. In activated mode the icon turns green.
Fence 	Select the target by fencing the area. By pressing ✓ the fenced area is scanned with a default resolution so that the user can pick the target centre from the point cloud of the fenced area. In activated mode the icon turns green.

Pick Target from
scan viewer

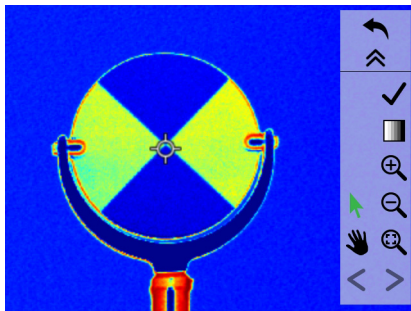

Command		Function
Continue	✓	Continue and return to Target Def menu.
Colourise	 	Switch between coloured  and black & white  intensity display.
Zoom In		Zoom in to the centre of the scan image.
Zoom Out		Zoom out from the centre of the scan image.

Command		Function
Zoom 1:1		Zoom back to fit complete scan to screen.
Pick		Pick the target centre. In activated mode the icon turns green.
Pan		Pan mode to move current scan on screen. In activated mode the icon turns green.
Next		Show next scan on current station.
Previous		Show previous scan on current station.

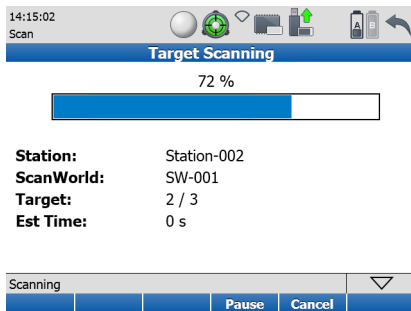**Target Scan
Progress screen**

Field	Description
Progress bar	Current target scan progress in percent.
Station	Name of the current station.
ScanWorld	Name of the current ScanWorld.
Target	Number of targets already scanned / number of total targets to be scanned.
Est Time	Estimated time to finish current target scan.

Available commands:

Command	Function
Pause	Pause current target scan process. Once paused the button changes to Resume . Press again to resume paused target scan process.
Cancel	Cancel current target scan process and continue to the Target Results screen.

Target Results screen

14:16:40

Scan

Target Results

Target ID	Target Type	State
123	B/W Target 6"	OK
S1	HDS Sphere	OK
t45	B/W Target 3"	OK

Ready

Store

Dist

Info

Del


View

Field	Description
Target ID	Target ID of scanned target.
Target Type	Target type of scanned target.
State	Status of scanned target. OK indicates a successful acquisition of the target centre. A bad target centre acquisition is marked as BAD .

Available commands:

Command	Function
Store	Store all targets listed in the Targets Results list.
Dist	Open Distance between Targets screen to measure slope distance between two targets in a ScanWorld.
Info	Open Info Targets Results screen with information about the selected target.
Del	Delete selected target from the Targets Results list.
View	View point cloud of selected target scan.
Shift -> Redo	Repeat target scan of target which has been selected in the Target Results list.

View Target screen

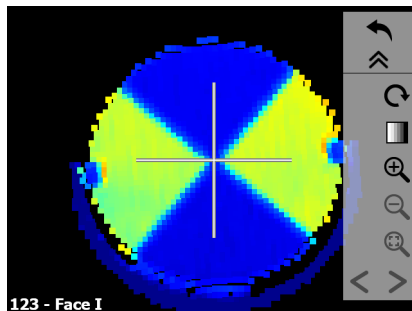


Available commands:

Command		Function
Rotate		Rotate the target point cloud by increments of 30°.
Change colour	 	Switch between coloured  and black & white  intensity display.
Zoom In		Zoom in to the centre of the scan image.

Command		Function
Zoom Out		Zoom out from the centre of the scan image.
Zoom 1:1		Zoom back to fit complete target scan to screen.
Next		Show next target.
Previous		Show previous target.

Confirmation message

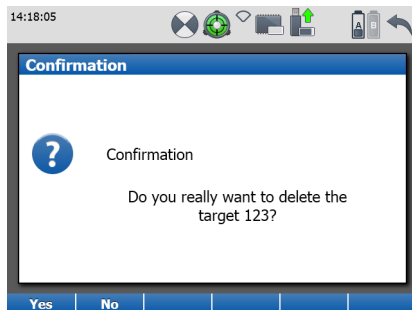

Option	Description
Yes	Confirm deletion of selected target and return to the Targets Results screen.
No	Cancel deletion of selected target and return to the Targets Results screen.

Target Information screen

14:19:16
Scan

Target Information

Target ID: 123

Target Type: B/W Target 6"

Northing: -1.3748 m

Easting: 1.9003 m

Height: -1.2521 m

Distance: 2.6587 m

Ready

Cont

Prev

Next

▽

Field	Description
Target ID	Target ID of selected target.
Target Type	Target type of selected target.
Northing	Northing of target.
Easting	Easting of target.
Height	Height of target base point.
Distance	Slope distance from scanner base point to target base point.

Available commands:

Command	Function
Cont	Continue and return to Target Results screen.
Prev	Show target information of previous target.
Next	Show target information of next target.

Distance between Targets screen

14:20:19
Scan



Distance between Targets

From Target:

To Target:

Slope Dist: 4.7943 m

Hz Dist: 4.5726 m

Height Diff: 1.4412 m

Ready 

Cont

Field	Description
From Target	Select first target for distance measurement.
To Target	Select second target for distance measurement.
Slope Dist	Slope distance between selected targets.
Hz Dist	Horizontal distance between selected targets.
Height Diff	Height difference between selected targets.


7.4 Favorite Scan

Access

Select **Main Menu**, **Favorite Scan** .

Description

The **Favorite Scan** menu starts a scan immediately with user defined settings as configured in the **Define Favorite** menu (see chapter "10.4 Configuration\Define Favorite").

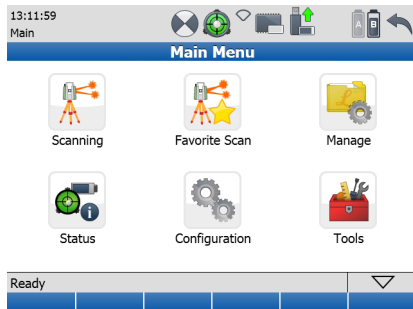

8 Manage


Access

Select **Main Menu, Manage**  .

Description

In the **Manage** menu all commands for project, target and control point management on the scanner are available.

Management Menu

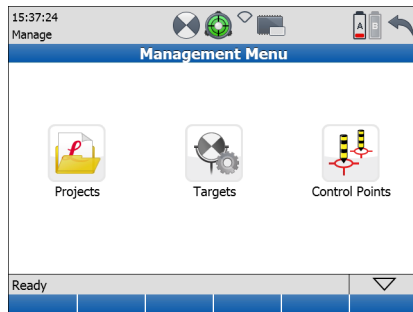

Icon	Function
Projects 	Offers access to all commands for project management.
Targets 	Offers access to all commands for target management.
Control Points 	Offers access to all commands for control point management.

8.1 Manage\Projects

Access

Select **Main Menu, Manage**  , **Projects**  .

Description

In the **Manage, Projects** menu all commands for project management are available.

Manage Projects screen

11:04:57
Manage



Projects

Name ▲	Size	Drive
Default	0.0MB	Internal
Office	595.6MB	Internal
ProjectName	497.7MB	Internal

Ready					
Cont	New	Edit	Del	Data	

Field	Description
Name	Unique name of the project.
Size	File size (in MB) of the project.
Drive	Storage device: Internal or USB device.

Available commands:

Command	Function
Cont	Confirm selection and return to previous screen.
New	Create new project with project name, description, name of creator and storage device.
Edit	Edit description and creator of selected project. Also show name, date and size of existing project.
Del	Selected project will be deleted after confirmation.
Data	Show data details of selected project such as station name, scan name, scan view, target ID, target type and target view.
Shift -> Trans	Transfer selected project or all projects to a USB memory storage device.

8.1.1

Manage\Projects\New Project


Access

Select **Main Menu**, **Manage**  , **Projects**  , **New**.

Description

In the **New Project** screen a new project with details such as name, description, creator and storage device can be created.

New Project screen

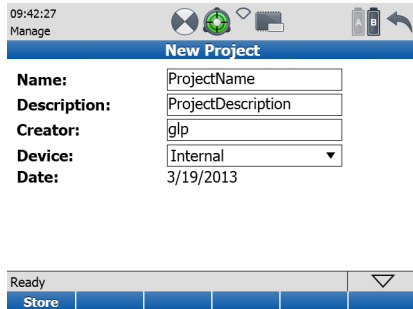

09:42:27
Manage

New Project

Name:

Description:

Creator:

Device:

Date:

Ready

Store

Field	Description
Name	Enter a unique project name. The name may be up to 14 characters long and may include letters such as A-Z, a-z, numbers from 0-9 and the special characters "-" and "_".
Description	Enter a short description of the project. Input is optional.
Creator	The person's name/abbreviation who is creating the scan project. Input is optional.
Device	Select the data storage device. Internal saves scan data on the internal SSD, USB Device stores scan data on an external USB storage device.
Date	Date of creation. Appears automatically and cannot be edited.

Available commands:

Command	Function
Store	Store the new project with description, creator and date and return to the Manage Projects screen.

8.1.2

Manage\Projects\Edit Project


Access

Select **Main Menu**, **Manage**  , **Projects**  , **Edit**.

Description

In the **Edit Project** screen the name, description and creator of the selected project can be changed. Storage device and date of the selected project are listed but are not editable.

Edit Project screen

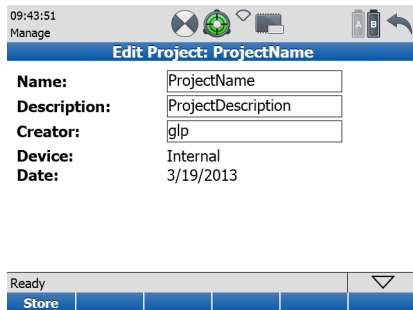

09:43:51
Manage

Edit Project: ProjectName

Name:

Description:

Creator:

Device: Internal

Date: 3/19/2013

Ready

Store

Field	Description
Name	Name of selected project.
Description	Edit/add project description.
Creator	Edit/add creator details.
Device	Storage device. Not editable.
Date	Creation date of selected project. Not editable.

Available commands:

Command	Function
Store	Store new information and return to the Manage Projects screen.

8.1.3

Manage\Projects\Delete Project


Access

Select **Main Menu**, **Manage**  , **Projects**  , **Del.**

Description

In the **Delete Project** screen an existing project can be deleted.

Confirmation message

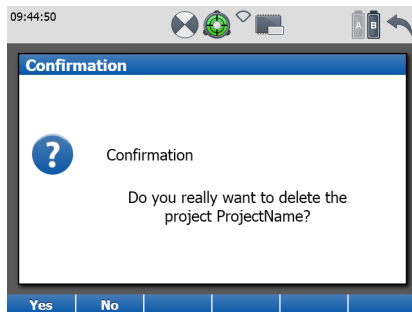

Option	Description
Yes	Confirm deletion of the selected project.  A deleted project cannot be restored.
No	Decline deletion of the selected project.

8.1.4 Manage\Projects\Data

Access

Select **Main Menu**, **Manage**  , **Projects**  , **Data**.

Description

In the **Data** screen details of scan data are available such as station name, scan name, target ID, target type and target coordinates. Point clouds of scans and target scans can be viewed.

Select Station / ScanWorld screen

13:33:55
Manage



Select Station / ScanWorld

Station	ScanWorld
Station-001	SW-001
Station-001	SW-002
Station-002	SW-003
Station-002	SW-004

Ready					
Cont		Info			

Field	Description
Station	List of available stations in the selected project.
ScanWorld	Name of the ScanWorld. A ScanWorld is created for each new Setup. Scans and images that belong to the same coordinate system are combined in a ScanWorld. Several ScanWorlds can belong to the same station.

Available commands:

Command	Function
Cont	Confirm station selection and continue to Manage Data screen.
Info	Open Station Information for details about selected station.

Scans page

14:40:16
Manage

Data

All Data Scans Images Targets

Scan ▲	Resolution	Quality	No of Points
Scan-1	50.0mm@10m	1	1276 x 472
Scan-2	25.0mm@10m	2	463 x 423
Scan-3	12.5mm@10m	3	845 x 845
Scan-4	6.3mm@10m	4	155 x 197

Ready

View Page

Field	Description
Scan	All scans from the selected station are listed.
Resolution	Resolution setting of selected scan.
Quality	Quality setting of selected scan.
No of Points	Number of points in the selected scan in horizontal and vertical direction.

Available commands:

Command	Function
View	View the point cloud of the selected scan.
Page	Switch to the Images page.

Images page

13:43:38
Manage



Data

All Data Scans Images **Targets**

Name	No of Files
Image-1	85

Ready



View

Page

Field	Description
Name	Name of the image set.

Field	Description
No of Files	Number of images included in the image set.

Available commands:

Command	Function
View	Open image viewer to display the selected image.
Page	Switch to the Targets page.

Targets page

13:42:13
Manage


Data

All Data | Scans | Images | **Targets**

Target ID	Target Type ▲	State
1	B/W Target 3"	OK
Target200	B/W Target 6"	OK
300	HDS Sphere	OK

Ready

View | Dist | Info | | | Page

Field	Description
Target ID	List of all targets that have been acquired on the selected station.
Target Type	The target's associated target type.
State	Status of scanned target. OK indicates a successful acquisition of the target centre. A bad target centre acquisition is marked as BAD .

Available commands:

Command	Function
View	View point cloud of the selected target scan.
Dist	Open Distance between Targets screen to compute slope distance between two targets.
Info	Show target results of the selected target such as target ID, target type, northing, easting, height and distance from scanner. Coordinates and distances refer to the target base point. For details about the target results refer to chapter "7.3.5 Scanning\Scan Parameters\...\Target Definition".
Page	Switch to the All Data page.

8.1.5

Manage\Projects\Transfer Project

Access

Select **Main Menu**, **Manage**  , **Projects**  , **Shift -> Trans.**

Description

In the **Transfer** screen projects can be transferred from the scanner's hard disc to an external USB memory storage device.
Refer to chapter "11.2 Tools\Transfer" for more information.

8.2

Manage\Targets

Access

Select **Main Menu**, **Manage**  , **Targets** 

Description

In the **Manage, Targets** menu all commands for target management on the scanner are available.

Manage Targets screen

14:46:44

Manage













Targets

Name ▲	Type
B/W Target 3"	B/W Target 3"
B/W Target 6"	B/W Target 6"
B/W Twin Target Bottom	B/W Target 3"
B/W Twin Target Bottom with Ext	B/W Target 3"
B/W Twin Target Top	B/W Target 3"
B/W Twin Target Top with Ext	B/W Target 3"
HDS Sphere	Sphere

Ready

▼

Cont

New

Edit

Del

More

Field	Option	Description
Name	-	Unique name of the target.
Type	Sphere	Spherical target.
	B/W Target 6"	HDS 6" Black&White circular planar target.
	B/W Target 3"	HDS 3" x 3" Black&White square planar target.
Class	System	Default target type provided by the system.
	User	User-defined target type.

Command	Function
Cont	Confirm selection and return to previous screen.
New	Create new target of class User with target name, target type, diameter, height offset and default target height.
Edit	Edit name, target type, diameter, height offset and default target height of a user-defined target. System targets cannot be edited.
Del	Selected target will be deleted after confirmation.
More	Shift between Type and Class in the target list.
Shift->Deflt	Restore all deleted System targets. User targets cannot be restored.

8.2.1

Manage\Targets\New Target

Access

Select **Main Menu**, **Manage** , **Targets** , **New**

Description

In the **New Target** menu a new target with details such as name, target type, diameter, height offset and target height can be created.

New Target page

15:15:21
Manage



New Target

Name:	<input grt146"="" on="" type="text" value="B/W 6"/>
Target Type:	B/W Target 6
Diameter:	0.0000 m
Height Offset:	0.0605 m
Target Height:	1.6230 m

Ready



Store

Field	Description
Name	Enter a unique target name. The name may be up to 16 characters long and may include letters such as A-Z, a-z, numbers from 0 -9 and the special characters "-" and "_".
Target Type	Enter the target type from a drop-down list.
Diameter	Enter the target diameter for a spherical target.
Height Offset	Enter a fixed height offset which is added to the target height. Input optional.
Target Height	Enter the default target height. Input optional.

Command	Function
Store	Store new target with name, target type, diameter, height offset and default target height on the scanner's hard disk and return to the Manage Target menu.

8.2.2

Manage\Targets\Edit Target

Access

Select **Main Menu**, **Manage** , **Targets** , **Edit**.

Description

In the **Edit Target** menu the target type, diameter, height offset and target height of an existing target can be changed.

Edit Target page

15:16:22
Manage



Edit Target

Name:	<input grt146"="" on="" type="text" value="B/W 6"/>				
Target Type:	B/W Target 6				
Diameter:	0.0000	m			
Height Offset:	0.0605	m			
Target Height:	1.6230	m			

Ready

Store



Field	Description
Name	Name of the selected target.
Target Type	Enter the target type from a drop-down list.
Diameter	Edit/add the target diameter for a spherical target.
Height Offset	Edit/add the fixed height offset which is added to the target height.
Target Height	Edit/add the default target height.

Command	Function
Store	Store new information and return to the Manage Targets menu.

8.2.3

Manage\Targets\Delete Target


Access

Select **Main Menu**, **Manage** , **Targets** , **Del.**

Description

In the **Delete Target** menu an existing target can be deleted from the target list.

Confirmation message

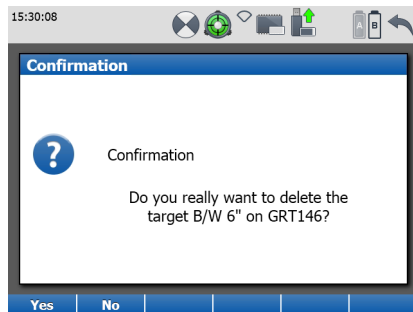

Option	Description
Yes	Confirm the deletion of the selected target.  A deleted system target can be restored by Shift->Deflt. A deleted user target cannot be restored.
No	Decline deletion of the selected target.

8.3

Manage\Control Points

Access

Select **Main Menu, Manage**  , **Control Points**  .

Description

In the **Manage, Control Points** menu all commands for control points management are available.

15:40:56

Manage

Projects

Name ▲

No of Points

Drive

Default

0

Internal

Office

15

Internal

ProjectName

2

Internal

Ready

Cont

New

Edit

Del

Import

Field	Description
Name	Unique name of the project.
No of Points	Number of control points included in the project.
Drive	Storage device: Internal or USB device.

Available commands:

Command	Function
Cont	Confirm selection and return to previous screen.
New	Create new project with project name, description and name of creator.
Edit	Edit name, description and creator of selected project. Also show storage device and date of the project.
Del	Selected project will be deleted after confirmation.
Import	Open Import Control Points screen to import control points from ASCII file.
Shift -> Data	Open the Control Points list with a list of all control points of the selected project and commands to create, edit, delete or import control points.

8.3.1

Manage\Control Points\New Project

Access

Select **Main Menu, Manage** , **Control Points** , **New**.

Description

Refer to chapter "8.1.1 Manage\Projects\New Project".

8.3.2

Manage\Control Points>Edit Project

Access

Select **Main Menu, Manage** , **Control Points** , **Edit**.

Description

Refer to chapter "8.1.2 Manage\Projects>Edit Project".

8.3.3

Manage\Control Points>Delete Project

Access

Select **Main Menu, Manage** , **Control Points** , **Del**.

Description

Refer to chapter "8.1.3 Manage\Projects>Delete Project".

8.3.4

Manage\Control Points\Import Control Points

Access

Select **Main Menu, Manage** , **Control Points** , **Import**.

Description

In the **Import Control Points** screen an external ASCII file can be selected for control point import. The import parameters can be defined in the **Define ASCII Import** screen.

15:42:06
Manage



Import Control Points

From File:

Control points office.b ▼

Header Lines:

1 ▼

Ready ▼

Cont	Conf				
------	------	--	--	--	--

Field	Description
From File	Select the ASCII file containing the control points to be imported.
Header Lines	Select the number of lines in the ASCII file to be skipped at import.



The ASCII file must be located in the main directory of the connected USB device. No particular file extension is required.

Command	Function
Cont	Confirm and import the control points from the selected file.
Conf	Open the Define ASCII Import screen to adjust import settings.

Define ACSII Import screen

15:42:41
Manage

Define ASCII Import

Delimiter:

Point ID Pos:

Northing Pos:

Easting Pos:

Height Pos:


Example: P E N H

Ready

Field	Description
Delimiter	Select the delimiting character used to separate one column from the next in the ASCII file (Semicolon, Comma, Space, Tab).
Point ID Pos	Select the position of the column which contains the point ID information.
Northing Pos	Select the position of the column which contains the Northing information.

Field	Description
Easting Pos	Select the position of the column which contains the Easting information.
Height Pos	Select the position of the column which contains the Height information.
Example	Shows example of selected import settings (e.g. P;E;N;H).

Command	Function
Cont	Confirm and return to the Import Control Points screen.
Deflt	Reset to default import settings (P,E,N,H).

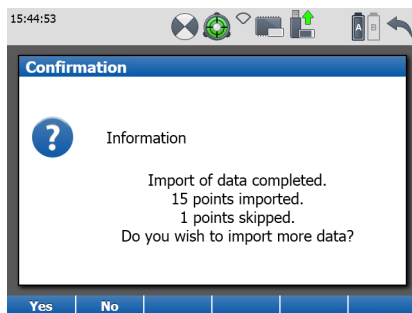**Confirmation
message**

Option	Description
Yes	Confirm and return to Import Control Points screen to import more data.
No	Decline import of more data and return to Projects screen.

8.3.5

Manage\Control Points\Data

Access

Select **Main Menu**, **Manage** , **Control Points** , **Shift -> Data**.

Description

In the **Manage, Control Points** screen all control points of a selected project are listed. For detailed information about the different options and commands that can be executed from this page refer to the descriptions on the following pages.



Control Points	
Name ▲	Date
10	3/19/2013
11	3/19/2013
12	3/19/2013
13	3/19/2013
14	3/19/2013
15	3/19/2013
20	3/19/2013
21	3/19/2013

Ready

Cont New Edit Del Import

Field	Description
Name	Point ID of control point.
Date	Date of creation of control point.

Command	Function
Cont	Continue to Projects screen.
New	Create new control point with Point ID, Northing, Easting and Height.
Edit	Edit Northing, Easting or Height of selected control point. Also show Point ID of existing control point.
Del	Selected control point will be deleted after confirmation.
Import	Open Import Control Points screen to import control points from ASCII file.
Shift -> D-all	All control points of selected project will be deleted after confirmation.

8.3.6

Manage\Control Points\Data\New Control Point

Access

Select **Main Menu**, **Manage** , **Control Points** , **Shift -> Data**, **New**.

Description

In the **New Control Point** screen a new control point can be created by entering Point ID, Northing, Easting and Height.

15:47:30
Manage



New Control Point

Point ID:

Northing:

m

Easting:

m

Height:

m

Ready

▼

Store

Field	Description
Point ID	Enter Point ID of new control point.
Northing	Enter Northing of new control point.
Easting	Enter Easting of new control point.
Height	Enter Height of new control point.

Command	Function
Store	Store new information and return to Control Points screen.

8.3.7

Manage\Control Points\Data\Edit Control Point

Access

Select **Main Menu**, **Manage** , **Control Points** , **Shift -> Data**, **Edit**.

Description

In the **Edit Control Point** screen Northing, Easting and Height of the selected control point can be changed.

15:48:15
Manage



Edit Control Point

Point ID:

Northing:

m

Easting:

m

Height:

m

Ready



Store

Field	Description
Point ID	Point ID of selected control point.
Northing	Northing of selected control point.
Easting	Easting of selected control point.
Height	Height of selected control point.

Command	Function
Store	Store new information and return to Control Points screen.

8.3.8

Manage\Control Points\Data\Delete Control Point


Access

Select **Main Menu**, **Manage** , **Control Points** , **Shift -> Data**, **Del**.

Description

In the **Delete Control Point** screen a selected control point can be deleted.

Confirmation message

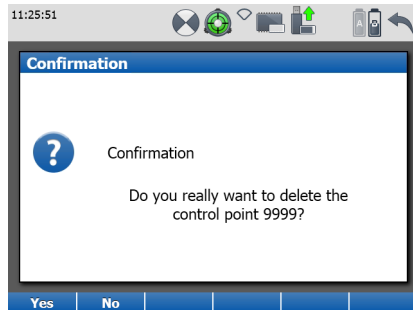

Option	Description
Yes	Confirm deletion of selected control point.  A deleted control point cannot be restored.
No	Decline deletion of selected control point.

8.3.9 Manage\Control Points\Data\Import Control Points

Access Select **Main Menu, Manage**  , **Control Points**  , **Shift -> Data, Imprt.**


Description Refer to chapter "8.3.4 Manage\Control Points\Import Control Points".

8.3.10 Manage\Control Points\Data\Delete All Control Points

Access Select **Main Menu, Manage**  , **Control Points**  , **Shift -> Data,**
Shift -> D-all.

Description In the **Delete All Control Points** screen all control points of a project can be deleted.

Confirmation message

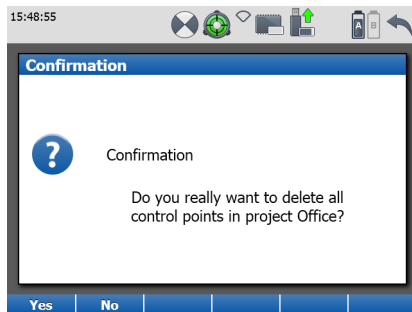

Option	Description
Yes	Confirm deletion of all control points in the selected project.  Deleted control points cannot be restored.
No	Decline deletion of all control points in the selected project.

9

Status

Access


Select **Main Menu, Status** .



Description

The **Status Menu** provides general status information about different components of the scanner such as battery and memory, general system information, level and laser plummet and WiFi status information.

Status Menu screen

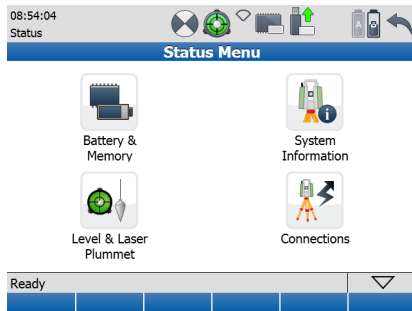

Icon	Command	Description
Battery & Memory 	Battery	Status information about internal battery, external battery and AC power supply.
	Memory	Status information about size and free space of internal hard disc's data partition and connected external USB device.
System Information 	Instrument	Status information about instrument type, serial number, equipment number and system language.
	Firmware	Status information about installed firmware version and firmware maintenance expiry date.
Level & Laser Plummet 	Level	Numerical and graphical display of instrument's tilt.
	Plummet	Switch laser plummet on/off.
	Compensator	Switch dual-axis compensator on/off. Define how scanner should react when compensator goes out of range.
Connections 	WiFi	Status information about internal WiFi. Enable/disable the internal WiFi adaptor.

9.1 Status\Battery & Memory

Access

- Select **Main Menu, Status** , **Battery & Memory**  .

OR

- Press one of the power icons    in the status bar to access the **Battery** page directly.


OR

- Press the memory icon  in the status bar to access the **Memory** page directly.

Description

In the **Status, Battery & Memory** screen detailed information about the scanner's battery and memory status can be obtained.

Battery page

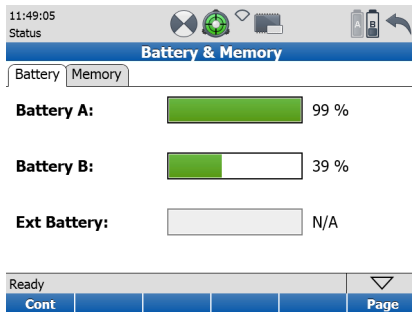

Field	Description
Battery A	Percentage of remaining power of battery A in compartment on scanner's front side (the side with touch screen).
Battery B	Percentage of remaining power of battery B in compartment on scanner's reverse side (the side without touch screen).
Ext Battery	Percentage of remaining power of external battery.



The battery status is also indicated by the power icons in the status bar. Refer to "3.3 Status Bar" for more information.

Available commands:

Command	Function
Cont	Return to previous menu.
Page	Switch to the Memory page.

Memory page

11:51:05
Status



Battery & Memory

Battery Memory

	Size / Free
Data:	199.22 / 190.42 GB 
USB:	3.61 / 2.43 GB 

Ready

Cont					Page
------	--	--	--	--	------

Field	Option	Description
Data	Size	Total space for data storage on data partition of scanner's hard disc.
	Free	Free space for data storage on data partition of scanner's hard disc.
USB	Size	Total space for data storage on external USB device.
	Free	Free space for data storage on external USB device.

Available commands:

Command	Function
Cont	Return to previous menu.
Page	Switch to the Battery page.

9.2 Status\System Information


Access

Select **Main Menu**, **Status** , **System Information** .

Description

The **System Information** screen provides detailed information about instrument type, serial number, system language and firmware version.

Instrument page

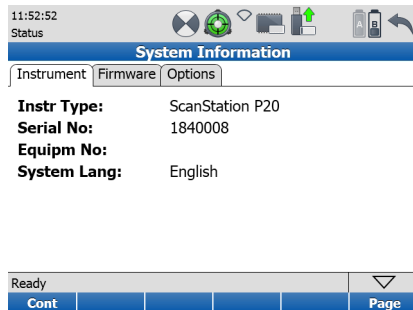

11:52:52
Status

System Information

Instrument Firmware Options

Instr Type: ScanStation P20
Serial No: 1840008
Equipm No:
System Lang: English

Ready

Cont Page

Field	Description
Instr Type	Instrument type.
Serial No	Serial number of the instrument. See also serial number plate on instrument's bottom side.
Equipm No	Leica unique identification code of the instrument.
System Lang	Active system language.

Available commands:

Command	Function
Cont	Return to Status Menu .
Page	Switch to the Firmware page.

Firmware page

14:53:28
Status





System Information

Instrument Firmware Options

Firmware: 1.50.673
Maint End: 4/17/2014 12:00:00 AM


Ready					▼
Cont					Page

Field	Description
Firmware	Firmware version of the installed onboard software.
Maint End	Expiry date of firmware maintenance period. All firmware versions with release date prior to this date can be uploaded.

Available commands:

Command	Function
Cont	Return to Status Menu .
Page	Switch to the Options page.

Options page



Field	Description
API Data Access	Access to scan data via Application Programming Interface (API) activated or deactivated.

Available commands:

Command	Function
Cont	Return to Status Menu .
Page	Switch to the Instrument page.

9.3

Status\Level & Laser Plummet

Access

- Select **Main Menu, Status**  , **Level & Laser Plummet**  .


OR

- Press the compensator icon  in the status bar to access the **Level** page directly.

Description

The **Level & Laser Plummet** screen provides detailed information about the electronic level, the laser plummet and the compensator settings.

Level page

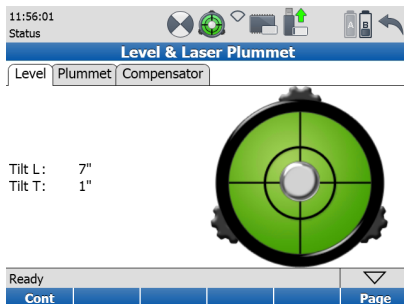


Field	Option	Description
Tilt L	-	Longitudinal tilt of the vertical axis.
Tilt T	-	Transversal tilt of the vertical axis.
Bubble Level	green	Tilt L and Tilt T < 5': level is within the high accuracy working range of the compensator. The accuracy of the compensator in the $\pm 5'$ working range is 1.5".
	red	Tilt L or Tilt T > 5': level is out of the high accuracy working range of the compensator.

As soon as the bubble level colour changes from green (within compensator range) to red (outside of $\pm 5'$ compensator range) the compensator icon in the status bar changes from  to .

The level moves linearly with the inclination values **Tilt L** and **Tilt T**. It moves down if the value in **Tilt L** increases and vice versa. It moves left if the value in Tilt T gets bigger and vice versa.



Align the scanner side cover with the touch screen parallel to two of the tribrach footscrews. Rotating these two footscrews then causes the bubble to move only left/right. Rotating the third footscrew causes the bubble to move only up/down.

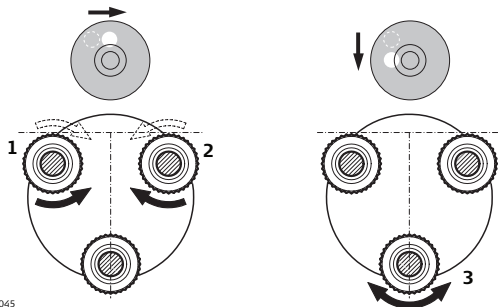

P20_045

Available commands:

Command	Function
Cont	Return to previous menu.
Page	Switch to the Plummet page.

Plummet page

11:57:00
Status









Level & Laser Plummet

Level Plummet Compensator

Laser Plummet: On

Intensity: 100 %

Ready

Cont

Page

Field	Option	Description
Laser Plummet	On	Turn the red laser plummet on.
	Off	Turn the red laser plummet off.
Intensity		Set the laser plummet intensity by increments of 20%.

By default the laser plummet is **Off** after system boot. Changing this setting to **On** turns the laser plummet on immediately. It is only visible when the **Level & Laser Plummet** screen is active.

Available commands:

Command	Function
Cont	Return to previous menu.
Page	Switch to the Compensator page.

Compensator page

11:57:41
Status



Level & Laser Plummet

Level

Plummet

Compensator

Compensator:

On

Out of Range:

flag data & cont

Ready

▽

Cont

Page

Field	Option	Description
Compensator	On	Turns the compensator on.
	Off	Turns the compensator off temporarily. After system restart, the compensator will be on again.
	Always Off	Turns the compensator off. After system restart, the compensator will remain off.
Out of Range	Cancel scan & img	If the compensator goes out of range, cancel the current scan or image acquisition.
	flag data & cont	If the compensator goes out of range, continue current scan or image acquisition, but flag unlevelled object for subsequent data import.

By default the compensator is **On** after system boot.

When changing this setting to **Off** or **Always Off** the compensator icon in the status bar changes to .

Available commands:

Command	Function
Cont	Return to previous menu.
Page	Switch to the Level page.

Access

Select **Main Menu**, **Status** , **Connections**  .

Description

In the **WiFi Configuration** screen the communication parameters of the internal WiFi device can be defined. Depending on the remote control device the WiFi connection mode and a key for encryption can be set.

WiFi Configuration screen

11:59:00
Status







WiFi Configuration

WiFi Operation:

Enabled ▼

WiFi Connection:

Access point mode ▼

WiFi SSID:

P20_1840008

WiFi IP:

192.168.173.1

WiFi Key:

abcd-abcd

Ready

▼

Cont

Set

Field	Option	Description
WiFi Operation	On Off Always on	Switches the internal WiFi board on, off or always on.
WiFi Connection	Access point mode Ad-hoc mode	Select the WiFi connection mode.
WiFi SSID	-	The scanner's Service Set Identifier (SSID) shown in the list of available network connections. The name is P20_184xxxx with 184xxxx being the scanner's serial number.
WiFi IP	-	The scanner's WiFi IP address. In Access point mode the general WiFi IP address for all scanners is 192.168.173.1. In Ad-hoc mode the WiFi IP address differs for each scanner.
WiFi Key	-	Password for WiFi encryption. The default key is "abcd-abcd" and can be changed to any other password with 8 or more characters.

Available commands:

Command	Function
Cont	Return to the Status Menu .
Set	Apply changes of the WiFi configuration.

10 Configuration

Access


Select **Main Menu, Configuration**



Description

In the **Configuration Menu** the **Units & Formats**, the local **Date & Time**, the MMI **Language** and the **Define Favorite** scan settings can be configured.

Configuration Menu screen

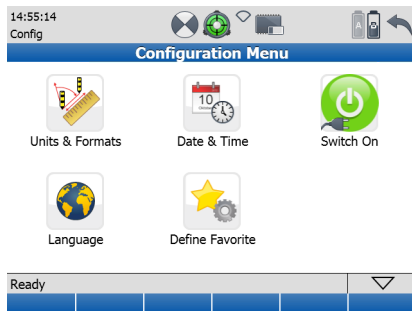

Icon	Command	Description
Units & Formats 	Distance Unit	Select unit for distances (Metre, Int Ft, Us Ft).
	Distance Dec	Select number of decimal digits for distance display.
Date & Time 	Local Time	Set local time.
	Local Date	Set local date.
Switch On 	By Power	On: Scanner boots up as soon as internal battery or external power supply is connected.
		Off: Scanner has to be started with the ON button.
Language 	Language	Select language for the user interface or delete a language from the list.

Icon	Command	Description
Define Favorite 	Field of View	Select area of interest and scanner action for Favorite Scan .
	Resolution	Define horizontal and vertical point spacing for Favorite Scan .
	Image Ctrl	Define parameters of internal camera for Favorite Scan .
	Filters	Define filter parameters for Favorite Scan .

10.1

Configuration\Units & Formats


Access

Select **Main Menu, Configuration**  , **Units & Formats**  .

Description

In the **Units & Formats** screen linear units and the number of decimals can be defined.

Units & Formats screen

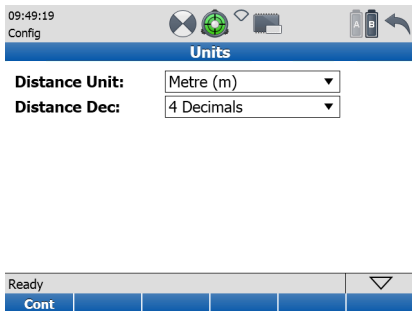

09:49:19
Config

Units

Distance Unit:

Distance Dec:

Ready

Cont

Field	Option	Description
Distance Unit	Metre (m)	Metre: Uses SI base unit metre.
	Int Ft (fi)	International feet: Uses 1 ft = 1' = 12 in. = 1/3 yd = 30.48 cm
	US Ft (ft)	U.S. survey feet: Uses 39,37 in. = 1 m (1 U.S. survey foot = 1200/3937 m equates approximately 30.48006 cm)
Distance Dec	0 to 4 Decimals	Number of decimal digits for distance related fields.

Available commands:

Command	Function
Cont	Confirm and return to the Configuration Menu .

10.2

Configuration\Date & Time


Access

Select **Main Menu**, **Configuration** , **Date & Time**  .

Description

In the **Date & Time** screen the system time and date can be configured.

Date & Time screen

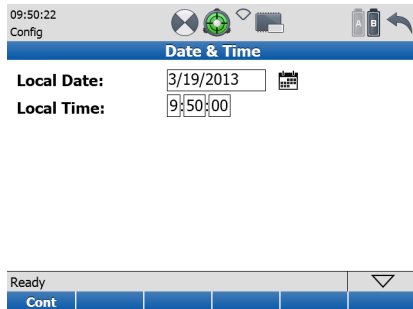

09:50:22
Config

Date & Time

Local Date: 3/19/2013 

Local Time: 9:50:00

Ready

Cont

Field	Description
Local Date	Enter the local date in the format MM/DD/YY .
Local Time	Enter the local time in the format hh:mm:ss .

Available commands:

Command	Function
Cont	Confirm and return to the Configuration Menu .

10.3

Configuration\Language

Access

Select **Main Menu, Configuration** , **Language** .


Description

In the **Language** screen a list of available languages for the user interface is shown. A language can be selected or deleted from the list.



Additional languages can be installed by uploading language files. Refer to "11.2 Tools\Transfer" for more information.

Language screen

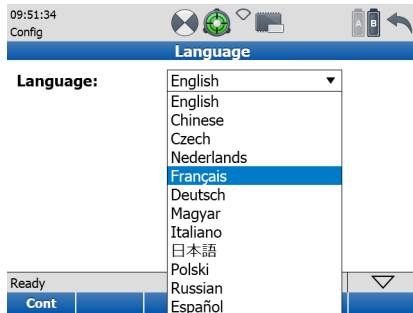

Field	Description
Language	List of installed languages on the scanner.

Available commands:

Command	Function
Cont	Activate the selected language and return to the Main Menu .
Del	Delete the selected language. English is part of the firmware and cannot be deleted.

10.4

Configuration\Define Favorite


Access

Select **Main Menu, Configuration**  , **Define Favorite**  .

Description

In the **Define Favorite** menu the settings for the **Favorite Scan** can be defined.

Field of View page

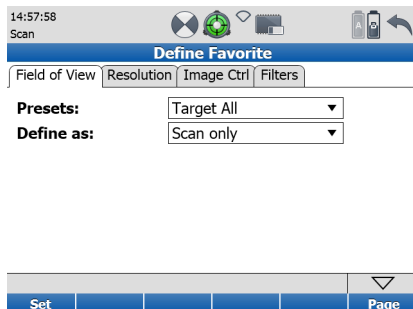

14:57:58
Scan

Define Favorite

Field of View Resolution Image Ctrl Filters

Presets: Target All ▼

Define as: Scan only ▼

Set Page

Field	Option	Description
Presets	Rectang 60 x 60	Set the Field of View to 60° x 60° (Hz x V).
	Rectang 90 x 90	Set the Field of View to 90° x 90° (Hz x V).
	Panorama 360 x 60	Set the Field of View to 360° x 60° (Hz x V).
	Panorama 360 x 90	Set the Field of View to 360° x 90° (Hz x V).
	Target All	Set the Field of View to 360° x 270° (Hz x V).
Define as	Scan only	Acquire scans only.
	Scan & Image	Acquire scans and images.
	Image only	Acquire images only.

15:00:01
Scan

Define Favorite

Field of View Resolution Image Ctrl Filters

6.3mm@10m

Resolution: — [Slider] +

Quality: — [Slider] +

1 2 3 4

No Pts (Hz x V): 10054 x 3771

Est Time: 3 min 25 s

Set Page

Refer to chapter "7.3.2 Scanning\Scan Parameters\Resolution" for the **Resolution** settings.

Image Ctrl page

The screenshot shows the 'Image Ctrl' page of the ScanStation P20 configuration interface. At the top, there is a status bar with the time '15:01:29', the word 'Scan', and several icons including a target, a green circular arrow, a Wi-Fi symbol, a memory card, and a mobile phone. Below this is a blue header bar with the text 'Define Favorite'. Underneath the header are four tabs: 'Field of View', 'Resolution', 'Image Ctrl' (which is selected), and 'Filters'. The 'Image Ctrl' tab contains three settings: 'Exposure:' with a dropdown menu set to 'Auto', 'Time:' with a text input field containing '100' followed by 'ms', and 'Image Resolution:' with a dropdown menu set to '1920 x 1920'. At the bottom of the page, there is a navigation bar with a 'Set' button, four empty buttons, and a 'Page' button with a dropdown arrow.

15:01:29
Scan

Define Favorite

Field of View Resolution **Image Ctrl** Filters

Exposure: Auto ▼

Time: 100 ms

Image Resolution: 1920 x 1920 ▼

Set Page

Refer to chapter "7.3.3 Scanning\Scan Parameters\Image Control" for the **Image Control** settings.

Filters page

11:06:20
Scan

Define Favorite

Field of View Resolution Image Ctrl Filters

Range Filter: Yes

Min Range: 0.0000 m

Max Range: 100.0000 m

Set Page

Field	Description
Range Filter	Enable or disable the range filters.
Min Range	Minimum range for point filtering. All points with a range lower than this limit will not be stored.
Max Range	Maximum range for filtering. All points with a range higher than this limit will not be stored.



Once a **Favorite Scan** with range filtering enabled is started, the icon  in the status bar is visible.

Filter settings for the **Favorite Scan** do not affect the general filter settings.

Available
commands in all
Define Favorite
tabs

Command	Function
Set	Store the selected settings for the Favorite Scan menu and return to the Configuration Menu .

11 Tools

Access


Select **Main Menu, Tools** .



Description

In the **Tools** menu all commands for disc formatting, data transfer, license management, display and instrument calibration are available.

Tools Menu screen

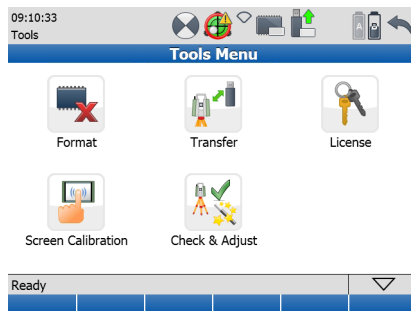

Icon	Command	Description
Format 	Confirmation	Format the complete data partition of the internal hard disc.  All project data will be erased.
Transfer 	Projects	Transfer selected project or all projects to a USB memory storage device.
	System Files	Upload a new firmware or firmware languages to the instrument.
License 	Manual	Enter license key manually.
	Upload	Upload license key file from a USB memory storage device.
Screen Calibration 	Touch Calibration	Recalibrate the touch screen by clicking four points on the display.

Icon	Command	Description
Check & Adjust 	Check Angular Parameters	Determine and update angular parameters of the instrument.
	Set Range Parameters	Set the range offset of the instrument.
	Check Tilt Compensator	Check and update the tilt compensation of the instrument.
	Current Calibration	List all current instrument parameters.

11.1

Tools\Format


Access

Select **Main Menu**, **Tools**  , **Format**  .

Description

In the **Format** screen the data partition of the scanner's hard disc can be formatted.

Confirmation message

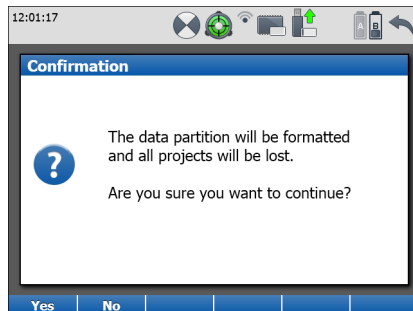

Option	Description
Yes	Starts formatting the data partition.  All project data will be erased.
No	Cancels the formatting process and returns to the Tools menu.



- Formatting is irreversible. It is recommended to backup any project files before starting **Format**.
- The **Format** command does not affect any system files. Only scan data will be erased.

11.2

Tools\Transfer

Access

Select **Main Menu, Tools**  , **Transfer**  .

Description

In the **Transfer** menu projects can be transferred from the scanner's hard disc to an external USB memory storage device and new firmware and languages can be uploaded from an external USB memory storage device to the scanner.

Project Transfer screen

13:02:59
Manage



Project Transfer

Project:

ProjectName ▼

Size:

279.4MB

Ready

▼

Cont					
------	--	--	--	--	--

Field	Description
Project	Name of the project to be transferred. Touch the name field to open the Manage, Projects menu for selecting another project.
Size	File size (in MB) of the selected project.

Available commands:


Command	Function
Cont	Transfer the selected project to the connected USB memory storage device into the folder \Data .
Logs	Transfer system log files to the connected USB memory storage device into the folder \Logs .



The file system on the USB memory storage device must be NTFS, FAT32 or FAT.

Information message

In case that no USB memory storage device has been connected, the following screen will appear:

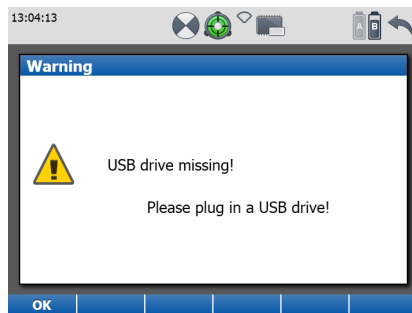

Please check whether the USB memory storage device has been connected properly and try again.

Firmware page

15:04:07
Tools

Transfer System Files

Firmware Language

Firmware: P20_1.50.673.fw ▼

Ready

Cont					Page
------	--	--	--	--	------

Field	Description
Firmware	Select firmware file (*.fw) from connected USB memory storage device.



- The firmware file (*.fw) must be located in the root directory of the USB memory storage device.
- Firmware files are named for example **P20_1.2.3.456.fw** with **1.2** being the firmware version in this case.

- Uploading a new firmware file can take up to 40 minutes. Ensure sufficient battery power or provide AC power and do not interrupt power supply during the upload process.
- Refer to the document **UpdateSSP20_v1.0.pdf** which is enclosed with each new firmware file for detailed instructions.

Available commands:

Command	Function
Cont	Starts the upload process of the selected firmware file.
Page	Switch to the Language page.



After the upload process, the instrument restarts two times and then displays the **Main Menu**.

Language page

13:06:52
Tools

Transfer System Files

Firmware Language

Language: Chinese_P20.Ing ▼

Ready

Cont Page

Field	Description
Language	Select language file (*.Ing) from connected USB memory storage device.



The language file (*.Ing) must be located in the main directory of the USB memory storage device.

Available commands:

Command	Function
Cont	Starts the upload process of the selected language file.
Page	Switch to the Firmware page.



After the upload process, the language is available as an additional entry in the **Language** page of the **Firmware Language** screen.

Refer to chapter "10.3 Configuration\Language" for more information.

11.3

Tools\License


Access

Select **Main Menu, Tools**  , **License**  .

Description

In the **License** screen the firmware maintenance license key can be entered manually or uploaded via key file. A valid license key is required to be able to update the ScanStation P20 firmware.

Manual page



13:10:35
Tools

License

Manual Upload

License: 17NLZ4UILQ05AQ

Ready					▼
Cont					Page

Field	Description
License	Enter the 14-digit license key manually.  The license key is not case sensitive.

Available commands:

Command	Function
Cont	Confirm the entered license key.
Page	Switch to the Upload page.

Upload page

13:11:08
Tools


License

Manual Upload

Key File:

L_1840025.key ▼

Ready

Cont

Page ▼

Field	Description
Key File	Select the license key file (*.key) from the connected USB memory storage device to load onto the scanner.



- The license key file (*.key) must be located in the root directory of the USB memory storage device.
- License key files are named for example "L_184xxxx.key" with 184xxxx being the scanner's serial number.

Available commands:

Command	Function
Cont	Confirm and load the license key from the selected license key file.
Page	Switch to the Manual page.

11.4

Tools\Screen Calibration


Access

Select **Main Menu, Tools** , **Screen Calibration**  .


Description

In the **Screen Calibration** menu the onboard touch screen can be calibrated.

Confirmation message

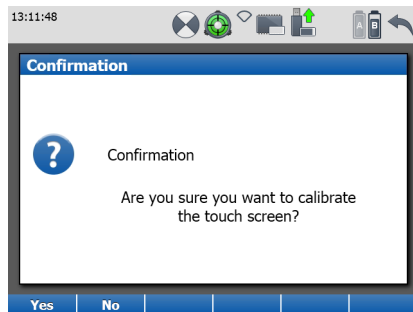

Option	Description
Yes	Start the touch screen calibration process. Then click the centres of four calibration points which appear consecutively on the display.
No	Cancel the touch screen calibration process and return to the Tools menu.

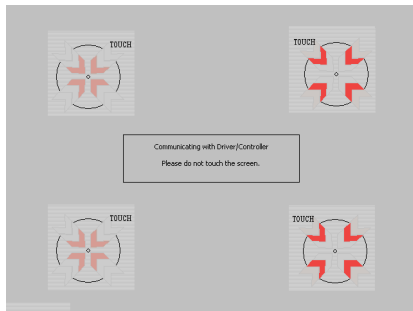

11.5

Tools\Check & Adjust


Access

Select **Main Menu, Tools** , **Check & Adjust** .

Description


In the **Check & Adjust** menu all commands for checking angular parameters, setting range parameters, checking the tilt compensator, and to check the current calibration settings are available.

Check & Adjust screen

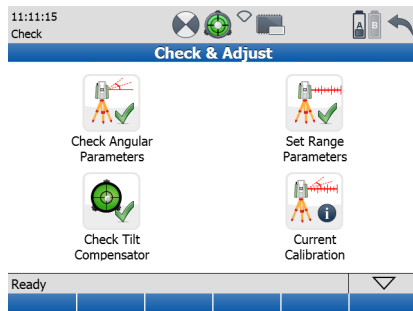

Icon	Description
Check Angular Parameters 	Angular system parameters can be determined by means of a field procedure and registered in the instrument.
Set Range Parameters 	The range offset parameter, which must be determined on a reference baseline, can be registered in the instrument.
Check Tilt Compensator 	The tilt sensor can be checked and its parameters be updated.
Current Calibration 	Current instrument parameters can be displayed and reset to factory default values.

Check Angular Parameters screen

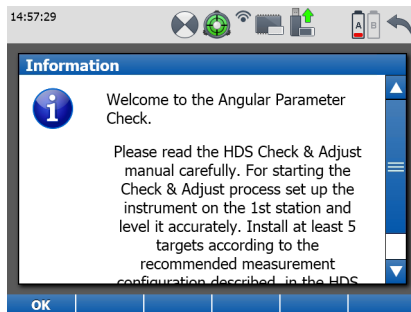

Refer to the separate Leica HDS Check & Adjust User Manual for step-by-step instructions and details about the setup of a test configuration.

Set Range Offset screen



Update the system range offset of your instrument after reliable results on a reference baseline according to:
correct dist. = offset + measured dist.
Consider the sign of your setting!

Range Offset: m



Field	Description
Range Offset	Range offset determined on a distance reference baseline.

Available commands:

Command	Function
Set	Registers the current range offset which will be added to all future distance measurements.

Check Tilt Compensator screen

14:44:45
Check



Checking Tilt Compensator

Parameter ▲	Result ▲
comp. L	11"
comp. T	-2"

Ready					▽
Set					

Field	Description
Parameter	List of instrument tilt parameters. • comp. L = compensator longitudinal index error. • comp. T = compensator transversal index error.
Result	Current value of the instrument tilt parameter.

Available commands:

Command	Function
Set	Registers the calculated tilt parameters.  All further scans are corrected by these values.

Current Check &
Adjust Parameters
screen

14:31:26

Check















Current Check & Adjust Parameters

Parameter ▲	Result ▲
$\lambda 1$	0°0'0" ▲
$\lambda 2$	0°0'0"
μ	0°0'0"
ε	0°0'0" ≡
Δel	0°0'0"
range offset	0.0000 m
comp. L	0°0'0"
comp. T	0°0'0" ▼
Ready ▾	
Cont	Reset

Field	Description
Parameter	List of instrument parameters. • $\lambda 1, \lambda 2$ = laser alignment deviations. • μ = deviation of the line of sight. • ε = deviation of the tilting axis. • $\Delta e l$ = deviation of the vertical index. • range offset = range offset determined on a distance reference baseline. • comp. L = compensator longitudinal index error. • comp. T = compensator transversal index error.
Result	Current value of the instrument parameter.

Available commands:

Command	Function
Cont	Return to the Main Menu.
Reset	Reset all user-determined parameters to the default in-factory calibration.

Index

A

AC power supply	23, 27
Arrow buttons	96, 112
Azimuth	51

B

Backsight	59
Battery, external	23, 27, 177, 179
Battery, internal	23, 28, 177, 179

C

Camera, internal	
Scan Parameters, Image Control	105
Check Backsight	46, 93, 104, 108
Check exposure	104, 106, 107, 110
Circular level	14, 17
Compensator, dual-axis	15, 25, 187, 188, 192
Connections	177
Control point	41, 52, 135, 159

D

Distance	130
----------------	-----

E

Estimated Time	91, 97, 98, 103, 107, 113, 114
Exposure, Automatic	106
Exposure, Manual	106
External memory	27

F

Favorite Scan	132
Define Favorite	205
Menu	132
Field of view (FoV)	91
Horizontal	91
Vertical	91
Filters	109, 209
Firmware	177, 182, 184
Firmware file	220
Firmware language	213
Firmware upload	217

I

Image control	88
Image Resolution	93, 106, 208
Instrument height	18
Internal hard disc	26

K

Keyboard, virtual	30
Known Backsight	46, 59

L

Language	203, 213
Language file	222
Language upload	217
Laser plummet	15, 17, 177, 187, 190
Level	14, 17, 177, 187
License	213, 224
License key	224, 225
License key file	226
License key file upload	226

M

Maintenance	184, 224
Memory, external	27
Message bar	21

Q

Quality	103
Quick Orientation	44, 46, 47, 49
Quick Scan	91, 94

R

Range Filter	109, 209
Remote Control	36, 37, 38
Resection Results screen	73
Resection setup	68

S

Scan resolution	103
Serial number	2, 182, 226
Set Azimuth	46, 51
Set up the tripod	13, 16
Station Setup	46
Status bar	21, 23, 178, 187, 192
System date	202
System time	21, 202

T

Target	93, 115, 118, 124
Target height	93, 104, 116
Target ID	104, 116, 118, 144, 149
Target Information	129
Target list	118
Target results	125, 149
Target scan	124
Target type	24, 104, 116, 118, 144, 149
Target, view	127
Targets	151
Title bar	21
Transport container	10
Tripod	12, 13, 16

U

Unit, distance	200
USB memory storage device	137, 217, 220
File system	218
USB socket	20

V

Viva Controller	36
-----------------------	----

W

Weight	10
White Balance	106, 108
WiFi	193

Leica Geosystems AG

Heinrich-Wild-Strasse
CH-9435 Heerbrugg
Switzerland

Phone +41 71 727 31 31

www.leica-geosystems.com

- when it has to be **right**

Leica
Geosystems

795822-2.0.0en
Original text
Printed in Switzerland © 2013 Leica Geosystems AG, Heerbrugg, Switzerland