
Yealink


DECT IP Base Station W70B





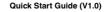

W70B Package Contents

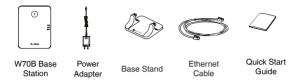

Note: We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in reduced performance.

Assembling the DECT IP Station

- Connect the base station power and the network using method a or method b.
 - a. AC Power Option
- b. PoE (Power over Ethernet) Option




Note:

- If you choose method a, use Yealink supplied power adapter (5V/0.6A). A third-party power adapter may damage the base station.
- If you choose method b, you do not need to connect the power adapter.
 Make sure the hub/switch is PoE-compliant.

2a. (Desktop Installation) Attach and remove the base stand.

Attach the Base Stand

Remove the Base Stand

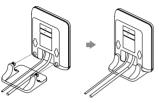


Align the snap-fits with the corresponding holes and push forward, snapping them into the holes.



Remove the snap-fits from the holes horizontally.

2b. (Wall-Mount Installation) Attach the base station.

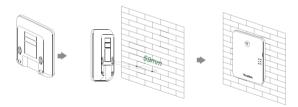

- Operating Amount remperatures: +32 to 104°F (0 to 40°C)
 Relative humidity: 5% to 90%, noncondensing
 Storage temperature: -22 to +158°F (-30 to +70°C)

Warranty
Our product warranty is limited only to the unit itself, when used normally in accordance
ocientinal instructions and the system environment. We are not liable for damage or loss resu the use of this newturt, or for any claim from a third narty. We are not liable for neoblems with Yealini the use of this product, or not any claim from a time pany, we are not isable for processes with health device arising from the use of this product; we are not liable for financial damages, lost profits, claim from third parties, etc., arising from the use of this product.

- Explanation of the symbols is the DC voltage symbol
- WEEE Warning symbol



To world the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and

electronic equipment should understand the meaning of the crossed-out wheeled bin symbol Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately Restriction of Hazardova Substances Directive (BoHS

reasroom or macaroosa Substances Directive (MoHS).
This device complies with the requirements of the EU RoHS Directive. Statements of composition by contacting support @yealink.com.

Save these instructions. Read these safety instructions before usel



- . Before you install and use the device, read the safety instructions carefully and observe the Studios during operation.
 During the process of storage, transportation, and operation, please always keep the device.
- dry and clean, avoid collision and crash.
 Please attempt not to dismantle the device by yourself. In case of any discrepancy, please reases attempt not to dismants the device by yoursel, in case or any discrepancy, pease contact the appointed maintenance center for repair. Please refer to the relevant laws and statutes while using the device. Legal rights of others
- Environmental Requirements
 - Place the device at a well-ventilated place. Do not expose the device under direct sunlight. Keep the device dry and free of dusts.
 Do not place the device on or near any inflammable or fire-vulnerable object, such as rubber.
 - Keen the device ower from any heat source or have fire, such as a carolla or an electric

- Do not let a crisid play with the device or any accessory in cas
 Please use the accessories provided or authorized by the ma
- . The power supply of the device shall meet the requirements of the input voltage of the device Please use the provided surge protection power socket only
- Please use the provided surge protection power socket only.

 Before plugging or unplugging any cable, make sure that your hands are completely dry.

 Do not splil liquid of any kind on the product or use the equipment near water, for example, near a bathtub, weathook, kitchen sirk, wet besement or near a swimming pool.

 During a throderstorm, stop using the device and disconnect if from the power supply
- Curing a munoaratorm, stop using the device and disconnect is from the power supply Unplug the power plug and the Asymmetric Digital Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avoid lightning strike. . If the device is left unused for a rather long time, disconnect it from the power supply and
- When there is sensing emitted from the device, or some abnormal noise or smell, disconnect
- The device from the power supply, and unplug the power plug immediately.

 Contact the specified maintenance center for repair.

 Do not insert any object into equipment slots that is not part of the product or auxiliary produ
- ing a cable, connect the grounding cable of the device first. Do not disconnect able until you disconnect all other cables.

A Battery Requirements

- . Do not immerse the battery into water, which could short-circuit and damage the Do not expose the battery to an open flame or leave the battery where it could be
- subjected to extremely high temperatures, which could cause the battery to explode Do power the handset off before removing the battery. Do not try to use the battery for the power supply of any device other than this
- Do not open or mutilate the battery, released electrolyte is corrosive and may cause
- Use only the rechargeable battery pack delivered with the handset or those
- rechargeable battery packs expressly recommended by Yealink

 Defective or exhausted battery should never be disposed of as municipal waste Return old battery to the battery supplier, a licensed battery dealer or a designated

A Cleaning Requirements

- . Before cleaning the device, disconnect it from the power sup . Use a piece of soft, dry and anti-static cloth to clean the device . Keep the power plug clean and dry
- Troubleshooting
- There is a hart connection with the nive
- Clean the plug with a dry clot Connect it to another wall outle
- The usage environment is out of operating temperature range Use in the operating temperature rang-The rable between the unit and the Yealink davine is connected incorrectly
- Connect the coble correctly You cannot connect the cable properly
- Lise the correct nower supply
- Some dust, etc., may be in the port . Clean the port. Clear the port.
 Contact your dealer or authorized service facility for any further questions
- FCC Statement This daving commilies with part 15 of the ECC Bules. Operation is subject to the following bur
- conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for ved by the party responsible for compliance uld unid the user's authority to operate the equipment
- This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the
- (1) this device may not cause interference; and (2) this device must accept any interference, including interference that may cause undesired operation of the device. CAN ICES-3(B) l e rescent annarali est conforme aux CNR d'industrie Canado anniicables aux annaralis radir
- npts de licence. L'exploitation est autorisée aux deux conditions suiva (1) l'annarail ne doit nes norduire de brovillane (1) l'appareir ne doit pas produire de brouitage;
 (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le hynvillane est syspentible d'en compromettre le fonctionnement NMR-3/R/

Radiation Exposure Statement

- This equipment complies with FDC and IC radiation exposure limits set forth for an une environment. This equipment should be installed and operated with minimum distance 20cm setween the radiator and your body. Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre
- Cell miseaur ne don pas eine Co-piace do ne londonment en memb temps qu'abcune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps. Contact Information YEALINK NETWORK TECHNOLOGY CO.,LTD
- 399, 3rd Floor, No.16, Yun Ding North Road, Hui District, Xiamen City, Fujian, P.R.C. YEALINK (EUROPE) NETWORK TECHNOLOGY B.V.
- Strawinskylaan 3127, Atrium Building, 8th floor, 1077ZX Amsterdam. The Netherlands YEALINK (USA) NETWORK TECHNOLOGY CO., LTD 999 Reachtree Street Suite 2300, Fulton, Atlanta, GA, 30309, USA Marie in China

About Yealink

Yealink (Stock Code: 300628) is a global brand that specializes in video conferencing, voice communications and collaboration solutions with best-in-class quality, innovative technology and user-friendly experience. As one of the best providers in more than 140 countries and regions, Yealink ranks No.1 in the global market share of SIP phone shipments (Global IP Desktop Phone Growth Excellence Leadership Award Report, Frost & Sullivan, 2019).

Technical Support

Visit Yealink WIKI (http://support.yealink.com/) for firmware downloads, product documents, FAQ, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (https://ticket.yealink.com) to submit all your technical issues





YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.

Web: www.yealink.com Copyright@2021 YEALINK(XIAMEN) NETWORK TECHNOLOGY CO.,LTD.All rights reserved.