

# IQOS

Korisnički priručnik

**IQOS** ILUMA i ONE™



# Discover the New Features

HR Otkrijte Nove značajke

## EN Download IQOS App

Use the IQOS app to adjust device settings and customize your experience.\* Visit [www.iqos.com/apps](http://www.iqos.com/apps)

\*Availability of the IQOS App may vary depending on the country.

## HR Preuzmite IQOS aplikaciju

Pomoću IQOS aplikacije možete prilagoditi postavke uređaja i svoj način korištenja. Posjetite [www.iqos.com/apps](http://www.iqos.com/apps)

\*Dostupnost IQOS aplikacije može varirati ovisno o zemlji.



# Autostart

## EN Autostart

Automatically starts heating after inserting SMARTCORE STICK™.

## HR Automatsko pokretanje

Automatski započinje zagrijavanje nakon umetanja SMARTCORE STICK™ umetaka za grijanje.



# FlexPuff

**EN FlexPuff** automatically analyzes your experience and may provide 4 extra puffs within experience lasting up to 6 min.\* \*FlexPuff is designed to work with tobacco sticks. Activation and number of puffs depend on individual usage patterns, extra puffs might not apply to all adult consumers and/or experiences.

**HR FlexPuff** automatski analizira vaše korištenje i može pružiti 4 dodatna udisaja tijekom korištenja koje traje do 6 minuta.\* \*FlexPuff je dizajniran za rad s duhanskim umetcima za grijanje. Aktivacija i broj udisaja ovise o pojedinačnim obrascima korištenja, dodatni udisaji možda se neće primjenjivati na sve punoljetne potrošače i/ili iskustva korištenja.

# Quick Tips

HR Brzi savjeti

## Autostop

### EN Autostop

During use, the experience will stop if the SMARTCORE STICK™ is moved, or removed from the device.

### HR Automatsko zaustavljanje

Tijekom upotrebe, korištenje će se prekinuti ako se umetak za grijanje SMARTCORE STICK™ pomakne ili ukloni iz uređaja.



## Battery Status

### EN Battery Status

Short press Button, Status  
Lights indicate battery level.

### HR Status baterije

Kratko pritisnite tipku, svjetla  
stanja pokazuju razinu baterije.



## Light Blinks Yellow

### EN Light Blinks Yellow

Battery depleted, need to charge.

### HR Svjetlo treperi žuto

Baterija je ispražnjena, potrebno ju je napuniti.



## Lights Blink White Twice

### EN Lights Blink White Twice

IQOS ILUMA i ONE™ is outside operating temperature range (0°C~40°C).

### HR Svjetla dvaput zatrepere bijelo

IQOS ILUMA i ONE™ je izvan raspona radne temperature (0°C~40°C).



## Light Blinks Red

### EN Light Blinks Red

Reset IQOS ILUMA i ONE™.  
If red Light blinking persists,  
contact Customer Care.

### HR Svjetlo treperi crveno

Resetirajte IQOS ILUMA i  
ONE™. Ako crveno svjetlo  
i dalje treperi, obratite se  
Centru za korisničku podršku.







## To Reset

### EN To Reset

Place Holder in Pocket Charger and press Pocket Charger Button for 10 seconds. All Status Lights will turn OFF, and turn ON to confirm a RESET. If problem persists, contact IQOS Support.

### HR Da biste vratili izvorne postavke:

Pritisnite tipku na 7 sekundi, a zatim otpustite. Sva svjetla stanja će se ugasiti, dvaput zatreptati i uključiti se. Ako se problem nastavi, obratite se Centru za korisničku podršku.



# How to use your IQOS ILUMA i ONE™

HR Kako koristiti IQOS ILUMA i ONE™

## 1.

### Turn On

#### EN Turn On

Press and hold Button for 4 seconds, Status Lights will turn ON slowly.

#### HR Uključite

Pritisnite i držite tipku 4 sekunde, svjetla stanja će se polako uključiti.



## 2.

### Charge

#### EN Charge

Before first use, fully charge your IQOS ILUMA i ONE™ in accordance with enclosed Safety Warnings and Instructions.  
(approx. 90 min)

#### HR Napunite

Prije prvog korištenja, potpuno napunite svoj IQOS ILUMA i ONE™ u skladu s priloženim Sigurnosnim upozorenjima i uputama.  
(oko 90 min)



# 3.

## Open

**EN** Open  
Slide to open.

**HR** Otvorite  
Pomaknite za otvaranje.




# 4.

## Insert SMARTCORE STICK™

**EN** Insert SMARTCORE STICK™  
Insert the SMARTCORE STICK™  
to the line on filter until device  
vibrates and Light(s) pulse(s).  
Heating starts automatically,  
or by pressing Button for 1  
second.

**HR** Umetnite umetak za grijanje  
SMARTCORE STICK™  
Umetnite umetak za grijanje  
SMARTCORE STICK™ do linije  
na filteru, dok uređaj ne zavibira.  
Grijanje se pokreće automatski ili  
pritiskom na tipku na 1 sekundu.

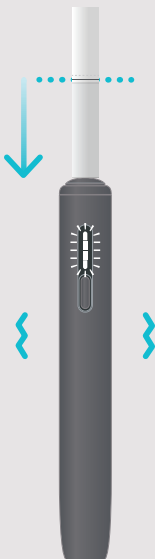

# 5.

## Begin Use

### EN Begin Use

Start using once IQOS ILUMA i ONE™ vibrates and Status Light(s) stay fixed.

### HR Početak korištenja

Počnite koristiti nakon što IQOS ILUMA i ONE™ zavibira, a svjetla stanja ostanu neprekidno svjetliti.



# 6.

## Experience Countdown

**EN Experience Countdown**  
During use Status Light(s) indicate remaining time.

**HR Odbrojavanje korištenja**  
Tijekom korištenja svjetla stanja pokazuju preostalo vrijeme do kraja korištenja.



# 7.


## Nearly Complete

### EN Nearly Complete

To signal the last 30 seconds or last 2 puffs, IQOS ILUMA i ONE™ will vibrate once with one Light pulsing white.

### HR Gotovo dovršeno

Kako bi signalizirao posljednjih 30 sekundi ili posljednja 2 udisaja, IQOS ILUMA i ONE™ će jednom zavibrirati uz pulsirajuće bijelo svjetlo stanja.

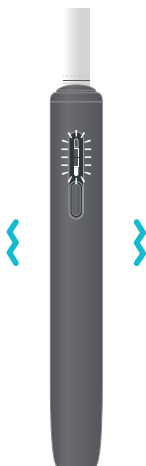





## 8.

### Remove SMARTCORE STICK™

**EN Remove SMARTCORE STICK™**

Remove used SMARTCORE STICK™ and dispose as per Safety Warnings and Instructions.

**HR Uklonite umetke za grijanje  
SMARTCORE STICK™**

Korišteni umetak za grijanje SMARTCORE STICK™ uklonite iz uređaja i postupite s navedenim u skladu s Sigurnosnim upozorenjima i uputama.



IQOS  
ILUMA i



This is the safety alert symbol. It is used to alert you to potential physical injury hazards.

ENGLISH

# SAFETY WARNINGS AND INSTRUCTIONS

**PLEASE READ ALL SAFETY WARNINGS AND INSTRUCTIONS BEFORE USE TO AVOID INJURY.**

**These safety warnings and instructions cannot cover all possible conditions that could occur, and users should exercise care and caution.**

KEEP THESE SAFETY  
WARNINGS AND  
INSTRUCTIONS FOR  
FUTURE REFERENCE  
AS THEY CONTAIN  
IMPORTANT  
INFORMATION.

**These Safety Warnings and Instructions are applicable to IQOS ILUMA i ONE™.**

**See [www.iqos.com](http://www.iqos.com) for any updates to these Safety Warnings and Instructions.**

## **INTENDED USERS**

- IQOS ILUMA i ONE™ and SMARTCORE STICKS™ are for adult use only.
- IQOS ILUMA i ONE™ and SMARTCORE STICKS™ are for adults who would otherwise continue to use tobacco or nicotine-containing products.
- Children and adolescents should never use IQOS ILUMA i ONE™ or SMARTCORE STICKS™ under any circumstances.
- This product should not be used by persons with reduced physical, sensory or mental capabilities

or lack of knowledge unless they have been given supervision or instruction to use the product in a safe way and understand the hazards involved.

## **TOBACCO AND NICOTINE**

- SMARTCORE STICKS™ contain nicotine, which is addictive.
- IQOS ILUMA i ONE™ and SMARTCORE STICKS™ are not risk-free. The best way to reduce tobacco and nicotine-related health risks is to quit tobacco and nicotine use altogether.
- Some users may experience side effects including: abdominal pain, chest pain, choking sensation, cough, difficulty breathing, dizziness, dry mouth, dry throat, gingivitis, headache, malaise, nasal stuffiness, nausea, mouth irritation, palpitations, throat irritation, and vomiting.
- Nicotine-containing products should not be used by people who have or are at risk of heart diseases, are diabetic, are epileptic, or are experiencing seizures.
- Nicotine-containing products should not be used during pregnancy or while breast-feeding. If you are pregnant, breast-feeding or think you may be pregnant, you should quit tobacco and nicotine use altogether.
- Stopping smoking or switching to IQOS ILUMA i ONE™ and SMARTCORE STICKS™ or other nicotine-containing products may require the adjustment of the dosing of certain medicines (e.g., theophylline, clozapine, ropinirole).
- If you have questions about whether you should use IQOS ILUMA i ONE™ and SMARTCORE STICKS™ given an existing health condition, you should consult a health care professional.

## **⚠ IMPORTANT SAFETY INFORMATION**



### **CHOKING, INGESTION AND HANDLING HAZARD**

- Keep IQOS ILUMA i ONE™ and SMARTCORE STICKS™ out of reach of children and pets at all times.
- CHOKING HAZARD – IQOS ILUMA i ONE™ devices, accessories, and SMARTCORE STICKS™ contain small parts.
- SMARTCORE STICKS™ contain metal parts with sharp edges.
- INGESTION HAZARD
  - Swallowed SMARTCORE STICKS™ can cause serious injury to internal organs due to small metal parts with sharp edges.
  - Swallowed SMARTCORE STICKS™ can pose a risk of nicotine intoxication.

- If SMARTCORE STICKS™ are swallowed, seek medical attention immediately.
- **HANDLING HAZARD** – Do not take apart SMARTCORE STICKS™ as they contain small metal parts with sharp edges. Always dispose of SMARTCORE STICKS™ as soon as fully cooled according to local waste disposal regulations.



## **ELECTRONIC AND BATTERY HAZARDS**

### **Electrical Risks**

Failure to follow these Safety Warnings and Instructions could result in fire, explosion, electric shock, injury, or damage to oneself, others, the product or other property:

- Only Intended Users should use IQOS ILUMA i ONE™.
- Do not use IQOS ILUMA i ONE™ where the use of electronic devices is prohibited.
- Do not charge or use IQOS ILUMA i ONE™ or accessories if damaged, tampered with or broken.
- Do not use IQOS ILUMA i ONE™ if the battery appears to be leaking.
- Only charge IQOS ILUMA i ONE™ indoors, as indicated by symbol , using a manufacturer-approved Charging Cable (supplied in the box) and certified Power Adaptor (which you should obtain from a reputable source). Do not use accessories not approved by the manufacturer. Refer to 'Technical Data' section and [www.IQOS.com](http://www.IQOS.com) for additional important safety information.
- This product must only be charged using Safety Extra Low Voltage with a 5V;2A Power Adaptor. Refer to the Technical Data section of this Safety Warnings and Instructions for details.
- Do not use, charge, or store IQOS ILUMA i ONE™ in places with high temperatures (such as inside a car in summer, or near heat sources such as radiators or fireplaces).
- Do not use IQOS ILUMA i ONE™ where flammable materials, liquids and gases are present.
- IQOS ILUMA i ONE™, Power Adaptor and Charging Cable should not be exposed to any liquid. Do not touch IQOS ILUMA i ONE™ and/or its accessories if they become wet or have been immersed in any liquid.
- Do not clean the device with any cleaning agent. Only clean with manufacturer-approved accessories or tools.
- Do not clean the device while on.
- Clean the USB charging port of the IQOS ILUMA i ONE™ periodically to avoid accumulation of foreign matters (such as dust particles) and inspect USB port for foreign materials before

using USB connector.

- Close cap of the device after use to avoid accumulation of foreign materials (such as dust particles) in the heating chamber and, inspect the heating chamber for foreign materials before using IQOS ILUMA i ONE™.
- Handle with care. Do not drop IQOS ILUMA i ONE™ or subject them to strong shock.
- This product contains no user-serviceable parts. Do not attempt to open, modify, service, disassemble or repair any component of IQOS ILUMA i ONE™ or to replace any of the components or batteries.
- Do not use this product if it has been exposed to excessive cold, heat, or moisture.
- Do not touch IQOS ILUMA i ONE™ and/or their accessories if they overheat, spark, fume, ignite, or burn. If applicable and possible, use caution to shut off or disconnect power supply.
- Do not attempt to insert any object in the heating chamber other than SMARTCORE STICKS™ or ILUMA™ Stick Remover (when necessary). Ensure the device is powered off before attempting to remove SMARTCORE STICKS™ with ILUMA™ Stick Remover.
- Do not insert metal pieces in the device while in use.
- Only operate the device in temperatures between >0°C/<40°C.
- SMARTCORE STICKS™ are single use only and should never be re-used, lit with a match, lighter, or any other flame source.
- Never dispose of IQOS ILUMA i ONE™ and/or their accessories with other household waste, as they may enter in contact with water and/or other liquids.

### **Battery Risks**

IQOS ILUMA i ONE™ are powered with sealed Lithium-ion (Li-ion) batteries. Under normal conditions of use, the battery is sealed. If you notice that battery fluid leaks, follow these precautions:

- If fluid from leaked battery is swallowed, seek medical attention immediately. Do not induce vomiting or ingest food or drink.
- If vapor from leaked battery is inhaled, get fresh air and seek medical attention.
- If fluid from battery is in contact with skin, wash the affected area, including hands and do not touch eyes.
- If fluid from leaked battery is in contact with eyes, immediately flush with clean running water for at least 15 minutes and seek medical attention immediately.



## CAUTION

### THERMAL BURN RISKS

Failure to follow these Safety Warnings and Instructions could result in thermal burns:

- Store IQOS ILUMA i ONE™ and SMARTCORE STICKS™ in a clean, dry, cool place.
- Do not expose IQOS ILUMA i ONE™ and SMARTCORE STICKS™ to high humidity conditions or direct sunlight.
- Do not use SMARTCORE STICKS™ that have been exposed to excessive heat or moisture.
- Do not remove a SMARTCORE STICK™ while in use.



## CAUTION

### ALLERGIC REACTION RISKS

- Using IQOS ILUMA i ONE™ and SMARTCORE STICKS™ could cause an allergic reaction, such as swelling of the face, lips, tongue, gums, throat, or body, difficulty breathing, or wheezing.
- Stop using IQOS ILUMA i ONE™ and SMARTCORE STICKS™ and seek medical attention immediately if you experience any of the symptoms above as they may indicate a serious allergic reaction.
- Certain SMARTCORE STICKS™ contain botanical ingredients that may cause allergic reactions in some users (see information on pack). Do not share IQOS ILUMA i ONE™ devices with other users to minimize the risk of cross-contamination that could lead to an allergic reaction.

### USE OF SMARTCORE STICKS™

- Only use IQOS ILUMA i ONE™ with SMARTCORE STICKS™ specifically designed for IQOS ILUMA device generations.
- Never use IQOS ILUMA i ONE™ with a cigarette or similar products. Doing so may cause injury.
- Do not use SMARTCORE STICKS™ with previous IQOS™ device (IQOS 3 DUO™ or earlier).
- Do not modify SMARTCORE STICKS™ in any way or add any substance to SMARTCORE STICKS™. Doing so may cause injury.

### REPORTING OF ADVERSE EVENTS OR INCIDENTS

- If you experience any unwanted health effect when using IQOS ILUMA i ONE™ and/or SMARTCORE STICKS™, consult a health care professional.
- You can report any adverse event or incident directly by contacting your local Customer Care (details can be found in the Customer Care & Warranty card). By reporting side effects, you can help provide more information on the safety of this product.

- For more information, please go to [www.IQOS.com](http://www.IQOS.com).

## TECHNICAL DATA

### Device:

IQOS ILUMA i ONE™ Model M0033

Battery type: Li-ion rechargeable battery

Input: 5V  2A

Not all devices listed in these Safety Warnings and Instructions are included in this mobility kit.

### Compatible Power Adaptor Information

Model: S52A21, S21A20, S21A22, S21A23, S21A25, S21A27, S82A40, S82A41, S82A42, S82A43, S82A45, S82A46

Input: 100 V-240 V~ 50-60 Hz 0.3 A

Output: 5.0 V  2.0 A

Output power: 10.0 W

Average active efficiency: 79.0 %

No load power consumption: <0.09 W

### Use with supplied Charging Cable

## INFORMATION FOR DISPOSING OF IQOS ILUMA i ONE™

### Valid across European Union and EEA



This symbol on the product or on its packaging indicates that this product and its individual parts (including batteries) must not be disposed of with your other household waste.

Instead, it is your responsibility to dispose of your waste equipment by bringing it to a designated collection point for the recycling of waste electrical and electronic equipment. In addition, waste batteries can be returned free of charge at the point of sale. The separate collection and recycling of your waste equipment (including batteries) at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. Disposing of waste equipment as unsorted municipal waste (e.g., by waste incineration or land filling) can have negative effects on the environment and human health. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your local household waste disposal service or the shop where you purchased the product. The local importer of the product will provide for the financing of the treatment and recycling of waste equipment returned through these designated collection points in accordance with local requirements.

## BATTERY REMOVAL INSTRUCTIONS (FOR DISPOSAL AND RECYCLING)

**Batteries must not be removed by the consumer. At end of product life, only an authorized recycler may safely remove batteries by following the steps below.**

**IQOS ILUMA i ONE™ Device:**

- Step 1: The device should be fully discharged before disassembling it.
- Step 2: Remove the Cosmetic Cover and two screws at the bottom of the device Housing.
- Step 3: Slide the assembly out from the Housing by Type C Connector.
- Step 4: Clean the adhesive at the bottom of the Housing.
- Step 5: Remove Top Cover Latch Sub Assembly and Tube Sleeve.
- Step 6: Remove two screws from Shield-can and remove Shield-can.
- Step 7: Disconnect Battery BTB (Board to Board) Connector.
- Step 8: Hold the adhesive pull tab on the underside of device and slowly drag and remove the adhesive from the Battery, then remove the Battery out of the Frame. If any tool is required during the process, use plastic tools.
- Step 9: Dispose of the battery according to local regulations.

**CONFIRMATION OF COMPLIANCE**

Designed and manufactured under the authority of Philip Morris Products S.A., Quai Jeanrenaud 3, 2000 Neuchâtel, Switzerland.

© 2024 Copyright Philip Morris Products S.A. 



IQOS  
ILUMA i



Ovo je simbol sigurnosnog upozorenja. Koristi se za upozoravanje na potencijalne opasnosti od tjelesnih ozljeda.

HRVATSKI

# SIGURNOSNA UPOZORENJA I UPUTE

**MOLIMO PROČITAJTE SVA SIGURNOSNA UPOZORENJA I UPUTE PRIJE UPOTREBE KAKO BISTE IZBJEGLI NASTANAK OZLJEDA.**

Ova sigurnosna upozorenja i upute ne mogu pokriti sve moguće uvjete i situacije koje bi se mogle pojaviti, stoga korisnici trebaju biti pažljivi i oprezni.

# ZADRŽITE OVA SIGURNOSNA UPOZORENJA I UPUTE ZA BUDUĆU UPOTREBU JER SADRŽE VAŽNE INFORMACIJE.

Ova sigurnosna upozorenja i upute primjenjuju se na **IQOS ILUMA i ONE™**.

Pogledajte [www.iqos.com](http://www.iqos.com) za sva ažuriranja ovih sigurnosnih upozorenja i uputa.

## **PREDVIĐENI KORISNICI**

- IQOS ILUMA i ONE™ i umetke za grijanje SMARTCORE STICKS™ smiju upotrebljavati samo punoljetne osobe.
- IIQOS ILUMA i ONE™ i umetci za grijanje SMARTCORE STICKS™ namijenjeni su punoljetnim osobama koje bi inače nastavile koristiti proizvode koji sadrže duhan i nikotin.
- Djeca i adolescenti nikada ne smiju koristiti IQOS ILUMA i ONE™ ili umetke za grijanje SMARTCORE

STICKS™ ni pod kojim okolnostima.

- Ovaj proizvod ne smiju upotrebljavati osobe smanjenih fizičkih, senzornih ili mentalnih sposobnosti ili osobe kojima nedostaje iskustva i znanja, osim ako su pod nadzorom ili su dobile upute za upotrebu proizvoda na siguran način i ako shvaćaju uključene rizike.

## **DUHAN I NIKOTIN**

- Umetci za grijanje SMARTCORE STICKS™ sadrže nikotin koji izaziva ovisnost.
- IQOS ILUMA i ONE™ i umetci za grijanje SMARTCORE STICKS™ nisu bez rizika. Najbolji način za smanjenje zdravstvenih rizika povezanih s duhanom i nikotinom je potpuni prestanak upotrebe duhana i nikotina.
- Neki korisnici mogu osjetiti nuspojave, uključujući: abdominalnu bol, bol u prsima, osjećaj gušenja, kašalj, otežano disanje, vrtoglavicu, suha usta, suho grlo, gingivitis, glavobolju, slabost, začepljenje nosa, mučninu, iritaciju usta, lupanje srca, iritaciju grla i povraćanje.
- Proizvode koji sadrže nikotin ne smiju upotrebljavati osobe koje boluju od srčanih bolesti ili kod kojih postoji rizik od razvitka srčanih bolesti, koje boluju od dijabetesa, epilepsije ili imaju napadaje.
- Proizvodi koji sadrže nikotin ne smiju se koristiti tijekom trudnoće ili dojenja. Ako ste trudni, dojite ili mislite da ste trudni, trebali biste potpuno prestati koristiti duhan i nikotin.
- Prestanak pušenja ili prelazak na IQOS ILUMA i ONE™ i umetke za grijanje SMARTCORE STICKS™ ili druge proizvode koji sadrže nikotin može zahtijevati prilagodbu doziranja određenih lijekova (npr. teofilin, klopabin, ropinirol).
- Ako imate pitanja o tome trebate li koristiti IQOS ILUMA i ONE™ i umetke za grijanje SMARTCORE STICKS™ s obzirom na postojeće zdravstveno stanje, trebali biste se posavjetovati sa zdravstvenim stručnjakom.

## **⚠ VAŽNE SIGURNOSNE INFORMACIJE**



**OPASNOST OD  
GUŠENJA, GUTANJA I  
RUKOVANJAVZ**

- Držite IQOS ILUMA i ONE™ i umetke za grijanje SMARTCORE STICKS™ izvan dohvata djece i kućnih ljubimaca u svakom trenutku.
- OPASNOST OD GUŠENJA – IQOS ILUMA i ONE™ uređaji, dodaci i umeci za grijanje SMARTCORE STICK™ sadrže male dijelove.
- Umetci za grijanje SMARTCORE STICKS™ sadrže

male metalne dijelove s oštrim rubovima.

- **OPASNOST OD GUTANJA**
  - Progutani umetci za grijanje SMARTCORE STICKS™ mogu uzrokovati ozbiljne ozljede unutarnjih organa zbog malih metalnih dijelova s oštrim rubovima.
  - Progutani umetci za grijanje SMARTCORE STICKS™ mogu predstavljati rizik od trovanja nikotinom.
  - U slučaju gutanja umetka za grijanje SMARTCORE STICKS™, odmah potražite liječničku pomoć.
- **OPASNOST OD RUKOVANJA** – Ne rastavljajte umetke za grijanje SMARTCORE STICKS™ jer sadrže male metalne dijelove s oštrim rubovima. Umetke za grijanje SMARTCORE STICKS™ uvijek odložite u skladu s lokalnim propisima o postupanju s otpadom, čim se u potpunosti ohlade.



#### **OPASNOSTI U VEZIS BATERIJOM I ELEKTRONIČKIM UREĐAJIMA**

#### **Elektronički rizici**

Nepridržavanje ovih Sigurnosnih upozorenja i uputa može dovesti do požara, eksplozije, strujnog udara, ozljeda ili oštećenja sebe, drugih, proizvoda ili druge imovine:

- Samo predviđeni korisnici trebaju koristiti IQOS ILUMA i ONE™.
- Ne koristite IQOS ILUMA i ONE™ gdje je upotreba elektroničkih uređaja zabranjena.
- Ne punite i ne koristite IQOS ILUMA i ONE™ ili dodatke ako su oštećeni, neovlašteno izmijenjeni ili slomljeni.
- Ne koristite IQOS ILUMA i ONE™ ako izgleda da je došlo do curenja iz baterija.
- IQOS ILUMA i ONE™ punite samo u zatvorenom prostoru, kako je označeno simbolom , pomoću kabela za punjenje koji je odobrio proizvođač (isporučenog u kutiji) i certificiranog adaptera za napajanje (koji biste trebali nabaviti iz provjerenog izvora). Ne koristite dodatke koji nije odobrio proizvođač. Dodatne važne sigurnosne informacije potražite u odjeljku "Tehnički podaci" i [www.IQOS.com](http://www.IQOS.com).
- Ovaj se proizvod smije puniti samo pomoću sigurnosnog iznimno niskog napona s 5V; 2A adapterom za napajanje. Pojednostoti potražite u odjeljku Tehnički podaci ovih Sigurnosnih upozorenja i uputa.
- Nemojte koristiti, puniti ili skladištiti IQOS ILUMA i ONE™ na mjestima s visokim temperaturama (kao što je ljeti unutar automobila ili u blizini izvora topline kao što su radijatori ili kamini).

- Ne koristite IQOS ILUMA i ONE™ gdje su prisutni zapaljivi materijali, tekućine i plinovi.
- IQOS ILUMA i ONE™, adapter za napajanje i kabel za punjenje ne smiju biti izloženi nikakvoj tekućini. Ne dirajte IQOS ILUMA i ONE™ i/ili njegove dodatke ako se smoče ili su uronjeni u bilo koju tekućinu.
- Ne čistite uređaj nikakvim sredstvom za čišćenje. Čistite samo dodacima ili alatom koji je odobrio proizvođač.
- Ne čistite uređaj dok je uključen.
- Povremeno očistite USB priključak za punjenje IQOS ILUMA i ONE™ kako biste izbjegli nakupljanje stranih tvari (kao što su čestice prašine) i prije upotrebe USB priključka pregledajte jesu li u USB priključku prisutni strani materijali.
- Zatvorite poklopac uređaja nakon upotrebe kako biste izbjegli nakupljanje stranih materijala (kao što su čestice prašine) u komori za grijanje i provjerite ima li stranih materijala u komori za grijanje prije upotrebe IQOS ILUMA i ONE™.
- Postupajte pažljivo. Nemojte ispuštati IQOS ILUMA i ONE™ ili ga podvrgavati jakom šoku.
- Ovaj proizvod ne sadrži dijelove koje korisnik može samostalno servisirati. Ne pokušavajte otvoriti, izmijeniti, servisirati, rastaviti ili popraviti bilo koju komponentu IQOS ILUMA i ONE™ ili zamijeniti bilo koju komponentu ili bateriju.
- Ne koristite ovaj proizvod ako je bio izložen prekomjernoj hladnoći, vrućini ili vlazi.
- Ne dodirujte IQOS ILUMA i ONE™ i/ili njegove dodatke ako se pregrijavaju, iskre, počnu dimiti, zapale se ili počnu goriti. Ako je primjenjivo i moguće, budite oprezni pri isključivanju ili odspajanju napajanja.
- Ne pokušavajte umetnuti bilo koji predmet u komoru za grijanje osim umetka za grijanje SMARTCORE STICKS™ ili ILUMA™ alat za uklanjanje slomljenog umetka (kada je to potrebno). Provjerite je li uređaj isključen prije nego što pokušate ukloniti umetak za grijanje SMARTCORE STICKS™ pomoću ILUMA™ alata za uklanjanje slomljenog umetka.
- Nemojte umetati metalne dijelove u uređaj dok je u upotrebi.
- Uređaj koristite samo na temperaturama između >0°C/<40°C.
- Umeci za grijanje SMARTCORE STICK™ su samo za jednokratnu upotrebu i nikada se ne smiju ponovno koristiti, paliti šibicom, upaljačem ili bilo kojim drugim izvorom plamena.
- Nikada ne odlažite IQOS ILUMA i ONE™ i/ili njegove

dodat s drugim kućnim otpadom jer mogu doći u dodir s vodom i/ili drugim tekućinama.

### **Rizici povezani s baterijom**

IQOS ILUMA i ONE™ napajaju se zatvorenim litij-ionskim (Li-ion) baterijama. U normalnim uvjetima upotrebe baterija je zapečaćena. Ako primijetite da tekućina iz baterije curi, slijedite ove mjere opreza:

- Ako progutate tekućinu iz baterije, odmah potražite liječničku pomoć. Ne izazivajte povraćanje i ne gutajte hranu ili piće.
- Ako udahnete paru iz procurjele baterije, udahnite svjež zrak i potražite liječničku pomoć.
- Ako tekućina iz baterije dođe u dodir s kožom, operite zahvaćeno područje, uključujući ruke i ne dodirujte oči.
- Ako tekućina iz baterije dođe u dodir s očima, odmah isperite čistom tekućom vodom u trajanju od najmanje 15 minuta i odmah potražite liječničku pomoć.



### **RIZICI OD VRUĆEG AEROSOLA**

Nepridržavanje ovih Sigurnosnih upozorenja i uputa može dovesti do opekline:

- IQOS ILUMA i ONE™ i umetke za grijanje SMARTCORE STICKS™ čuvajte na čistom, suhom i hladnom mjestu.
- Ne izlažite IQOS ILUMA i ONE™ i umetke za grijanje SMARTCORE STICKS™ uvjetima visoke vlažnosti ili izravnom sunčevom svjetlu.
- Ne koristite umetke za grijanje SMARTCORE STICK™ koji su bili izloženi prekomjernoj toplini ili vlazi.
- Ne uklanjajte umetak za grijanje SMARTCORE STICK™ dok je u upotrebi.



### **RIZICI OD ALERGIJSKE REAKCIJE**

- Korištenje IQOS ILUMA i ONE™ i umetka za grijanje SMARTCORE STICKS™ može izazvati alergijsku reakciju, poput oticanja lica, usana, jezika, desni, grla ili tijela, otežanog disanja ili teškog disanja.
- Prestanite koristiti IQOS ILUMA i ONE™ i umetke za grijanje SMARTCORE STICKS™ i odmah potražite liječničku pomoć ako osjetite bilo koji od gore navedenih simptoma jer mogu ukazivati na ozbiljnu alergijsku reakciju.
- Određeni umetci za grijanje SMARTCORE STICKS™ sadrže botaničke sastojke koji mogu izazvati alergijske reakcije kod nekih korisnika (vidi informacije na pakiranju). Ne dijelite IQOS ILUMA

i ONE™ uređaje s drugim korisnicima kako biste smanjili rizik od unakrsne kontaminacije koja bi mogla dovesti do alergijske reakcije.

## **KORIŠTENJE UMETAKA ZA GRIJANJE SMARTCORE STICKS™**

- Koristite samo IQOS ILUMA i ONE™ s umecima za grijanje SMARTCORE STICKS™ posebno dizajniranim za generacije IQOS ILUMA uređaja.
- Nikada ne koristite IQOS ILUMA i ONE™ s cigaretom ili sličnim proizvodima. To može uzrokovati ozljede.
- Ne koristite umetke za grijanje SMARTCORE STICKS™ s prethodnim IQOS™ uređajima (IQOS 3 DUO™ ili stariji).
- Ne mijenjajte umetke za grijanje SMARTCORE STICKS™ ni na koji način niti dodajte bilo koju tvar u umetke za grijanje SMARTCORE STICKS™. To može uzrokovati ozljede.

## **PRIJAVLJIVANJE ŠTETNIH DOGAĐAJA ILI INCIDENATA**

- Ako osjetite neželjeni učinak na zdravlje kada koristite IQOS ILUMA i ONE™ i/ili umetke za grijanje SMARTCORE STICKS™, posavjetujte se sa zdravstvenim stručnjakom.
- Sve štetne događaje ili incidente možete prijaviti izravno kontaktiranjem lokalne službe za korisnike (pojedinci možete pronaći na kartici Centar za korisničku podršku i jamstvo). Prijavljujući nuspojave, možete pomoći pružiti više informacija o sigurnosti ovog proizvoda.
- Za više informacija posjetite [www.IQOS.com](http://www.IQOS.com).

## **TEHNIČKI PODACI**

### **Uređaj:**

**IQOS ILUMA i ONE™ Model M0033**

**Vrsta baterije:** Li-ion punjiva baterija

**Ulaz:** 5V  2A

Nisu svi uređaji navedeni u ovim Sigurnosnim upozorenjima i uputama uključeni u ovaj set.

### **Informacije o adapteru za napanjanje**

**Model:** S52A21, S21A20, S21A22, S21A23, S21A25, S21A27, S82A40, S82A41, S82A42, S82A43, S82A45, S82A46

**Ulaz:** 100 V-240 V~ 50-60 Hz 0.3 A

**Izlaz:** 5.0 V  2.0 A

**Izlazna snaga:** 10.0 W

**Prosječna aktivna učinkovitost:** 79.0 %

**Potrošnja energije bez opterećenja:** <0.09 W

**Koristite s isporučenim kabelom za punjenje.**

## INFORMACIJE ZA POSTUPANJE S OTPADOM NASTALIM OD IQOS ILUMA i ONE™

### Vrijedi diljem Europske unije i EGP



Ovaj simbol na proizvodu ili na pakiranju označava da se ovaj proizvod i njegovi pojedinačni dijelovi (uključujući baterije) ne smiju odlagati s drugim kućnim otpadom.

Umjesto toga, vaša je odgovornost s otpadom postupati tako da ga predate ovlaštenom sakupljaču električnog i elektroničkog otpada ili na određeno mjesto za recikliranje otpadne električne i elektroničke opreme. Osim toga, iskorištene baterije mogu se besplatno vratiti na prodajnom mjestu. Odvojeno skupljanje i recikliranje otpada (uključujući baterije) pomoć će u očuvanju prirodnih resursa i osigurati da se reciklira na način kojim se štiti ljudsko zdravlje i okoliš. Odlaganje otpada kao nerazvrstanog komunalnog otpada (npr. paljenjem otpada ili odlaganjem u/na tlo) može imati negativne učinke na okoliš i ljudsko zdravlje. Za više informacija o tome gdje možete predati otpad kako bi se reciklirao, obratite se svom mjesnom gradskom uredu, mjesnoj službi za odlaganje kućanskog otpada ili trgovini u kojoj ste kupili uređaj. Lokalni uvoznik proizvoda osigurat će financiranje obrade i recikliranja otpada vraćenog putem ovlaštenih sakupljača ili na ovlaštenim mjestima u skladu s lokalnim zahtjevima.

### UPUTE ZA UKLANJANJE BATERIJE (ZA POSTUPANJE S OTPADNOM BATERIJOM I RECIKLIRANJE)

**Baterije ne smije uklanjati korisnik. Pri kraju vijeka trajanja proizvoda, samo osoba ovlaštena za recikliranje može sigurno ukloniti baterije pridržavajući se sljedećih koraka.**

#### **IQOS ILUMA i ONE™ uređaj:**

- Korak 1: Uređaj treba potpuno isprazniti prije rastavljanja.
- Korak 2: Uklonite kozmetičku masku i dva vijka na dnu kućišta uređaja.
- Korak 3: Izvucite sklop iz kućišta pomoću konektora tipa C.
- Korak 4: Očistite ljepilo na dnu kućišta.
- Korak 5: Uklonite podsklop zasuna gornjeg poklopca ičahuru cijevi.
- Korak 6: Uklonite dva vijka iz Shield-cana i uklonite Shield-can.
- Korak 7: Odspojite BTB konektor baterije (ploča na ploču).
- Korak 8: Držite jezičak za povlačenje ljepila na donjoj strani uređaja i polako povucite i uklonite ljepilo iz baterije, a zatim izvadite bateriju iz okvira. Ako je tijekom postupka potreban bilo koji alat, upotrijebite plastične alate.

Korak 9: S baterijom postupite u skladu s lokalnim propisima koji se odnose na pravilno postupanje s otpadom.

## **POTVRDA USKLAĐENOSTI**

Razvijeno i proizvedeno pod licencom/ ovlaštenjem Philip Morris Products S.A., Quai Jeanrenaud 3, 2000 Neuchâtel, Švicarska.

© 2024 Copyright Philip Morris Products S.A.

