

Italiano



* Per informazioni integrative e aggiornamenti visita il sito: www.trevi.it

Frequenza Cardiaca

Indossare correttamente l'orologio, non troppo stretto o largo, e assicurarsi che non vi siano perdite di luce verde. L'orologio può registrare automaticamente la frequenza cardiaca di tutto il giorno, oppure misurarla istantaneamente toccando direttamente la sua icona.



Attività

Visualizza il numero di passi, la distanza e le calorie nello stesso giorno. Nella stessa pagina, scorrendo verso l'alto, vengono visualizzati anche i grafici con l'andamento giornaliero. Puoi impostare un obiettivo sull'app, incluso il numero dei passi, la distanza e le calorie.



Ossigenazione del sangue (SpO2)

Selezionare l'icona dell'ossigenazione del sangue nell'orologio per avviare la misurazione.



Sonno

Lo smartwatch, se indossato durante il sonno, può fornire una statistica sulla qualità del sonno, sia sullo schermo che sull'app. Il dispositivo ricollerà le informazioni dai dati per il nuovo giorno.



Meteo

Dopo aver collegato l'orologio all'app e aver attivato l'autorizzazione alla posizione, l'interfaccia meteo visualizzerà la temperatura e la previsione in tempo reale.



Musica

Selezionare l'icona "Musica" nell'orologio; è possibile controllare la riproduzione musicale del tuo telefono e la regolazione del volume.



Pressione sanguigna

Selezionare l'icona della pressione sanguigna nell'orologio per avviare la misurazione. La misurazione si basa sulla tecnologia PPG.



Si prega di leggere il manuale prima dell'uso.

- A causa della continua evoluzione tecnologica dei prodotti, i dati contenuti nel presente manuale possono subire leggere modifiche senza preavviso da parte del produttore.
- L'orologio deve essere caricato almeno 2 ore prima dell'uso.

1. Specifiche del prodotto

- Modello: T-Fit 510 A
- CPU Realtek 8763E
- RAM 192kB + ROM 256KB + Flash 128MB
- Full Touch screen 1.43" AMOLED 466x466pixel
- Versione Wireless 5.0 (Frequenza di trasmissione 2,4GHz, Potenza max di trasmissione 2,5mHz)
- Funzioni: Risponditore/ Avvio chiamate telefoniche, rilevazione Frequenza cardiaca, Ossigenazione del sangue, Pressione sanguigna, Avviso sedentarietà, Trova telefono, Pedometro, Monitoraggio del sonno, notifiche social (Facebook, Whatsapp, ecc...), controllo riproduzione file audio
- Batteria agli Ioni di Litio 3.7V/380mAh
- Grado di resistenza all'acqua: IP68
- Sistema operativo supportato: Android 4.4, iOS 9.0 o superiori
- Incluso nella confezione: dispositivo, cavo di ricarica, istruzioni

Manutenzione

- Pulire regolarmente l'orologio, specialmente il lato interno con i sensori.
- Assicurarsi che il sensore non risulti sporco durante la misurazione. Il colore della pelle, la densità dei peli, i tatuaggi e le cicatrici possono influenzare l'accuratezza dei risultati delle misurazioni.
- Un uso eccessivo di prodotti per la cura della pelle sul polso può risultare dannoso per l'orologio.
- Si prega di non continuare ad indossare il braccialetto in caso sopraggiungano stati di allergia cutanea o qualsiasi altro stato di alterazione cutanea.
- Non premere i tasti quando l'apparecchio si trova a contatto con liquidi/acqua.

2. Accensione e spegnimento

- Accensione: ad orologio spento, tenere premuto il tasto Encoder per 7 secondi. Dopo l'avvio verrà visualizzato l'orario.
- Spegnimento: con orologio acceso, tenere premuto il tasto Encoder per secondi, selezionare il comando "Spegni" che comparirà sul display, l'orologio vibrerà e poi si spegnerà.

Esercizi di respirazione

Nel Menu dell'orologio, selezionare l'icona "Allenamento respiratorio" e, a seconda delle tue esigenze, seleziona orari e modalità.



Composizione

L'orologio è in grado di gestire le chiamate telefoniche, infatti, è possibile effettuare, rispondere e rifiutare le chiamate direttamente dall'orologio.



Notifiche

Scegli da quale social ricevere le notifiche dall'app e l'orologio visualizzerà i messaggi corrispondenti. Puoi attivare/disattivare la notifica in arrivo dall'app.



Trova telefono

Quando l'orologio è connesso all'app, il telefono emetterà un suono dopo averlo toccato.



Richiamo assistente vocale

Richiamo assistente vocale del vostro smartphone per usare il telefono e le app con la vostra voce.



Cronometro

Tocca il tasto di avvio sulla pagina del cronometro per avviare il conteggio, e tocca il pulsante di arresto per interrompere il cronometraggio.




Timer

Svolgere automaticamente una o più azioni a intervalli di tempo prefissati. Selezionare il tempo tra quelli pre impostati.



Sveglia

Mantiene l'orologio connesso all'app per impostare una sveglia singola o una sveglia ciclica. E' possibile impostare fino a 5 sveglie, il dispositivo vibrerà per ricordare in tempo.

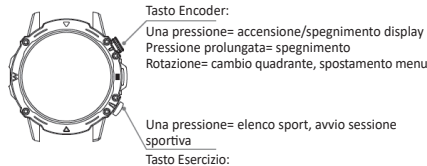

3. Configurazione

Scaricare e installare l'app "FitCloudPro" inquadrando il seguente QRcode o quello mostrato sull'orologio. Accedere all'app e crearsi un proprio account per la sincronizzazione delle informazioni. L'app consente di controllare l'analisi dei dati ogni giorno e di personalizzare alcune funzionalità, come l'impostazione della sedentarietà, la notifica delle chiamate, gli obiettivi di esercizio e così via.

Collegamento allo smartphone

1. Attivare il Wireless del proprio smartphone;
2. Scaricare l'app FitCloudPro;



3. Accoppiare l'orologio all'app:

Aprire app > Dispositivo > Aggiungi un dispositivo > scegliere T-Fit 510 A Ad accoppiamento avvenuto comparirà il seguente simbolo.


Accoppiamento per gestione chiamate e SMS

I dispositivi iPhone supportano il doppio collegamento Wireless 5.3 + 3.0, pertanto, una volta effettuato l'accoppiamento del dispositivo dall'app, appariranno una serie di avvertimenti che chiederanno l'autorizzazione per la gestione delle telefonate e SMS.

Per i dispositivi Android, dopo aver accoppiato il dispositivo tramite

app, occorre entrare nell'interfaccia di accoppiamento wireless, avviare la ricerca e selezionare T-Fit 510 A, fare clic su "associa" e quindi dare l'autorizzazione alle interfacce successive.

Nei successivi collegamenti tutto questo avverrà automaticamente.

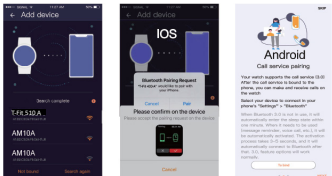

4. Istruzioni per la ricarica

Questo prodotto adotta una cavo di ricarica con connettore magnetico. Per ricaricare l'orologio:

1. Sul retro dell'orologio sono presenti dei contatti metallici, avvicinare questi contatti al connettore del cavo di ricarica, questa tenderà ad allinearsi correttamente in maniera automatica;
2. Collegare la presa USB del cavo di ricarica ad un computer o ad un alimentatore 5V --- 1A (non in dotazione) dotato di porta USB.

È possibile visualizzare sul display lo stato di carica.

Attenzione: non collegare il cavo di ricarica a materiali conduttori, o ad altri apparecchi, causa cortocircuiti.



5. Informazioni rapide sul prodotto

Modifica del quadrante


Una volta accesso l'orologio, nella videata del quadrante principale, ruotare la corona per visualizzare i quadranti pre caricati; oppure, all'interno della app, andare su **Dispositivo > Quadranti**, selezionare il preferito e caricarlo sull'orologio selezionando "Sync".



Informazioni rapide del prodotto

- Far scivolare il dito sul display per visualizzare le varie schermate;
- Premere il tasto Encoder per accendere il display, ruotarlo per cambiare il quadrante; scorrere verso destra per entrare nel Menu funzioni (icone), ruotare il tasto Encoder per scorrere le varie icone. In navigazione premere il tasto Encoder per tornare alla visualizzazione dell'orario.
- Premere il tasto Esercizio per accedere direttamente alla funzione di attività fisica.

Descrizione quadrante touch

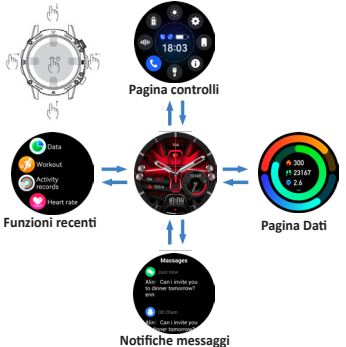

6. Funzioni

Display sempre acceso (Always on display)

Se desiderate visualizzare l'ora sullo schermo anche quando il dispositivo è in standby o con lo schermo "spento":
Selezionare Impostazione > Luminosità display > Orologio sempre attivo su display.

Attivare o meno la funzione e scegliere se attivare l'indicazione digitale o quella analogica.


Sport

L'orologio T-fit 510 A supporta oltre 100 modalità sportive, fitness, tempo libero, competizioni, giochi con la palla, lezioni di danza, incluso: corsa, camminata, tapis roulant, escursionismo, ciclismo, bicicletta da spinning, yoga, pallacanestro, calcio, badminton ecc... L'orologio T-Fit 510 A supporta la personalizzazione delle modalità sportive con più di 100 modalità preferite.



Selezione sport

1. Dall'applicazione selezionare "Dispositivo";
2. Selezionare la voce "Push sportivo";
3. In base al vostro sport desiderato, selezionate la corrispondente categoria;
4. Selezionare lo sport desiderato e selezionare "Download".

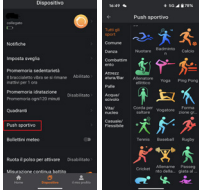

- Si prega di tenere il corpo fermo e l'orologio vicino al polso durante la misurazione.
- Per le persone con la pelle più scura e più peli sulle braccia, attivare la misurazione avanzata nell'app.

I dati sul sonno non sono sufficientemente precisi

- Il monitoraggio del sonno serve a simulare lo stato naturale di addormentarsi e svegliarsi e deve essere indossato normalmente.
- I dati sul sonno non vengono monitorati durante il giorno e il monitoraggio predefinito del sonno va dalle 21:30 alle 12:00 del giorno successivo.

Perché non è possibile fare un bagno caldo con il braccialetto?

- L'alta temperatura dell'acqua provoca fumi di vapore acqueo che può facilmente infiltrarsi nel braccialetto. Una volta che la temperatura scende, il vapore si condensa in goccioline liquide, che facilmente causano cortocircuiti all'interno del braccialetto, danneggiandolo.

9. Informativa sullo smaltimento

Qualunque sia il tipo di batteria esaurita, essa non deve essere gettata tra i rifiuti domestici, nel fuoco o nell'acqua. Tenere la batteria al riparo da fonti di calore. Ogni tipo di batteria esaurita deve essere riciclata oppure smaltita presso gli appositi centri riciclatori dedicati.



INFORMAZIONI AGLI UTENTI ai sensi del Decreto Legislativo N° 49 del 14 Marzo 2014 "Attuazione della Direttiva 2012/19/UE sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE)"

Il simbolo del cassetto barrato riportato sull'apparecchiatura indica che il prodotto alla fine della propria vita utile deve essere raccolto separatamente dagli altri rifiuti. L'utente dovrà, pertanto, conferire l'apparecchiatura integra dei componenti essenziali giunta a fine vita agli idonei centri di raccolta differenziata dei rifiuti elettronici ed elettotecnici, oppure riconsegnarla al rivenditore al momento dell'acquisto di nuova apparecchiatura di tipo equivalente, in ragione di uno a uno, oppure 1 a zero per le apparecchiature aventi lato maggiore inferiore a 25 cm. L'adeguata raccolta differenziata per l'avvio successivo dell'apparecchiatura dimessa al riciclaggio, al trattamento e allo smaltimento ambientale compatibile contribuisce ad evitare possibili effetti negativi sull'ambiente e sulla salute e favorisce il riciclo dei materiali di cui è composta l'apparecchiatura. Lo

smaltimento abusivo del prodotto da parte dell'utente comporta l'applicazione delle sanzioni amministrative di cui al D.Lgs n. Decreto Legislativo N° 49 del 14 Marzo 2014.

Dichiarazione di conformità UE semplificata

Il fabbricante TREVI S.p.A. dichiara che il tipo di apparecchiatura T-Fit 510 A è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo internet:

<https://www.trevi.it/dms/zid/ITREVI/DOCTFITS10A.pdf>

Simplified EU Declaration Of Conformity

Hereby TREVI S.p.A. declares that the equipment T-Fit 510 A

is in compliance with Directive 2014/53/UE.

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.trevi.it/dms/zid/ITREVI/DOCTFITS10A.pdf>

TREVI S.p.A

Strada Consolare Rimini-San Marino, 62
47924 Rimini (RN) Italy
Tel. 0541/756420 - Fax 0541/756430
www.trevi.it - e-mail: info@trevi.it



English



* For additional information and updates visit the website: www.trevi.it

Activity:

After wearing the watch correctly, open the “step counting” in the watch; display the number of steps, calories, distance and other parameters of the day’s exercise.



Sport record:

This interface saves your most recent 10 exercise history records, and you can view data such as exercise duration, heart rate, and calories during exercise.



SpO2:

After wearing the watch correctly, open the “SpO2” in the watch; manual blood oxygen measurement is required.



Sleep:

After wearing the watch correctly, open the “Sleep” in the watch; record the sleep status throughout the night.



Weather

After connecting the watch to the app and activating location authorisation, the weather interface will display the will display the temperature and forecast in real time.



Music:

Open the “Music” app in the watch app; you can control the music playback of your phone, and support operations such as previous track, play/pause, next track, and volume adjustment.



Blood pressure:

When entering the blood pressure measurement interface, the green light at the bottom lights up to start the measurement, and the measurement is completed within 30 to 60 seconds. The measurement at this time is based on the PPG technology.



Breathing exercises:

In the Menubar click on “breathing exercises” and, depending on your needs, select different times.



Please read the manual before use.

- The information contained in this document will not be modified or extended in accordance with any notice.
- The watch must be charged at least 2 hours before use.

1. Technical Specifications

- Model: T-Fit 510 A
- CPU Realtek 8763E
- RAM 192kB + ROM 256KB + Flash 128MB
- Full Touch screen 1.43” AMOLED 466x466pixel
- Wireless version 5.0 (Transmission frequency 2.4GHz, Maximum transmission power 2.5mW)
- Functions: Wifi calling, Heart rate detection, Blood pressure monitor, Blood Oxygen, Sleep monitor, Sedentary, Remote Camera, Control music, Weather, Multi-sport functions, Pedometer, Calorie Consumption, Distance Calculation
- Ion Lithio Battery 3.7V/380mAh
- Waterproof protection: IP68
- Operating system: Android 4.4, iOS 9.0 or above
- Included in the package: device, charging cable, instructions

Manutenzione

- Clean the watch regularly, especially the inside with the sensors.
- Ensure that the sensor is not dirty during measurement. Skin colour, hair density, tattoos and scars can influence the accuracy of measurement results.
- Excessive use of skin care products on the wrist can be detrimental to the watch.
- Do not press the buttons when the device is in contact with liquids/water.
- Please do not continue to wear the bracelet in the event of a skin allergy or any other skin condition.

2. Switching on and off

- Power On: with the watch off, press and hold the Encoder key for 7 seconds. After starting, the time will be displayed.
- Power Off: with the watch on, press and hold the Encoder button for seconds, select the “Switch off” command which will appear on the display, the clock will vibrate and then switch off.

Frequent contacts:

It can be added through “App-Device-Frequent Contacts”. Add, delete, sort, and add up to 10 frequently used contacts.



Dial:

The smart watch supports Wireless calls, and users p can make, answer and reject calls directly on the watch.



Message:

Turn on the push of relevant information on the App side, and the watch side can receive the corresponding message push, up to 15 messages can be saved, and the upper limit will be automatically overwritten.



Find phone:

When the watch is connected to the app, the phone will make a sound after tapping it.



Anti-lost reminder:

When the watch is connected to the app, the phone will make a sound after tapping it.



AI voice:

Wake up your phone's voice assistant.



Stopwatch

This interface is a stopwatch function, and you can also set a segmented timer, and up to 10 pieces of data can be saved.



Timer:

In the timer function, the user can quickly start timing through the system preset time, or click the custom button to set the time.



Alarm:

Set the alarms in app and sync to watch, maximum 5 alarms



Encoder key: Rotation = Menu carousel, switch dial
Short press= Screen On, Screen Off
Long press= Power ON/ Power Off

One press= Exercise list + start of sports session
Exercise button:

3. Setting Up your T-Fit 510 A

The first step is to download and install the app “FitCloudPro” by framing the following QRcode or the one shown on the watch. Log in to the app and create your own account to synchronise your information. The app allows you to check your data analysis every day and customise certain features, such as setting your sedentariness, call notification, exercise goals and so on.

Connection to your smartphone

1. Turn On Wireless on the mobile;
2. Download app FitCloudPro;



3. Pair the watch to the app:

Open app > Device > Add a device > choose T-Fit 510 A

Once paired, the following symbol will appear.

Pairing for call and SMS handling

iPhone devices support Wireless 5.3 + 3.0 dual connection, so once the device has been paired from the app, a series of warnings will appear asking for permission to handle phone calls and SMS.

For Android devices, after pairing the device via the app, you need to enter the Wireless pairing interface, start the search and select T-Fit 510 A, click

Camera:

From the App it is possible to activate/deactivate the shooting function through the movement of the wrist. From the App, select “Shooting” and enable the function.



Drink water reminder:

It can be turned on in the App[Device> Drinking Water Reminder], and the start, end time, and reminder interval can be set after it is turned on.



Sedentary reminder:

It can be turned on in the App[Device> Sedentary Reminder], and it can be set to start, end time, and do not disturb time.



Settings:

The setting function includes screen display (dial switching, bright screen duration, brightness adjustment, flip wrist bright screen duration), language, vibration intensity, menu style, QR code, and system settings.



Shortcut menu:


In this menu you can directly adjust certain functions, such as: Do not disturb mode, brightness adjustment, settings, find mobile phone, audio call mode



7. WARNING

1. The Heart Rate, Blood Oxygen and Blood Pressure data output by T-Fit 510 A are not intended to be a medical or diagnostic basis. Smart watch should not be used for any medical purpose though it with dynamically monitor the heart rate at real time. The data is for reference only.
2. Self-diagnosis and self-treatment are dangerous. Only qualified physicians are allowed to diagnose and treat high blood pressure or any other heart diseases. Please contact your physician for more professional diagnostic opinions.

on “pair” and then give permission to the various interfaces. On subsequent connections all this will happen automatically.

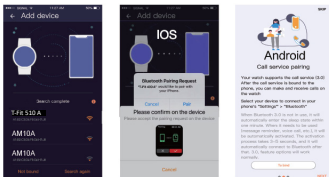

4. Charging instructions

This product adopts a charging cable with magnetic connector. To recharge the watch:

1. On the back of the watch there are contacts on the back of the watch, bring these contacts closer to the connector of the recharging cable, this will tend to align correctly automatically;
2. Connect the USB socket of the charging base to a computer or to a 5V 1A power supply (not supplied) equipped with a USB port. You can see the charging status on the display.

Warning: do not connect the charging cable to conductive materials, or other equipment, it will cause short circuits.



5. Quick product information

Changing the dial

Once the watch is switched on, in the main dial screen, rotate the crown to display the pre-loaded dials; or, within the app, go to **Device > Dials**, select your favourite and load it onto the watch by selecting ‘Sync’.



3. T-Fit 510 A smartwatch data such as heart rate, blood pressure, etc. may not be completely accurate due to factors such as interference with environmental signals, wearing posture, changes in the climate environment, and physical condition.
4. Do NOT carry out drugs and treatment on the basis of the monitoring data provided by T-Fit 510 A, and should follow medical advice when medication and treatment are required, and we are not liable for the inaccuracy of monitoring data and the consequences of misuse of monitoring data and information.

Warnings

This device is an electronic instrument of high precision; therefore, avoid using it in the following cases:

- Close to strong heat sources such as heaters and stoves.
- In environments that are too cold or too hot or very dusty.
- The appliance must not be exposed to dripping or splashing water. No liquid-filled objects, such as vases, must be placed on the appliance.
- If liquids penetrate into the device, bring the device to the nearest authorized TREVI service Centre.
- Do not use the device near flammable or explosive gases, this may cause a malfunction of the device or a fire hazard.
- No naked flame sources, such as lighted candles, must be placed on the appliance.
- Keep the device out of reach of children. The device is not a toy. The device is made up of small removable parts which, if ingested, can cause suffocation.
- Do not expose the device to strong shocks.
- Store the product in a dry place when you are not using it.
- To avoid damage, do not press the buttons when the device is in contact with water.
- Keep this instruction manual.

8. Common problem handling

Watch won't turn on

- Please press and hold the power button for more than 10 seconds.
- Maybe the battery is too low, please charge it in time.


Wireless is not connected or unable to connect

- Please, try to restart the watch and reconnect.
- Please, try to restart the phone's Wireless and connect again.
- Do not connect the phone to other Wireless devices at the same time.

Use the screen

- Slide your finger across the display to view the various screens;
- Press the Encoder button to light up the screen, rotate it to change the dial; press it a second time to enter the function menu (icons), press it twice quickly to change the style of the functions menu, rotate it to scroll through the various icons or to zoom.
- While navigating, press the Encoder button to return to time display.
- Press the Exercise button you will quickly enter the page of 100 sports modes.

Touch dial description

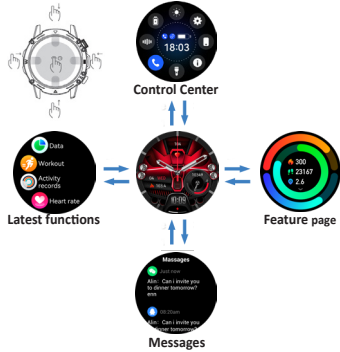

6. Functions

Always on display:

If you wish to display the time on the screen even when the device is in standby or with the screen ‘off’:

Select **Setup > Display Brightness > Always on display clock**.

Activate or deactivate the function and choose whether to activate the digital or analogue display.

Inaccurate heart rate/ blood pressure/ blood oxygen

- Generally, it is caused by poor contact between the sensor of the watch and the human body during measurement.
- Please, make sure that the sensor is in full contact with your wrist during measurement.
- Please keep your body still and the watch close to your wrist during measurement.

Sleep data is not accurate enough

- Sleep monitoring is to simulate the natural state of falling asleep and waking up, and needs to be worn normally.
- Wear it when you fall asleep too late or when you fall asleep, errors may occur.
- Sleep data is not monitored during the day, and the default sleep monitoring is from 9:30 pm to 12:00 noon the next day.
- For more frequently asked questions, please check the App [My> FAQ].

9. Disposal information

Regardless of the type of spent battery, it must not be disposed of in household waste, fire or water. Keep the battery away from heat sources. Any type of spent battery must be recycled or disposed of at the appropriate collection points.



Precautions for correct disposal of the product

The symbol shown on the equipment indicates that waste must be disposed of in “separate collection” and so the product must not be disposed of together with urban waste. The user must take the product to special “separate waste collection centres” provided by local government, or deliver it to the retailer against the purchase of a new product. Separate collection of waste and subsequent treatment, recycling and disposal operations promotes the production of equipment with recycled materials and limits negative effects on the environment and on health caused by improper handling of waste. Illegal disposal of the product leads to the enforcement of administrative penalties.


Sports:

T-Fit 510 A watch support up to 100 sports modes, fitness, leisure, competition Classes, ball games, dance classes, including: running, walking, treadmill, mountaineering, cycling, Spinning bike, yoga, basketball, football, badminton and other sports. T-Fit 510 A watch supports sports customization, which can be customized in more than 100 sports modes favorite sport.



Sport customization:

1. From the application, select ‘Device’;
2. Select ‘Sport Push’;
3. According to your desired sport, select the corresponding category;
4. Select the desired sport and select ‘Download’.

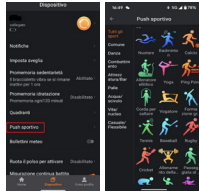

Heart rate:

Wearing T-Fit 510 A correctly, not too tight or loose, make sure no green light leak, open the “Heart rate” application in the watch application, automatically measure the heart rate after entering the application.

