Version 1.7 EN

UMAIN

Harmless UWB Radar Sensor for 24-hours

UWB Radar Sensor Thunder Series

- Presence Detection
- Respiration Detection
- Sleep Detection
- Intrusion Detection
- Passenger Detection



Rev. 1.7

www.umain.co.kr

umain.co.kr Page 1 | 26

Contents

1. Introduction	4
2. Product Specification	7
3. Terminal Information	8
4. Difference between Omni Directional and Directional	g
5. UART Interface	10
5.1 Commands description	14
5.1.1 Sensor range	14
5.1.2 Communication speed	15
5.1.3 Sending method	16
5.1.4 Data format	17
5.1.5 Continuous sending interval	18
5.1.6 Request send data	19
5.1.7 Change ID	19
5.1.8 Ping	20
5.1.9 Recalibrate the sensor	20
5.1.10 Wrong CRC	21
5.2 Error-detecting code description	22
6. Host Integration Guide	22
7 ECC Statement	22

1. Introduction

Sensor "Thunder Series" is an impulse radar based on Ultra-Wide Band technology in high band areas (7GHz-9GHz), which can be used to detect the presence of person or animals within detection range. US Federal Communications Commission (FCC) authorized the definition of UWB and the use of frequency bands and limited uses in February 2002.

Using a very wide frequency band compared to conventional systems, low-power signal energy is distributed to spectra of several GHz bandwidth.

Sensors can detect a person's respiration signal also have reliable capture performance and are designed to reduce false alarms for commercial use.


For this purpose, sensor contain two fields in detection solution: Doppler detector and Vital Signal detector. Doppler detector allows to detect movements of person's inside of area, Vital Signal catch signals when body is unmoved (sleeping, reading book or watch tv etc.).

Sensor "Thunder Series" provides the data by UART interface. Sensor's maximum working distance can be adjusted through UART interface or using IR remote controller.

Data that provided by sensor is indicating about area occupancy. Two numbers are representing motion detection and respiration detection.

This device complies with Part 15.517 of the FCC Rules. This equipment may only be operated indoors. Operation outdoors is in violation of 47 U.S.C. 301 and could subject the operator to serious penalties.


umain.co.kr Page 3 | 26

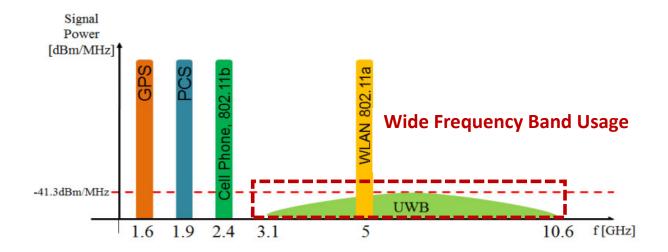

1.1 IR-UWB Radar System

- IR-UWB Radar measures distance using time reflected from the detection object using nano-second or less pulse heat.
- The smaller pulse size, the more precise the measurement and the more information it can contain.
- The precision of the target is improved compared to normal radar and has less impact on the surrounding environment.
- Because it uses short pulses, it can also be used in the security field, and because of
 its high permeability, distance measurement is possible even if there are obstacles.
- To estimate the distance of an object, we need to eliminate background noise and compensate for signal attenuation

<System of UWB Radar>

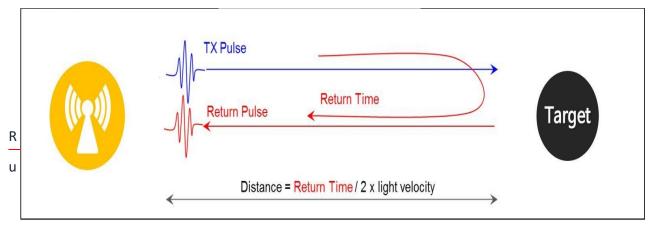

If you look at the figure above, you can see the Tx pulse.

- For biometric purposes at close range (within 10 meters)
- Low power operation according to domestic and international standards
- Key technologies of the fourth industry used in biometric signal detection and human detection technologies at home and abroad, which are harmless to the human body (from 1/700 to 1/1,500 levels of first-class mobile phones)
- Small objects, small motion detection, and strength

1.2 UWB Technical Advantages

- Radar technology is harmless to the human body for 24 hours a day (most important)
- Low power of radio waves compared to other electronic devices
- The size of the pulse is very short, allowing precise measurements
- Use in security because of short pulses
- Good permeability, allowing distance measurements even with obstructions
- Low power output, available for low power use

umain.co.kr Page 5 | 26



High Resolution

Non-contact heart rate, biometric signals such as breathing can be detected

Anonymous Data

Sensing without camera function. Prevent personal information leakage and privacy breaches

Permeability

High permeability using high frequency bands. Not affected by external environment, such as mist, rain, snow, or darkness



2. Product Specification


Hardware Specification				
RF central frequency	7.9GHz +/- 0.15GHz			
RF bandwidth	>500MHz			
RF power	<-42dBm/MHz			
Antenna type	Omni directional, Directional			
Range resolution	50cm			
Detecting range	5m max			
Detecting speed of motion	0.2 ~ 1.0m/s			
Detecting vital signs	0.13 ~ 0.7Hz			
Warm-up period	<30 sec (calibration time)			
Alarm Delay	1sec (min)			
Interface Specification				
Outputs (default/optional)	UART			
Communication output (optional)	9600bps, 57600bps, 115200bps, 230400bps			
Inputs (default/optional)	IR remote control			
IR compatible decoder	NEC (10keys)			

Rev. 1.7

umain.co.kr Page 6 | 26

Communication input (optional)	Remote control		
Electrical Specification			
Electrical Specification			
Current supply Standby 10mA / Max. 20mA			
Voltage input	VDC 12V/Class B 9.6V ~ 14.4V		
Functional Extra Low Voltage	VDC 5V (min)		
Time of power interrupt	<1sec (max)		

3. Terminal Information

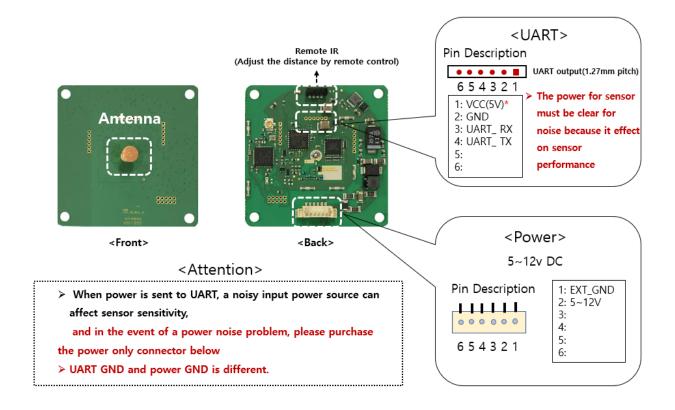


umain.co.kr Page 7 | 26

4. Difference between Omni Directional and Directional

There are two types of Thunder series products, Omni Directional and Directional. The table below shows the difference between Omni Directional and Directional based on the antenna specifications.

Parameter	Value	Value	
Antenna Type	Omni directional	Directional	
Antenna Angle	X-Z Plane: 360°	X-Z Plane: 50°~80°	
	Y-Z Plane: 60°	Y-Z Plane: 60°	
Antenna Gain	XZ Plane: 4.91(min.) dBi	XZ Plane: 7(min.) dBi	
	YZ Plane: 4.66(min.) dBi	YZ Plane: 7(min.) dBi	

Figure below shows the model of an Omin Directional antenna and Directional antenna and the difference in respiration detection distance.

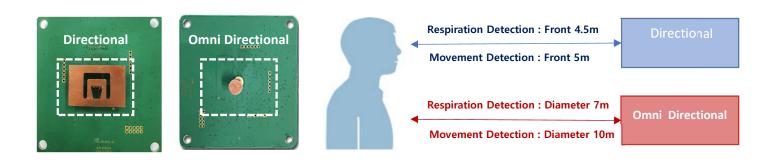

umain.co.kr Page 8 | 26

Rev. 1.7

5. UART interface

UART interface is available on 6-pin connector inside of the sensor PCB. Pinout of this connector is described on picture below:

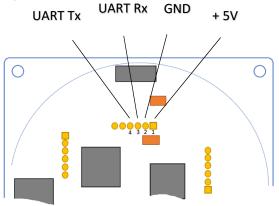


Fig. 1 – UART connector pinout

UART interface can be used for sensor's data receiving and for changing sensor's parameters as well. Result of sensor detection is represented in two values: "motion marker" and "respiration marker".

Table 1 – Description of sensor output variables

Situation:	Not occupied	Occupation detected	Occupation detected
		(Motion detected)	(Respiration detected)
First value	0	Min:100	
"Motion		Max:4800	
marker"		Value represents how strong	-
		the environment was changed	
		since previous measurements.	
Second value	0		Min:6
"Respiration			Max:40
marker"		-	Value represents estimated
			respiration rate (BPM).

Rev. 1.7

Default settings

By default, data provided in event driven mode. Which means that sensor sends the data when motion or respiration detected. The message after first detection is sending during 1 second. For continuous event sensor sends messages with delay around 3 second.

In case of no detection, sensor sends zero values every 1 minute to indicate that sensor is "online".

Data format is ASCII and represented as "val1, val1 < CR > < LF > ". Default communication speed is 9600 bps. Default sensor's ID is 0x00.

Optional settings

Parameters of serial communication can be adjusted as follow:

- Communication speed:
 - 1) 9600 bps.
 - 2) 57600 bps.
 - 3) 115200 bps.
 - 4) 230400 bps.
- Sending method:
 - 1) Event driven.
 - Sensor sends the data when motion or respiration detected. The message after first detection is sending during 1 second. For continuous event sensor sends messages with delay around 3 second. In case of no detection, sensor sends zero values every 1 minute.
 - 2) Continuously sending.Sensor sends the data continuously with fixed time interval from 1 to 180 seconds.
 - 3) By request.Sensor sends the data when host request it.

Rev. 1.7

umain.co.kr Page 10 | 26

- Data format:

1) ASCII.

Data format is represented as "val1, val1 < CR > < LF >" (in C: $printf(%d, %d \forall r \forall m, val1, val2)$;)

val1 is movement value and respiration value.

```
2020-05-20 16:10:07.970 [RX] - Motion Marker, BPM<CR><LF>
2020-05-20 16:10:08.583 [RX] - 0, 0<CR><LF>
2020-05-20 16:10:17.148 [RX] - 362, 0<CR><LF>
2020-05-20 16:10:29.764 [RX] - 481, 0<CR><LF>
2020-05-20 16:10:32.434 [RX] - 260, 0<CR><LF>
2020-05-20 16:10:35.114 [RX] - 209, 0<CR><LF>
2020-05-20 16:10:41.473 [RX] - 102, 0<CR><LF>
2020-05-20 16:10:50.410 [RX] - 170, 0<CR><LF>
2020-05-20 16:11:00.450 [RX] - 520, 0<CR><LF>
2020-05-20 16:11:04.230 [RX] - 325, 0<CR><LF>
```

In the figure above, the received data is in ASCII format, left values 362, 481 are movement values, and right values 0 are respiration values. Respiration is zero because it is an environment that measures the state of movement.

2) Hex format.

Data is packed in message that contains header, sensor id, motion and respiration markers and checksum:

0x6A	Sensor ID	0xC1	Value 1	MSB	Valu	ie 1 LS	βB	Val	ue 2	CRC8
	2020-05-2	0 16:58	:19.699	[RX]	- 6A	00 C	1 04	FF	00 9	90
	2020-05-2	0 16:58	:22.370	[RX]	- 6A	00 C	1 02	58	00 9	9E
	2020-05-2	0 16:58	:27.987	[RX]	- 6A	00 C	1 00	73	00 7	71
	2020-05-2	0 16:59	:30.178	[RX]	- 6A	00 C	1 00	00	00 E	C
	2020-05-2	0 17:00	:10.643	[RX]	- 6A	00 C	1 00	DB	00 (1
	2020-05-2	0 17:00	:40.527	[RX]	- 6A	00 C	1 01	. 14	00 8	34

Rev. 1.7

umain.co.kr Page 11 | 26

In the figure above, the data received is Hex format. For example "6A 00 C1 01 14 00 84" data has been received

- 1. 6A is always a common type of sensor
- 2. 00 is a default sensor ID (selectable, ref. P17)
- 3. C1 is alarm signals that the sensor has detected movement or respiration
- 4. 01,14 is the value of movement value
- 5. 00 is the respiration value
- 6. 84 is a CRC8 value

The sensor working range and option settings can be set using the command in hex format as follow:

Sensor type	Sensor ID	Command	Value	CRC8
0x6A	0x00	0xC2	0x01	0x09

umain.co.kr Page 12 | 26

5.1 Commands description

5.1.1 Sensor range

C4

Possible values:

0x00 – no changes, return current range

0x01 - set 1.5m

0x02 - set 2.0m

0x03 - set 2.5m

0x04 - set 3.0m

0x05 - set 3.5m

0x06 - set 4.0m

0x07 - set 4.5m

0x08 - set 5.0m

Comment:

Distance in meters means the maximum detection range from sensor.

As soon as sensor's detection range can be changed by IR remote controller as well, we would recommend controlling sensor's settings periodically by sending 0x00 value.

After changing of working range, the sensor starts to recalibrate.

Example:

Change range to 3.5m for sensor with id 0:

Host request: 0x6A 0x00 0xC4 0x06 0x62 Sensor reply: 0x6A 0x00 0xC4 0x06 0x62

umain.co.kr Page 13 | 26

5.1.2 Communication speed

Command:

C8

Possible values:

0x00 – no changes, return current speed

0x01 - set 9600

0x02 - set 57600

0x03 - set 115200

0x04 - set 230400

Comment:

Sensor replies on the same communication speed. Then communication speed is

changed for requested one.

Example:

Change UART speed to 115200 for sensor with id 0:

Host request: 0x6A 0x00 0xC8 0x03 0x85 Sensor reply: 0x6A 0x00 0xC8 0x03 0x85

u main.co.kr Page 14 | 26

5.1.3 Sending method

Command:

CA

Possible values:

0x00 – no changes, return current setting

0x01 – event driven

0x02 – continuous sending with fixed interval

0x03 – sending by request

Comment:

- Event driven sensor sends the data when motion or respiration detected. The
 message after first detection is sending during 1 second. For continuous event
 sensor sends messages with delay around 3 second. In case of no detection,
 sensor sends zero values every 1 minute.
- Continuously sending sensor sends the data continuously with fixed time interval from 1 to 180 seconds. Time interval can be changed by command "CC"
- By request sensor sends the data when host request it by command "CB".

The data format is set by command "C9".

Example:

Change sending method to "continuous sending" for sensor with id 0:

Host request: 0x6A 0x00 0xCA 0x02 0xA8 Sensor reply: 0x6A 0x00 0xCA 0x02 0xA8

umain.co.kr Page 15 | 26

5.1.4 Data format

Command:

C9

Possible values:

0x00 – no changes, return current setting

0x01 - ASCII

0x02 - Hex

Comment:

When ASCII format is set, sensor sends the header text "Motion marker,

respiration < CR > < LF > " after calibration finished.

Example:

Change data format to "Hex" for sensor with id 0:

Host request: 0x6A 0x00 0xC9 0x02 0x97 Sensor reply: 0x6A 0x00 0xC9 0x02 0x97

5.1.5 Continuous sending interval

Command:

CC

Possible values:

0x00 – no changes, return current setting

0x01...0xB4 – set interval value from 1 to 180 seconds, in seconds

Comment:

This parameter is meaningful only when sending type is "continuous sending"

(command "CA").

The intervals less then 3 seconds are not recommended.

Example:

Change repetition interval to 5 seconds for sensor with id 0:

Host request: 0x6A 0x00 0xCC 0x05 0xC3 Sensor reply: 0x6A 0x00 0xCC 0x05 0xC3

5.1.6 Request send data

Command:

CB

Possible values:

Any

Comment:

Sensor replies to this command with data message. It is working only when

sending type is "sending by request" (command "CA").

Example:

Change repetition interval to 5 seconds for sensor with id 0:

Host request: 0x6A 0x00 0xCB 0x00 0xB3

Sensor reply: 0x6A 0x00 0xC1 0x01 0x12 0x00 0xFA (Motion marker: 274,

BPM: 0) 0x01, 0x12 = 274, 0x00 = 0

Rev. 1.7

umain.co.kr Page 17 | 26

5.1.7 Change ID

Command:

C3

Possible values:

0x00 ... 0xFE - set sensor ID respectively

Comment:

This command changing sensor's id.

If the command refers to 0xFF and value field contains 0xFF then sensor will

return current ID.

Example:

umain.co.kr

Change sensor ID from 0 to 1:

Host request: 0x6A 0x00 0xC3 0x01 0x1C Sensor reply: 0x6A 0x01 0xC3 0x01 0x77

Get current ID:

Host request: 0x6A 0xFF 0xC3 0xFF 0xC3 Sensor reply: 0x6A 0xFF 0xC3 0x01 0x37

5.1.8 Ping

Command:

C2

Possible values:

Any

Comment:

Just returns the same message (To check the connection with the sensor)

Example:

Ping the sensor:

Host request: 0x6A 0x00 0xC2 0x00 0x0E Sensor reply: 0x6A 0x00 0xC2 0x00 0x0E

5.1.9 Recalibrate the sensor

Command:

CD

Possible values:

Any

Comment:

This command pushes the sensor to recalibrate.

Example:

Recalibrate the sensor:

Host request: 0x6A 0x00 0xCD 0x00 0xCD

Sensor replies "0x6A 0x00 0xCD 0x00 0xCD" and starts to recalibrate

Rev. 1.7

umain.co.kr Page 19 | 26

5.1.10 Wrong CRC

Command:

C7

Possible values:

This is one direction message. Only from sensor to host.

Comment:

If the CRC code in the host's message is wrong, then sensor returns this command. Value field of returned message contains CRC that calculated in sensor.

Example:

Change sensor ID from 0 to 1:

Host request: 0x6A 0x00 0xC3 0x01 0x53 Sensor reply: 0x6A 0x00 0xC7 0x1C 0x1B

(0x1C is the correct CRC part in the sensor response section)

Rev. 1.7

umain.co.kr Page 20 | 26

5.2 Error-detecting code description

The last byte of message to and from sensor should contains error-detecting code calculated according to CRC8 rules.

CRC8 calculation parameters: initial value 0x00; polynomial value 0x07.

Computation code for reference:

For checking crc8 value you can refer to website https://crccalc.com/.

Rev. 1.7

umain.co.kr Page 21 | 26

6. Host Integration Guide

According to KDB996369 D03 2.0 INTEGRATION INSTRUCTIONS(2.2-2.7)

2.2

This module has been assessed against the following FCC rule parts: CFR 47 FCC Part 15 F (15.517, UWB). It is applicable to the modular transmitter.

2.3

This radio transmitter FCC ID: 2AN8QUM80M has been approved by Federal Communications Commission to operate with the integrated PCB antenna. Use of any other antenna is strictly prohibited without filing an application for a new system-specific FCC ID.

2.4

The module complies with FCC Part 15.517 and applies for single module approval.

2.5

Trace antenna designs: Not applicable – the antenna is integrated into the module and cannot be modified. See section 2.3.

2.6

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

2.7

Antenna type and antenna gain for UWB:

Antenna Type: Internal U-Slot Antenna

Antenna Gain: 5.36 dBi

Rev. 1.7

umain.co.kr Page 22 | 26

Note: U-Slot Antenna is permanently attached and can't be replaced.

2.8

Please note that if the FCC identification number is not visible when the module is installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module. This exterior label can use wording such as the following: "Contains FCC ID: 2AN8QUM80M" Any similar wording that expresses the same meaning may be used.

2.9

Testing of the host product with all the transmitters installed – referred to as the composite investigation test-is recommended, to verify that the host product meets all the applicable FCC rules. The radio spectrum is to be investigated with all the transmitters in the final host product functioning to determine that no emissions exceed the highest limit permitted for any one individual transmitter as required by Section 2.947(f). The host manufacturer is responsible for ensuring that when their product operates as intended it does not have any emissions present that are out of compliance that were not present when the transmitters were tested individually. The host product manufacturer is responsible for compliance with any other FCC rules and a C2PC is required for each host when installed in any host.

2.10

Any company of the host device which installs this modular should perform the test of radiated & conducted emission and spurious emission etc. according to FCC Part 15C: 15.517 and 15.209 & 15.207, 15B class B requirement, only if the test result comply with FCC part 15F: 15.517 and 15.209 & 15.207, 15B class B requirement. Then the host can be sold legally. The host product manufacturer is responsible for compliance with any other FCC rules and a C2PC is required for each host when installed in any host.

2.11

The host manufacture is recommended to use D04 Module Integration Guide recommending as "best practice" RF design engineering testing and evaluation in case non-linear interactions generate additional non-compliant limits due to module placement to host components or properties.

2.12

This module is stand-alone modular. If the end product will involve the Multiple simultaneously transmitting condition or different operational conditions for a stand-alone modular transmitter in a host, host manufacturer have to consult with module manufacturer for the installation method in end system.

Rev. 1.7

umain.co.kr Page 23 | 26

Manual Information to the End User:

• The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module. The end user manual shall include all required regulatory information/warning as show in this manual.

OEM Responsibilities to comply with FCC Regulations

The (your product name) Module has been certified for integration into products only by OEM integrators under the following conditions:

- 1. The antenna(s) must be installed such that a minimum separation distance of 5mm is maintained between the radiator (antenna) and all persons at all times.
- 2. The transmitter module must not be co-located or operating in conjunction with any other antenna or transmitter.

As long as the two conditions above are met, further transmitter testing will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed (for example, digital device emissions, PC peripheral requirements, etc.).

IMPORTANT NOTE: In the event that these conditions cannot be met (for certain configurations or colocation with another transmitter), then the FCC authorizations are no longer considered valid and the FCC ID cannot be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

This modular transmitter is only FCC authorized for the specific rule parts (i.e., FCC transmitter rules) listed on the grant, and that the host product manufacturer is responsible for compliance to any other FCC rules that apply to the host not covered by the modular transmitter grant of certification. If the grantee markets their product as being Part 15 Subpart B compliant (when it also contains unintentional radiator digital circuity), then the final host product still requires Part 15 Subpart B compliance testing with the modular transmitter installed.

Host labelling guidance for the end integrator

This is an advise for host manufacture to provide a physical / e-label on their host product stating, "Contains FCC ID: 2AN8QUM80M": A permanently affixed label must be used. The modular transmitter must be labeled with its own FCC identification number, and, if the FCC identification number is not visible when the module is installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module. This exterior label can use wording such as the following: "Contains Transmitter Module FCC ID: 2AN8QUM80M" or "Contains FCC ID: 2AN8QUM80M".

Any similar wording that expresses the same meaning may be used.

Rev. 1.7

umain.co.kr Page 24 | 26

7. FCC Statement

Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including

interference that may cause undesired operation.

Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's

authority to operate the equipment.

RF Exposure

This portable transmitter with its antenna complies with FCC RF exposure limits for general population /

uncontrolled exposure.

UWB devices may not be employed for the operation of toys. Operation onboard an aircraft, a ship or a satellite

is prohibited.

This device complies with Part 15.517 of the FCC Rules. This equipment may only be operated indoors.

Operation outdoors is in violation of 47 U.S.C. 301 and could subject the operator to serious penalties.

Rev. 1.7

FCC ID: 2AN8QUM80M

Page 25 | 26 umain.co.kr



www.umain.co.kr

sales@umain.co.kr

u m a i n . c o . k r Page 26 | 26

Rev. 1.7